

ATRIUM 5.5

Model No.:F55L

User Manual

Manual de Usuario

Tabla de Contenido

<i>Información de Seguridad</i>	2
<i>Apariencia y Funciones</i>	3
<i>Introducción</i>	4
<i>Realizar una Llamada</i>	5
<i>Contactos</i>	5
<i>Mensajería</i>	7
<i>Navegador de Internet</i>	8
<i>Bluetooth</i>	9
<i>Cámara</i>	10
<i>Fotos</i>	10
<i>Alarma</i>	11
<i>Radio FM</i>	12
<i>Configuración</i>	13
<i>Almacenamiento</i>	16

Información de Seguridad

Por favor, lea atentamente los siguientes términos: **Use de Forma Segura**

No utilice el teléfono móvil donde esté prohibido o cuando pueda causar peligro.

Seguridad de Transporte

Tenga en cuenta todas las leyes y regulaciones de transporte.

Por favor maneje con las dos manos en el volante.

NO USE MENSAJERIA DE TEXTO CUANDO ESTEN CONDUCIENDO

Hospitales

Por favor, apague su teléfono móvil cuando cerca de instrumentos médicos. **Aeropuertos**

Por favor, siga todas las normas de seguridad de vuelo y no use el teléfono durante el vuelo.

Sustancias Químicas y Tóxicas

No utilice su teléfono móvil cerca de combustibles o productos químicos.

Accesorios y Baterías

Utilice únicamente accesorios y baterías autorizados de Blu.

Prueba de Agua

El teléfono móvil no es impermeable. Por favor, manténgalo alejado del agua.


Copia de Seguridad

Por favor, recuerde hacer una copia de seguridad o llevar un registro por escrito de toda la información importante almacenada en su teléfono móvil.

Llamadas de Emergencia SOS

Asegúrese de que su teléfono móvil está encendido y en un área de servicio. En la pantalla de inicio, pulse la tecla del teléfono y marque el 911.

Apariencia y Funciones

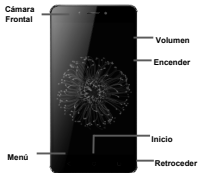

Introducción

Instalación de la Tarjeta SIM

Por favor, instale la tarjeta SIM antes de utilizar su teléfono.

Aviso: Mantenga la tarjeta SIM fuera del alcance de los niños. El contacto de la tarjeta SIM se daña fácilmente debido al roce o flexión. Por favor tenga cuidado al transportar o instalar la tarjeta SIM. **Para insertar la tarjeta SIM:**

1. Apague el teléfono móvil y retire la cubierta posterior.
2. Inserte la tarjeta(s) SIM.

SIM 1(Parte Posterior)

SIM 2 (Parte Inferior)



3. Finalmente vuelva a colocar la tapa posterior y encienda el teléfono móvil.

Encender y Apagar

Encender - Asegúrese de que la tarjeta SIM se ha insertado correctamente en el teléfono. Mantenga pulsado el botón de encendido para encender el teléfono.


Apagar - En el modo de espera, mantenga pulsado el botón de encendido hasta que aparezca el menú de opciones. Seleccione apagar en el menú y confirme para apagar el teléfono.

Seguridad

Se puede configurar una imagen de desbloqueo de pantalla o un bloqueo de código PIN como medida de seguridad. Para más información sobre bloqueos de contraseña, revisión de contraseña y otras funciones, por favor diríjase a los ajustes de seguridad del teléfono.

Realizar una Llamada

En el teclado de marcación, introduzca el número de teléfono y haga clic en icono del teléfono para realizar una llamada. Si llamas a una extensión, puede hacerle clic en el icono del teclado en la parte inferior de la pantalla y abrir la interface para introducir el número de la extensión. También puede introducir un número de entrada y llamar a contactos a través de marcación rápida.




Registros de Llamadas

Cada número de teléfono llamado y recibido se guardará en el registro de llamadas del teléfono. Habrá un indicador en el registro de llamadas que mostrará SIM1 o SIM2. Todos los números en el registro de llamadas se pueden marcar directamente haciendo clic en el icono de marcado en el lado derecho de la pantalla. Cuando el número aparezca en la lista, haga clic en él para ver más detalles.

Contactos

Ingreso: Haga clic en el menú de aplicaciones y seleccione Contactos

- La pantalla predeterminada es la agenda del teléfono y los contactos de la tarjeta SIM
- Los contactos están organizados alfabéticamente.

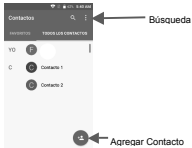

Haga clic en el icono de búsqueda para acceder a la interface de búsqueda de contactos.

- Cualquier número o letras asociadas con algunos de los contactos guardados en la lista, se muestra en los resultados de búsqueda.
- Si no hay resultados, la interface mostrará que no ha encontrado Contactos.


Agregar Contacto Nuevo

1. Haga clic en el icono de "Agregar Contacto"
2. Seleccione para guardar los contactos en el teléfono o en la tarjeta SIM.
3. Puedes editar imagen de contacto, nombre, número de teléfono, grupo, dirección y correo electrónico, entre otras opciones
4. Haz clic para finalizar y guardar contactos.



Mensajería

Puede utilizar esta función para intercambiar mensajes de texto y mensajes multimedia con su familia y amigos. Los mensajes mandados y recibidos del mismo contacto o número de teléfono se guardan en una sola conversación y se puede ver el historial de mensajes.

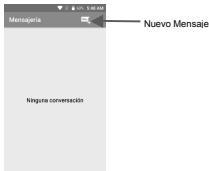

Mandar un SMS

Pulse Menú de Aplicaciones » Mensajería » Nuevo Mensaje

1. Pulse para entrar al destinatario (Puede introducir contactos de la guía telefónica o introduzca un nuevo número)
2. Escriba el Mensaje
3. Envié el Mensaje

Mandar un MMS

Al crear un mensaje, el estilo de mensaje predeterminado es SMS. El mensaje se convertirá automáticamente a MMS cuando se añada un archivo adjunto.

1. En la interface de mensajes, haga clic en el icono de sujetapapeles.
2. Haga clic para "Adjuntar" y añadir archivos adjuntos.



Navegador de Internet

Funciones de Menú

Retroceder

- Después de navegar a través de varias páginas, esta opción permite al usuario volver a la página anterior. Adelantar
- Después de navegar a través de varias páginas, esta opción permite al usuario adelantar la página actual. Ventanas
- Puede ver todas las ventanas abiertas. Marcadores
- Haga clic en la opción de "Marcadores" para guardar un URL actual como un favorito.
- Haga clic en el Marcador en la lista de favoritos y se abrirá la página de internet. Mas

Buscar en la página: Búsqueda de datos en la página.

Compartir Pagina: Seleccione para compartir la página actual.

Guardar para leer en línea: Guarda la página para leer en línea Información de Página: La dirección de la página y otra información de la exploración actual.

Historia: Mostrar el historial de navegación y ver las páginas más visitadas.

Ajustes: Contiene una variedad de ajustes del navegador.


Navegador



Bluetooth

Bluetooth es una tecnología de comunicaciones de corto alcance inalámbrico que los dispositivos pueden utilizar para intercambiar información y conectar a diferentes tipos de dispositivos que incluyen auriculares, kits de coches, y otros dispositivos.

Encender el Bluetooth

- 1) Pulse Ajustes » Bluetooth y seleccione para encender Bluetooth.
- 2) El icono Bluetooth aparecerá en gris  en la barra de notificaciones. Haga clic en "Buscar dispositivos" y el teléfono empezará a buscar todos los dispositivos dentro del alcance.
- 3) En la configuración de Bluetooth todos los dispositivos encontrados se mostrarán en la lista bajo el icono. Importante: El máximo tiempo de detección del teléfono es de 2 minutos.



Lista de
dispositivos
disponibles

Cámara

Antes del uso: Instalación de la tarjeta de memoria es necesario antes de utilizar la cámara o cámara de vídeo. Todas las fotos o vídeos tomados por el teléfono se almacenan en la tarjeta de memoria.

Abrir Cámara

1. Pulse Menú de Aplicaciones » Cámara
2. Pulse el botón de la cámara para tomar la foto. **Aviso:** También puede colocar un icono de la cámara con acceso

directo en cualquiera de las pantallas

Tomar Fotos

1. Apunte y enfoque el objeto por el visor de la cámara.
2. Pulse el botón de la cámara para tomar la foto.
3. Después de tomar la foto, el archivo se guardará en la carpeta de la galería de la cámara. Puede realizar varios ajustes para la cámara en la interface de la cámara.

En el visor de la cámara, se puede cambiar a la función de galería. En la parte superior derecha de modo de visor de la cámara, se encuentra la pantalla de la imagen anteriormente tomada. Haga clic en el "cuadro de vista previa" y la foto se mostrará en pantalla completa.

Fotos

Abrir Imágenes

Pulse Menú de Aplicaciones » Fotos

Compartir Fotos

Se puede enviar imágenes a través de la función de mensajes MMS escribiendo un mensaje o correo electrónico y adjuntando la imagen. Cualquier imagen también puede ser enviada a través de la función Bluetooth.

Ajustar Imágenes

Al abrir la imagen, en la parte inferior verá las opciones de editar para ajustar la imagen.



Editar Foto

Se puede elegir diferentes efectos para fotos que incluyen: Vintage (Antiguo), Blanco y Negro, Instantánea, Latte, Litho, Rociamiento, Enderezar, Recortar, Girar, Espejo, Automático, Viñeta, Exposición, Contraste, Sombras, Nitidez, y otros ajustes que se puede usar para editar imágenes.

Ver Imágenes

En la interface de imagen, haga clic en un álbum de fotos para ver las imágenes archivadas.

Recortar Imágenes

1. Si desea ajustar el tamaño de la imagen, se puede utilizar las herramientas de recorte. Una vez que aparezca la flecha, pellizque los dedos hacia adentro o hacia afuera para ajustar el tamaño.
2. Si desea ajustar la imagen y mantener su proporción, por favor, mantenga pulsada cualquiera de las cuatro esquinas de la imagen y ajuste.

Alarma

1. Abra la aplicación: Menú de aplicaciones » Reloj
2. Haga clic en el botón de alarma e ingrese la configuración de la alarma



← Pulse para agregar o editar una alarma

RadioFM

Radio FM

A través de esta función, se puede escuchar la radio FM en el dispositivo. La radio FM utiliza los auriculares con cable como una antena para recibir la señal. Antes de utilizar esta función, conecte los auriculares de equipos originales que vienen con el teléfono. [Abrir Radio FM](#)

Pulse el icono de Radio FM para abrir la aplicación.

1. Haga clic en "Búsqueda" para buscar canales de radio FM.
2. Haga clic para agregar el canal a la lista de canales de favoritos.




Radio FM como fondo

Haga clic en el botón Inicio o Retorno para mover el programa de radio FM en segundo plano.

Configuración

Administración de la Tarjeta SIM

- Seleccione esta opción para desactivar la tarjeta SIM.
- Operadores de la Red.  **Wi-Fi**
- Wi-Fi – Haga clic en Wi-Fi para encender. Cuando está activado, la conexión de Wi-Fi automáticamente buscará las redes disponibles. Cualquier red no segura se puede utilizar directamente y cualquier red segura requiere una contraseña al conectar.

Bluetooth

Pulse el botón para encender Bluetooth. Una vez encendido, el Bluetooth buscará automáticamente cualquier equipo abierto cerca.

Uso de Datos

- Datos de uso y límite de tráfico de datos móviles.

Más Conexiones Inalámbricas y Redes

- Modo de Vuelo
- VPN
- Anclaje a red y zona Wi-Fi
- Redes Móviles y APN

Aviso: Cuando el teléfono está en modo de vuelo, el Wi-Fi se desactivará automáticamente. .

Sonido/notificación

Esta opción configura los ajustes de tonos de teléfono:

- Vibrar, Volumen, Tonos de llamada, Tonos de llamada, y Tonos de notificación.

Pantalla

Configure diferentes opciones como Brillo, Auto Rotación de Pantalla, Fondo, Tiempo de Espera de Pantalla.

Espacio de Almacenamiento

- Ver la información de la tarjeta SD y el uso de memoria del teléfono.
- Permite la eliminación o el formateo de la tarjeta SD.
- Permite la selección de la memoria predeterminada.

Batería

- Uso de consumo de batería.

Aplicaciones

- Administrar Aplicaciones - Administrar y eliminar aplicaciones instaladas.
- Servicios Corrientes - Pulse para seleccionar uno de los servicios enumerados en el cuadro de operación. Pulse el botón "Parar" para cancelar cualquiera de los servicios en ejecución.

Ubicación

- Uso Inalámbrico - Utilizar los servicios inalámbricos para encontrar ubicaciones.
- Cuando se utiliza la ubicación por satélite GPS, aplique la precisión a nivel de la calle.

Seguridad

Configure bloqueos de pantalla: Utilice un patrón, PIN o contraseña para bloquear la pantalla.

- Patrón: La primera vez que habrá sencillas instrucciones de desbloqueo y ejemplos. Haga clic en "siguiente paso" para continuar con el paso del patrón de seguridad.
- PIN: Introduzca el número PIN para desbloquear la pantalla.
- Contraseña: Establecer contraseña para desbloquear la pantalla.

*Puedes cancelar la función de seguridad en cualquier momento. **Bloqueo de la Tarjeta Sim y Pin***

PIN de Tarjeta SIM se utiliza para prevenir el uso no autorizado de las tarjetas SIM. Para cambiar un código de PIN bloqueado, tendrá que desbloquear el SIM y luego ir a configuración de cambio de contraseña. El teléfono le pedirá que introduzca el código PIN antiguo y pedirá que introduzca un código PIN nuevo dos veces. El teléfono le mostrará que el cambio se haya realizado correctamente. Si introduce el PIN de forma incorrecta tres veces, el código PIN de la tarjeta SIM y se bloquea automáticamente. Usted necesitará el código PUK para desbloquear el teléfono. Este código está disponible a través de su proveedor de servicios. Si introduce el código PUK incorrecto 10 veces seguidas, la tarjeta SIM quedará bloqueada permanentemente. Por favor consulte a su proveedor de servicios para una nueva tarjeta SIM.

- Credenciales de Seguridad - Permite aplicaciones que visite las credenciales de seguridad.
- Instalar desde la tarjeta SD - Instale el certificado cifrado desde la tarjeta SD.

Teclado e Idioma

- Idioma – Cambiar el idioma del teléfono.
- Diccionario Personalizado - Agregar o eliminar palabras al diccionario personalizado.
- Teclado y métodos de entrada – Capitalizar,

Copia de Seguridad

- Copia de Seguridad – se copia de seguridad de todos los datos de aplicaciones, contraseñas WLAN y otros ajustes a los servidores de Google
- Restaurar datos de Fabrica - Borrar todos los datos y ajustes almacenados en el teléfono

Fecha y Hora

- Seleccione Formato de fecha - Hay 3 tipos de formatos que se pueden elegir: Mes-Día-Año – Día-Mes-Año y Año-Mes-Día. La opción de Mes-Día-Año y Día Mes es el valor predeterminado
- Zona horaria automática – Usar zona horaria proporcionada por la red.

Programar encendido y apagado

- Programar encendido y apagado

Accesibilidad

- Sistema – Subtítulos
- Gestos de ampliación
- Botón de encendido- Corta la Llamada
- Contraseñas Audibles
- Pantalla – Inversión de Color, Corrección de Color

1 Opciones de Desarrollo

Si el teléfono no muestra opciones para desarrollo, Pulse 'Numero de compilación' siete (7) veces en la ficha sobre el teléfono en ambientes para acceder.

- Depuración USB y otras funciones de desarrollo.

2 Acerca del dispositivo

- Se puede revisar posibles cambios de software o de firmware a través de la opción de Actualizaciones del sistema

Almacenamiento

Conecte el teléfono con el cable USB suministrado. Una vez conectado, el icono de conexión aparecerá en la barra de estado. Deslice hacia abajo la barra y haga clic en el icono. Una vez en el modo de interface de conexión, seleccione "almacenamiento masivo USB" y encender.



Algunos ajustes y la interface de usuario pueden variar dependiendo de la versión de SW final.

TABLE OF CONTENTS

1- Get Started with your Atrium 5.5 device	
Set up & use your device	1
Connect to WI-FI networks	8
Browse and organize your home screen	10
2- Explore your Atrium 5.5 device	
Make & receive phone calls	13
Manage your contacts and call log	16
Send & receive text messages	18
Type Text by speaking	22
Relax with Google Play	23
Change the wallpaper	24
3- Settings	
Wireless & network settings	25
Device Settings	33
Security settings	38
Account and location Settings	40
Factory Reset	44
4- Hardware reference	
Safety information	45
FCC	46

Get Started

Set up and use your device

- **Install SIM cards**

Important: Turn your device off before installing or removing the SIM cards. Do not bend or scratch the SIM cards. Take care when handling, installing, or removing SIM cards, and avoid exposing the SIM cards to static electricity, water, or dirt. Keep SIM cards out of reach of small children.

You can install up to 2 micro SIM cards in your Android device. You can check to see how many micro SIM cards are installed and assign activities to each of them on your device.

To install SIM cards in your Android device, follow these steps:

- 1- **While the phone is turned off, remove the back cover.**

If the battery is in place, remove it.


- 2- **Carefully insert the SIM cards into each of the SIM slots.**
- 3- **Insert the battery, making sure to align the gold contacts. Press down gently to secure the battery.**

- 4- Position the back cover over the battery compartment and press down firmly along the edges of the cover to secure it.

After you install a SIM card, you'll be asked to assign the activities you want to use the SIM card for, like phone calls, text messages, or using data.

- Check what SIM cards are installed


You can check to see what SIM cards are installed in your Android device at any time by following these steps:

- 1- Open your device's Settings menu .
- 2- Under "Wireless & networks," touch SIM management.
- 3- The screen shows the carrier data and phone number for each SIM card installed in the device.

- Assign activities for a SIM card

After you've installed SIM cards in your Android device, you can assign the activities you want to use each SIM card for. These activities include phone calls, text messaging, and using data.

To assign an activity to a SIM card, follow these steps:

- 1- Open your device's Settings menu .


- 2- Under "Wireless & networks," touch SIM management.
- 3- You can assign a SIM to an activity, such as SMS messaging. Under "Activities," touch the activity and choose the SIM to use.

For some apps, you'll need to assign a SIM card to complete app activities. Follow the instructions in the app to complete the process.


- Install a micro SD card
- A micro SD (Secure Digital) card is a small device you can insert in your phone to extend its storage capacity. For some apps or features on your phone, you'll need a micro SD card. Here's how to install and use it.
 - 1- While the phone is turned off, remove the back cover and the battery.
 - 2- Carefully place the SD card into the slot with an arrow labeled.
 - 3- Position the back cover over the battery compartment and press down firmly along the edges of the cover to secure it.
- Mount or unmount a micro SD card

To start using your micro SD card after you've inserted it, you need to make sure it's mounted. If you want to remove the SD card, you need to unmount it first in order to remove it safely.

To mount or unmount a micro SD card, follow these steps:

- 1- **Open your device's Settings menu** .
 - 2- **Under "Device," touch Storage.**
 - 3- **To mount a micro SD card, touch Mount SD card.**
 - 4- **To unmount a micro SD card, touch Unmount SD card and then touch OK. If you unmount the SD card, some of your apps may not work properly until you remount the SD card.**
- **Erase a micro SD card**

To erase a micro SD card, follow these steps:

- 1- **Open your device's Settings menu** .
 - 2- **Under "Device," touch Storage.**
 - 3- **Touch Erase SD card to erase all data, including any music or photos saved on the SD card.**
- **Charge your Android device**

Your battery will not be fully charged when you first unpack your Android. It's a good idea to fully charge the battery as soon as you get a chance.

To charge your Android, follow these steps:

- 1- Using the adapter that comes with the phone, connect one end of the micro USB cable to the charger port at the bottom of the phone.**
- 2- Connect the other end to the travel adapter.**
- 3- Connect the travel adapter to a power outlet.**

Important: Use only the travel adapter and USB cable that came with your Android. Using a different travel adapter or cable may damage your phone.

Charging your phone through a USB cable attached to another device, such as a laptop computer, takes longer than charging with a travel adapter.

- Set up your Atrium 5.5**

The first time you turn on your Atrium 5.5, it'll walk you through the steps to get it set up. You'll be prompted to do the following:

- 1- Choose the language you want your phone to use**
- 2- Connect to a Wi-Fi network or your cellular data network**
- 3- Sign in with your Google Account**

If you use Gmail, you have a Google Account. Just use the same email address and password to sign in here. By signing in, all of your email, contacts, calendar events, and other data associated with that account will be synced to your phone.

If you don't have a Google Account, you can create one during the setup process. You can also skip this step and create one later.

If you have more than one Google Account, you can add other ones later.

To make sure your phone doesn't lose power during setup, it's recommended that you keep it plugged in until setup is complete.

- **Atrium 5.5Basics**

Here are some tips to get you familiar with your Atrium 5.5 device. They'll help you with the basic features you're likely to use often.

Navigation buttons



At the bottom of every screen, no matter what you're doing, you'll always find these three navigation buttons:

- 1- Back: Takes you back to your previous screen. If you back up to the Home screen, you can't go back any further.**


- 2- **Home:** Takes you to the Home screen. If you're on a left or right Home screen, it takes you to the central Home screen.
- 3- **Recent apps:** Opens a list of thumbnail images of apps you've used recently. To open an app, touch it. To remove a thumbnail from the list, swipe it left or right.

Settings and Quick Settings


To change your device's settings, including your network, sound, account, and many others, go to the Settings screen:

- 1- In your Favorites tray, touch the All Apps  icon.
- 2- Look for the Settings  icon and touch it.
- 3- Select the setting you want to change

You can get quick access to settings like Wi-Fi, screen brightness, and others you use frequently by going to Quick Settings

- 4- Swipe down from the top of the screen with one finger to pull down the notifications shade.
- 5- In the top-right, touch the Quick Settings  icon.

Help with your device

Many screens in apps and Settings include a Menu  icon. Touch it to explore additional options, often including a Help item that provides more information about that screen.

Connect to Wi-Fi networks


You can connect to Wi-Fi networks with your device, as well as add networks you use often or remove networks you don't use any longer. You can also change the settings for saved Wi-Fi networks on your device.

Keep in mind that your device will remember networks you connect to and connect automatically when in range.


- Turn on Wi-Fi and connect to a network
 - 1- Open your device's Settings menu .
 - 2- Under "Wireless & networks," touch Wi-Fi.
 - 3- Touch the Wi-Fi switch to turn it to the On position.
 - 4- You'll see a list of saved and available networks.
 - 5- Secured networks display a lock icon  and ask for a password to connect.

- 6- Your device will remember networks it connects to and automatically connect to them when in range.
 - 7- You can forget a saved Wi-Fi network if you don't want your device to connect to it automatically.
 - 8- Touch a network name from the list of available networks to connect to it.
 - 9- Once connected, your device will say "Connected" under the network name.
- Remove a Wi-Fi network

You can forget a saved Wi-Fi network if you don't want your device to connect to it automatically. To remove a Wi-Fi network from your device, follow these steps:


- 1- Open your device's Settings menu .
 - 2- Under "Wireless & networks," touch Wi-Fi.
 - 6- Make sure the Wi-Fi switch is in the On position.
 - 7- In the Wi-Fi settings screen, touch the name of a saved network.
 - 8- Touch Forget.
- View Wi-Fi network details and change network settings

You can view your saved Wi-Fi networks' details and change network settings by following these steps:

- 1- Open your device's Settings menu .**
- 2- Under "Wireless & networks," touch Wi-Fi.**
- 3- Connect to the network you want to view details for.**
- 4- Touch the network name. You can see information about:**
 - Connection status**
 - Signal strength**
 - Link speed**
 - Frequency**
 - Security**
- 5- To change network settings, touch and hold the network name. You can choose to:**
 - Forget the network**
 - Modify the network**

Browse and organize your home screens

- Browse Home screens**


Your Home screens are the first ones you see when you turn on or unlock your device. You can find them at any time when you touch the Home  button.

- Add apps and widgets to your Home screen

You can add apps and widgets ("at-a-glance" view of an app's most important information) to your Home screens so you can easily find them.

To add an app or widget to a Home screen:

Go to the Home screen where you want to place the app or widget.

- 1- Touch the All Apps icon .
- 2- Swipe right, if necessary, to find the app or widget you want.
- 3- Touch and hold the app or widget until the Home screen appears, slide it into place, and lift your finger.

To move an app or widget icon to a different location on a Home screen:

- 1- Touch and hold the icon.
- 2- Slide your finger to the new position. To bump another icon out of the way, slide slowly into it.

To move between Home screens, slide toward the edge of the screen.


3- Lift your finger.

4- The icon drops into its new position.

- **Remove an app or widget**

To remove an app or widget from a Home screen, follow these steps:

1- Touch and hold the app or widget.

2- Drag it up to the Remove icon  at the top of the screen.

- **Create a folder for apps**

To create a folder, follow these steps:

1- Touch and hold the app.




2- Slide the app icon quickly over the other.

3- To rename a folder, touch its name.






Make & receive phone calls

- **Make, receive, and block phone calls**

You can place calls from the Phone app , Contacts app , People app , or other apps or widgets that display contact information. Wherever you see a phone number, you can usually touch it to dial.

- **Make a phone call**

To open the Phone app, touch the Phone icon on your mobile device. Wherever you see a phone number on your screen, you can usually touch it to dial. You can use the Phone app to make a phone call in the following ways:

- 1- **Dialpad:** Touch the Dialpad  whenever you want to use the keypad to manually type in a phone number. Type the number, then touch the Phone icon below the keypad to make a call. If you type a wrong number, touch backspace  to erase digits one by one. To end a call in progress, touch end call  at the bottom of the screen.
- 2- **Speed dial:** Touch the "Speed dial" tab for one-touch dialing for your favorites and numbers you call frequently. Just touch the contact in the list and the call will start.



- 3- **Recents:** Touch the "Recents" tab to view your call log and select a contact or number that you recently called.
- 4- **Contacts:** Touch the "Contacts" tab to select from the list of all your contacts. Once you select a contact, touch their phone number to place a call.

- **Manage incoming phone calls**



When you receive a phone call, you'll get a notification that you have an incoming call. If the caller is an existing contact in your Contacts app or People app, you may see additional information about the caller. You can choose to answer or dismiss the phone call and send a text message to the caller.

You can manage an incoming call in the following way:

- 1- You can choose to answer or dismiss the call from within the notification simply by touching Answer or Dismiss.
- 2- For more options, touch the notification to open it, then touch the white phone icon, and slide over one of the following icons:
 - **Answer call:** Touch the green phone icon to answer the call and start talking to the caller.
 - **Send to voicemail:** Touch the red phone icon to direct the caller to leave a voicemail message.




- **Send a text message to the caller:** Touch the message icon  to open a list of quick short text responses or the option to write your own message and send it to the caller immediately. You can edit text responses from within the Phone app by touching the menu icon  then selecting Settings, Other Settings and then Quick responses.




To block a call, follow these steps:

- 1- Open the Contacts app  .
- 2- Touch the contact you want to block or add that contact.
- 3- Touch the menu icon  .
- 4- Check the box next to "Block incoming calls"

- Options during a call

During a call, you can touch the following icons in the Phone app:

- 1- Touch  to switch to the dial keypad.
- 2- Touch  to turn the speakerphone on or off. If a Bluetooth headset is connected, this functions as a three-way switch among the built-in earpiece, the speakerphone, and the headset. The icon changes to indicate the current output. Touch and hold to see a three-way menu.
- 3- Touch  to mute your microphone.

- 4- Touch  to put the other party on hold.
- 5- Touch  to switch to another call in progress.
- 6- Touch  to merge separate calls as a single conference call.


Answer or respond to another incoming call

To answer another incoming call while you're already in a call, touch the white phone icon and slide to answer, respond with a text message, or send the call to voicemail.





If you answer, the first call will be put on hold. If you respond with a message or send to voicemail, you return to the first call.

Manage your contacts and call log

- **Manage your contacts**

Favorite contacts, contacts you call often, and contacts you star will show on the screen when you open the Phone app. Open your Phone app by touching  on your mobile device.







To go to a contact's card, simply touch their name from your list of contacts. You can manage your contacts in the following ways:

- 1- **Search:** If you're looking for a specific contact, you can search your contacts or for nearby places in the Search bar at the top of the screen.
- 2- **Add a contact:** To add a contact touch the menu icon , then touch New contact and add the contact's information. If you're signed in to a Google Account, the new contact will sync with your account.
- 3- **Favorite:** To make a contact a favorite, touch the star icon  on a contact's card and it will show up in the speed dial tab when you open the Phone app.
- 4- **Organize:** You can organize the contacts on your screen in your speed dial list by touching and holding them to move them around.
- 5- **Edit:** To edit a contact, touch the edit icon  on a contact's card.
- 6- **Share:** To share a contact or place it on a Home screen for easier access, select it from the contacts list, then touch the menu icon .
- 7- **Remove:** Touch and drag contacts to the top of the screen to remove them from the grid.

- Use the call log


You can see a list of all the calls you've placed, received, or missed in the Recents tab in the Phone app. It's an easy way to redial a number, return a call, or add a number to your contacts.

To use the call log, follow these steps:

- 1- Open the Phone app  on your device.
- 2- Touch the "Recents" tab. You'll see a list of your most recent incoming and outgoing calls.
- 3- Touch View full call history to see more calls. Arrow icons beside a call indicate the type of call, and multiple arrows indicate multiple calls:
 - Missed incoming call 
 - Received incoming call 
 - Outgoing call 
- 4- You have the following options for recent calls:
 - Touch a number or contact then Details for more information about the call.
 - Touch "Call back" to dial the number.
 - Touch the trash icon  to delete the call from your call log.
 - Touch the the menu icon , then Edit number to make changes to the call back number.

Send & receive text messages


- Open messaging

From a Home or All Apps screen, touch the Messaging icon .

The Messaging screen opens, where you can create a new message or open an ongoing conversation.

To read the messages in an existing conversation, touch the conversation. A list of its messages appears.

Touch & hold a message to take any of these actions:

- 1- Copy text. Copy the message text.
 - 2- Forward. Forward the message to one of your contacts or another recipient.
 - 3- Lock. Prevent the message from being deleted if you reach your storage limits.
 - 4- View details. View information about the message and the sender.
 - 5- Delete. Delete the message from the conversation.
- Delete a conversation
 - 1- While viewing the list of conversations, touch & hold a conversation to select it.
 - 2- Touch the Trash icon  to delete the conversation.

To delete all conversations, go to the main Messaging screen and touch Menu > Delete all threads.

- Search Messaging

To search for a specific word or contact do the following:

- 1- Touch the Search icon .

The Search Messaging field appears at the top of the screen.

2- Use the onscreen keyboard to type your search terms.

- **Premium Text message warnings**

Apps may sometimes send text messages using premium services that cost you money. To alert you to such charges, Android detects any attempt by an app to send a message on your behalf. If it looks like the message may cause you additional charges, you'll see a dialog indicating the name of the app, the address to which the text message is being sent, and a warning. When this happens, you can choose to cancel the message or send it anyway.

From a Home or All Apps screen, go to Messaging > Menu > Settings.

- **Storage settings**

1- Delete old messages. Check to delete older messages in a conversation when limits are reached.


Uncheck to keep all messages.

2- Text message limit. Touch to set the number of text messages to save per conversation. When the limit is reached, older text messages are deleted if Delete old messages is checked.

- 3- Multimedia message limit. Touch to set the number of multimedia messages to save per conversation. When the limit is reached, older multimedia messages are deleted if Delete old messages is checked.**
- **Text message (SMS) settings**
 - 1- Delivery reports. Check to receive a delivery report for each text message you send.**
 - 2- Manage SIM card messages. Manage text messages stored on your SIM card.**
- **Multimedia message (MMS) settings**
 - 1- Delivery reports. Check to receive a delivery report for each multimedia message you send.**
 - 2- Read reports. Request to receive notifications that your message was read by the recipient.**
 - 3- Auto-retrieve. Check to automatically retrieve multimedia messages that you receive.**
 - 4- Roaming auto-retrieve. Check to automatically retrieve multimedia messages while roaming.**
- **Notification settings**
 - 1- Notifications. Check to display message notifications in the status bar.**
 - 2- Sound. Touch to select a ringtone for message notifications.**
 - 3- Vibrate. Touch to have your phone vibrate when messages are received.**

Type text by speaking

You can speak to enter text in most places that you can enter text with the onscreen keyboard.

1. Touch a text field, or a location in text you've already entered in a text field.
2. Touch the Microphone key  on the onscreen keyboard.
3. When you see the microphone image, speak what you want to type.

Say “comma,” “period,” “question mark,” “exclamation mark,” or “exclamation point” to enter punctuation. (*Spoken punctuation is currently supported in English, French, German, Italian, Russian, and Spanish.*)

When you pause, what you spoke is transcribed by the speech-recognition service and entered in the text field, underlined. You can touch the Delete key to erase the underlined text. If you start typing or entering more text by speaking, the underline disappears.

To improve processing of your voice input, Google may record a few seconds of ambient background noise in temporary memory at any time. This recording remains on the device only fleetingly and is not sent to Google.

Relax with Google Play


Google Play brings together all your favorite content in one place – movies, TV shows, books, music, magazines, and more – so you can reach it from any of your devices.

If you purchased content on Google Play in the past, you'll automatically have access to this content on other Android devices - just make sure you're signed in to the same account you used to purchase it.


- Use Google play widgets

These widgets are available for your Home screens:

- 1- **My Library:** Displays your most recently used music, books, and so on. Touch any of the images to see your content.
- 2- **Recommended on Play:** Suggests music, movies, and other content that may interest you. Touch the suggestion to learn more about it.
- 3- **Recommended apps:** Recommends apps that you can add to your Home screen. Touch the recommendation to learn more about it.



To resize a widget, touch & hold, then let go and drag the blue dots. To remove it, touch & hold, then drag it to the Remove icon at the top of the screen.

To add another Google Play widget, touch the  All Apps icon, then Widgets, and swipe from right to left until you see the one you want. Then touch & hold, and let go in the Home screen location you want.

- Shop on Google Play

To open the Google Play Store app, touch the Play Store icon on a Home or All Apps screen.

Most things you purchase on Google Play are available from your computer as well as from any of your Android mobile devices. (Android apps are one exception – they run only on Android devices.)

Sign in to play.google.com to get your entertainment from anywhere

- Google Play Support

For more detailed information about Google Play, including phone and email support options, visit:

Support.google.com/googleplay

Change the wallpaper

To change the wallpaper that's displayed on your Home screens:

- 1- Touch & hold anywhere on a Home screen that's not occupied. A list of options appears.

- 2- Touch a wallpaper source, such as Live Wallpapers. You can download additional wallpapers on Google Play.
- 3- To set a wallpaper, touch Set wallpaper or, for other images, drag the blue dots to determine the cropping and touch OK.

To change your device's wallpaper in Settings, touch Settings > Device > Display > Wallpaper.

Wireless & network settings

- Optimize data usage


Data usage is the amount of data that your device uploads or downloads in a given period. You can check your data usage in the Settings app on your device. You can see how you use data and change the settings to make sure you're not using data unnecessarily.

Important: The data usage you see in your device's Settings app is measured by your device - your carrier could count data usage differently. If you go over your plan's data usage limit, your carrier could charge you fees. Check your plan to see your data limits.

You can turn mobile data on or off in the Settings app. If it's off, you can't use data over your mobile network and many features of your device and apps might not work correctly. You'll still be able to use data if you're connected to a Wi-Fi network.


Keep in mind that you need to have a SIM inserted in your device to see the mobile data option. You need to assign cellular data usage to a SIM before adjusting data usage settings.

To turn mobile data usage on or off, follow these steps:

- 1- Open the Settings menu  on your device.**
 - 2- Under Wireless & networks, touch Data usage.**
 - 3- Move the switch next to "Cellular data" or "Mobile data" to the On or Off position. If you're turning data off, touch OK.**
- Check your data usage**

To check how you much data you use on your device, follow these steps:

- 1- Open the Settings menu  on your device.**
- 2- Under Wireless & networks, touch Data usage:**

- **In the Mobile tab, you can see how much data you use on your carrier's data network or networks. If more than one is displayed, touch the tabs at the top of the screen to switch between them.**
- **To see Wi-Fi usage, touch the menu icon  in the top right corner of the screen. Check the box next to "Show Wi-Fi usage." In the Wi-Fi tab on the main screen, your device will show how much data you use over Wi-Fi connections.**


3- You can check the following settings :

- **Check current data usage: By default, you'll see the date range of your most recent data usage cycle. You can see how much data you've used in that time period simply by looking in between the two vertical white lines on the graph.**
- **Check data usage from different time periods: Move the vertical white lines on the graph to the time period that you want to view. Then check to see how much data you used during that period of time.**
- **Check total data usage: You can see the total data usage for the time period you select below the graph.**

- **Check data usage by app:** You can see how much data each of your apps is using below the graph. Apps are listed in order of how much data they've used.
- **Set data usage Warning**

You can set a warning to alert you when your device uses a certain amount of data. This feature is only available if you have mobile data.

To set a data usage warning, follow these steps:


- 1- Open the Settings menu  on your device.
- 2- Under Wireless & networks, touch Data usage.
- 3- In the graph that shows your data usage, drag the line by its right side to the level where you want to receive a warning.
- 4- When your data usage reaches this level, you'll receive a notification on your device.

- **Set data usage limit on your device**


You can set a limit to the amount of data that your device uses. When your data usage reaches that limit, mobile data on your device will turn off automatically and you'll receive a notification. Many features on

your device might not work correctly when data is turned off. This feature is only available if you have mobile data.

To set a data usage limit, follow these steps:

- 1- Open the Settings menu  on your device.**
- 2- Under Wireless & networks, touch Data usage.**
- 3- Turn on Set cellular data limit or Set mobile data limit depending on your version of Android.**
- 4- When the dialog box appears, read the message, and touch OK.**
- 5- Drag the line at the top of the graph by its right side to the limit you want to set.**
- 6- When your data usage reaches this level, mobile data on your device will turn off automatically and you'll receive a notification.**


To turn mobile data back on, follow these steps:

- 1- Open the Settings menu  on your device.**
 - 2- Under Wireless & networks, touch Data usage.**
 - 3- Move the switch next to "Cellular data" or "Mobile data" to the On position.**
- Change you data usage settings**

You can adjust your data usage settings to optimize the data that you use. Some apps use data only when you're using them. Other apps use data in the background, even if you're not actually using the app. You can conserve data usage by changing how and when apps you use access data

You can conserve data usage by turning off access to data while you're on your mobile network. If you do this, you won't be able to get any data over your mobile network, but you'll still be able to use data when you connect to a Wi-Fi network.

To turn off data access over your mobile network, follow these steps:


- 1- Open the Settings menu  on your device.**
 - 2- Under Wireless & networks, touch Data usage.**
 - 3- Use the switch next to "Cellular data" or "Mobile data" to turn it off, then touch OK.**
 - 4- To turn mobile data back on, simply move the switch to the On position.**
- Data Roaming**

Data roaming allows your device to send data over other carriers' networks when you leave an area that is covered by your own carrier's networks. You can conserve data usage by turning off data roaming. Keep in mind that using data roaming may be the only way to connect to the Internet in some places.



- **Tethering & portable hotspot**

You can share your device's Internet connection with another device, such as a laptop computer, via USB tethering or Bluetooth tethering. You can also turn your mobile device into a portable Wi-Fi hotspot and share its Internet connection with up to 10 other devices at once.

You can turn your phone with mobile data into a portable Wi-Fi hotspot for up to 10 other devices, such as a laptop computer.

- 1- **Open your device's  Settings menu.**
- 2- **Under "Wireless & networks," touch More > Tethering & portable hotspot.**
- 3- **Check the box next to "Portable Wi-Fi hotspot."**

When the option is turned on, you'll see one of the following notifications:

-  **Portable Wi-Fi hotspot active**
-  **Multiple tethering or hotspot connections active**

Touch the notification, then follow these steps:

- 1- **Touch Set up Wi-Fi hotspot.**


- 2- You can choose a new name for the hotspot in the “Network SSID” field if you prefer. If you want a different password, enter a new one in the “Password” field. If you don’t want security, choose None under “Security.”
- 3- Touch Save.
- 4- Use the other device and find the new network name in the list of Wi-Fi options.
- 5- Select the network and enter the password.

To stop sharing your data connection, uncheck the box next to “Portable Wi-Fi hotspot.”

- USB tethering



USB tethering isn’t available on computers running Mac OS.

To share your phone’s Internet connection with another device using USB tethering, follow these steps:

- 1- Connect your phone to another device using a USB cable.
- 2- You’ll see a USB icon and a notification Connected as a media device or Connected as a camera appear at the top of the screen. For the purposes of tethering, the type of connection doesn’t matter.
- 3- Open your device’s  Settings menu.

- 4- Under “Wireless & networks,” touch More > Tethering & portable hotspot.
- 5- Check the box next to “USB tethering.”

When the connection is made, you’ll see one of the following notifications:


-  USB or portable hotspot active
-  Multiple tethering or hotspot connections active

To stop sharing your data connection, uncheck USB tethering or disconnect the USB cable.




Device Settings

- Set and change ringtones

You can change your default ringtone, have different ringtones for different people, and get new ringtones.

- 1- Open your device's Settings menu  .
- 2- Under "Device," touch Audio profiles.
- 3- Touch Settings for the selected profile.
- 4- Touch “voice call ringtone”.
- 5- Select a ringtone and touch OK to save.

Assign ringtone to contact:


- 1- Open the Contacts app . If you're running Android 4.4 or lower, open the People app .
- 2- Touch a contact, then touch Menu .
- 3- Touch Set ringtone.
- 4- Touch Phone ringtone.
- 5- Select a ringtone and touch OK to save.

Tip: You can quickly set your phone to vibrate for phone calls and texts. Make sure your screen is unlocked, then press the Volume Down key until you feel the phone vibrate. To resume normal ringing, press the Volume Up key

- Check your remaining battery life

You can see how much battery you have left by looking at the battery level icon at the the top of your screen. To check the percentage of your remaining battery life, swipe down from the top of the screen. Touch the battery icon to go to the battery setting menu.

You can check your remaining battery life and usage since last full charge in the Settings menu:

- 1- Open your device's Settings menu .

2- Under "Device," touch **Battery**.

3- You can check the following settings:

- **Percent of battery life**
- **Length of time your battery is estimated to last**
- **Use and usages details since last full charge**

- **Manage memory usage**

You typically don't need to worry about managing apps beyond installing, opening, and using them. But there may be times when you want to know more about what's happening behind the scenes in order to better manage your storage.


Important: Android manages and carefully guards the portion of internal storage where the system, apps, and most data for those apps are stored, because this area may contain your private information. It's not possible to view this portion of internal storage when you connect your device to a computer with a USB cable. The other portion of internal storage, where music, downloaded files, and so on are stored, remains visible for your convenience.


You're able to optimize your memory usage by:

- **Uninstalling apps you don't use.**

- **Deleting downloaded files or files you created.**
- **Copying files between your device and a computer via USB.**
- **Removing content from Google Play that's saved for offline use and streaming it via a Wi-Fi or mobile network.**

You can use the Apps screen to adjust several aspects of the way your device uses memory. To view these settings, follow these steps:

- 1- **Open your device's Settings menu  .**
- 2- **Under "Device," touch Apps.**
- 3- **You'll see three tabs at the top of the screen, each displaying a list of apps or their components.**
 - **Downloaded. Displays apps you've downloaded on Google Play or other sources.**
 - **Running. Displays all apps, processes, and services that are currently running or that have cached processes, and how much memory they are using. The graph on the Running tab shows the total memory in use and the amount free.**
 - **All. Displays all apps that came with Android and all apps you downloaded on Google Play or other sources.**

To switch the order of the lists displayed in the **Downloaded** or **All** tabs, touch **Menu**  > **Sort by name** or **Sort by size**.


To view details about an app or other item listed under any tab, touch its name. The information and controls available vary among different types of apps, but commonly include:

- **Force stop button.** Stops an app that is misbehaving. Stopping an app, process, or service may cause your device to stop working correctly. You may need to restart your device after doing this.
- **Uninstall button.** Deletes the app and all of its data and settings.
- **Disable button.** Prevents the app from running, but does not uninstall it. This option is available for some apps and services that can't be uninstalled.
- **Clear data button.** Delete an app's settings and other data without removing the app itself.
- **Clear cache.** If the app stores data in a temporary area of the device's memory, lists how much information is stored, and includes a button for clearing it.
- **Launch by default.** If you have configured an app to launch certain file types by default, you can clear that setting here.

- **Permissions.** Lists the kinds of information about your device and data the app has access to.


Security settings

- **Manage security settings**

You can manage the security settings for your device by opening the Settings menu  and touching Security. Here are the settings you can change:

- **Screen security:** Manage screen lock options. **Encryption:** Encrypt the data on your phone.
- **SIM card lock:** Set up a PIN to lock your device's SIM card.
- **Passwords:** Make passwords visible, which helps you to enter a password that is more complex and secure.
- **Device administration:** Manage device administrators, allow apps to be installed from sources other than the Play Store, and choose to verify apps from all sources. **Unknown sources:** Manage installation of apps from sources other than the Play Store.


- **Credential storage:** Manage, install, or clear certificates on your devices.
- **Trust agents:** Manage trust agents for features like Smart Lock

Tip: Touch Settings  > Security > Owner info to enter information that's displayed on the lock screen.

This can be useful in case you lose your device.

You can secure your phone by setting a screen lock. Each time you turn on your device or wake up the screen, you'll be asked to unlock your device.

- **Set up or change a screen lock:**


- 1- **Open your device's Settings menu .**
- 2- **Under "Personal," touch Security.**
- 3- **Under "Screen security," touch Screen lock. If you've already set a lock, you'll need to enter the pattern, PIN, or password before you can choose a different lock.**
- 4- **Touch the screen lock you'd like to use and follow the on screen instructions.**

Some applications can harm you or your device. You can choose to verify apps that you download from the Internet in order to help prevent harmful software from being installed on your device.

The Google Play Store helps prevent harmful software from being installed on your device by blocking potentially harmful apps. If you install apps from other sources, you can turn on app verification to make sure the apps you install are scanned for malware. You'll also need to allow your device to download apps from sources other than the Google Play Store.

Account and location Settings


You can add accounts so that information associated with that account automatically syncs with your device. You need to have an account set up on your device if you want to get apps from the Google Play store.

- **Add an account on your device**
 - 1- Open the Settings menu  on your device.
 - 2- Under "Accounts," touch Add account.
 - 3- Touch the type of account you want to add. You may be able to choose from choices like "Google," "IMAP," or "POP3."
 - Choose "Google" if you want to add your Google Account. When you sign in with a Google Account, all the email, contacts, Calendar events, and other data associated with that account are automatically synced with your device.

- Choose "IMAP" or "POP3" if you want to access your mail with a program like Microsoft Outlook or Thunderbird, even when you aren't connected to the Internet.


4- Follow the on-screen instructions to add the account.

Whenever you need to change the settings of any of the accounts you added, follow these steps to get to them:


- 1- Open the Settings menu  on your device.
 - 2- Under "Accounts," select your account. If you're using a Google account, touch Google and then your account.
- Remove an account from your device

You can remove an account you've added to your device. When you do so, everything associated with that account, including email, contacts, and settings, will also be deleted.

To remove an account from your device, follow these steps:

- 1- Open the Settings menu  on your device.
- 2- Under "Accounts," touch the name of the account you want to remove.

3- If you're using a Google account, touch Google and then the account. Keep in mind that when you sign out of your Google Account, all the email, contacts, Calendar events, and other data associated with that account will no longer automatically sync with your device.

4- Touch the Menu icon  in the top right corner of the screen.


5- Touch Remove account.

- Change your location mode

You can use different modes when you turn on location for your device. These modes replace the GPS, Wi-Fi, and cellular network options in previous versions of Android.

Each mode uses different sources to estimate your device's location. You can allow apps to use this information to provide location-based services, such as the ability to check in, view commute traffic, or find nearby restaurants.

To control what location information your device can use, follow these steps:

1- Open your device's Settings menu  .


2- Under "Personal," touch Location.

- **When the switch at the top of the screen is Off, your device location isn't shared with any apps.**

Important: Turning off location for your device also turns it off for Google apps and non-Google apps. That means that apps can't use your device location, and many useful features will be turned off.

When the switch at the top of the screen is On, you can select one of the following modes:

- **High accuracy. High accuracy mode uses GPS, Wi-Fi, cellular networks, and other sensors to get the highest-accuracy location for your device. It uses Google's location service to help estimate your location faster and more accurately.**
- **Battery saving. Battery saving mode estimates your location using low battery-intensive location sources, such as Wi-Fi and cellular networks. It uses Google's location service to help estimate your location faster and more accurately.**
- **Device only. Device only mode estimates your location using GPS only. It doesn't use Google's location service to provide location information. This mode may use more battery power and take longer to determine your location.**

You'll see the location icon  at the top of your screen when your device's precise location is being used by any app. This icon doesn't necessarily indicate GPS activity: it means that a mode using more power to determine your location is turned on.

Factory reset

If you want to erase all your personal data from your device, follow these steps:

- 1- **Open your device's Settings menu.**
- 2- **Under "Personal," touch Backup & reset.**
- 3- **Touch Factory data reset.**

All of your data is erased from your device, including your Google Account, any other accounts, your system and app settings, and any downloaded applications.

After resetting your device, you'll need to re-enter the same information requested when you first set it up. If you've been backing up your data to a Google Account, an option during the setup process allows you to restore it.

Safety information

To reduce the risk of fire or electric shock, do not expose the battery charger to rain or moisture. Do not expose the charger to dripping or splashing of liquids.

- The battery charger must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
- Charge the battery only on a charger approved by Figo. Do not continue charging the battery if it does not reach full charge within the specified charging time. Doing so may cause the battery to become hot, rupture, or ignite. If you see any heat deformation or leakage, properly dispose of the battery.
- Do not expose the battery to temperatures greater than 212°F (100°C). If exposed to excessive heat, the battery can catch fire and explode.
- Do not place the battery in direct sunlight, or use or store it inside cars in hot weather where it can be exposed to temperatures in excess of 140°F (60°C). Doing so may cause the battery to generate heat, rupture, or ignite. Using the battery in this manner also may result in a loss of performance and a shortened life expectancy.

- **Do not short circuit the battery. Avoid placing it around metal objects such as keys, pocket change, paper clips, and jewelry.**
- **Do not hit the battery with a hammer, step on, throw or drop it to expose it to a strong shock. Do not pierce the battery with a sharp object such as a nail. Do not crush, dent, or deform the battery in any way. If the battery becomes deformed, properly dispose of it.**
- **The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 212°F (100°C), or incinerate. Replace battery with an approved Figo battery only. Use of another battery may present a risk of fire or explosion.**

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: F55L (FCC ID: 2ADX3F55L) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the **ear is 0.27W/kg** and when properly worn on the body is **1.23W/kg**. This device was tested for typical body-worn operations with the back of the handset kept **1.5cm** from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a **1.5cm** separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **1.5 cm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

FCC Hearing-Aid Compatibility (HAC)

The (SL5550) has been tested for hearing aid compatibility. This device has an M4 and T3 rating. When some wireless devices are used near some hearing devices such as hearing aids and implants, users may detect a buzzing or humming noise. Some hearing devices are more immune than others to this interference noise. Wireless devices may also vary in the amount of interference they generate.

The ratings for compatibility of digital wireless devices with hearing aids are described in the American National Standards Institute (ANSI) C63.19 standard:

M-Rating: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference with hearing devices than phone that are not labeled. M4 is the better/higher of the two ratings. (SL5550) is rated M4.

T-Rating: Phones rated T3 or T4 meet FCC requirements and are likely be more usable with hearing devices' telecoil than unrated phones. T4 is the better/higher of the two ratings. (SL5550) is rated T3.

The more immune the hearing aid device is, the less likely one is to experience interference noise from the wireless phone. Hearing aid devices may also be rated. Adding the rating of the hearing aid and the phone would determine probable usability:

1. Any combined rating equal to or greater than six offers the best use.
2. Any combined rating equal to five is considered normal use.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use this device successfully. Trying out this device with your hearing device is the best way to evaluate it for your personal needs. This device has been tested and rated for use with hearing aids for some of the wireless technologies that it utilizes. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control:

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC:

<https://fjallfoss.fcc.gov/oetcf/eas/reports/GenericSearch.cfm>