

MAXWEST MX-BT2

BT Portable Speaker USER GUIDE



For correctly operating , please read this manual carefully before using. Any content revise of the manual won't declare again, and we are no responsible for consequence caused by fault or oversight of this manual

FEATURES:

1. 1.0 outdoor active Bluetooth Speaker with 10W output
2. Output very clear sound and dynamic sound effect
3. With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
4. Secure simple pairing for user-friendly operating
5. 10 meters operating range
6. With USB and Micro SD card supporting;
7. With FM radio
8. With Line-in function, suitable for PC, MID, TV and other audio device.
9. Built-in lithium rechargeable battery 1500mAh
10. With handle, easy to take out.

SPECIFICATION:


Horn Size:3 inch

Horn output: 10W*1,4Ω

Battery Capacity: 1500mAh

Frequency Response:100-20Khz

INSTRUCTION FOR APPEARANCE AND KEY:

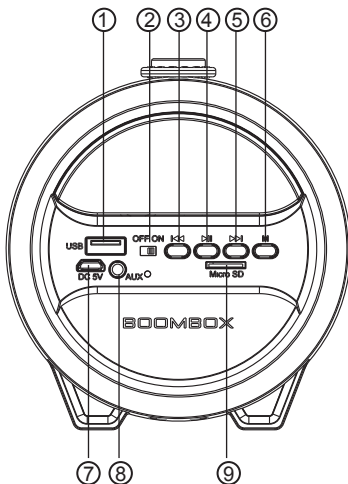

- | | | |
|------------------|------------------|---|
| 1.USB port | 2. ON/OFF button | 3. Backward |
| 4.Play/Pause | 5. Forward | 6. Mode (Switch Bluetooth,USB disk, SD,FM and AUX-IN state) |
| 7. Charging jack | 8.Aux-in jack | 9.Micro SD slot |

Bluetooth:

- 1.Turn the power button to "ON", The LED light turn blue and twinkle quickly and beep twice.

2. Activate *Bluetooth* of mobile phone and search for device name “MX-BT2” then connect it. The blue LED light twinkle slowly and and beep third times once connected successful.

3. Play the music from your mobile phone and enjoy.

4. Press forward or backward button on the devices or on Mobile phones to select songs you like.

5. Press Play/pause button on the devices or on Mobile phones to play/stop the music

6. Use the bluetooth device to adjust volume up and down. Or long press to forward or backward button to adjust volume up and down

Playing music from USB disk & Micro SD card:

1. Turn the Power button to “ON”.

2. Insert Micro SD card or USB flash disk into slot, the music stored will be played automatically and blue LED light always keep lighting.

3. Under playing mode, short press forward or Backward button to select songs you like, long press to forward or backward button to adjust volume up and down.

4. Press PLAY/PAUSE to play or pause.

5. Please turn the Power button to “OFF” while without use.

Remark: Under Bluetooth playing mode, insert Micro SD card or USB will disconnect the Bluetooth and switch the playing from USB or Micro SD card. You can press the MODE button to switch to Bluetooth mode again.

FM Radio:

1. Under FM radio state, the audio cable provided treat as antenal. Please Insert the audio cable to get the best FM signal before using.

2. Turn the power button to “ON”, press the “MODE” button to switch to FM radio state.

3. Under playing mode, short press “Play/pause” button to auto search the FM Channel and store it automatically.

4. Press forward or backward button to change the stored FM channel.

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device’s “Line Out” to the “Aux In” of this devices. Then press the “MODE” button to switch to AUX-IN state. Enjoy...

When using an external device, all functions will be controlled by the external device .

Remarks:

1. Press the MODE button to switch the different modes, the order is Bluetooth, Micro SD card, USB disk, FM radio and AUX-IN.

2. Turn the power button to “off” to cut off the power supply while without use.

How to charge:

1. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with 5V output (Not included),the red charging indicator keep lighting.
2. Charge time should be 3-5 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.

Warning:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.