



INSTRUCTIONS

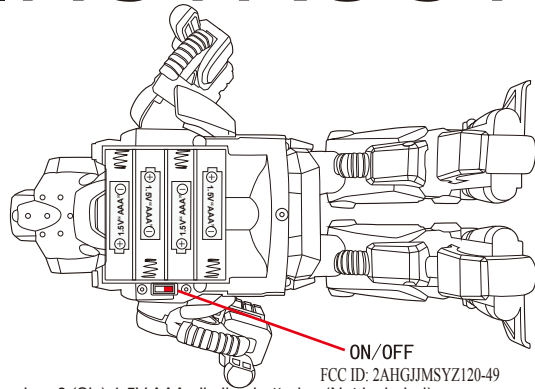

FCC ID: 2AHGJJMSYZ120-49

⚠ CAUTION:

- 1.ALWAYS PURCHASE THE CORRECT SIZE AND GRADE OF BATTERY MOST SUITABLE FOR INTENDED USE.
- 2.DO NOT MIX OLD & NEW BATTERIES,ALKALINE, STANDARD(CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.
- 3.CLEAN THE BATTERY CONTACTS AND ALSO THOSE OF THE DEVICE PRIOR TO BATTERY INSTALLATION
- 4.ENSURE THE BATTERIES ARE INSTALLED CORRECTLY WITH THE REGARD TO POLARITY (+ AND -)
- 5.ALWAYS REMOVE BATTERIES IF CONSUMED OR IF PRODUCT IS TO BE LEFT UNUSED FOR A LONG TIME.

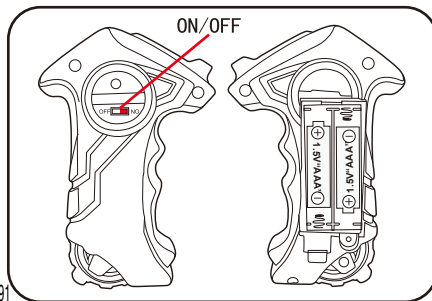

FCC ID: 2AHGJJMSYZ120-491

FCC ID: 2AHGJJMSYZ120-49

FCC ID: 2AHGJJMSYZ120-491

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received,including interference that may cause undesired operation.

Warning:Changers or modifications to this unit not expressly approved by the party responsible for the compliance could void the user's authority to operate the equipment.

NOTE:This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to Part, 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.

However,there is no guarantee that interference will not occur in a particular installation.If this equipment dose cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ATTENTION - FOR BEST RESULTS:

- 1.Please remove the batteries from the robot and the remote control, if the product will not be used for a long period of time.
- 2.Please keep the product dry.

- 1.Requires 6 (Six) 1.5V AAA alkaline batteries (Not included).
- 2.Put 4 "AAA" size batteries into the robot and 2 "AAA" size batteries into the remote control as pictured.
- 3.Turn the red switch on the back of the robot to "ON".Turn the red switch on the top of control to"ON".
- 4.The robot is now ready for use.
Shake the right hand control,robot will give a right punch and a little right step.
Vice versa.
Shake two controls one at a time,robot will give punches while moving forward.
- 5.Do not shake the controller too fast which would make the robot disordered.
If the robot happen to make sound but without moving,pls shake&swing the equipment gently for 20-30times and the robot will be working fine.
- 6.Please do not play the robot at high place.
If the equipment fall down,its function will likely become disordered.