



Control4 CORE-3 Controller Installation Guide



Supported models

- C4-CORE3 Control4 CORE-3 Hub & Controller

Introduction

Designed for an exceptional family room entertainment experience, the Control4® CORE-3 Controller does more than automate the gear around your TV; it is the ideal smart home starter system with entertainment built in.

The CORE-3 delivers a beautiful, intuitive, and responsive on-screen user interface with a touch remote and enhances the entertainment experience for any TV in the home. The CORE-3 includes a built-in remote control, a built-in IR receiver, and a built-in Blu-ray player, satellite or cable boxes, game consoles, TVs, and virtually any product with infrared (IR) or serial (RS-232) control. It also features IP control for Apple TV, Roku, televisions, A/VRs, or other network-connected devices, as well as secure wireless ZigBee control for lights, thermostats, smart locks, and more.

For entertainment, the CORE-3 also includes a built-in music server that allows you to listen to your own music library, stream from a variety of feeding music services, or from your AirPlay-enabled devices using Control4 ShareBridge technology.

Box contents

The following items are included in the CORE-3 controller box:

- CORE-3 controller
- AC power cord
- IR emitters (4)
- External antennas (1)

Accessories available for purchase

- CORE-3 Wall-Mount Bracket (C4-CORE3-WM)
- Rock Mount Kit (C4-CORE3-RMK)
- Control4 3-Meter Wireless Antenna Kit (C4-AK-3M)
- Control4 Dual-Band WiFi USB Adapter (C4-USBWIFI) OR C4-USBWIFI-I
- Control4 3.5 mm to DB9 Serial Cable (C4-CBL3.5-DB9B)

Requirements and specifications

- Note: We recommend using Ethernet instead of WiFi for the best network connectivity.
- Note: The Ethernet or WiFi network should be installed before starting the CORE-3 controller installation.
- Note: The CORE-3 requires OS 3.3 or newer.

Composer Pro software is required to configure this device. See the *Composer Pro User Guide* (ctrl4.co/go/cpro-ug) for details.

Warnings

Caution! To reduce the risk of electrical shock, do not expose this apparatus to rain or moisture.

AVERTISSEMENT! Pour réduire le risque de choc électrique, n'exposez pas cet appareil à la pluie ou à l'humidité.

Caution! In an over-current condition on USB, the software disables the output. If the attached USB device does not appear to power on, remove the USB device from the controller.

AVERTISSEMENT! Dans une condition de surintensité sur USB ou sortie de contact le logiciel désactive sortie. Si le périphérique USB ou le capteur de contact connecté ne semble pas s'allumer, retirez le périphérique du contrôleur.

Specifications


	Inputs / Outputs
Video out	1 video out—HDMI
Video	HDMI 2.0a; 3840x2160 @ 60Hz (4K); HDCP 2.2 and HDCP 1.4
Audio out	4 audio out—HDMI 2 × 3.5 mm stereo audio, 1 digital coax
Digital signal processing	Digital coax in—Input level Audio Out 1/2 (dual)—Balance, volume, loudness, 5-band PEQ, mono/stereo, test signal, mute Digital coax out—Volume, mute
Audio playback formats	AAC, AIF, ALAC, FLAC, M4A, MP3, MP3, MP4/M4A, Ogg Vorbis, PCM, WAV, WMA
Audio in	1 audio in—digital coax audio in
High-resolution audio playback	Up to 192 kHz / 74 bit
Ethernet	Network 2 10/100/1000BaseT compatible ports—PoE-in and 1 standard network port
Wi-Fi	Available with USB Wi-Fi adapter
ZigBee Pro	802.15.4
ZigBee antenna	External reverse SMA connector
Z-Wave	Z-Wave 700 series
Z-Wave antenna	External reverse SMA connector
USB port	1 USB 3.0 port—500mA Control
IR out	6 IR out—5727mA max output
IR capture	1 IR receiver—front, 20-40 kHz
Serial out	3 serial out (shared with IR out 1-3)
Relay	1 × 2-30V DC input, 12V DC 125mA max output 1.2 lb (0.54 kg) max across relay; DC: 24V, 2A max across relay
Power requirements	100-240 VAC, 60/50Hz or PoE+
Power consumption	Max: 18W, 61 BTU/hr/hour Idle: 12W, 41 BTU/hr/hour
Operating temperature	32°F to 104°F (0°C to 40°C)
Storage temperature	4°F to 158°F (20°C to 70°C)
Dimensions (H × W × D)	1.3 × 7.5 × 5.0" (28 × 191 × 127 mm)
Weight	2.2 lb (1.0 kg)
Shipping weight	
	Other

Additional resources

The following resources are available for more support.


- Control4 CORE series help and information: ctrl4.co/cocx
- Shop One Tech Community and Knowledgebase: tech.ctrl4.com
- Control4 Technical Support
- Control4 website: www.ctrl4.com

Front view



- A Activity LED**—The Activity LED shows when the controller is streaming audio.
- B IR window**—IR blaster and IR receiver for learning IR codes.
- C Caution LED**—This LED shows solid red, then blinks blue during the boot process.
- D Link LED**—The LED blinks orange during the factory restore process. See "Reset to factory settings" in this document.
- E Power LED**—The blue LED indicates that AC power is present. The controller turns on immediately after power is applied to it.

Back view

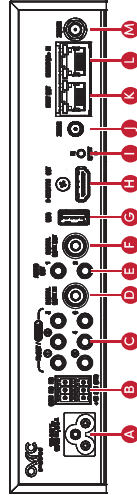

- A Power port**—AC power connector for an IEC 60320-C5 power cord.
- B Terminal and relay**—Connect one relay device and one contact sensor device to the terminal block connector. Relay connections are COM, NC (normally-closed), and NO (normally open). Contact sensor connections are +12_VSIG (signal), and GND (ground).
- C SERIAL and IR OUT**—3.5 mm jacks for up to four IR emitters or for combination of IR emitters and serial devices. Ports 1 and 2 can be configured independently for serial control (for controlling receivers or disc changers) or for IR control. See "Connecting the IR ports/serial ports" in this document for more information.
- D DIGITAL COAX IN**—Allows audio to be shared over the local network to other Control4 devices.
- E AUDIO OUT 1/2**—Outputs audio shared from other Control4 devices or from digital audio sources (local media or digital streaming services).
- F DIGITAL COAX OUT**—Outputs audio shared from other Control4 devices or from digital audio sources (local media or digital streaming services such).
- G USB**—One port for an external USB drive (such as a USB stick formatted FAT32). See "Setting up external storage devices" in this document.
- H HDMI OUT**—An HDMI port to display navigation menus. Also an audio out over HDMI.
- I ID button and RESET**—ID button is pressed to identify the device in Composer Pro. The ID button on the CORE-3 is also an LED that displays feedback useful in a factory restore. The RESET pinhole is used to reset or factory restore the controller.
- J ZWAVE**—Antenna connector for the Z-Wave radio.
- K ENET/POE+ IN**—RJ-45 jack for Ethernet out connection. Acts as a 2-port network switch with ENET/POE+ IN jack.
- L ENET/POE+ IN**—RJ-45 jack for a 10/100/1000BaseT Ethernet connection. Also can power the controller with PoE+.
- M ZIGBEE**—Antenna connector for the ZigBee radio.

Installation instructions

To install the controller:

- Ensure that the home network is in place before starting system setup. An Ethernet connection to the local network is required for setup. The controller requires a network connection to use all of the features as designed. After initial configuration, Ethernet (recommended) or Wi-Fi can be used to connect the controller to web-based media databases, communicate with other IP devices in the home, and access Control4 system updates.
- Mount the controller near the local devices you need to control. The controller can be hidden behind a TV or placed on a shelf. The CORE-3 Wall-Mount Bracket is sold separately and designed for easy installation of the CORE-3 controller behind a TV or on the wall.
- Attach antennas to the ZIGBEE and ZWAVE antenna connectors.
- Connect the controller to the network.

- Ethernet**—To connect using an Ethernet connection, connect the network cable into the controller's RJ-45 port (labeled "Ethernet") and into the network port on the wall or at the network switch.
- Wi-Fi**—To connect using Wi-Fi, first connect the unit to Ethernet, connect the Wi-Fi adapter to the USB port, and then use Composer Pro System Manager to reconfigure the unit for Wi-Fi.

- Connect system devices. Attach IR and serial devices as described in "Connecting the IR ports/serial ports" and "Setting up IR emitters."
- Set up any external storage devices as described in "Setting up external storage devices" in this document.
- If using AC power, connect the power cord to the controller's power port and then into an electrical outlet.

Connecting the IR ports/serial ports (optional)

The controller provides four IR ports, and ports 1 and 2 can be reconfigured independently to support serial communication. It can be used for IR. Connect a serial device to the controller using the Control4 3.5 mm-to-DB9 Serial Cable (C4-CBL3.5-DB9B, sold separately).

- The serial ports support baud rates between 1200 to 115200 baud for odd and even parity. The serial ports do not support hardware flow control.
- See Knowledgebase article #268 (dealer.ctrl4.com/dealer/knowledgebase/article/268) for pinout diagrams.
- To configure a port for serial or IR, make the appropriate connections in your project using Composer Pro. See the *Composer Pro User Guide* for details.

Note: The serial ports can be configured as straight-through or null with Composer Pro. Serial ports by default are configured straight-through and can be changed in Composer by selecting **Enable Null-Modem Serial Port (1 or 2)**.

Setting up IR emitters

Your system may contain third-party products that are controlled through IR commands. Set up one of the included IR emitters to an IR OUT port on the controller.

- Connect one of the included IR emitters to an IR OUT port on the controller.
- Place the stick-on emitter and onto the IR receiver on the Blu-ray player, TV, or other target device to drive IR signals from the controller to the targets.

Setting up external storage devices (optional)

You can store and access media from an external storage device, for example, a network hard drive or USB memory device, by connecting the USB drive to the USB port and configuring or scanning the media in Composer Pro.

- Note: Self-powered USB drives are not supported.
- Note: When using USB storage devices on a CORE-3 controller, you can use only one partition with a 2 TB maximum size. This limitation also applies to the USB storage on other controllers.

Composer Pro driver information

Use Auto Discovery and SDDP to add the driver to the Composer project. See the *Composer Pro User Guide* (ctrl4.co/go/cpro-ug) for details.

OvC setup and configuration

OvC gives you remote device management, real-time notifications, and intuitive customer management, right from your computer or mobile device. Setup is plug-and-play, with no port forwarding or DDNS address required.


To add this device to your OvC account:

- Connect CORE-3 controller to the Internet.
- Navigate to OvC (www.ovc.com) and log in to your account.
- Add the device (MAC address and Service Tag numbers needed for authentication).


Connecting the contact port

The CORE-3 provides one contact port on the included pluggable terminal block (+12, SIG, GND). See the examples below to learn how to connect various devices to the contact port.


Wire the contact to a sensor that also needs power (Motion sensor)



Wire the contact to a dry contact sensor (Door contact sensor)

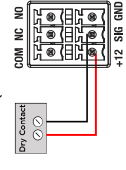


Wire the contact to an externally powered sensor (Driveway sensor)

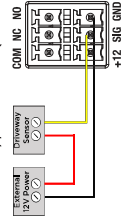


Connecting the relay port

The CORE-3 provides one relay port on the included pluggable terminal block. See the examples below to learn how to connect various devices to the relay port.


Wire the relay to a single-relay device, normally open (Fireplace)

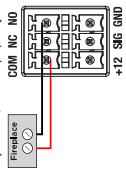

Wire the relay to a dual-relay device (Blinds)

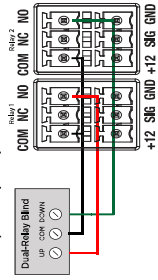

Wire the relay with power from the contact, normally closed (Amplifier trigger)

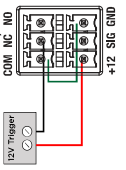

Troubleshooting

Reset to factory settings

⚠ Caution! The factory restore process will remove the Composer project.

To restore the controller to the factory default image:

1. Insert one end of a paper clip into the small hole on the back of the controller labeled **RESET**.
2. Press and hold the **RESET** button. The controller resets and the **ID** button changes to solid red.
3. Hold the button until the **ID** flashes double orange. This should take five to seven seconds. The **ID** button flashes orange while the factory restore is running. When complete, the **ID** button turns off and the device power cycles one more time to complete the factory restore process.

✔ Note: During the reset process, the **ID** button provides the same feedback as the Caution LED on the front of the controller.

Power cycle the controller

1. Press and hold the **ID** button for five seconds. The controller turns off and back on.


Reset the network settings

To reset the controller network settings to the default:

1. Disconnect power to the controller.
2. While pressing and holding the **ID** button on the back of the controller, power on the controller.
3. Hold the **ID** button until **ID** button turns solid orange and the Link and Power LEDs are solid blue, and then immediately release the button.

✔ Note: IDuring the reset process, the **ID** button provides the same feedback as the Caution LED on the front of the controller.


LED status information

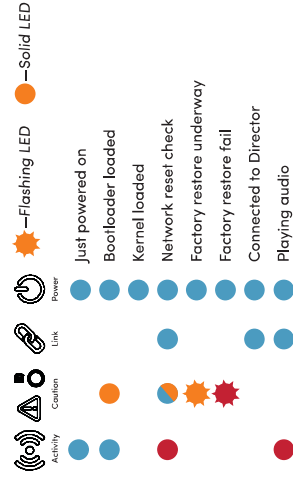

More help


For the latest version of this document and to view additional materials, open the URL below or scan the QR code on a device that can view PDFs.

1033 RECENT VERSION

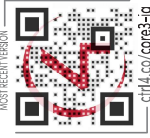

ctrl4.co/core3-ig

1036 INFO ON CORE CONTROLLERS

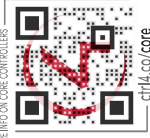

ctrl4.co/core

Legal, Warranty, and Regulatory/Safety information

Visit snapone.com/legal for details.



control4.com | 888.400.4070

Copyright 2021, Snap One, LLC. All rights reserved. Snap One and its respective logos are registered trademarks or trademarks of Snap One, LLC (formerly known as Wirepath Home Systems, Inc.) in the United States and other countries. Snap One, Snap One Custom My Home, SnapAV, Macquigance, NEEQ, CynC, Wirepath, and Wirepath ONE are also registered trademarks or trademarks of Snap One, LLC. Other names and brands may be claimed as the property of their respective owners. Snap One makes no claim that the information contained herein covers all installation scenarios and contingencies, or product use risks. Information within this specification subject to change without notice.

2021-10-21 0H
A