



Connect Spark: NC1S-SDI-3G

# USER MANUAL



# About our user manual

**Thank you for purchasing NewTek™ NC1S-SDI-3G SDI WIFI video encoder.**

Before install NC1S-SDI-3G video encoder, please read this user manual carefully. Please strictly to follow our manual to install and use our encoder, or install and use under guiding by professional person, to protect your body safety and to avoid the encoder damage from physical and electrical. The encoder may be damaged if incorrect electrical connection or the physical installation, even threaten the operator safety.

## Copyright

**© 2017 NewTek, Inc.**

This manual is protected by international copyright laws. Any of the contents of this manual can not in any form or manner (electronic or mechanical) copy, distribute, translate or disseminate, including any information storage and retrieval photocopying, recording, or stored in systems without NewTek, Inc. prior written permission.

## Trademark

**NewTek is registered trademark of NewTek, Inc.**

# Manual

<b>1</b>	<b>DEVICE CONNECTION.....</b>	<b>1</b>
1.1	CONNECT VIDEO SIGNAL .....	1
1.2	CONNECT INTERNET .....	1
1.3	CONNECT ANALOG AUDIO INPUT/OUTPUT (OPTION) .....	1
1.4	CONNECT THE POWER ADAPTER .....	1
<b>2</b>	<b>LED INDICATOR DESCRIPTIONS .....</b>	<b>2</b>
<b>3</b>	<b>DEVICE CONFIGURATION AND MANAGEMENT .....</b>	<b>3</b>
3.1	FACTORY DEFAULT IP ADDRESS .....	3
3.2	LOG IN MANAGEMENT INTERFACE VIA WEB BROWSER.....	3
3.3	DEVICE WORKING STATUS .....	4
3.4	AUDIO SIGNAL SOURCE OPTION.....	5
3.5	DECODER/VIDEO DECODER SOFTWARE CONNECT THE ENCODER .....	7
3.6	RESTORE FACTORY SETTINGS .....	8
3.7	FIRMWARE UPGRADING .....	8
3.8	NETWORK CONFIGURATION .....	9
3.9	QUICK RESET .....	10
3.10	REBOOT .....	10
<b>4</b>	<b>NOTICE AND STATEMENT .....</b>	<b>11</b>

# 1 Device connection

## 1.1 Connect video signal

### (1) Connect SDI signal

Connect SDI signal to corresponding NC1S-SDI-3G SDI input port through the corresponding cable from the signal source (such as camera or other SDI devices).



To improve signal quality and ensure the effective transmission distance of SDI signal, please use high quality SDI coax. Inferior coax may seriously cause the signal quality, like snow, streaking, smear, blurring, or worse, no signal input.

## 1.2 Connect internet

Connect one end of the network cable to the encoder Ethernet interface. The other end is connected to the network switch, or the computer's Ethernet port.



Please note: When using the common network cable directly to the computer's network port, the port should have automatic transfer function. Otherwise, please use a crossover cable to connect.

## 1.3 Connect analog audio input/output (option)

Audio input/output interface is 3.5mm analogy audio.

## 1.4 Connect the power adapter

Using the power adapter (DC12V1A) connect to the main product, after the power is turned on, then the product starts working immediately.



Be sure to use the original power adapter, or compatible with the electrical/mechanical characteristics of device power adapter. Improper power adapter may damage the device, and even endanger the operator safety! When you use a charger for charging, adapter shall be installed near the equipment and shall be easily accessible.

Manufacturer of Power Adapter: Dongguan Xiaoderdu Electronics Co., LTD.

Parameters of Power adapter: Input voltage: 100-240VAC 50/60Hz; Output voltage:


Output voltage: 12V; Product name: AC/DC Adapter; Model No.: STD-412K-A+

## 2 LED indicator descriptions

Name	Color	State	Descriptions
RUN	green	flashing	the device is start to encode, or encoder is not start, or restore device to factory settings (and LINK lights flashing simultaneously)
		off	device not working properly
LINK	green	always on	network cable is connected
		flashing	restore device to factory settings (and LINK lights flashing simultaneously)
		off	network cable is not connected
POWER	red	always on	power supply is connected
		off	power supply is not connected

## 3 Device Configuration and Management

### 3.1 Factory default IP address



Encoder default IP address is 192.168.1.168, net Mask is 255.255.255.0. You can log in WEB management interface to change the address.

### 3.2 Log in management interface via WEB browser

Before log in NC1S-SDI-3G Web management interface, please ensure that the following network conditions are connected:


- Your computer is connected with encoder correctly;
- Insure your computer IP address and the IP address of the encoder in same network segment;
- Try using PING and other network testing tools to identify and insure to be communicated with the encoder based on TCP / IP protocol.

After reaching the above conditions, use a Web browser to access the following address:




<http://<device IP address>>

For example, if the factory default IP address is 192.168.1.168, then access the following address: <http://192.168.1.168>, then the authentication dialog box will appear.



Default log in name is admin, and default password is admin.

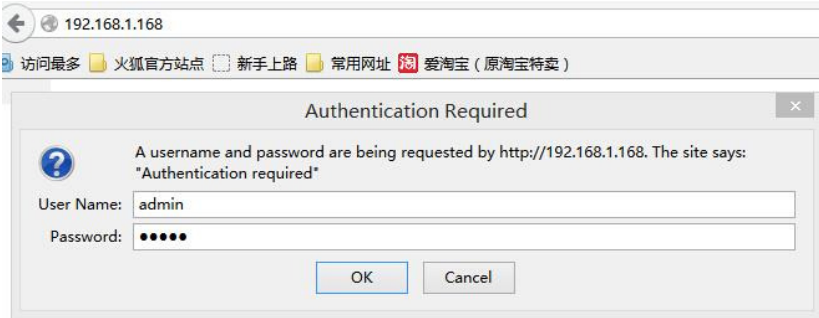

### 3.3 Device working status

After logging in to the WEB management interface, first appeared the working status in the information page. You can also manually click the WEB management interface of the "**BasicSettings**" menu to appear the status page.

Dashboard

System Information

Basic Settings +

Audio&Video +

Encoding & Stream +

Network Settings +

Quick Reset

Logs & Debug

Reboot

System Information

Serial No.:  
000000000000  
Hardware Ver.: 1.4  
Firmware Ver.: 2.5.0  
Software Ver.:  
3.02.0084

HD/3G-SDI Professional Wireless Encoder | SYSTEM STATUS


Refresh

SYSTEM

- Device start time: 1969/12/31 23:59:59
- Persistent time: 4Minute(s)5Second(s)
- System spaces: Available 39MB [Used 65 %]
- Data spaces: Available 72MB [Used 2 %]
- CPU payload: 18%
- Free memory: 638 MB


VIDEO/AUDIO Signals

- Video signal lock: NO SIGNAL
- Video format: UNKNOWN
- Audio sampling: 48000 Hz




Video signal: SDI Input  
Audio signal: SDI Input [Select...](#)

Main Stream




Scene  
Cut


Video: H.264 (High Profile)  
Scaling size: Default (1920x1080)  
Instant bitrate: 20 Kbps  
Instant frame rate: 25 fps  
Audio engine bundle: [Channel 1 \[ Change... \]](#)  
Audio Codec: AAC / Stereo  
Bitrate: 64000 Kbps  
Actual sampling: 48000 Hz

 RTSP  
(RTSP always start)


Access by: <rtsp://192.168.1.156:554/ch01>

 KMP Media Service  
Start

(Manual disabled or no publish point, service stopped.)

 RTMP Pushing  
Start

(Manual disabled or no publish point, service stopped.)

 [Add a stream...](#)

Sub Stream

Sub stream is disabled. Click "Multiple stream control" icon at right-top corner to enable/disable it.

GLOBAL NETWORK STATUS

- Network: Internet
- Connectivity: Internet

Network Manager...


### 3.4 Audio signal source option

Click the "Select Source" in the WEB management interface.

NewTek, Inc.

www.newtek.com



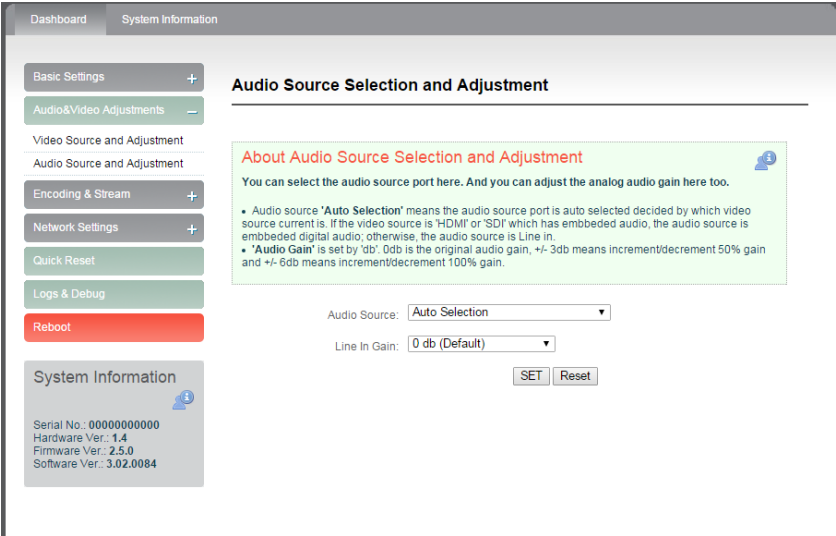

Or select Web Management Interface "Source selection & scaling"→"source selection & cropping," sub-function (see right), you can select the video and audio via software configuration:

Video/Audio signal source option:

Parameter	Option	Description
Video source port	SDI video input	Input, loopback
	SDI embedded audio	Audio signal source is embedded digital audio.
Audio source port	analog audio input	the audio source is Line in, whatever which video port input.



After switching the audio source, the encoder will quickly reset (currently connected decoder will be disconnected), this process takes about three seconds.

### 3.5 Decoder/video decoder software connect the encoder

The encoder uses the standard of RTSP Media Transfer Protocol to transmit the encoded video and audio, the products which support the standard RTSP transport protocol and which support H.264 decoding (such as the company's KV-DC series decoders, PC client software) all can be connected to the encoder device and obtain the encoded video and audio.

How does the RTSP of encoder visit URL:

Main streaming:



rtsp://<encoder address>/ch01

(For example: rtsp://192.168.1.168/ch01) Secondary streaming:



rtsp://< encoder address >/sub01

(For example: rtsp://192.168.1.168/sub01)

ch01, sub01 is RTSP session ID (Session ID).

If the encoder involves firewall / NAT traversal issues, please refer to 7.8 firewall / NAT traversal setup instructions. If the encoder set the mapping on the firewall / NAT port, then the RTSP of encoder access URL is:

Main streaming:



rtsp://<firewall/NAT device's public network address>:<RTSP mapping port>/ch01

(for example: rtsp://211.0.0.1:554/ch01)

Sub streaming:



rtsp://<firewall/NAT device's public network address>:<RTSP mapping

port>/sub01

---

(for example: rtsp://211.0.0.1:554/sub01)

RTSP supports media capture, parameter setting and PTZ remote control.

### 3.6 Restore factory settings


Restore factory settings two methods:

1. Via the WEB interface, "Basic Setup > restore factory settings" function;
2. Through RESET button:

Pressing on RESET button for 3 seconds, device will restore factory settings. Restoring factory setting will lead to the device hard restart, restarting course will last 1 minute.

After restoring factory settings, below parameters will be changed as default value:

- \* Log in will be still as admin;
- \* Network address capture way is restored as manual capture;
- \* IP address will be still 192.168.1.168, subnet mask will be 255.255.255.0;
- \* All video, audio encoding parameters will be restored as default value;
- \* RTSP setting will be restored as default value.

lick on the "Delete user" icon  in user interface list, you can delete the user.

### 3.7 Firmware upgrading

The encoder supports online firmware upgrade, use for updating the software version .

Via the WEB management interface, "**Basic Setup> update firmware/software**", you can online upload the firmware upgrade file which provide by the manufacturer.





### Kindly noted:

1. The speed of firmware upgrades file upload is slow, please be patient.
2. After uploading firmware file successfully, the encoder will automatically restarts the encoder, this process will takes about 1-2 minutes (the time will be different according to upgrade content), and please be patient.
3. Please do not upload the unofficial release of the firmware upgrade file, or other illegal files, in order to avoid permanent damage the encoder.
4. After the upgrade is complete, via the WEB interface "**system information>version information**" to check whether the latest version information in accordance with expectations, and confirm the upgrade is successful.

## 3.8 Network Configuration

Via the WEB management interface function "**Network Settings>Network Parameters**", you can configure the encoder IP address and related network parameters.

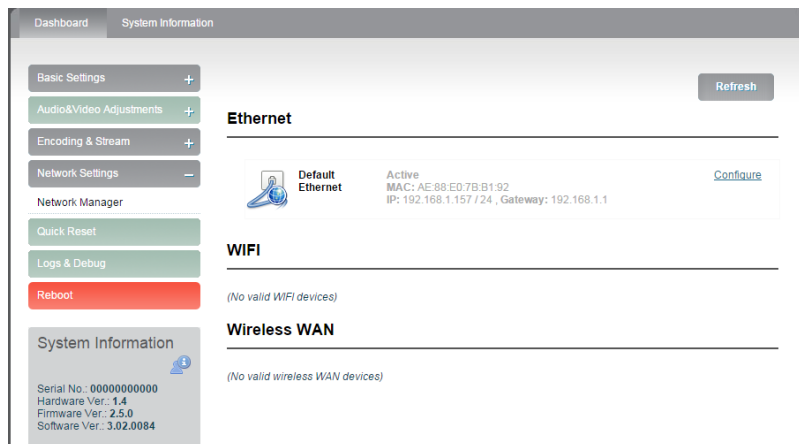

 Note: After setting the address obtains way is "**DHCP dynamic obtain**", please manually restart the encoder to update the DHCP address obtain.

## 3.9 Quick Reset

"**Quick Reset**" is quickly reset the video encoding function of encoder. When the video signal instability or improper parameter setting cause the encoder does not work, try to set the device quickly reset. The quickly reset probably need to wait three seconds or so.

## 3.10 Reboot

"Reboot" is for encoder performs a **warm reboot**, when the encoder still does not work after quick reset, please try to reboot the device. Device reboot last around one minute.

## 4 Notice and Statement

The product shall only be connected to a USB interface of version USB2.0.

Extreme Temperature: -20°C~80°C max.

### **FCC Statement:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.