
P41

Android™ 12 is the Operating System for your Touch Screen Phone.

INTRODUCTION

Thanks for choosing P41PR, single SIM, Android-4G smart phone based on 1.28GHz Quad Core Processor. This smartphone is running on Android 12 OS. If you'd like your phone to live a long and fruitful life, please read this guide carefully and keep it for future reference. You never know when you might need it.

And don't worry if the pictures we use to demonstrate your phone's functions look a little different from what you see on its screen. It's the functions that matter.

Table of Contents

1	Safety	4
1.1	Safety Precautions	4
1.2	Using your phone safely	4
2	Understanding your Phone.....	7
2.1	Your Phone.....	7
	Here need to add your own pictures.....	错误!未定义 书签。
2.2	Description Icons	7
2.3	Charging the battery	8
2.4	Power ON/OFF	8
2.5	Enter Main Menu.....	9
2.6	Enter Sub Menu	9
2.7	Use Notification Panel	9
2.8	Move icons on the main interface.....	9
2.9	Delete icons on the main interface	9
2.10	Change wallpapers.....	10
2.11	Recent tasks.....	10
2.12	Install APK through File Manager	10
3	Using your Phone	11
3.1	Main Menu & Its Functions	11
3.2	Wi-Fi.....	14
4	Inputting Text.....	15
5	Maintenance.....	16
6	Taking Care of your Device	16

1.1 Safety Precautions



Please read through the following briefings carefully and act in accordance with these rules, so as to prevent causing any danger or violating any law.

SAR Value

- **W/kg@1g(Head) W/kg@1g(Body)**
- Use cell phone when the signal strength is good. Keep your calls short or instead use headset or send a text message. This advice applies especially to children, adolescents and pregnant women.
- If you are using a Bluetooth headset device, please make sure it has a low power emitter.

1.2 Using your phone safely



On The Road

Using a phone while driving is illegal in many countries. Please follow local laws and drive safely at all times.



Near Sensitive Electronics

Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

For more information about how your phone affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor.

Your phone may cause interference when used near TVs, radios or automated office equipment.



While Flying

Your phone can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your phone, or disable its wireless functions, please do as they say.



In Hospital

Your phone may interfere with the normal operation of medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.



At a Petrol Station

Don't use your phone at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.



Around Water

Keep your phone away from water (or any other liquid). It's not a waterproof model.



Making Repairs

Never take your phone apart. Please leave that to the professionals. Unauthorised repairs could break the terms of your warranty.



Broken Antenna

Don't use your phone if the antenna is damaged, as it could cause injury.



Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.



Original Accessories

Only use the original accessories supplied with your phone or those approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of mobile phones, or even cause injury.



Near Explosives

Turn off your phone in or near areas where explosive materials are used. Always obey local laws

and turn off your phone when requested.



Emergency Calls

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.



Working Temperature

The working temperature for the phone is between 0 Degree and 40 Degree Celcius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause problems.



At very high volume, prolonged listening to a mobile phone can damage your hearing.

2.1

Your Phone



2.2

Description Icons

Keys	Functions
Home	<ul style="list-style-type: none"> Press this button to return home from any application or interface.
Menu	<ul style="list-style-type: none"> Press it to open recently opened application window
Back	<ul style="list-style-type: none"> Press it to return to the previous interface, or to close dialog box ,options, menu notification panel or the keypad.

Power	<ul style="list-style-type: none">● Press it to open the phone's menu, then you could choose to restart phone or turn off the phone
Up	<ul style="list-style-type: none">● Press it to increase the volume
Down	<ul style="list-style-type: none">● Press it to decrease the volume.

2.3 Charging the battery

The rechargeable Li-ion battery that comes with your phone is ready to be used, but is not charged full. It is easy to do & can be done in 3 simple steps below:

1. Connect the charger to your phone, and plug it into a socket.
2. The battery indicator in the corner of the screen will scroll to show you it's charging.
3. When fully charged, the battery indicator will stop scrolling.
4. Disconnect the charger from your mobile, and unplug.

2.4 Power ON/OFF

Press the power key to power-ON/OFF the phone.

When you turn your phone on, it'll automatically check the SIM and show the following information on screen:

- **Input SIM PIN:** If you've set a PIN for your SIM.

Note:

The PIN is supplied with your SIM. Please replace it with your own PIN code as soon as possible.

Enter the wrong PIN three times, and your SIM will be locked. Then you'll need to contact your network service provider to ask for a PUK code to unlock it.

2.5 Enter Main Menu

In Idle mode, press the Menu key to enter the main menu on the desktop and click the Home key /Back key to return.

2.6 Enter Sub Menu

Once at the main menu, click the icon to select the submenu, press **Back Key** to return to the previous menu, and press the **Home Screen** to return to the home screen.

2.7 Use Notification Panel

As a new notification appears in the notification area, slide down in the area to view the contents of the notification. And slide down again, there is shortcut of some functions, about brightness level、Bluetooth、Airplane mode、Auto-rotate、Flashlight、Location、Do not disturb、Wi-Fi and many more

2.8 Move icons on the main interface

1. Long press the icon on the main interface until it's enlarged and the mobile.
2. Drag the icon to the desired position and then release it.

2.9 Delete icons on the main interface

1. Long press the icon on the main interface until it's enlarged and the mobile .
2. Drag the icon to "Remove" to delete it.

2.10 Change wallpapers

1. Long press the desktop pop-up menu.
2. Choose WALLPAPERS to change wallpapers

2.11 Recent tasks

On any interface, press [**menu**] to access to the recent tasks interface, view all the recent tasks & touch one of them to enter this App.

2.12 Install APK through File Manager

APK is a supported file format for the Android mobile operating system.

- a) Please copy the downloaded APK file into the SD card, and then insert the SD card into the phone.
- b) In Idle mode, click Main Menu to enter the main menu.
Click "File Manager" to enter the directory of SD card.
- c) Click the APK file you wish to install, and follow the installation wizard.

3.1 Main Menu & Its Functions

Select  to enter the main menu.

Allows you to view a list of features available in your phone.

1.Chrome browse

Browse the internet. Search engine default set as Google.

2.Calculator

This function can turn your phone into calculator, it can do some simple calculations.

3.Calendar

View the calendar & add events.

4.Camera

Allows you to click pictures& video anytime you want.Camera opens in capture mode. Frame your picture within the screen and hold the phone steady. Touch Camera button to capture. Continue to hold the camera steady for a second after you hear the shutter sound.

Click the preview box to browse the picture, share (via a compatible application), edit a picture, or delete a picture

5.clock

After entering Clock, move right to set Alarm.

6.Contacts

To see your list of Contacts.Access phonebook through this function.

7.Email

Set up a common email, manage your email

8.File Manager

You could install the files in APK format & also view your files.

9.FM Radio



In main menu, touch **Radio FM** to enter FM Radio interface,Through this program, you may listen to FM radio on the device, FM radio use the wired headset as an antenna to receive signals, before opening this program ,you can install the original equipment-headphones, when listening, you can switch it manually to speakers or the mode with wired headphones.

10.Photos

Allows you to view photos & videos in folders.

11.Gmail

Gmail is an easy to use email app that saves you time and keeps your messages safe. Get your messages instantly via push notifications, read and respond online & offline, find any message quickly and lots more.

12.Messaging

Allow you to view messages sent & received as a thread.

13.Music

View the list of songs available in your phone. Your music files are classified according to the following four categories: Artists, albums, songs and play lists. Touch one of these categories; you can view the list inside.

14.Phone

Allow you to make quick outgoing calls.

15.Google Play

Google Play is your entertainment unbound. It brings together all of the entertainment you love and helps you explore it in new ways, anytime, anywhere.


16.Google



In main menu, touch

to access Google



Search, Enter key words, touch , you can search a target in All or Web or Apps or Contacts, the matched result will display below. You also can do voice search here.

17.Settings

Modify settings under the following:

- Screen lock
- Add another email account
- Wi-Fi
- Bluetooth
- SIM cards
- Data Usage
- More
- Display
- Notifications
- Sound
- Apps
- Storage
- Battery
- Memory
- Users
- DuraSpeed
- Location
- Security
- Accounts
- Google
- Language & input
- Backup&reset

-
- Date &time
 - Accessibility
 - Printing
 - Schedule power on/off
 - About phone

18.SIM Toolkit

This service is provided by the operator. It provides many types of personalized message services.

19.Sound Recorder

Allows you to record sounds.


3.2 Wi-Fi

P41PR supports Wi-Fi which allows you to connect with a Wireless connection.This is useful for surfing internet on phone.

Enter "Settings" interface & search WIRELESS & NETWORKS. Select the network you want to connect.

GoogleKeyboard

P41PR use GoogleKeyboard by default.

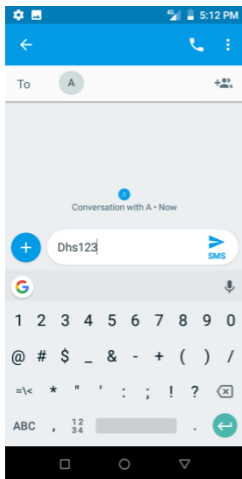

Cut, Copy and Paste

Touch and hold text content to bring up the magnifying glass, and then slide your finger to move the insertion points. Then choose to cut, copy, or paste. It is very easy to copy text from web pages, email, or text messages.

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of colour.

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use indoor chargers.
- Google, Android, Google Play and other marks are trademarks of Google LLC.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ -Reorient or relocate the receiving antenna.
- ▶ -Increase the separation between the equipment and receiver.
- ▶ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ -Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Mobile phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Mobile phone (FCC ID: 2ALJJP41) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.787W/kg and when properly worn on the body is 0.959W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

HAC Regulations

The EUT was tested and rated under the American National Standard Institute (ANSI) C63.19-2011 hearing aid compatibility (HAC)

standards. The ANSI standard for hearingaid compatibility contains two types of ratings:

- M-Ratings: Rating for less radio frequency interference to enable acoustic coupling with hearing aids.

- T-Ratings: Rating for inductive coupling with hearing aids in telecoil mode.

This device complies with the FCC HAC requirements has also been tested E-Field, H-Field and T-Coil, the worst test result of M rating is M3, the T rating is T3.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not rated. M4 is the better/higher of the two ratings. Your device is rated M4.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing aid's telecoil than phones that are not rated. T4 is the better/higher of the two ratings. Your device is rated T3.