

Owner's Manual



EN USER'S INSTRUCTION

1 Instruction For Use


This set includes 2 PACK walkie-talkie : there are communication devices which operate on mobile radio frequencies 462/467MHZ. They come with 8 channels as well as back-lit LCD screen, enabling you to communicate over several kilometers free-of –charge(up to 5 Km in open areas).

Note: Please read the user manual carefully before using the equipment and retain for future consultation!


Specific Recommendations

- If you carry any kind of personal medical device, please consult a doctor before use.
- To avoid the risk of burns, do not use the device if the aerial is damage in any way.
- Don not use the device in a potentially explosive setting(e.g. Around pumps, on the lower deck of a boat or around a fuel-storage installation or chemical products.
- Switch off the device if on an airplane or in a hospital.
- Never use the device in close proximity to a radio that avoid to interference.
- Remove the batteries if the device is not use for an extended period of time. Never mix used and new batteries.
- Position the transmitter and antenna at least 5cm from your face. Direct the antenna upwards and speak normally.
- Clean the device with a damp cloth. Don't use agents and solvent for cleaning.
- Do not modify the device in any way. In the event of damage occurring, ensure that the device us checked by a qualified professional.
- The device cannot be used to contact the emergency services.

PIC 01

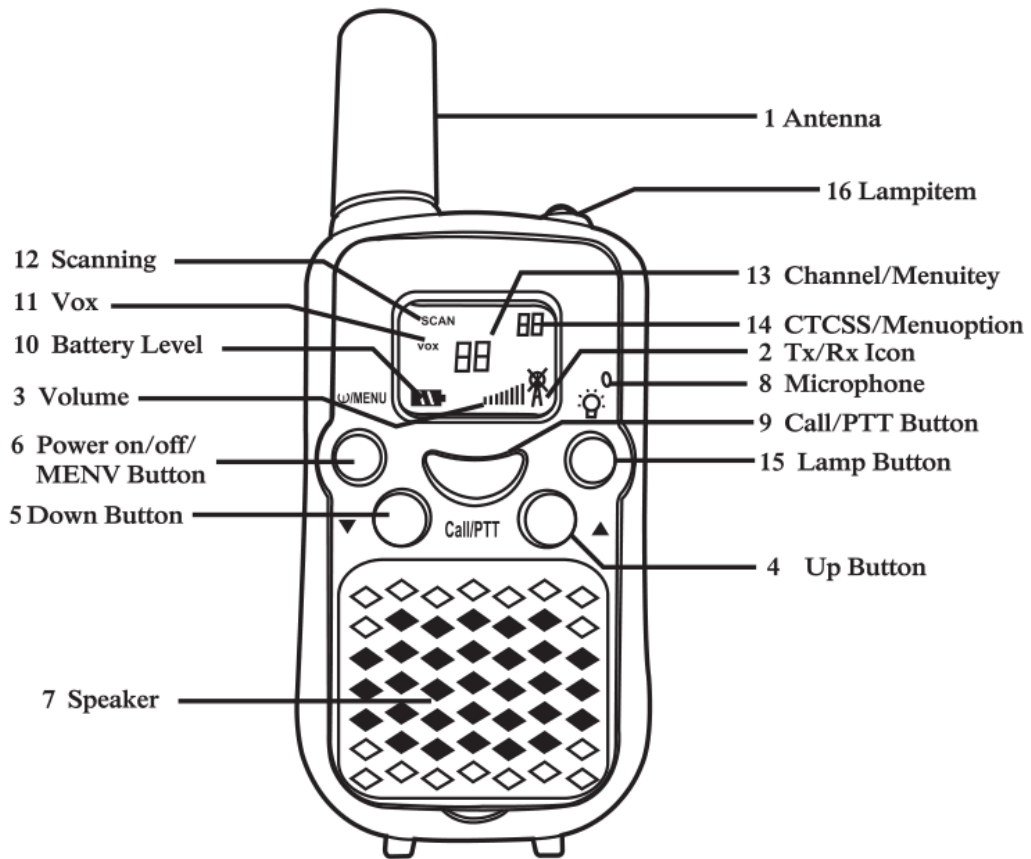

PIC 02

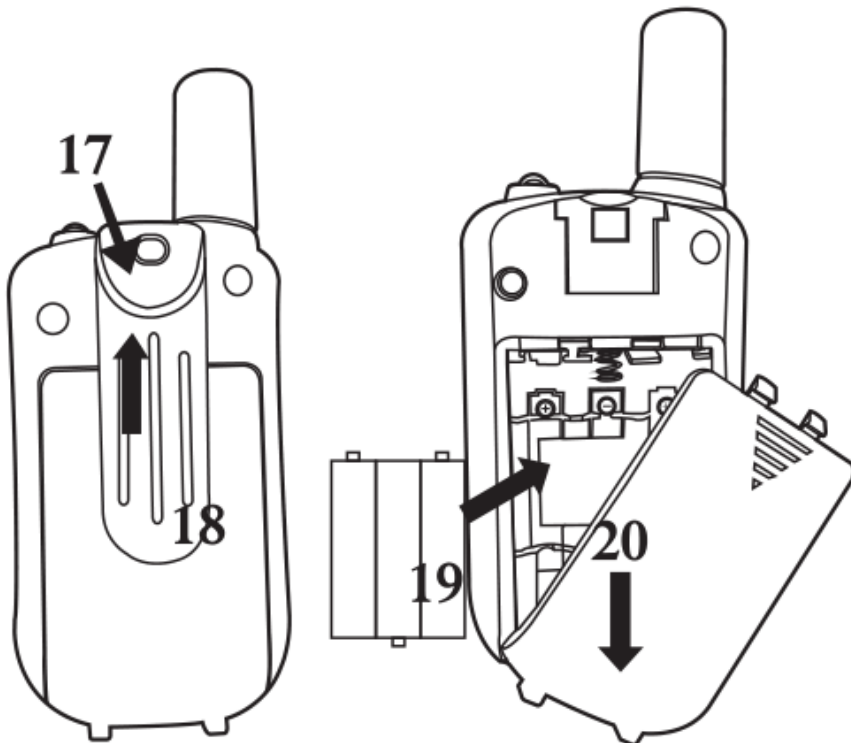

2 Key DESCRIPTION(Pic01, 02)

1.Antenna

2.RX icon  -Displayed when receiving

TX icon  -Displayed when transmitting

3. Volume level indicator

4. Adjustor button Up(▲)

5.Adjustor button Down(▼)

6.On/off/MENU button(⏻)

7.Loud speaker

8.Microphone

9.Call button(CALL)/TALK

10.Battery level indicator

11.VOX indication

12.Scanning indication:

Displayed during scan mode

13.Channel/Menu item indication

14.CTCSS/Menu option -value

15.Lamp Button

16.Lamp

17.Belt attachment clip

18.Belt attachment

19.Batteries(not supplied)

20.Battery compartment

3 Before Use the device

3.1 Removing the belt clip


Before insert batteries into the device, first remove the belt clip latch away from the device.


3.2 Installing the Batteries and charging the device

- 1, Slid down the battery compartment cover.
- 2, Insert 3* AAA Recchargeable battery each walkie talkie
- 3, Position the batteries according to the polarity making on the battery compartment.
- 4, After placing batteries into correct positions, replace the battery cover.
- 4, When the device is low battery power, connect the USB cable to recharge the device. The fully charging time is about 6 hours.



4 Using the device

4.1 Turning the device on/off

Switch on the device: Press and hold on the  3 seconds then you will hear a beep sound.

Switch off the device: Press and hold on the  3 seconds then you will hear a beep sound.

4.2 Adjusting the volume

To increase the volume, press the Up  button. And press the Down  button to decrease the volume.

Note: The volume level is display on the screen.

4.3 Low Battery Indication

The device can detect the low battery level when the battery voltage goes low. When battery voltage is low, the battery icon will flash and a beep will be heard to indicate that the batteries need to be replaced.

4.4 Receiving/transmitting communications:

The devices are in "Reception" mode when it is turned ON and no transmitting. When a signal is received on the current channel, the LCD will display in reception.

When you press the PTT (push to talk) button, the devices switches to "Transmission" mode.

Hold the device in a vertical position with the Mic(microphone) 3-5cm away from your mouth. While holding the PTT button, speak into the microphone in a normal tone of voice.

Release the PTT button when you have finished transmitting.

For others to receive your transmission, they must be on the same channel with you.

Note: 1, The talking range will depend on your surroundings and environment. It will be affected by obstructions such as hills or buildings.

2, Don't try to use two devices which are less than 1.5m (5 feet) apart. Otherwise, you may experience interference.

4.5 Changing Channels

Press the MENU button one time, the channel number will flash on the display.

Press the up▲/down▼ button to change the channel.

Press the PTT button to confirm and return to stand-by mode.

Note: if no button is pressed within 15 seconds during setting, the device will return to stand-by mode.

4.6 CTCSS (Continues Tone Coded Squelch System)

Press the MENU button twice, the current CTCSS code will flash on the display. Press the up▲/down▼ button to change the 38 available codes.

Press the PTT button to confirm and return to stand-by mode..

License free radio's operating on the 400-470MHZ frequency band, the device has 8 available radio channels. If there are many device users near you, there is a chance that some of the users are operating on the same radio channel.

When using CTCSS, a low frequency tone (between 67-250Hz) will be transmitted along with the voice signal. There are 38 available tones to choose from.

You are free to choose one of the 38 available sub-channels. Due to filtering, these sub-channels will generally not be audible so they will not disturb the communication.

4.7 VOX (Hands free function)

Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display,

Press UP▲ button to set the VOX sensitivity level between 1 and 3 level(level 3 is the high sensitive level).

Press down▼ button until "OF" appears on the display to turn VOX OFF.


Press the PTT button to confirm and return to stand-by mode.

In VOX mode, the radio will transmit a signal when it is activated by your voice or other sound around you.

VOX Operation is not recommended if you plan to use your device in a noisy or windy environment.

Note: VOX mode will be over ride when you press the PTT button.

4.8 Scanning for an active radio channel

Press and hold the  button 2 seconds: The "SCAN" function indicator will appear on the display and the channel will scan

continuously from 1 to 8. Once an active channel is found, the scanning will stop and you can listen to the transmission.

When the transmission is on the found channel stop, the scanning will resume automatically.

Note: If you press PTT button while listening to a found channel, the device will go back to stand-by mode on the found channel.

4.9 Monitor

Press and hold the DOWN ▼ button about 3 seconds to active monitor. Release the DOWN ▼ button return to stand by mode.

4.10 Setting the Call tones

The device has 10 call tones.

Press the MENU button 4 times, "CA" is displayed and on the current call tone.

Press the UP ▲/Down ▼ button to change another call tones.

Press the PTT button to confirm and return to stand-by mode.

4.11 Sending a call tone

Press the PTT button one time quickly, the call tone will be transmitted on the setting channel.

4.12 Key Tone On/Off

You can on/off the key tone when press the buttons.

Press the MENU button 5 times, "KO" will be displayed.

Press the UP ▲/Down ▼ button disable the key tone ON/OFF.

Press The PTT button to confirm your selection and return to the stand-by mode.

4.13 Roger Beep On/Off

After the PTT button released, the device will send out a roger beep to confirm that have stopped talking.

Press the MENU button 6 times, "RO" will be displayed.

Press the UP ▲/Down ▼ button disable the roger beep ON/OFF.

Press The PTT button to confirm your selection and return to the stand-by mode.

4.14 Backlit display

Press any button except for the MENU button to activate the back light of the LCD display. The back light will light on about 5 seconds.

4.15 Battery saving function

When the device has not been used for 6 seconds, the economy mode is automatically activated. This does not affect the reception of transmission and the stand by mode is automatically re-activated as soon as a signal is detected.

4.16 Built-in Flash light

Your device has a built-in flash light that can be used in sending light signals or for our lighting needs.

5 Technical specifications

Frequency	462.5500~467.7125MHz
Channel number	22 channels
Sub-code	CTCSS 38
Range	Up to 5 Km in open fields
Modulation type	FM-F3E

6 Channel and Frequency (MHz)

USA(22CH)

Ch.	Frequency	Ch.	Frequency	Ch.	Frequency	Ch.	Frequency
1	462.5625	7	462.7125	13	467.6875	19	462.6500
2	462.5875	8	467.5625	14	467.7125	20	462.6750
3	462.6125	9	467.5875	15	462.5500	21	462.7000
4	462.6375	10	467.6125	16	462.5750	22	462.7250
5	462.6625	11	467.6375	17	462.6000		
6	462.6875	12	467.6625	18	462.6250		

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Safety Information for Radios

Your wireless handheld portable transceiver contains a low power transmitter. When the talk button is pushed, it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless devices.

Important

FCC RF Exposure Requirements: For body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Use only the supplied antenna. Unauthorized antennas, modifications or attachments could damage the transmitter and may violate FCC regulations.

Normal Position

Hold the transmitter approximately 25 mm from your face and speak in a normal voice, with the antenna pointed up and away.