

H7172说明书

版本:1.0

折叠尺寸:145×210 (mm)

材质:80G书页纸


工艺:单色

折叠方式:骑马钉

页数:16页

Govee

Model: H7172

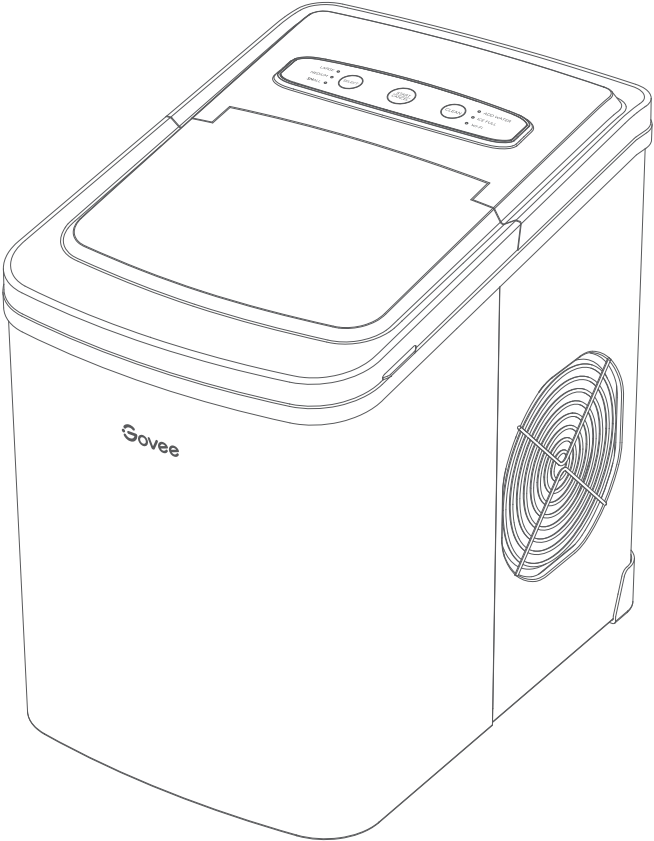

User Manual

Smart Countertop Ice Maker

Contents

Important Safety Instructions	01
Included in the Box	02
Introduction	03
Operation	04
Govee Home App	06
User Servicing Instruction	07
Troubleshooting	08
Appendix	08

Important Safety Instructions

When using this electrical equipment, basic safety precautions should always be followed, including the following:

READ AND FOLLOW ALL INSTRUCTIONS

- This product must be properly installed and located in accordance with the installation instructions before it is used.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Unplug from outlet when not in use and before cleaning or servicing.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing should be performed by an authorized service representative.
- The Ice Maker is for indoor household use only. Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces. Do not let the power cord cross over carpeting or other heat insulators. Do not cover the cord.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Do not leave unit unattended while in use.
- Plug the Ice Maker into an exclusive grounded 3-prong outlet. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the receptacle.
- If the Ice Maker is brought in from outside in wintertime, do not use for a few hours, allowing the unit to warm up to the room temperature before operating.
- Do not clean your Ice Maker with any flammable fluids. The fumes may create a fire hazard or explosion.
- **WARNING:** Do not touch the Evaporator when the Ice Maker is making ice, it may burn your skin.
- **DANGER – Risk of fire or explosion.** Flammable refrigerant used. Do not use mechanical devices to defrost ice maker. Do not puncture refrigerant tubing.
- **DANGER – Risk of fire or explosion.** Flammable refrigerant used. To be repaired only by trained service personnel. Do not puncture refrigerant tubing.
- **CAUTION – Risk of fire or explosion.** Flammable refrigerant used. Consult repair manual/owner's guide before attempting to install or service this product. All safety precautions must be followed.
- **CAUTION – Risk of fire or explosion.** Dispose of property in accordance with federal or local regulations. Flammable refrigerant used .
- **CAUTION – Risk of fire or explosion due to puncture of refrigerant tubing; follow handling**

instructions carefully. Flammable refrigerant used.

- When handling, moving, installing, and operating the appliance, care should be taken to avoid either damaging the refrigerant tubing, or increasing the risk of a leak.
- The ice maker should be installed in accordance with the safety standard for refrigeration systems, ASHRAE 15. The ice maker shall not be installed in corridors or hallways of public buildings.
- If the unit is with problem need to be maintained, that replacing with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.
- Dispose of the ice maker in according with Federal and Local Regulations as it uses flammable refrigerant.
- SAVE THESE INSTRUCTIONS

Power Cord & Plug

- This appliance must be plugged into at least a 15 AMP 110-115 VOLT 60 Hz GROUNDED OUTLET. This appliance must be grounded. It is equipped with a 3-wire cord having a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.
- Avoid the use of an extension cord because it may overheat and cause a risk of fire. However, if it is necessary to use an extension cord:
 - a. Use only 3-wire extension cords with 3-blade grounding plug.
 - b. Do not under any circumstances, cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician.
 - c. The marked rating of an extension cord must be equal to or greater than the rating of this appliance.
 - d. It should be positioned such that it does not drape over the counter or tabletop where it can be pulled on by children intentionally.

Risk of Electric Shock & Leakage

- **WARNING:** Improper use of grounded wire can result in the risk of electric shock. Consult a physician if necessary. Do not attempt to defeat this safety feature by modifying the plug.
- To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.

Included in the Box

Item	Quantity
Smart Ice Maker	1
Ice Basket	1
Ice Scoop	1
User Manual	1
Quick Start Guide	1

Introduction


The Govee Smart Countertop Ice Maker can provide you and your family with fresh ice bullets in time for hot summer days. It has 3 ice specifications for different scenarios. You can also use Govee Home App to schedule ice making remotely. The self-cleaning function makes cleaning easier with just one tap. Govee is committed to making your life smarter and of higher quality.

Part Names

- a. Ice Scoop
- b. Ice Shovel
- c. Ice Basket
- d. Large Viewing Window
- e. Air Exhaust
- f. Control Panel
- g. Maximum Water Level:

Remove the ice basket to see the Maximum Water Level mark.

- h. Water Drain Cap

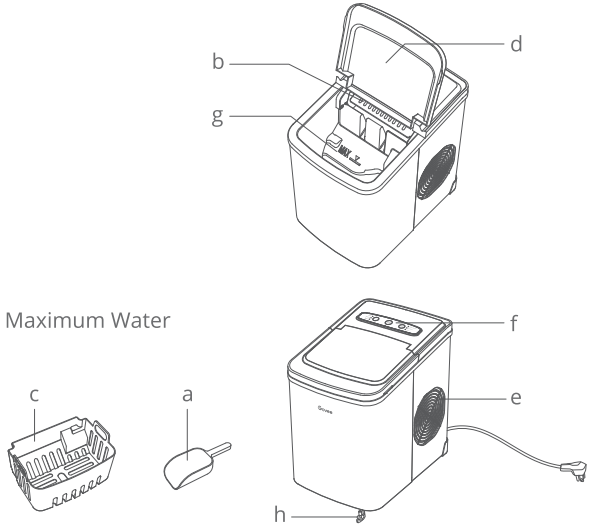

Controls

START/CANCEL Button

Press to turn the ice maker on or off. When powered back on, the ice maker will restore to the SELECT mode set previously.

CLEAN Button


Press to turn the CLEAN mode on or off.

SELECT Button

Press to cycle through three ice sizes: LARGE, MEDIUM, and SMALL.

Note:

- The SELECT mode set previously will still be active when the ice maker is powered back on.
- Long press both START/CANCEL and CLEAN buttons for 5 seconds to restore the device to factory settings.

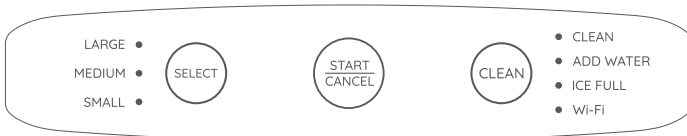

Smart Alerts & Indicator Status

Status	Display	Beep
LARGE/MEDIUM/SMALL On	White	/
CLEAN On	White	/
ICE FULL On	Red	3 Times
ADD WATER On	Red	5 Seconds
Wi-Fi On	White	/

Note:

- The app will send you an alert notification when the ice is full or the device is running out of water.
- The beeping alerts can be turned off in the app.

Functions

Memory Function

The ice maker will save its previous ice size (LARGE/MEDIUM/SMALL) when powered off. When it is powered back on, the settings will resume.

Smart Function

Connect the ice maker to Govee Home App via Wi-Fi or Bluetooth to remotely switch to cleaning mode, select the ice size, set a delayed start, etc.

Waterless Protection

The ice maker will enter the Waterless status when the tanks have no water left. Please press START/CANCEL button to dismiss that status and add some water before restarting.

Operation

Getting Started

1. The incline angle of the ice maker cabinet should not exceed 45 during transportation or use. Do not turn the ice maker upside down.

Note:

- Doing so could cause the compressor or refrigerating system to operate incorrectly. When the ice maker is moved or transported, please allow time for the fluids in the compressor to settle. Before using the ice maker for the first time, please wait 2 hours after the unit has been leveled and positioned in its proper place.
2. Please ensure the ice maker is level and on a stable table or platform to avoid malfunction.
 3. Unpack the unit, then check and make sure that all the accessories (i.e. the ice basket and ice scoop) are included. Please contact us if some accessories are missing.
 4. Remove the tapes for fixing ice shovel, ice basket and ice scoop. Clean the tank and ice basket.

5. Put the ice maker on a level and flat counter top without direct sunlight and other sources of heat (i.e. stove, furnace, radiator).
6. Only use drinking water. Make sure that there is at least 4 inches gap between the back and left/right hand sides with the wall.
7. Allow 2 hours for the refrigerant fluid to settle before plugging the ice maker in.
8. The appliance must be positioned so that the plug is accessible.

Warning:

- Do not fill the water tank with hot water. This may damage the unit. It is best to fill the water tank with water of room temperature or lower.
- Do not use the unit in a very cold environment (lower than 41°F/5°C).
- Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, please call customer service.

Using Your Ice Maker

1. Plug the ice maker into the wall outlet and all indicators' lights will blink.
2. Open the cover and remove the ice basket.
3. Fill the water tank.

Note:

Do not fill above the maximum water level mark at the back of the water tank.

4. Replace the ice basket and close the cover.
5. Press the START/CANCEL button and the white indicator light of LARGE mode will flash 3 seconds until it remains on. To change one of the ice sizes among LARGE, MEDIUM or SMALL, press the SELECT button until the light remains on beside the desired ice size.
6. The first ice making cycle will last approximately 8-13 minutes depending on the ice size that is selected. The ice making cycle starts with water being pumped into the water tray situated below the evaporator tubes. Over the next 8-13 minutes ice forms on the evaporator tubes. Once this is completed, the ice tray will tilt backwards and the remaining water in the ice tray is drained back into the water tank. The ice is then dropped from the evaporator tubes and pushed forward into the ice basket by the ice shovel. The ice tray will automatically move back into position under the evaporator tubes and start the next cycle.

Note:

The recommended room temperature is 50°F to 105°F

7. The ICE FULL light will light up in red when the ice basket is full and the ice maker will stop the ice making cycle automatically. Gently remove the ice from the ice basket with the ice scoop.


Note:

Once the ice basket has been emptied and the cover closed, the ice maker will restart its ice making function automatically.

8. The ADD WATER light will light up in red when there is no more water in the water tank and the ice making cycle will stop automatically.

Note:

Press the power button once to dismiss Waterless Protection. Remove the ice basket and add water to the water tank. Do not fill above the maximum water level mark of the water tank. Replace the ice basket and close the cover. After refilling the water tank, press the power button again.

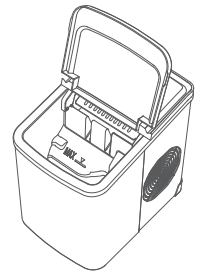

- When you have finished making ice, it is recommended to enjoy the fresh ice directly, otherwise, please transfer the ice to a freezer.

Note:

The ice machine does not turn off automatically. If the ice is not taken for a long time after the ice making is completed, the ice will melt, and the ice maker will start making ice again.

- Stop the ice making cycle by pressing the power button. Unplug the unit from the wall outlet. Open the cover and allow the ice maker to reach room temperature and follow the directions in the Cleaning section.

Note:

- Change water in the water tank every 24 hours to ensure a reasonable hygiene level.
- If the unit is not to be used, drain all the water, and dry the tank.

Govee Home App

You can access more features using Govee Home App.

Downloading Govee Home App

To download Govee Home App, scan the QR code or search for “Govee” in the Apple App Store® (iOS) or Google Play Store (Android).



Govee Home App



Note:

- Choose “Allow” to the permissions requested when opening Govee Home App for the first time. These permissions allow the app’s features to function normally and are not used to record personal, private information.
- Due to ongoing updates, Govee Home App may be slightly different than shown in this manual. In case of any differences, always follow the in-app instructions.

Pairing with Govee Home App

1. Turn on your smartphone’s Bluetooth.
2. Open Govee Home App, touch the “+” icon in the top right corner and search for “H7172.”
3. Touch the device icon and follow the in-app instructions to complete pairing.

Note:

- Method to turn off Bluetooth and Wi-Fi connection: Press and hold the START/CANCEL button and SELECT button for 5 seconds to restore the device to factory settings. For the next device connection, please make sure to delete the previous device on the app.

- You can use Govee Home App to connect your ice maker to Amazon Alexa or Google Assistant. Follow the in-app instructions to connect to each voice assistant.
- Govee Home App is being continually updated and its features expanded.

User Servicing Instruction

This appliance requires little maintenance from the user as it contains no user serviceable parts. If necessary, any servicing or repairs must be done by qualified personnel.


Cleaning and Maintaining

Before using your ice maker, it is strongly recommended to clean it thoroughly.


1. Open the cover, take out the ice basket. Add diluted detergent or distilled vinegar into the water tank, keep water level below the water level mark.
2. Close the cover and press the CLEAN button. Wait for the self-cleaning process to be finished.

Note:

- If water pump can't inject water, the ice maker will activate Waterless Protection, and the "ADD WATER" indicator will be on. Press "START/CANCEL" button to dismiss this status, and fill water up to the maximum water level mark and Press "CLEAN" button again to turn on the cleaning process.
- You can only turn CLEAN mode on when the ice maker is off.

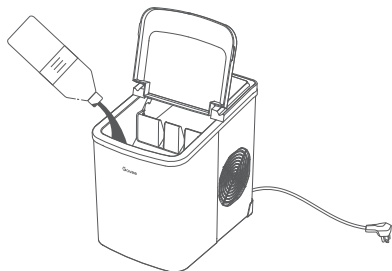

3. Use the water to rinse the inside parts and drain out the water by unplugging the drain cap on the front bottom side.

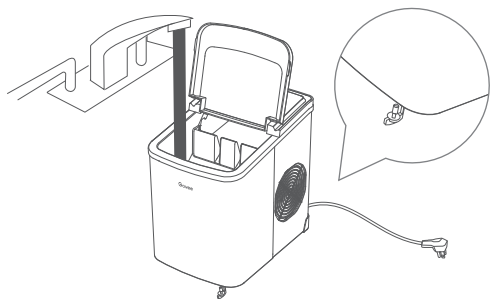

4. The outside of the ice maker should be cleaned regularly with a mild detergent solution and water.
5. Dry the interior and exterior with a clean and soft cloth.

Troubleshooting

The troubleshooting section below is for solving frequently asked questions. If your problem persists, please contact customer support.

For Govee Smart Ice Maker

Problem	Possible Cause	Solution
“ADD WATER” indicator is on.	Lack of Water.	Press “START/CANCEL” to dismiss and turn off the ice maker, fill water, and press “START/CANCEL” button again to restart the product.
“ICE FULL” indicator is on.	Ice is full in basket.	Remove ice from ice basket.
Ice is sticking together.	The ice making cycle is too long.	Press “START/CANCEL” to turn the ice maker off and restart it when the ice melt. Select the small ice bullet selection.
	Water temperature in inner tank is too low.	Replace the water. Recommended water temperature is 40°F-90°F.
Ice making cycle is normal but no ice formed.	Room temperature or water temperature in inner tank is too high.	The room temperature should be 50 °F-105°F, water temperature should be 40°F-90°F.
	Refrigerant in cooling system leaks.	Verify by a qualified technician.
	Pipe in the cooling system is blocked.	Verify by a qualified technician.

For App & Connectivity

- Cannot connect to Govee Home App.
 - Make sure the Bluetooth of your smartphone is enabled and your smartphone is not connected with other Bluetooth devices.
 - Enable the smartphone’s Location Services.
 - Try connecting with another smartphone.
 - Make sure your app is the latest version.
 - Make sure you connect to your Wi-Fi router’s 2.4GHz network and the network is working correctly.
 - Make sure the Wi-Fi password you entered is correct.
 - Shorten the distance between the ice maker, Wi-Fi router, and the smartphone.

- Make sure your ice maker and the Wi-Fi router are located away from appliances that produce electromagnetic radiation (e.g. microwave ovens, refrigerators, etc.).
 - If you are using a VPN, try turning it off and then connecting the ice maker.
 - Disable portal authentication for your Wi-Fi network. If portal authentication is enabled, this ice maker will not be able to access your Wi-Fi network, and setup will fail. Portal authentication means that you need to sign in to your Wi-Fi network through a web page before you can use the Internet.
2. Cannot find the device on Bluetooth Device Nearby page of the app.
- The ice maker may be connected with another smartphone. Disconnect it from the other smartphone first.
3. The ice maker is offline.
- Make sure the ice maker is plugged in and powered on, then refresh “My Devices” in Govee Home App by swiping down on the screen.
 - Make sure your router is connected to the internet and your phone’s network connection is working.
 - If the Wi-Fi password has been changed, the ice maker will automatically go offline. Try connecting it to the network again.
 - Delete the offline ice maker from Govee Home App, then add and reconfigure the ice maker again in the app.

Appendix

After-Sales Service

 Warranty: 12-Month Limited Warranty

 Support: Lifetime Technical Support

 Email: support@govee.com

 Official Website: www.govee.com

 @Govee  @goveeofficial  @govee.official

 @GoveeOfficial  @GoveeOfficial

Specifications

Model Name	H7172	
Power Voltage	AC 115V, 60Hz	
Rated Power	≤160W	
Water Tank Capacity	2L / 0.53 Gal	
Net Weight	15.65 lb / 7.1kg	
Dimensions	8.74 x 12.32 x 12.6 in/ 22.2 x 31.3 x 32 cm	
Ice Making Current	1.7A	
Ice Harvest Current	2.0A	
Refrigerant	R600a 0.74oz/21g	
Design Pressure	High/Max	290 psig
	Low/Min	88 psig

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- (1) Reorient or relocate the receiving antenna.
- (2) Increase the separation between the equipment and receiver.
- (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- (4) Consult the dealer or an experienced radio/TV technician for help.

FCC Radio Frequency Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

The following importer is the responsible party

Name: GOVEE MOMENTS(US) TRADING LIMITED

Address: 13013 WESTERN AVE STE 5 BLUE ISLAND IL 60406-2448

Email: support@govee.com

Contact information: <https://www.govee.com/support>

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Shenzhen Intellirocks Tech. Co., Ltd. is under license.



Govee Home App

For FAQs and more information,
please visit: www.govee.com