


Plank 5000 mAh Bamboo Wireless Power Bank

Instruction Manual 7121-71

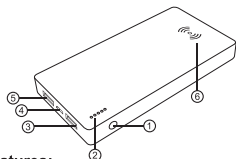

Features:

1. ON/OFF Button
2. LED Indicators (1 red/green wireless convert light; 4 power indicators)
3. USB Output 1
4. Micro USB Input
5. USB Output 2
6. Wireless Charging Pad

What's included:

- 1 x Plank 5000mAh Wireless Power Bank
- 1 x USB to Micro-USB charging cable
- 1 x Instruction Manual

Tech Specifications

- 5000mAh poly-Ii battery
- Input power: 5V/2A
- USB 1 Output power: 5V/1A
- USB 2 Output power: 5V/2.1A
- Wireless Output: DC 5V/1A

LED Indicators:

- ON/OFF Button: Press once to view the remaining power capacity.

Instructions:

1. Charging the Power Bank:
 - a. Using USB to Micro-USB charging cable, insert the USB Charging cable into a certified USB AC adapter or USB port of a computer to begin charging.
 - b. When Charging, LED Indicator will glittering blue light. Once fully charged all LED lights will be illuminated.
2. Charging with the Power Bank through Cable
 - a. The power bank has a 2xUSB output ports, (USB1) has a maximum out 1A and (USB2) has a maximum out 2.1A .
 - b. Connect the desired cable to your mobile phone/device by using the appropriate connector. Connect USB head to the power bank outputs. BLUE LED Indicator will illuminate when charging.
 - c. Remove the desired cable from your mobile device when it is fully charged.
3. Charging Mobile phones and other electronic devices with wireless charging.
 - a. Press ON/OFF Button 3 seconds and wait for LED flash from RED to GREEN for one time. RED indicator will be on. When RED light illuminate, place wireless charging device on wireless charging pad. LED will illuminate GREEN when charging. If no device was detected on wireless pad over 15 seconds, it will turn off wireless charging automatically. After 36 seconds, the power bank is off.

* Note: In order to charge devices, use only the accessory cable or the cable included with your own device by the manufacturer.

SAFETY PRECAUTIONS:

WARNING—When using this product, basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. Charge the power bank fully before initial use. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
3. To reduce the risk of injury, close supervision is necessary when the product is used near children.
4. Do not expose the device to moisture.
5. Do not use the device in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury.
6. Do not use the device if damaged or modified.
7. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
8. Do not disassemble the device. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
9. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 212°F may cause explosion.
10. Have servicing performed by a qualified repair person using only identical replacement parts.
11. This will ensure that the safety of the product is maintained.
12. Do not overcharge Phone. Unit may get hot with excessive use. Remove Phone when it is fully charged. Never charge for more than 7 hours at a time.
13. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating and fire. You must remove attachments prior to use.
14. Environment temperature for operating: 32°F ~ 113°F While charging; 50°F ~ 113°F While discharging.
15. Environment temperature for storage: Storage in -4°F ~ 113°F product needed recharge battery every month; Storage in -4°F ~ 95°F product needed recharge battery 6 months. Avoid overdischarge of the battery can help keeping the safe performance of the product.
16. Do not use or store in extreme temperatures. Avoid exposure to direct sunlight, and do not leave in a car. High temperature will shorten the service life and can result in fire or explosion.
17. Please use the product in the prescribed environment to maintain the best performance of the product. Using or recharging battery in high temperature may shorten the service life or result in overheating and explosion.
18. If this product not used for a long time, need to be charged at least every 5-6 months.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The distance between user and products should be no less than 20cm



Made in China