

Test model: KC-101

BARIETAH®

SMART COOKER

INSTRUCTION MANUAL



MODEL **KC-100/101**

Dear customer, congratulations on choosing Barietah® Smart Cooker. This versatile, multifunctional cooking device will greatly simplify your daily cooking, enhance your cooking

experience, constantly and reliably produce professional quality meals within 10 minutes with ingredients ready. Before use please use a screw driver to assemble the cooking pot handler to the cooking pot with the two screws included.

Please read this manual carefully before you start using the cooker.



Top IR Heater

Connecting Arm


Cooking Pot

Stirrer Bar

Cooking Pot Handle




LCD Display Panel

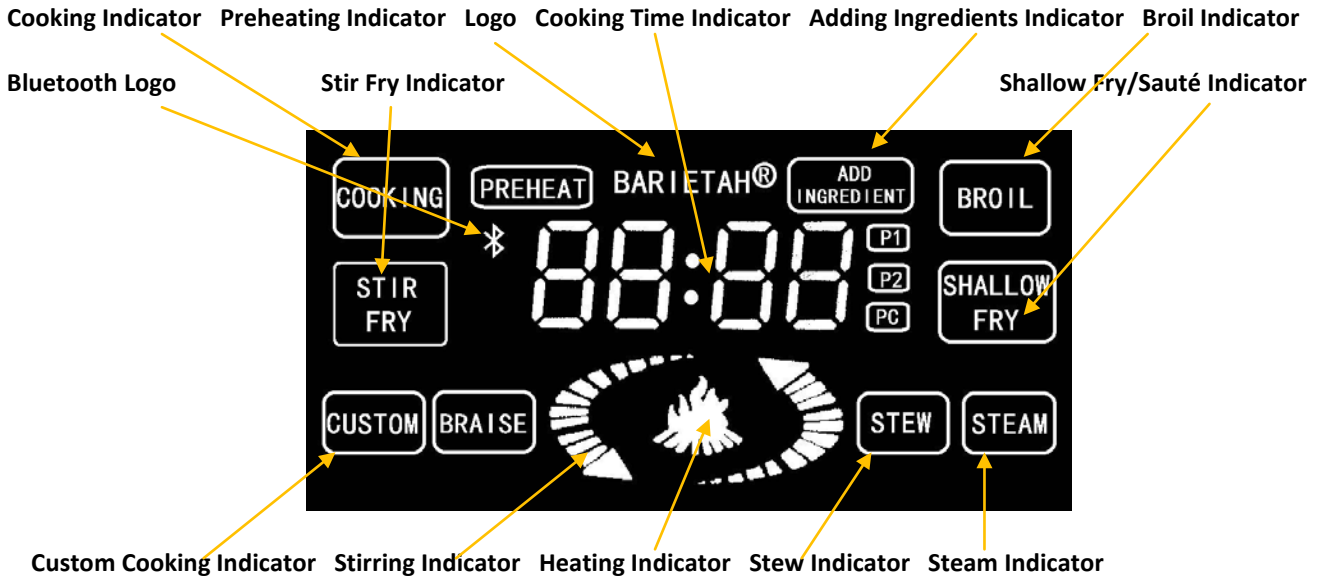

Touch Button Controls

Power ON/OFF Function Selection Cooking Time Decrease Cooking Time Increase
Cooking Cycle Start/Stirring Toggle

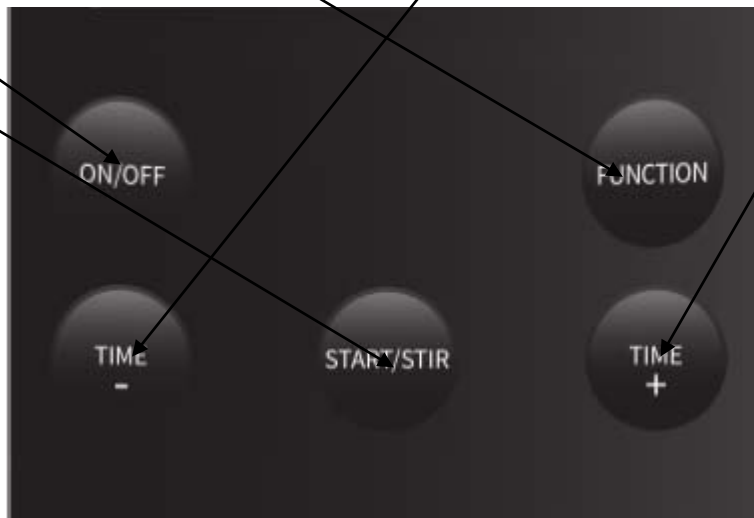

ON/OFF: turns on or off the cooker after connecting power cord.

FUNCTION: toggles among built-in cooking cycles.

TIME (+ OR -): increases or decreases the cooking time after a cooking cycle has started.

START/STIR: starts a cooking after the cycle is selected. In 'Custom' cooking cycle, turns on and off the stirring bar.

Cooking Cycle Controls:

Mode	Preheating		Add Ingredients Time		Cooking			
					Preset Time(*)	Bottom Heating	Top Heating	Stirring
Stir Fry	Yes	3 min or until cooking temp is reached	30 sec, after preheating		6.5 min	Always on or unless terminated by overheating protection	Turned on 20 sec after cooking starts, then on for 15 sec, off for 5 sec until done	Turned on 30 sec after cooking starts, then on for 15 sec, off for 15 sec until done
Custom	Yes	3 min or until cooking temp is reached	30 sec, after preheating		5 min	Always on or unless terminated by overheating protection	Turned on 30 sec after cooking starts, then on for 15 sec, off for 5 sec until done	Controlled by "Start/Stir" touch button on the panel
Braise	Yes	3 min or until cooking temp is reached	30 sec, after preheating		10 min	Always on or unless terminated by overheating protection	Turned on 30 sec after cooking starts, then on for 15 sec, off for 5 sec until done	Turned on 60 sec after cooking starts, then on for 15 sec, off for 15 sec until done
Stew	No		Add Ingredients without preheating		40 min	Always on in the first 10 min, then continues on with 1/4 power until done	No	No
Steam	No		Add Ingredients without preheating		20 min	Always on or unless terminated by overheating protection	No	No
Shallow Fry Sauté	Yes	3 min or until cooking temp is reached	30 sec, after preheating		6 min	Always on or unless terminated by overheating protection	Turned on 30 sec after cooking starts, then on for 15 sec, off for 5 sec until done	No

Broil	Yes	3 min or until cooking temp is reached	30 sec, after preheating	10 min	Always on or unless terminated by overheating protection	Turned on 60 sec after cooking starts, then on for 40 sec, off for 20 sec until done	No
*: if cooking is controlled by bluetooth, preset cooking time is controlled by bluetooth cooking signals (See below 'Use Bluetooth Features' section for details)							

Safety Tips:

- 1) Keep out of reach from children.
- 2) Make sure you don't use any other kitchen appliances consuming big amount of powers on the same circuit that the cooker is using. The cooker consumes up to 1380w of power. If you are not sure, consult your electrician first.
- 3) Before use, make sure that the cooker is dry inside out.
- 4) During cooking, never put hands directly on the lid, or go close to the exhaust vent. Doing so may cause serious injuries.
- 5) After cooking, open the lid VERY SLOWLY from the backside of the lid handle, otherwise serious injuries may occur.
- 6) Disconnect from power after use.
- 7) Wipe the cooking pot completely clean and dry before cooking. If cooking pot is not clean, excess smokes might be generated; if cooking pot is not dry, there might be potential electric shock hazard.
- 8) If you don't use the cooker for a long time, wrap and store the cooker in a dry and cool place.
- 9) If you plan to bring the cooker to travel, same safety rules should be followed on the road trips.
- 10) Do not expose the cooker in a direct sun light. Doing so may shorten the life of the cooker.

Cleaning Tips:

- 1) Cooking pot is dish washer safe.
- 2) After cooking, disconnect from power, let both top and bottom heating elements cool down completely, use only soft cloth, paper towels to clean the lid and wipe out any condensed water on the lid and inner chamber.
- 3) Keep the outside of the cooker clean with soft cloth, paper towels or sponge.

Operation Instruction:

- 1) Before the first use, carefully inspect all contents in the package. Use a screw driver and securely assemble the cooking pot handle to the cooking pot.
- 2) Place the cooker on a counter top. Make sure you read and follow the safety tips.
- 3) Make sure stirring bar on the outer side of the bottom of the cooking pot has interlocked with the stirring bar on the bottom of the cooker

Bottom Heater



Bottom of Cooking Pot



- 4) After connection power cord:
On LCD panel, the Barietah® logo is steadily on and the Bluetooth logo is flashing
- 5) After turning on cooker by tapping on the ON/OFF touch button:
On LCD panel, the time indicator is on.
- 6) After selecting a cooking cycle by tapping/toggling on Function touch button:
One of the cooking cycle indicators is on
- 7) After starting a cooking cycle and preheating is on:
Preheat indicator is flashing.
- 8) After preheating ends and adding ingredient is on:
Add Ingredient indicator is flashing. Add ingredients at this time, following instructions on your ingredient bag, or in case there is no instruction, then depending on your cooking cycle, a good rule of thumb is adding in the following order: cooking oil, meat or seafood or other protein, vegetables, flavor/sauce, etc, then cover the lid and let cooking cycle run thru. If your cooking instruction requires adding something during cooking, then open the lid carefully, following the safety tips, add the ingredients of your choice, and cover the lid let the cycle run thru.
- 9) After the cooking cycle starts and bottom heating is on:
Cooking time is shown with minutes and seconds. The green heating light is on
- 10) After cooking cycle starts and both bottom and top heating are on:
Cooking time shown and red heating light is on.
- 11) After cooking cycle is finished:
A 'HOT' message displays in the area where cooking time displayed previously. If you do not continue to cook, unplug the power cord, clean and dry the cooking, let the cooker completely cool down, put cooker in a dry place at room temperature. If you do, then clean and dry the cooking pot thoroughly before cooking another item, make sure you always follow the safety tips.
- 12) Follow the safety tips, transfer food from cooking pot to a plate/container.
- 13) Clean the cooker following the safety and cleaning tips.

Use Bluetooth Features:

- 1) When you are using the built-in Bluetooth features which is indicated by the flashing Bluetooth logo on the top left side on the panel, make sure the cooker is powered on, the ingredient bags contain vendor-provided QR code, and you have installed Barietah mobile app (currently Barietah mobile app supports iOS and Android platforms, mobile app details can be found on the mobile app itself)
- 2) Make sure no other Bluetooth enabled devices in your home is connected to the cooker. Some devices, such as some versions of iPhone, do not show certain types of nearby Bluetooth devices it can connect to, Barietah mobile app provide a 'Test Connection' button to let you test if your mobile device can connect to the cooker. If the connection failed, most likely another device in your home have already connected to the cooker and locked out any other Bluetooth-enabled devices to connect to the cooker, find out the device, disconnect it from the cooker, then try again
- 3) Use Barietah mobile app to scan, validate the QR code on your ingredient bags, and then send cooking instructions to the cooker via the Bluetooth connection. The cooker then starts the cooking cycle. After this point follow the instructions above.
- 4) Barietah mobile app disconnects the Bluetooth connection after successfully transmitting the cooking instructions to the cooker.

Trouble Shooting Tips:

- 1) After connecting power cord, the Barietah® logo or the Bluetooth logo are not on.
Possible reasons: power cord may be broken, or the power outlet may not be functioning
- 2) The food ingredients are either overcooked or undercooked.
Possible reasons: your portion size may be either too little or too much. The cooker produces ideal results with two to three servings, within 6.5 to 10 minutes, depending on the nature of ingredients.
- 3) Touch buttons are malfunctioning.
Possible reasons: The cooker may need to reset, simply unplug and re-plug the power cord; or the cooker might have caught some moisture, simply let the cooker dry thoroughly before trying again.

Product Specifications:

Total Power: 1380W (Bottom Heater: 1100W, Top Heater: 280W)

Electrical: AC 120 V, 60 Hz

Cooking Pot Capacity: 1.53 Gal (5.8 Liter)

Electrical Motor: 6W

Product Weight: 11 lb (5 Kg)

Package Contents:

- 1) A Cooking Pot with a detached handle and two screws
- 2) A Cooker (with a cooking pot and cooker itself)
- 3) A Power Cord
- 4) An Instruction Manual
- 5) Any other accessories you may have ordered

FCC Warning Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.