


# BYMUSE

## USER GUIDE

BYMUSE FLO Wireless Neckband Earphones

# In the Package

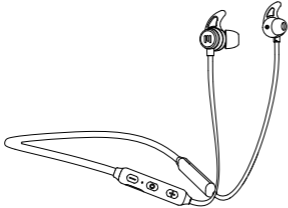


**BYMUSE FLO earphones**



**Quick Start Guide**



**3 - pairs of in-ear earphones**  
Large | Med | Small  
(Med size installed on the headphones.)




**1 - USB Micro Charging Cable**



**3 - pairs iso-Fit Cushions**  
Large | Med | Small  
(Med size installed on the headphones.)

# Getting to know your BYMUSE FLO

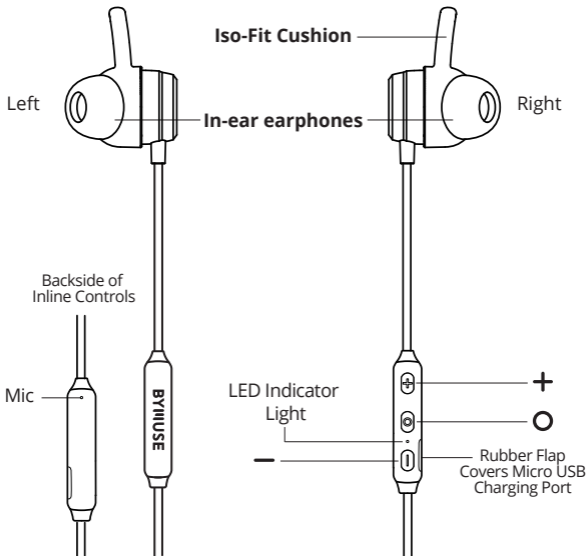

Note: When you wear the BYMUSE FLO headset, note that the side with the control button is to the right.

# Charging the Battery

Your BYMUSE FLO rechargeable battery will have a partial charge and be ready to play. For maximum playtime, fully charge the battery.

## Music Play Time

Up to 8 hours on a full charge, with volume at 60%. Louder volume will reduce play time.

## Automatic Turn Off

The BYMUSE FLO will turn off 15 minutes after being disconnected from your mobile device.

## Charge indicator on iPhone

The vertical battery charge level will appear in the top right corner of your iPhone screen




## Low Charge Remaining Indicator

When the battery charge gets down to 20% there will be a voice prompt and the RED LED Light will flash in rapid succession.

## Charging Time

It will take about 2 to 3 hours to fully charge a low battery

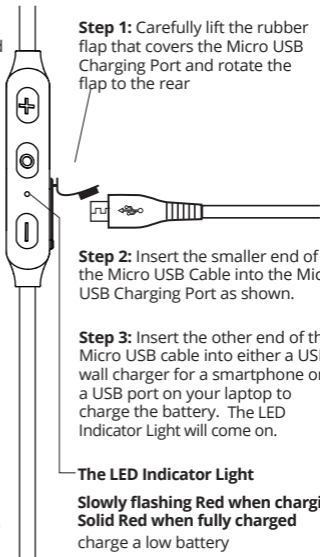

**Step 1:** Carefully lift the rubber flap that covers the Micro USB Charging Port and rotate the flap to the rear


**Step 2:** Insert the smaller end of the Micro USB Cable into the Micro USB Charging Port as shown.

**Step 3:** Insert the other end of the Micro USB cable into either a USB wall charger for a smartphone or a USB port on your laptop to charge the battery. The LED Indicator Light will come on.

## The LED Indicator Light

**Slowly flashing Red when charging**  
**Solid Red when fully charged**  
 charge a low battery

# Turning On and Off



## Turn ON

Press and Hold Down  button for 2 Seconds

## LED Indicator Light

will turn on

## Flashing Blue rapidly

indicates BYMUSE FLO is in pairing mode

## Flashing Blue 3 times every 5 seconds

indicates BYMUSE FLO is connected to a mobile device and is ready to play

## Turn OFF

Press and Hold Down  button for 2 Seconds

## LED Indicator Light

flashes RED twice and turns off

LED Indicator Light

# Pairing & Connecting to your mobile device

- Your mobile device needs to be within 30 unobstructed feet of the BYMUSE FLO
- Make sure your BYMUSE FLO battery has a sufficient charge

## Turn ON your BYMUSE FLO

### The LED Indicator Light will turn on

#### **If the blue light is rapidly flashing**

the BYMUSE FLO is ready to pair and connect.

#### **If the blue light is flashing 3 times every 5 seconds**

the BYMUSE FLO has automatically reconnected to the last mobile device it was connected to and is ready to play.

The BYMUSE FLO will try to reconnect each time it is turned on.

**The BYMUSE FLO can be connected to one mobile device at a time.** To pair and connect to a different mobile device, you need to disconnect the currently paired mobile device.

To disconnect it:

**press and hold down the  $\oplus$  button and the  $\ominus$  button together for 3 seconds.**

The blue light will begin flashing and the BYMUSE FLO is ready to pair and connect.

## Pairing & Connecting to your Mobile Device (continued)

### **To pair and connect from an iPhone, iPad, or iPod:**


- Go to Settings > Bluetooth, check Bluetooth is on
- Select 'BYMUSE FLO' when it appears under OTHER DEVICES
- The BYMUSE RUN will connect in a few seconds
- The LED Light on your BYMUSE FLO will flash BLUE 3 times every 5 seconds and you are ready to play

### **To pair and connect from a Smartphone or Tablet:**

- Go to Settings > Bluetooth, check Bluetooth is on
- Scan or Search and select 'BYMUSE FLO' when it appears under AVAILABLE DEVICES
- The BYMUSE FLO will connect in a few seconds
- The LED Light on your BYMUSE FLO will flash BLUE 3 times every 5 seconds and you are ready to play

**Note:** Your Smartphone or Tablet instructions may vary, please check your mobile device's manual for specific pairing instructions.


# Play Controls

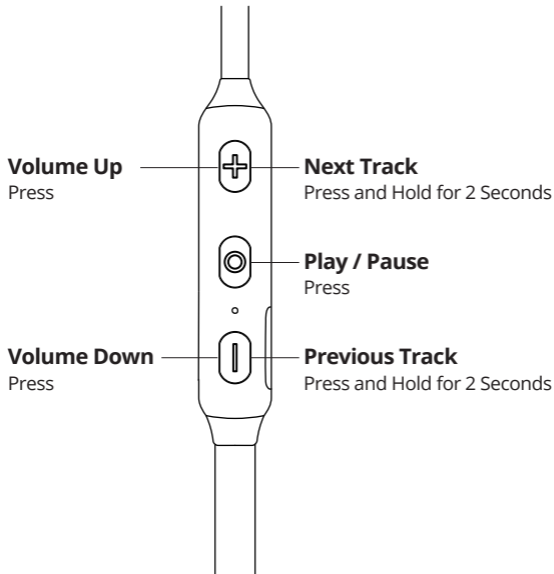




# To Hear the Best Sound and Best Bass from your BYMUSE FLO Select the Best Fitting In-Ear FLO

A comfortable snug fit of the In-Ear FLO provides the highest quality listening experience with the BYMUSE FLO .We suggest starting with the medium size In-Ear FLO to learn if they are snug and comfortable. If they do not feel snug try the large In-Ear FLO , and if the medium are too tight try the small In-Ear FLO . The largest size In-Ear FLO that are comfortable will provide the best overall sound experience.

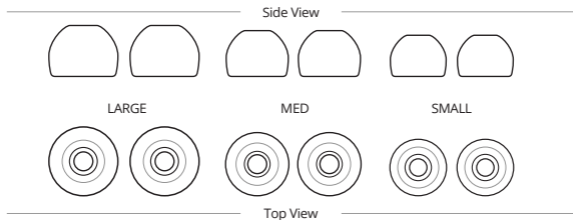


# Comfort Fit with Iso-Fit Cushions

The Iso-Fit Cushions help provide a comfortable snug fit, perfect for listening during sports and physical activity.

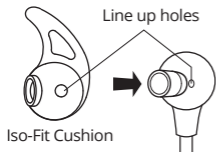

**Step 1:** With the In-Ear FLO removed, slide the Iso-Fit Cushion over the shaft of the earbud with the smaller tube opening facing outwards from the earbud and the small holes lined up

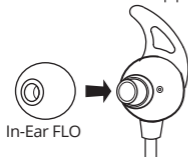


**Step 2:** Slide the In-Ear FLO onto the earbud shaft




**Step 3:** Your BYMUSE FLO are now ready to insert into your ear

Side view




Side view




## Wearing your BYMUSE FLO Under-Ear

Install the Right (R) Iso-Fit Cushion onto the Right (R) earbud, with the holes lined up as shown. Insert the Right earbud into your right ear canal. The Iso-Fit Cushion should fit comfortably and snugly in your ear, allowing for the best sound quality.

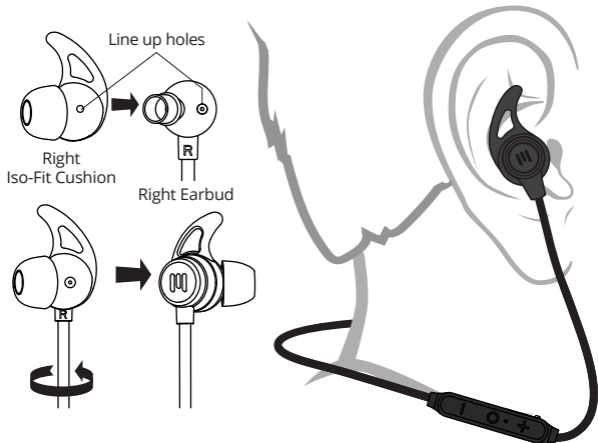


# Phone Call Controls

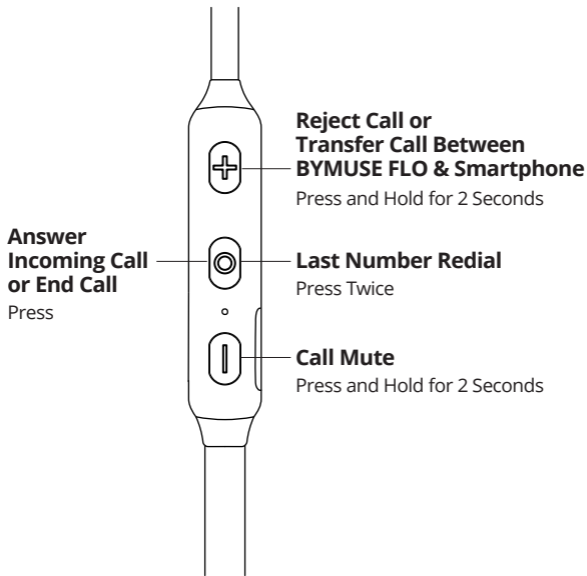


# Troubleshooting

---

## BYMUSE FLO will not turn on

- The battery may have become fully drained. Charge the BYMUSE FLO using a USB wall charger from a Smartphone/iPhone or tablet for at least 15 minutes, then press the  button to turn the BYMUSE FLO on. Then continue charging the battery.
- 

## Cannot pair or connect the BYMUSE FLO with my mobile device

- Your mobile device may be out of range (signal loss) and you will hear a double beep every 15 seconds. Move back within 30 unobstructed feet of the mobile device. The BYMUSE RUN will reconnect, there will be a voice prompt " Dida ". Click the  button to start playing again.
- Check that your BYMUSE FLO has a sufficient battery charge, the headphones may not connect when the battery has a low charge. Connect the BYMUSE FLO to a charging source and try again to pair and connect.
- Check the LED light to make sure it is flashing Blue rapidly. If it is solid blue the BYMUSE FLO is already connected to another mobile device. The BYMUSE FLO can be connected to one mobile device at a time. You need to disconnect the connected mobile device then you can connect to the next mobile device. Please see instructions on page 5.
- Your mobile device may have a temporary Bluetooth connection issue please try the following steps which can resolve this: (continued next page)

## Cannot pair or connect the BYMUSE FLO with my mobile device (continued)

### For iPhone, iPad, iPod

- Turn off the BYMUSE FLO, go to the Bluetooth device list on your iPhone, iPad or iPod and check if the BYMUSE FLO is listed. If it listed press the icon next to the BYMUSE FLO and then forget this device, twice. With the BYMUSE FLO removed from the list or if it was not listed, do a hard reset on your iPhone, iPad or iPod by pressing and holding down the Home and sleep buttons at the same time for about 10 seconds until the Apple icon appears and it restarts. When it restarts turn on the BYMUSE FLO and then try again to pair and connect.
- 

### For Smartphones and Tablets

- Turn off the BYMUSE FLO, go to the Bluetooth device list on your Smartphone or Tablet and check if the BYMUSE FLO is listed. If it listed press the icon next to the BYMUSE FLO and then press Unpair this device. With the BYMUSE FLO unpaired or if it was not listed, do a hard restart on your Smartphone or Tablet. When it restarts turn on the BYMUSE FLO and then try again to pair and connect.
- 

### No audio from your mobile device

- Make sure the volume is up on your BYMUSE FLO.
- Remove the BYMUSE FLO from the Bluetooth device list on your mobile device, restart your mobile device, and then re-pair and connect to the BYMUSE FLO.
- Make sure your mobile device is playing audio, not paused and volume is up.
- Your mobile device may be out of range, move closer within 30 unobstructed feet.
- Turn your BYMUSE FLO off and back on.
- Some mobile device have a default volume when they connect to a new device, try turning up the volume on the BYMUSE FLO and the mobile device after connecting.

## Poor sound quality from a mobile device

- Your mobile device may be out of range, move closer within 30 unobstructed feet.
  - If your iPhone, iPad, or iPod has an option to select stereo or Mono, select Stereo.
  - Try another track or music app.
  - Turn your BYMUSE FLO off and back on.
  - Some mobile devices need to have their WiFi turned off to improve audio quality over Bluetooth.
  - It may be that you need to re-pair the BYMUSE FLO with your mobile device. Remove it from your paired devices list, restart the mobile device and then follow the steps to re-pair the headphones.
- 

## BYMUSE FLO won't fit or stay in place

- Try one size larger In-Ear FLO.
- Make sure you have the Iso-Fit Cushions in place.
- Be sure the BYMUSE FLO is being worn correctly by checking on each earbud for which side it should be worn on.

# FCC Warning

FCC ID: 2ATRS-BYMUSEFLO

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.


NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



# 包装内容

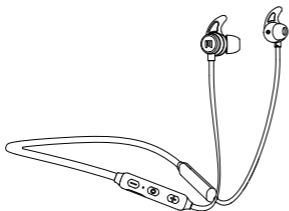


BYMUSE FLO耳机

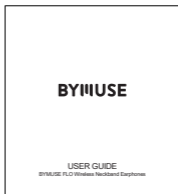

快速操作指南



耳塞大中小号各1对  
(中号耳塞已装在耳机上)



Micro USB充电线1条



耳翼大号1对




耳翼中号1对  
(中号耳翼已装在耳机上)



耳翼小号1对

# 关于BYMUSE FLO

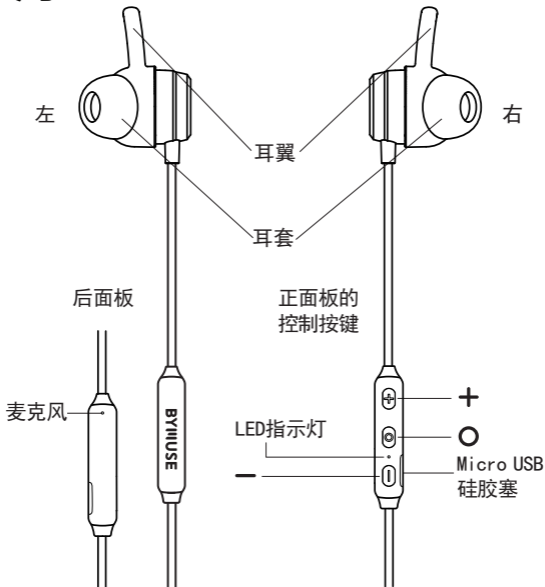

注：您在佩戴BYMUSE FLO耳机时，注意有控制按键的一边为右边。

# 耳机充电

您的BYMUSE FLO无线蓝牙耳机的电池在出厂时只充了一部分电，我们建议您先充满电后再播放，这样可以使播放时间最长久。

## LED指示灯

- 红色慢闪 - 表示电池正在充电
- 红色恒亮 - 表示电池已经充满

## 音乐播放时间

电池充满电后、音量在60%情况下播放时间可以达到8小时，加大音量将会缩短播放时间。


## 低电量

当电量降低到15%，将会有有一个低电量“Dong”语音提示，且红色的LED灯会连续快闪。

## 自动关机

如果BYMUSE FLO的蓝牙连接断开15分钟后耳机会自动关机来省电。

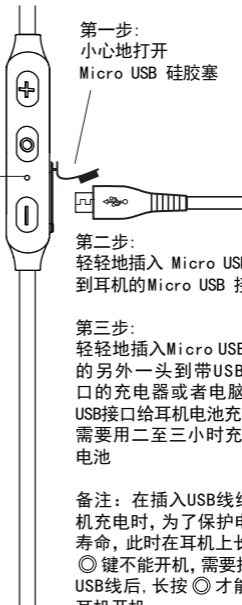

在iPhone或iPad屏幕上会实时显示耳机的电量，这垂直的电量指示将会出现在您的iPhone或iPad屏幕的右上角位置。




第一步：  
小心地打开  
Micro USB 硅胶塞

第二步：  
轻轻地插入 Micro USB线  
到耳机的Micro USB 接口

第三步：  
轻轻地插入Micro USB线的  
另外一头到带USB接口  
的充电器或者电脑的  
USB接口给耳机电池充电，  
需要用二至三小时充满  
电池

备注：在插入USB线给耳机充电时，为了保护电池寿命，此时在耳机上长按  键不能开机，需要拔出USB线后，长按  才能使用耳机开机。

# 开/关机

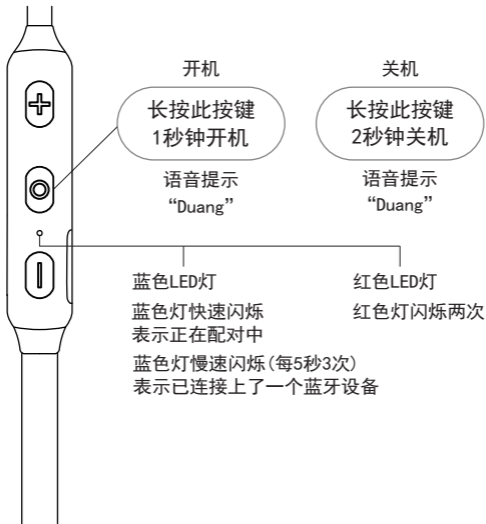

# 按键功能介绍

	+	○	-
开机		长按2秒	
关机		长按2秒	
音量加	单击		
音量减			单击
上一曲			长按2秒
下一曲	长按2秒		
播放/暂停		单击	
接听电话		单击	
挂断电话		单击	
拒接电话	长按2秒		
重拨最后一个号码		双击	
进入Siri模式， 有“嘀”提示音；	同时短按一次		
在播放歌曲时候，切换“电影 模式/音乐模式”功能；有“电 影模式”或“音乐模式”提示音；	同时短按一次		
在配对状态下回连 到最后已配对手机		双击	

备注：

- 在蓝牙连接的状态下，同时短按“开机”和“音量+”2个按键1秒 进入Siri模式，Siri启动时有个“Di”的提示音；
- 在蓝牙连接的状态下，同时长按“音量+”和“音量-”2个按键3秒进入蓝牙配对模式，启动时有个“Didadida”的提示音；

- 电影模式/音乐模式:

在播放歌曲的时候,同时短按“音量-”和“开机”2个按键一下,可以切换到“电影模式/音乐模式”,如果有“电影模式”提示音,就切换到了电影环绕声模式;在电影环绕声模式时同时短按“音量-”和“开机”2个按键一下,有“音乐模式”提示音,就切换到了正常音乐模式;关机再开机后耳机能记住最后设置的功能。


## 灯功能介绍

工作状态	LED指示灯
蓝牙耳机正在配对中	蓝色灯快闪(1秒闪4次)
耳机已经配对成功	蓝色灯由快闪变为慢闪(5秒闪3次)
在通话中	蓝色灯慢闪(5秒闪3次)
在播放音乐的状态	蓝色灯慢闪(5秒闪3次)
耳机电池在低电状态	红色灯快闪(1秒闪3次)
耳机电池正在充电状态	红色灯呼吸
耳机电池充满电后	红色灯常亮

# 配对连接(1)

在配对之前，请把您的蓝牙设备移近与 BYMUSE FLO无线蓝牙耳机3米范围以内进行配对和连接。

确保您的BYMUSE FLO无线蓝牙耳机的电池有足够的电量。



打开您的BYMUSE FLO

长按此按键1秒钟

语音提示“Duang”

蓝色LED灯将会快闪表示BYMUSE FLO进入到配对模式和准备配对连接到您的蓝牙设备。

如果蓝色LED灯慢闪（每5秒3次），表示BYMUSE FLO已经自动连接到您一个蓝牙设备，请继续按照步骤5来操作：配对连接到您的另外一部iPhone、iPad、iPod、智能手机和平板电脑。

## 配对连接(2)

在您的无线蓝牙设备：


iPhone、iPad、iPod及Android智能手机或者平板电脑

- 在您的蓝牙设备上打开“设置”功能。
- 确保您的蓝牙设备上的“蓝牙”选项是打开的，点击“搜索”功能。
- 等待BYMUSE FLO的蓝牙名称显示在“可用设备”的蓝牙列表中。
- 选择BYMUSE FLO蓝牙名称，开始与您的蓝牙设备进行配对和连接。
- 在您的BYMUSE FLO无线蓝牙耳机上的蓝色LED灯由快速闪烁变成慢速闪烁（每5秒闪烁3次），表示您无线蓝牙耳机已经配对成功，您可以开始播放和聆听您喜欢的音乐了。



## 配对连接(3)

BYMUSE FLO无线蓝牙耳机一次可以连接一台蓝牙设备，如果您想要连接到不同的蓝牙设备，您需要先断开已连接过的蓝牙设备，然后才能配对连接下一个蓝牙设备。




从已连接的蓝牙设备上断开蓝牙  
并进入配对模式

同时按下 **+** 和 **-** 按键4秒钟

语音提示：“Didadida”

蓝色的 LED灯将会快速闪烁，  
表示耳机已进入配对状态，  
您可以进行配对连接到下一个  
不同的蓝牙设备。

# 播放控制

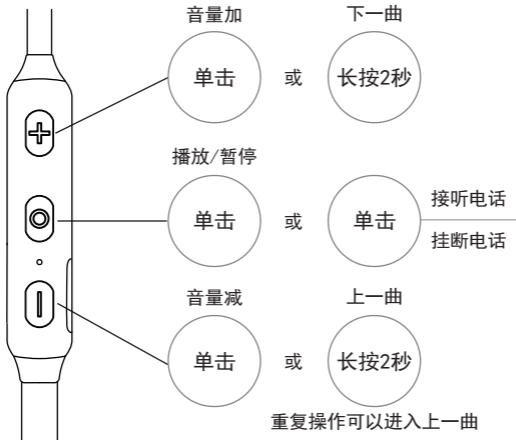

电影模式/音乐模式：在播放歌曲的时候，同时短按“音量-”和“开机”键一下，可以切换到电影模式/音乐模式；如果有“电影模式”提示音，就切换到了电影环绕声模式；在电影环绕声模式时同时短按“音量-”和“开机”键一下，有“音乐模式”提示音，就切换到了正常音乐模式，关机再开机后耳机能记住最后设置的功能。

# 耳塞选择

选一个合适的入耳式耳塞能给您带来最高品质的聆听感受和最大化的降噪能力。我们建议您先从“中号”尺寸的入耳式耳塞开始感受是否舒适。如果您感觉不够贴紧，可以尝试下“大号”的尺寸，如果是太紧，可以尝试下“小号”的。

侧面图



小号



中号




大号




顶视图

# 耳翼佩戴

运动型的耳翼将会帮助您在运动或者激烈活动的过程中可以安全使用。

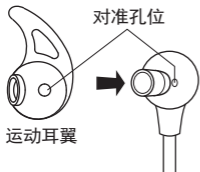

第一步：把入耳式耳塞和ISO-Fit护套取掉，滑动运动型耳翼对着耳塞的小管开口穿进去，对准耳塞上的小孔定位。

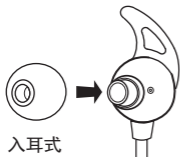


第二步：把入耳式耳塞滑进轴上



第三步：您现在可以把您的BYMUSE FLO放进耳朵内开始聆听您喜欢的音乐了。

# 电话控制

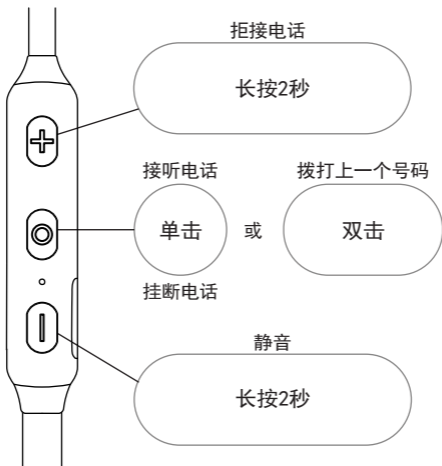

# 故障排除

## 如果BYMUSE FLO无线蓝牙耳机不开机

- 检查您的BYMUSE FLO无线蓝牙耳机的电池有足够的电量。
  - 如果您的电脑自身的电池耗尽了，您电脑的USB端口将无法给BYMUSE FLO的电池进行充电，请尝试用5V (1A或2A)的USB充电器给BYMUSE FLO的电池进行充电，充电时间至少要充2-3小时。
  - 如果红色的LED灯慢闪，表示正在正常充电。
- 



## 如果BYMUSE FLO配对或连接不上您的蓝牙设备

- 检查您的蓝牙设备是否超过配对或连接的有效距离，如果超过配对或连接的有效距离这样每隔15秒你将会听到2声DoDo提示音。走回到您的蓝牙设备的有效10米范围内，BYMUSE FLO将会自动重连，您会听到一声示音“Dida”，单击播放/暂停按键，可以继续播放音乐。
- 检查您的BYMUSE FLO是否连接到其它的蓝牙设备上，如果有，需要先断开其它您的蓝牙设备，然后再进入配对和连接。
- 确保您的蓝牙设备支持蓝牙音频
- 确保您的BYMUSE FLO在配对状态，这时蓝色指示灯是快速闪烁，如果蓝色的指示灯是慢闪（每5秒闪3次），表示您的BYMUSE FLO已经自动连接上了您的其它的蓝牙设备。请参考第5部分：配对连接到不同的iPhone、iPad、iPod、智能手机和平板电脑。



## 如果BYMUSE FLO名称出现在我的蓝牙可用设备列表中，但是连接不上。

- 检查BYMUSE FLO是否连接到您的其它的蓝牙设备上，断开其它的蓝牙设备和BYMUSE FLO的连接。
  - 确保您的蓝牙设备和BYMUSE FLO无线蓝牙耳机有足够大的电量。
  - 如果您的BYMUSE FLO已经连接到其它的蓝牙设备上，这样会影响到现在的蓝牙配对，确保您的BYMUSE FLO没有连接到其它的蓝牙设备，这样您才能开始和BYMUSE FLO进行配对
- 

## BYMUSE FLO想与您的蓝牙设备配对，但是配对不上。

- 检查BYMUSE FLO是否连接到您的其它的蓝牙设备上，断开其它的蓝牙设备和BYMUSE FLO的连接。
  - 长按  按键关机BYMUSE FLO，然后再开机。
  - 在您的已配对的蓝牙设备列表中移除BYMUSE FLO名称，重新在您的蓝牙设备上重启蓝牙功能，开始配对和连接。
  - 重新开启BYMUSE FLO，然后快速短按  按键2次来重连上您的蓝牙设备。
- 

## BYMUSE FLO在配对过程中关机

- 按住  按键2秒将会使BYMUSE FLO无线蓝牙耳机关机。
- 想要BYMUSE FLO重新开机，确保您只按住  按键1秒。


在“微信电话” / “微信视频” / “QQ电话” / “QQ视频”来电时，如果在耳机上按“接听键”接听后，耳机没有声音输出。

- 因为微信和QQ是第三方软件，不能通过蓝牙方式来接听微信来电和QQ来电。如果X3耳机已经与您的手机配对连接后，当对方“微信电话” / “微信视频” / “QQ电话” / “QQ视频”来电时，请在您手机上按“接听键”来接听，声音会从耳机端出来。
  - 微信/QQ在手机上的默认音量是50%位置，通过手机和耳机上音量键来调大音量。
- 

在玩“吃鸡游戏”时，如果X3耳机没有声音输出，请按以下操作步骤可以从耳机中听到游戏声音

- 第1步：关闭当前游戏，在您打开游戏之前，先把X3耳机与您的手机配对连接成功；
  - 第2步：您再打开“吃鸡游戏”就可以开心玩了；
- 

如果没有音频从BYMUSE FLO无线蓝牙设备传输出来

- 确保您的BYMUSE FLO和蓝牙设备的音量是调到合适的位置。
- 确保您的蓝牙设备上有正在播放音乐，不在暂停状态，而且音量调整合适的位置。
- 您的蓝牙设备可能超出了蓝牙连接的有效范围，移步缩短两者的蓝牙距离在有效距离10米以内。
- 长按  按键关机BYMUSE FLO，然后再开机。



- 有些蓝牙设备当连接上一个新蓝牙设备后，音量会重新回到默认的音量位置，尝试在蓝牙连接上后，加大您的蓝牙设备的音量。
- 

## 不能接听电话

- 检查您配对的手机是否支持HFP蓝牙协议。
  - 检查您的蓝牙设备和BYMUSE FLO的蓝牙是否连接成功。
  - 取决于您用的手机类型，是否支持音频功能。
  - 确保您有按“播放/暂停 ○”按键来接听和挂断电话。
- 

## 在结束通话后音乐不会继续播放

- 确保您的BYMUSE FLO和您的蓝牙设备有正确蓝牙连接上。
  - 确保在蓝牙连接的状态下继续播放音乐。
- 

## 从您的蓝牙设备、电脑、笔记本电脑传来很差的音质

- 您的蓝牙设备可能超出了蓝牙连接的有效范围，移步缩短两者的蓝牙距离在有效距离10米以内。
- 尝试选择另外一首歌曲或者另外的音频播放器播放。
- 如果您的苹果电脑、iPad、电脑或者笔记本电脑可以选择单声道或者立体声，请选择立体声。
- 重新开启BYMUSE FLO。
- 有些蓝牙设备需要关掉WiFi功能来提高蓝牙传输的音频播放质量。

- 可能需要重新给您的蓝牙设备和BYMUSE FLO进行配对和连接，先把BYMUSE FLO从您的蓝牙设备上移除掉，然后再重新启动蓝牙设备或者电脑，然后按照步骤重新配对和连接上蓝牙。
- 

## Windows笔记本电脑需要驱动

- BYMUSE FLO不需要任何驱动

如果出现类似以下需要驱动的信息，您需要从您的供应商处获取驱动，照做之后，您的电脑系统要重新启动，然后按照操作指导书重新配对连接上蓝牙。

---

## BYMUSE FLO 关机

- 当插入Micro USB充电线给BYMUSE FLO无线蓝牙耳机开始充电时，主机会自动关机。
  - 确保您的BYMUSE FLO的电池有充分的电量，并且充电时间要达到2-3小时。
- 

## BYMUSE FLO 佩戴不合适或者戴不紧

- 选择合适的耳塞、耳翼，佩戴在你的耳朵上。
- 确保每一对耳翼能够正确地佩戴在您的耳朵上

# 产品规格

蓝牙版本: V5.0

支持协议: HSP, HFP, A2DP, AVRCP

频率响应: 20Hz~20KHz

传输距离: Up to 10m

播放时间: 7H

充电时间: 1.5~2H

## 产品安全及防范措施

1. 阅读这些指导 - 全部的安全和操作指导应该在操作耳机前仔细阅读
2. 保存好指导书 - 安全和操作指导书可以用于以后参考使用
3. 遵从所有的指导 - 所有的操作和使用指导都要遵从
4. 在充电时禁止靠近水, 防止触电
5. 只能用干布擦拭机器
6. 保护 Micro USB 线, 禁止踩压线材, 特别是接头和拔插口的地方
7. 在闪电或者长时间不使用的情况下要拔掉Micro USB充电线

# 部件中有毒有害物质或元素

产品中有毒有害物质或元素的名称及含量根据中国  
《电器电子产品有害物质限制使用管理办法》

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBBs)	多溴二苯醚 (PBDEs)
耳机线	○	○	○	○	○	○
电路板及组件	○	○	○	○	○	○
塑胶部件	○	○	○	○	○	○
金属部件	○	○	○	○	○	○
耳套	○	○	○	○	○	○

○：表示该有害物质在该部件所有均质材料中的含量均在SJ/T11364-2014标准规定的限量要求以下；

×：表示该有害物质至少在该部件的某一均质材料中的含量超出SJ/T11364-2014标准规定的要求，但该项目仅在库存或已加工产品中有少量应用，且按照计划正在进行环保切换，切换后将符合上诉规定。



本产品的“环保使用期限”为10年，其标识如左图所示。电池等可更换部件的环保使用期限可能与产品的环保使用期限不同。只有在本使用说明书所述的正常情况下使用本产品时，“环保使用期限”才有效。

**说明书尺寸：98\*90mm**  
**材质：80g书写纸**  
**骑马钉**  
**V1.0版本**