



GALILEO

Quick Start Guide


Alarm Clock & Bluetooth® Speaker

CTAC02

Read Before Use

- Protect your device from impact from bumps and falls.
- Avoid using this device in strong magnetic and static environments as much as possible.
- If the device comes into contact with water or any other liquid, power it off immediately and wait for it to dry completely before turning it on again.
- Do not clean the device with any cleaning products containing chemicals, to avoid damage caused by corrosion and dampness. When cleaning is necessary, use a dry, soft cloth.
- Please do not disassemble the device by yourself; doing so will void the warranty.


Product Overview

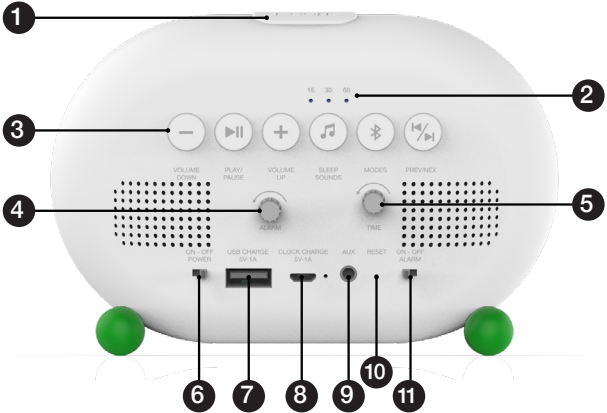

Product Overview (continued)

1. Snooze Button
2. Sleep Sound Timer
3. Button Controls
4. Alarm Knob
5. Time Knob
6. Power Switch
7. USB Charging Port
8. Micro USB Clock Charging Port
9. AUX In
10. Reset Button
11. Alarm Switch

Button Controls

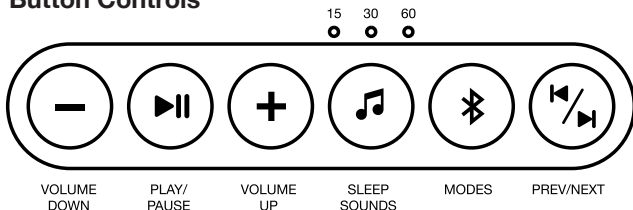

1. **Volume Down:** Press to decrease volume
2. **Pause / Play:** Press to pause or play the music
3. **Volume Up:** Press to increase volume
4. **Sleep Sounds:** Press to turn on sleep sounds; press again to set sleep sounds timer to 15, 30, or 60 minutes, respectively
5. **Modes:** Press to switch between modes (FM Radio Mode, Bluetooth® Setup, Snooze Sound Setup, Alarm Song Setup)
6. **Previous / Next:** Press once to skip to the next track. Press twice to return to the previous track

Time and Alarm Setup



Turn the **TIME** knob to adjust the clock's time.



Turn the **ALARM** knob to set up the alarm.



Make sure the **ALARM SWITCH** is also set to ON.

To snooze the alarm:

Press the top **SNOOZE BUTTON** once.
The alarm will snooze for 10 minutes.

To turn off the alarm:

Flip the **ALARM SWITCH** to OFF.

Set Alarm Sound



To set up the Alarm Sound, press the **MODES** button until you hear the “Set Up Alarm Song” voice prompt.



Use the **PREV/NEXT** button to select your desired alarm song. Press the **MODES** button again to confirm your selection.

Set Snooze Sound



To set up the Snooze Sound, press the **MODES** button until you hear the “Set Up Snooze Sound” voice prompt.



Use the **PREV/NEXT** button to select your desired snooze sound. Press the **MODES** button again to confirm your selection.

Note: When the alarm is not ringing, you may press the **SNOOZE** button to play the snooze sound. Press the button again to pause the sound.

Sleep Sounds



To play sleep sounds, press the **SLEEP SOUNDS** button.

Press the **SLEEP SOUNDS** button again to turn on the timer. The blue light indicator will turn on, allowing you to set the timer to 15, 30 or 60 minute intervals.

Note: To turn off sleep sounds, press the **SLEEP SOUNDS** button again after the 60 minute timer is enabled.

FM Radio



Press the **MODES** button until you hear the “FM Radio” voice prompt.

Press and hold the same **MODES** button to scan radio stations automatically.



If you want to search radio stations manually, press the **PREV/NEXT** button.

Note: Press the **PREV/NEXT** button once to search forward; press twice to return to the previous station.

For optimal radio reception, plug one end of the included AUX cable into the clock’s **AUX input**.

Bluetooth® Setup




Press the **MODES** button until you hear the “Bluetooth Setup” voice prompt.

Enter Bluetooth® settings on your smartphone or other Bluetooth®-enabled device, and search for “**GALILEO**”. Tap to connect to Bluetooth®.

AUX

Insert an AUX cable to automatically play music from any device compatible with an AUX cable.

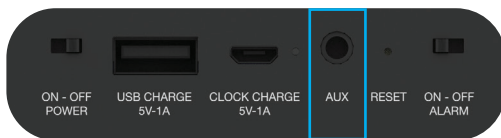

Charging the Clock

Insert the included micro USB cable to charge the alarm clock through the **CLOCK CHARGE** port.

NOTE: You will need to connect the USB end of the cable into a wall adapter or computer (not included).




Charging Other Devices

Charge your mobile phone or other portable device by plugging in your device's USB charging cable (sold separately) into the clock's **USB CHARGE** port.



Resetting the Clock

Using a paper clip, press and hold the **RESET** button for 3 seconds to reset the alarm clock to factory default settings.

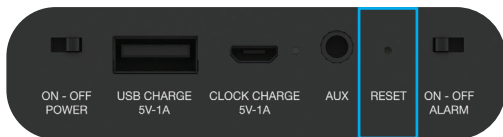

Lamp

You may illuminate the clock face by pressing and holding the **SNOOZE** button when the clock is turned on. Press and hold the **SNOOZE** button again to turn the lamp off.

SNOOZE



Specifications

- Built-in Lights and Night Light
- 5 Preloaded Alarm Sounds
- FM Radio Function
- Bluetooth® Speaker
- Sleep Sound Machine
- Sleep Sound Timer
- Bluetooth® 5.1
- 3.5mm AUX In
- Up to 10 Hours of Play Time
- Charging Time: 2.5 Hours
- Working Distance: 32 ft
- Audio Amplifier & Volume Adjustment
- Micro USB Charging
- Portable Charger Function
- Battery Capacity: 2000mAh
- Speaker: 2*3w
- Power Output: 6W
- Frequency Response: 100Hz ~ 20kHz+ / -3dB

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Need Help?

For customer support regarding your device, please submit a request by emailing **support@dpaudiovideo.zendesk.com**. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a Core Innovations customer service representative by calling **1-833-909-CORE (1-833-909-2673)**. We are available Monday - Friday, 9am - 5pm PST, except major holidays. Core Innovations strongly urges customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Thank you for purchasing a Core Innovations product.

