



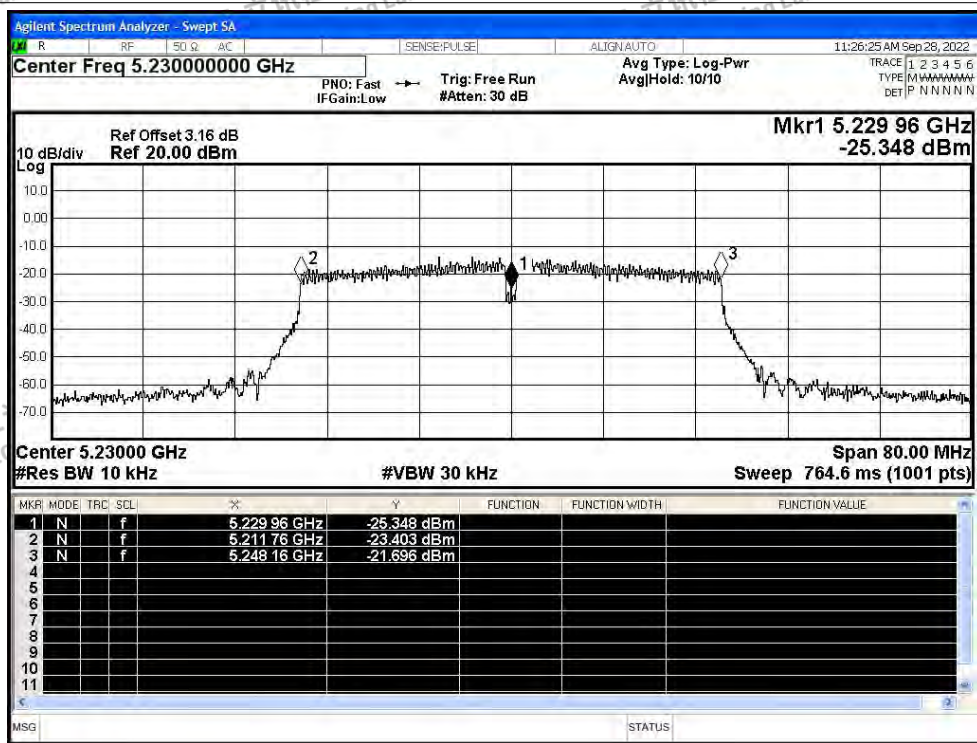

Freq. Stability NVNT ac40 5230MHz Ant0

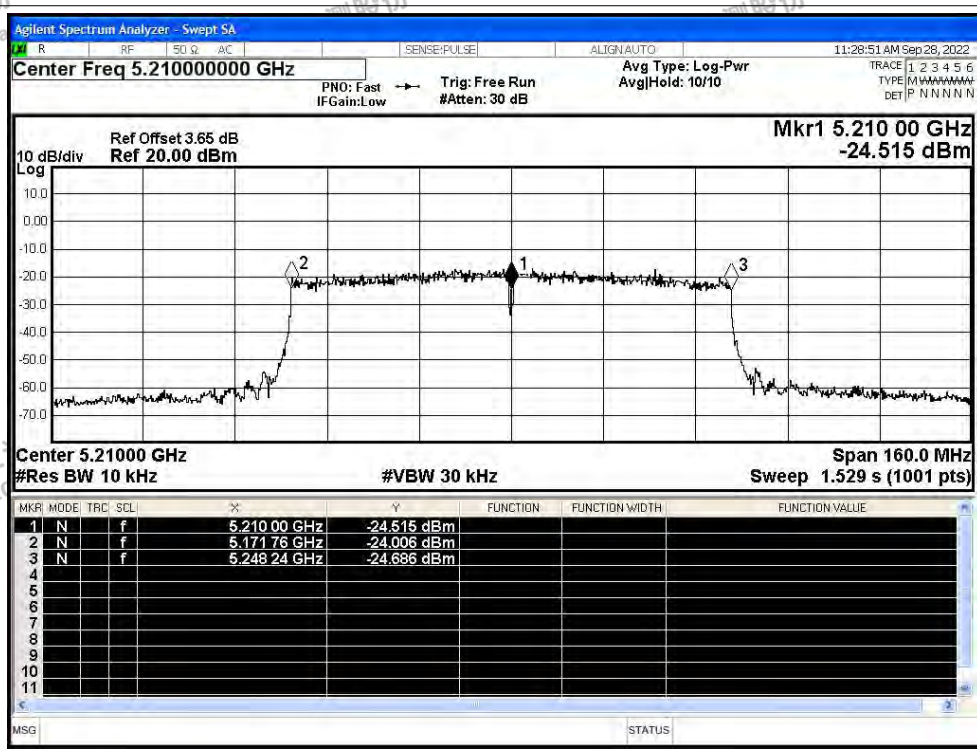

Freq. Stability NVNT ac80 5210MHz Ant0





Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5180	Ant1	5179.98	-20000	-3.86	25	Pass
NVNT	a	5200	Ant1	5199.98	-20000	-3.85	25	Pass
NVNT	a	5240	Ant1	5239.96	-40000	-7.63	25	Pass
NVNT	n20	5180	Ant1	5180	0	0	25	Pass
NVNT	n20	5200	Ant1	5199.98	-20000	-3.85	25	Pass
NVNT	n20	5240	Ant1	5239.98	-20000	-3.82	25	Pass
NVNT	n40	5190	Ant1	5190	0	0	25	Pass
NVNT	n40	5230	Ant1	5230.04	40000	7.65	25	Pass
NVNT	ac20	5180	Ant1	5180	0	0	25	Pass
NVNT	ac20	5200	Ant1	5199.98	-20000	-3.85	25	Pass
NVNT	ac20	5240	Ant1	5240	0	0	25	Pass
NVNT	ac40	5190	Ant1	5190	0	0	25	Pass
NVNT	ac40	5230	Ant1	5230	0	0	25	Pass
NVNT	ac80	5210	Ant1	5210	0	0	25	Pass




Shenzhen LCS Compliance Testing Laboratory Ltd.
 Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China
 Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
 Scan code to check authenticity




Test Graphs

Freq. Stability NVNT a 5180MHz Ant1

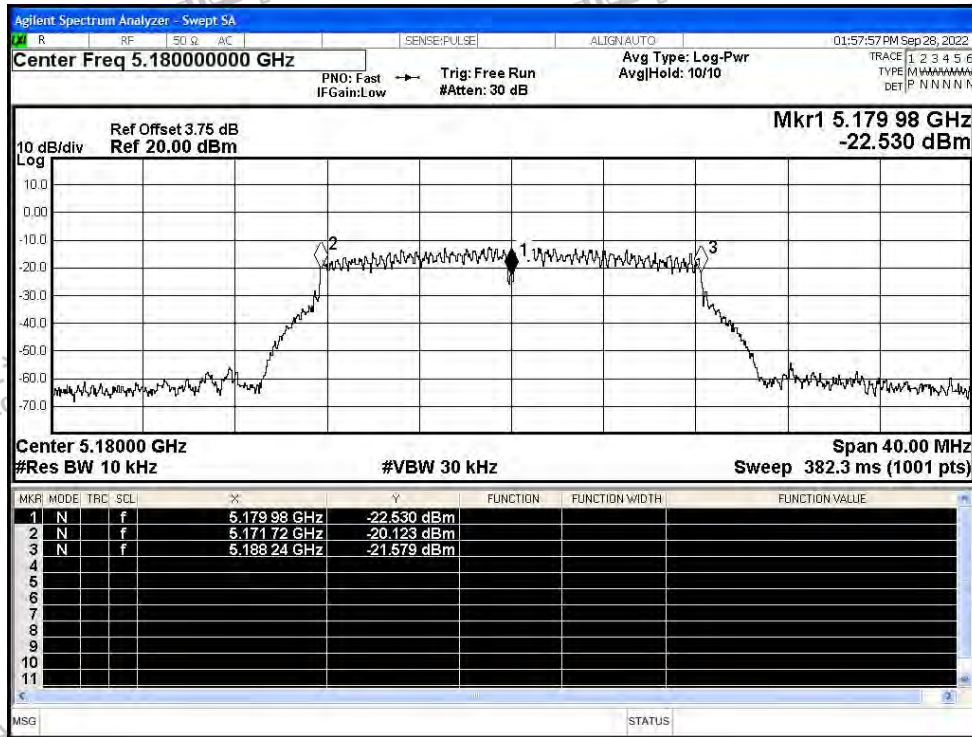


Freq. Stability NVNT a 5200MHz Ant1

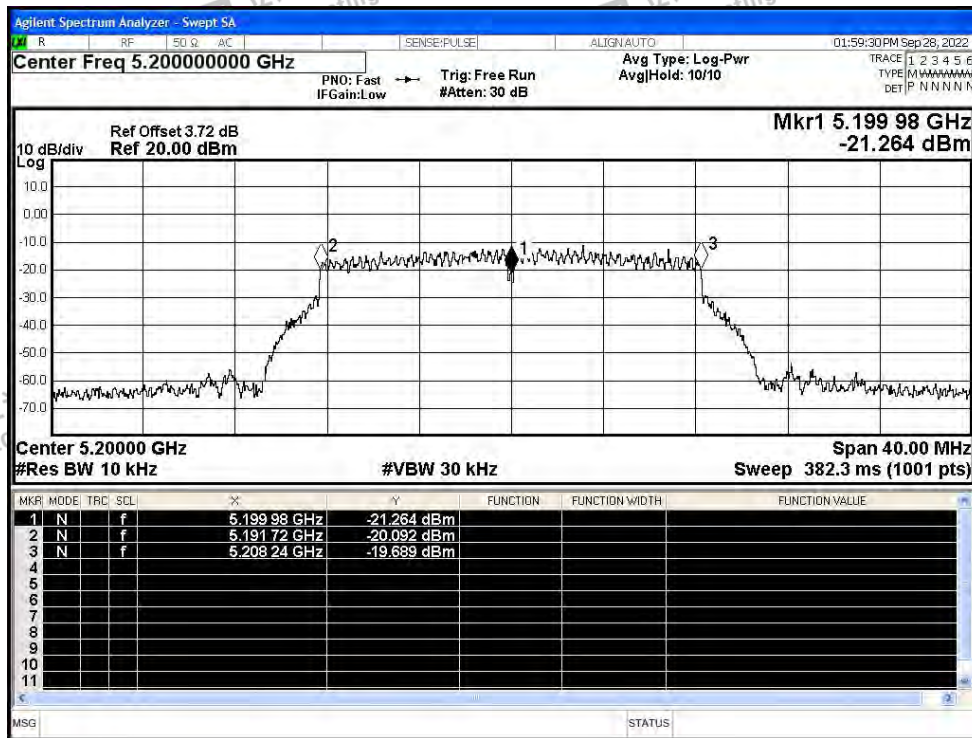




Freq. Stability NVNT a 5240MHz Ant1

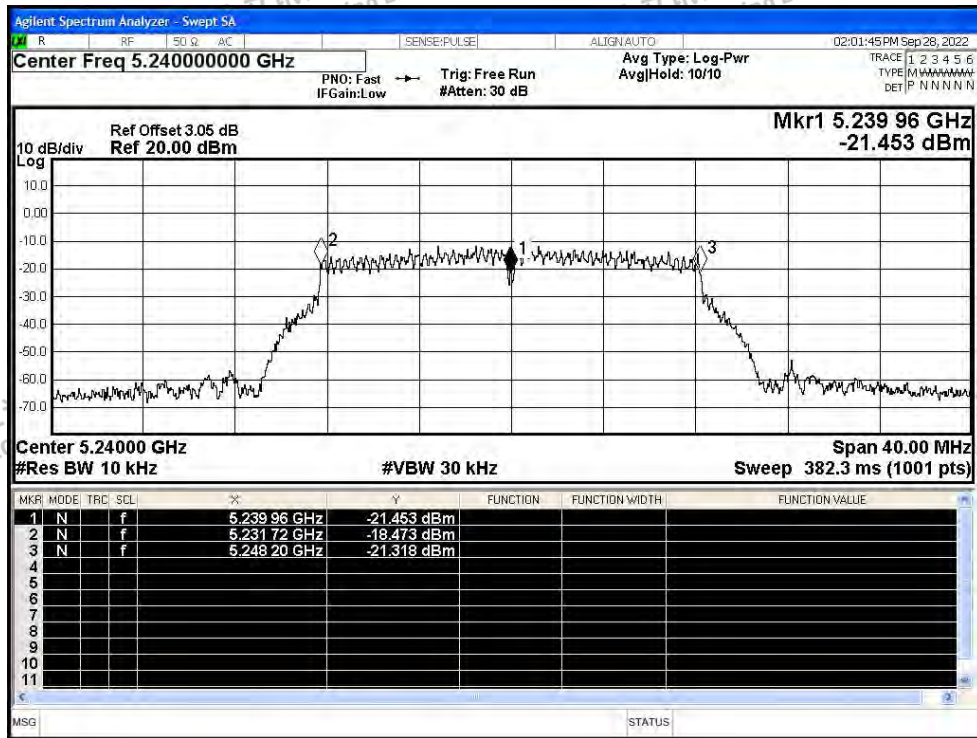


Freq. Stability NVNT n20 5180MHz Ant1

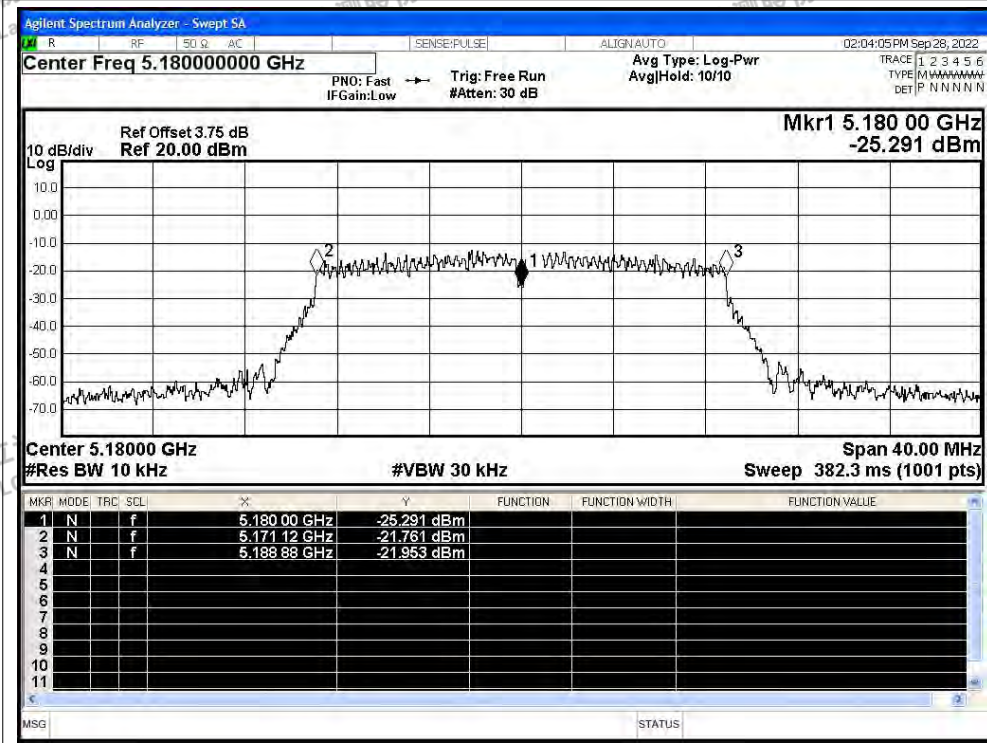




Freq. Stability NVNT n20 5200MHz Ant1

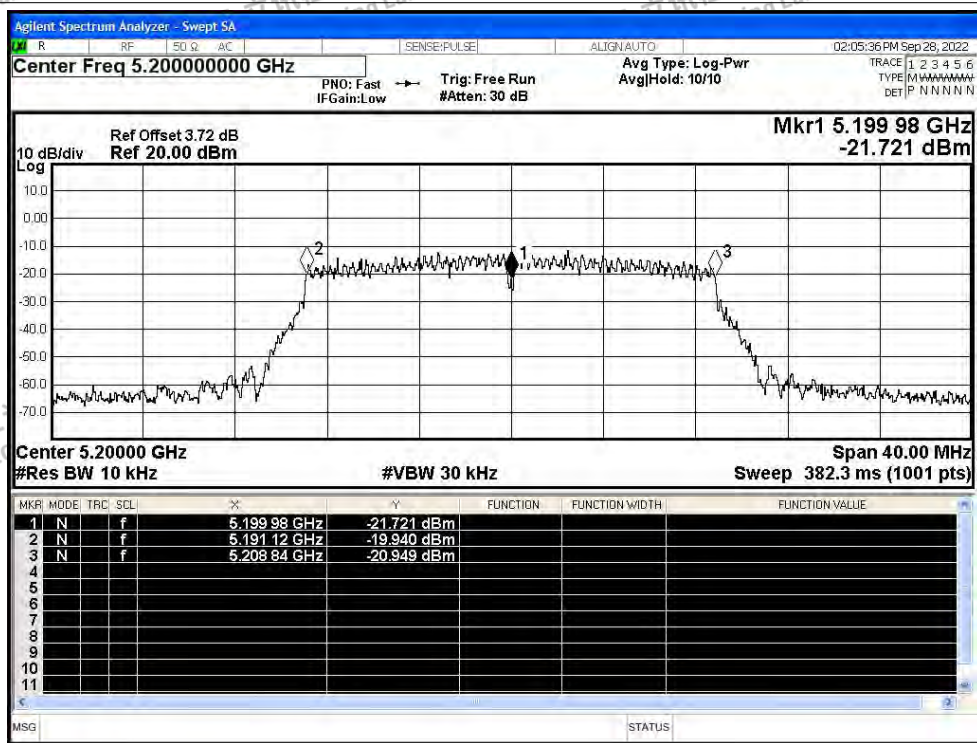


Freq. Stability NVNT n20 5240MHz Ant1

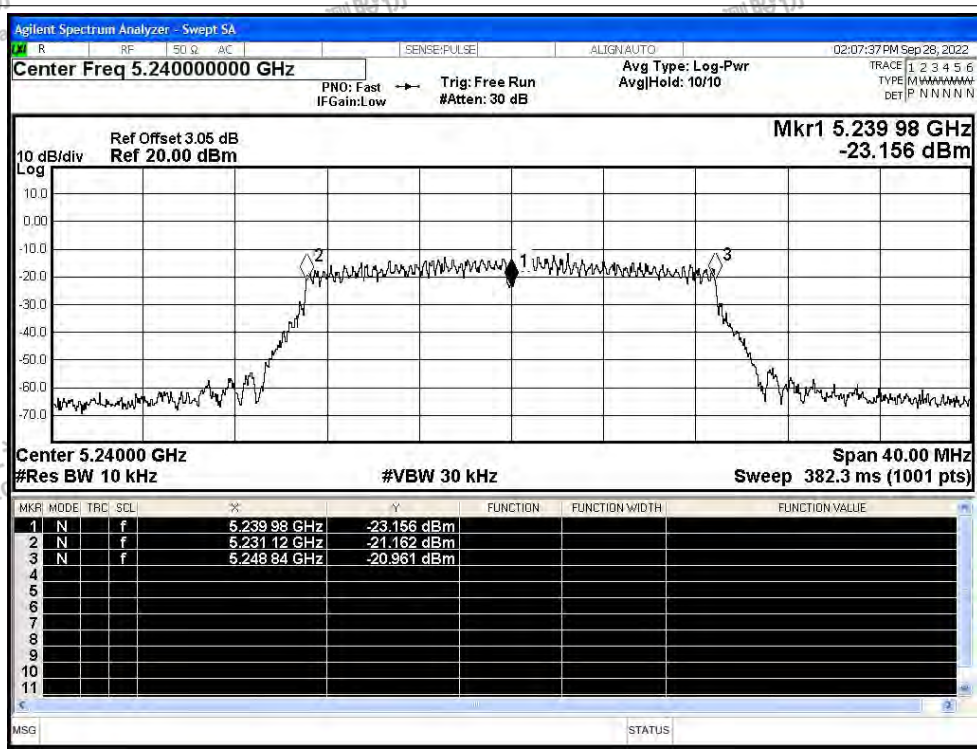




Freq. Stability NVNT n40 5190MHz Ant1

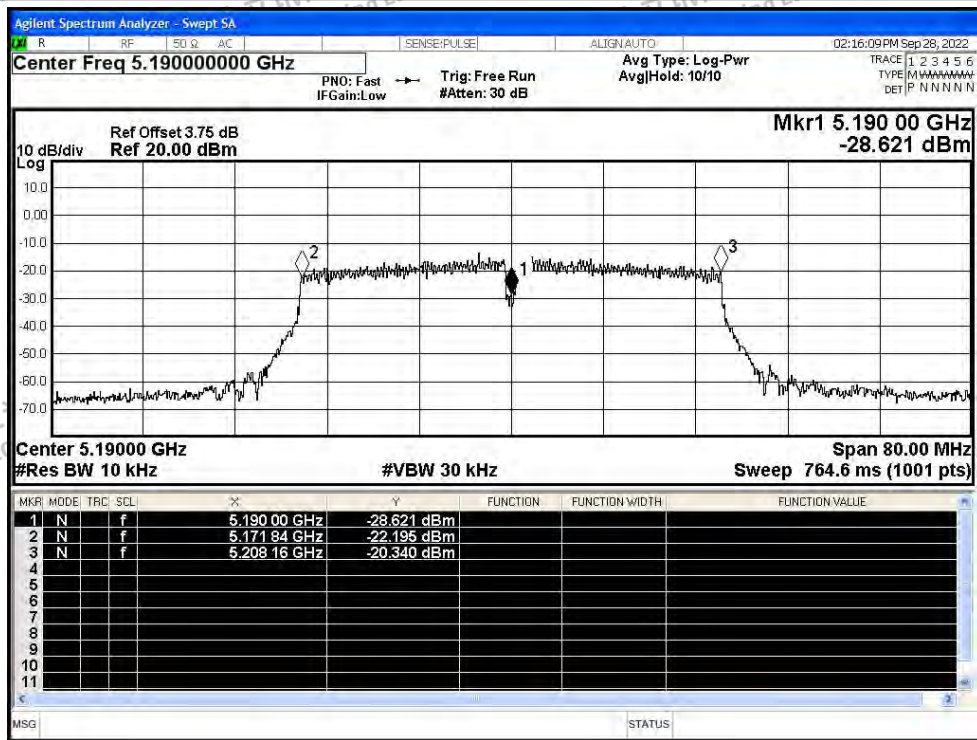


Freq. Stability NVNT n40 5230MHz Ant1

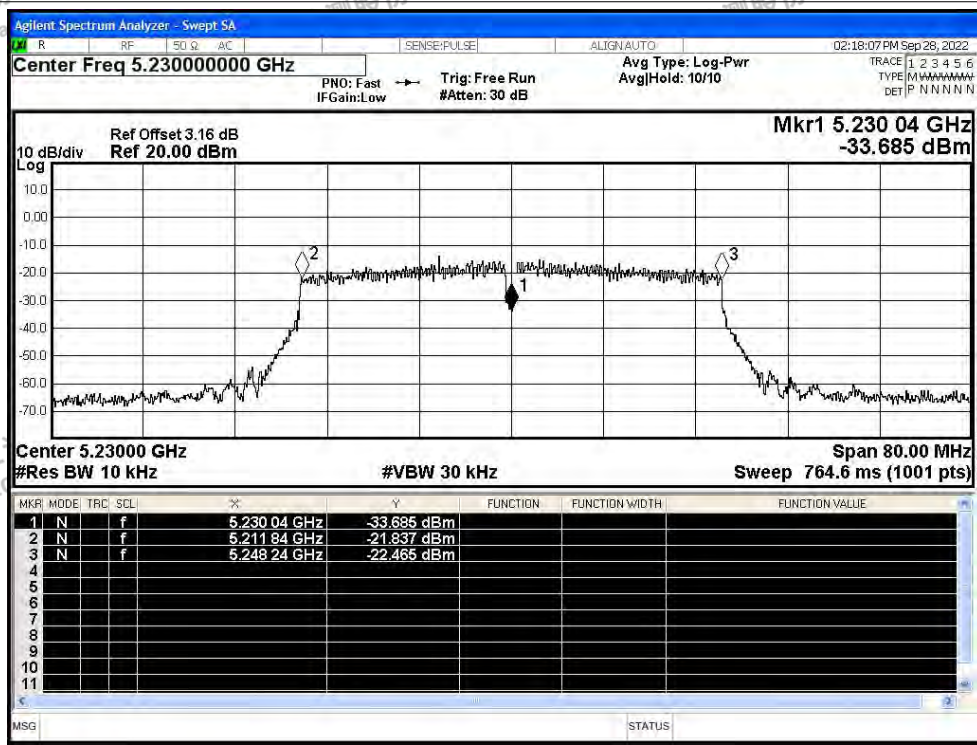




Freq. Stability NVNT ac20 5180MHz Ant1

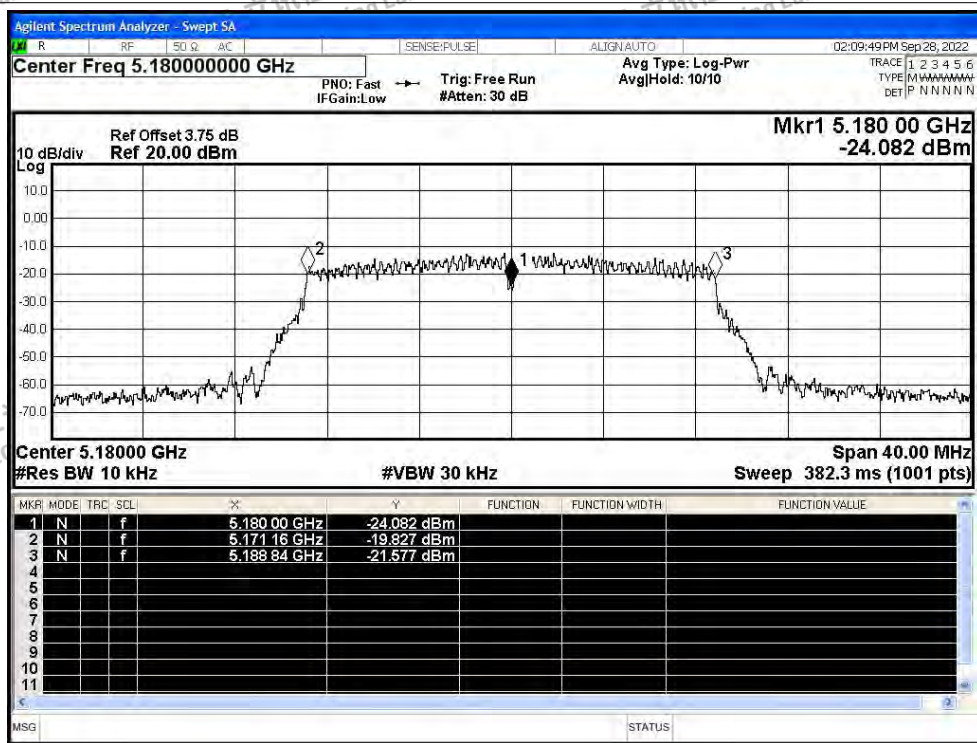


Freq. Stability NVNT ac20 5200MHz Ant1

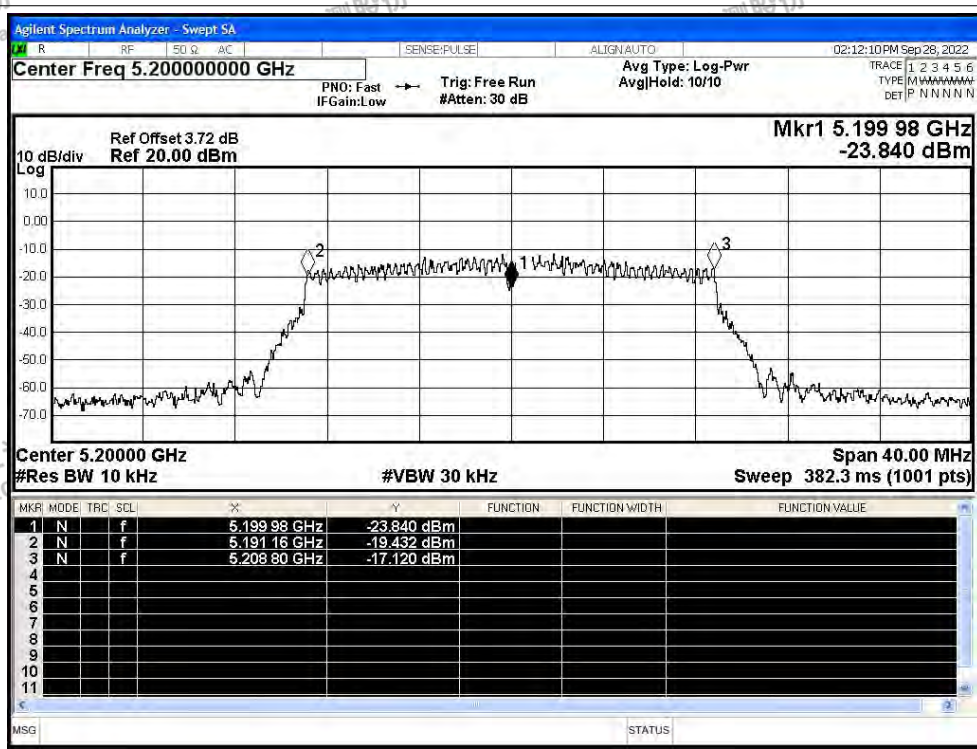




Freq. Stability NVNT ac20 5240MHz Ant1

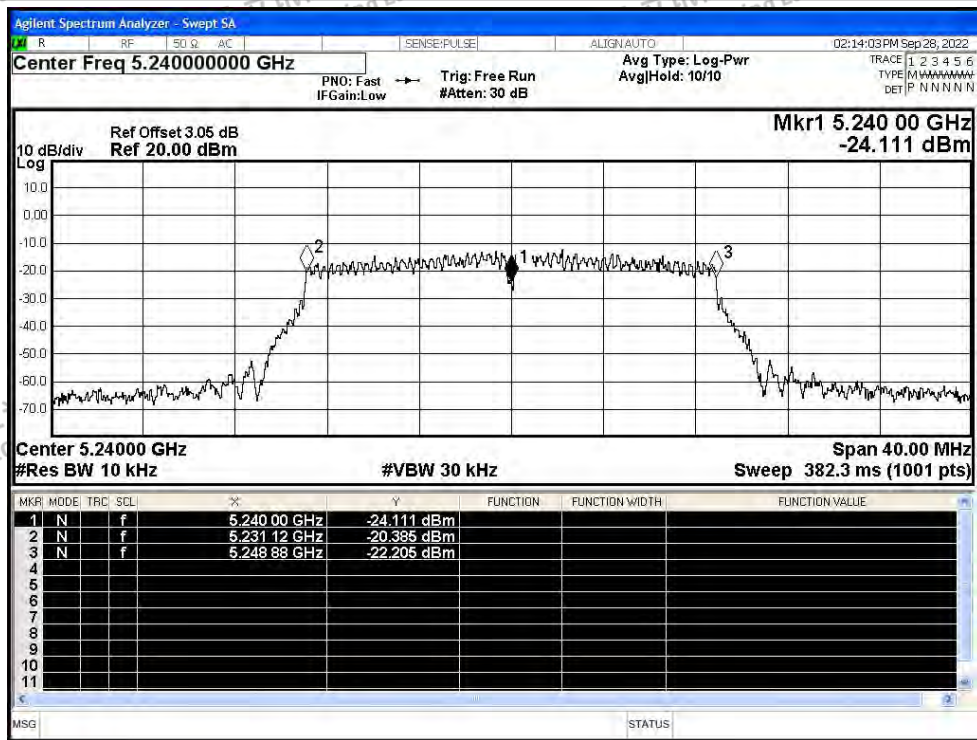


Freq. Stability NVNT ac40 5190MHz Ant1

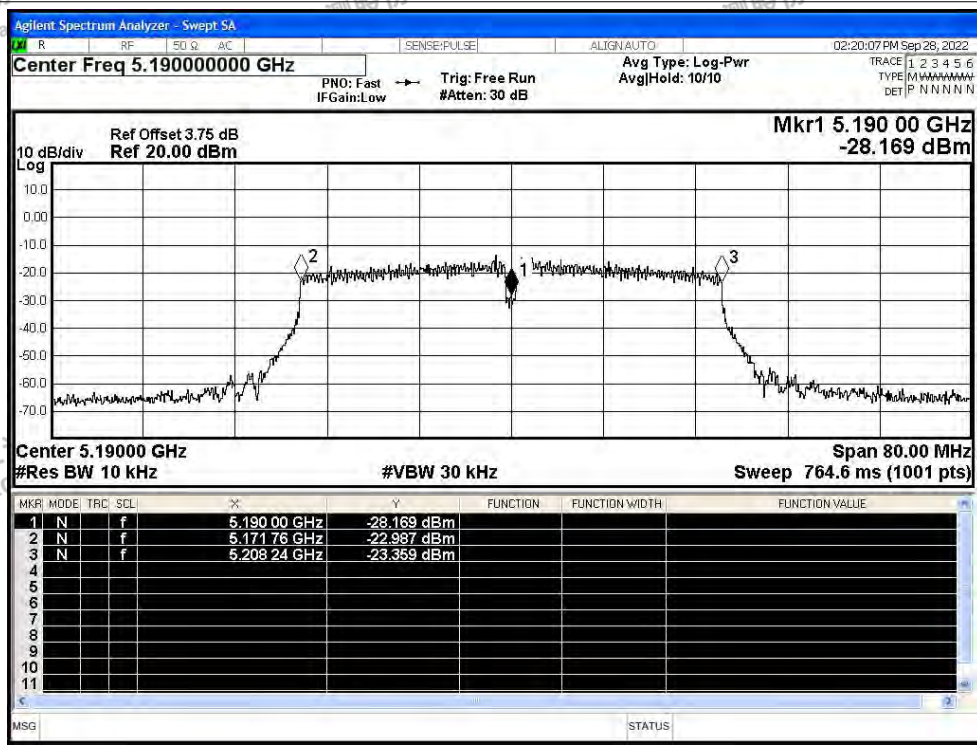




Freq. Stability NVNT ac40 5230MHz Ant1

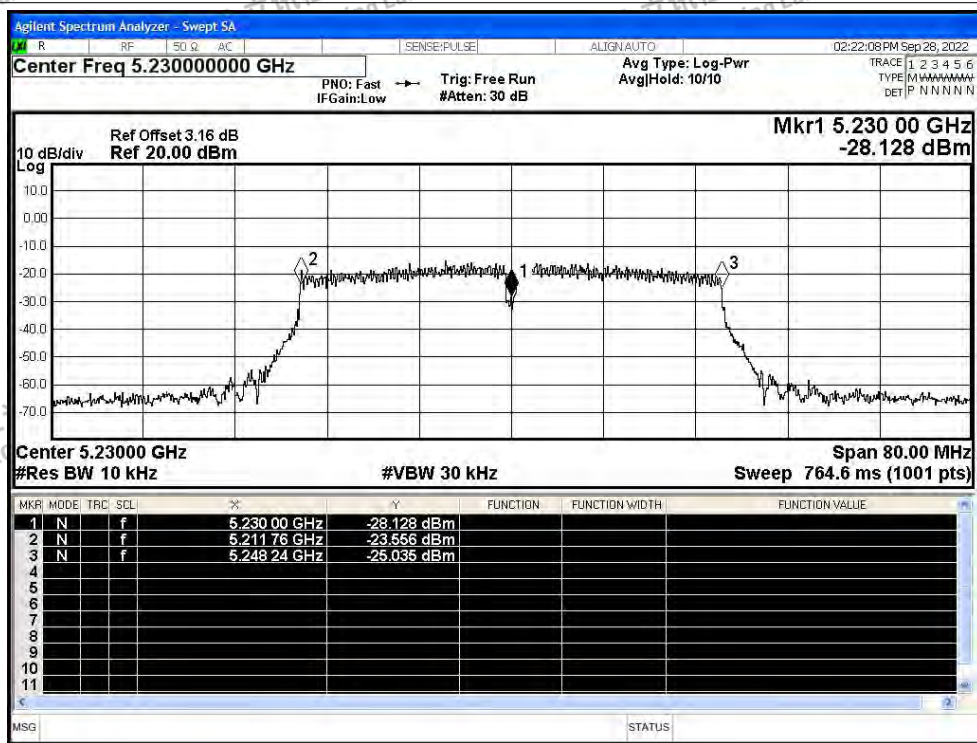

Freq. Stability NVNT ac80 5210MHz Ant1

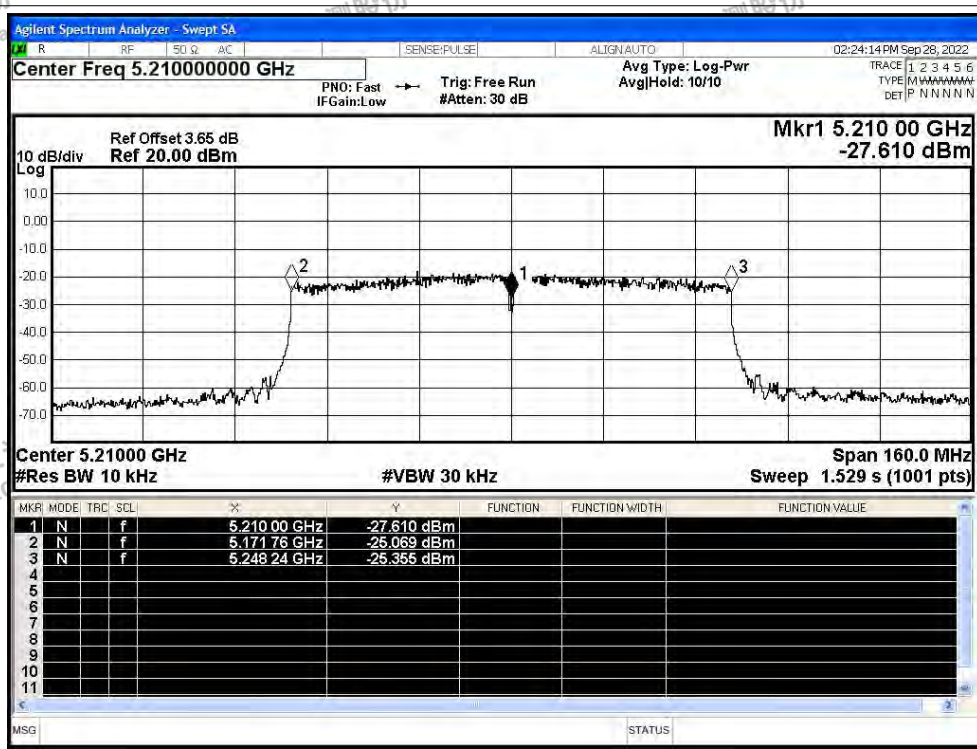



D.7 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5180	Ant0	100	0	0
NVNT	a	5200	Ant0	100	0	0
NVNT	a	5240	Ant0	100	0	0
NVNT	n20	5180	Ant0	100	0	0
NVNT	n20	5200	Ant0	100	0	0
NVNT	n20	5240	Ant0	100	0	0
NVNT	n40	5190	Ant0	100	0	0
NVNT	n40	5230	Ant0	100	0	0
NVNT	ac20	5180	Ant0	100	0	0
NVNT	ac20	5200	Ant0	100	0	0
NVNT	ac20	5240	Ant0	100	0	0
NVNT	ac40	5190	Ant0	100	0	0
NVNT	ac40	5230	Ant0	100	0	0
NVNT	ac80	5210	Ant0	100	0	0




Shenzhen LCS Compliance Testing Laboratory Ltd.
 Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China
 Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
 Scan code to check authenticity




Test Graphs

Duty Cycle NVNT a 5180MHz Ant0

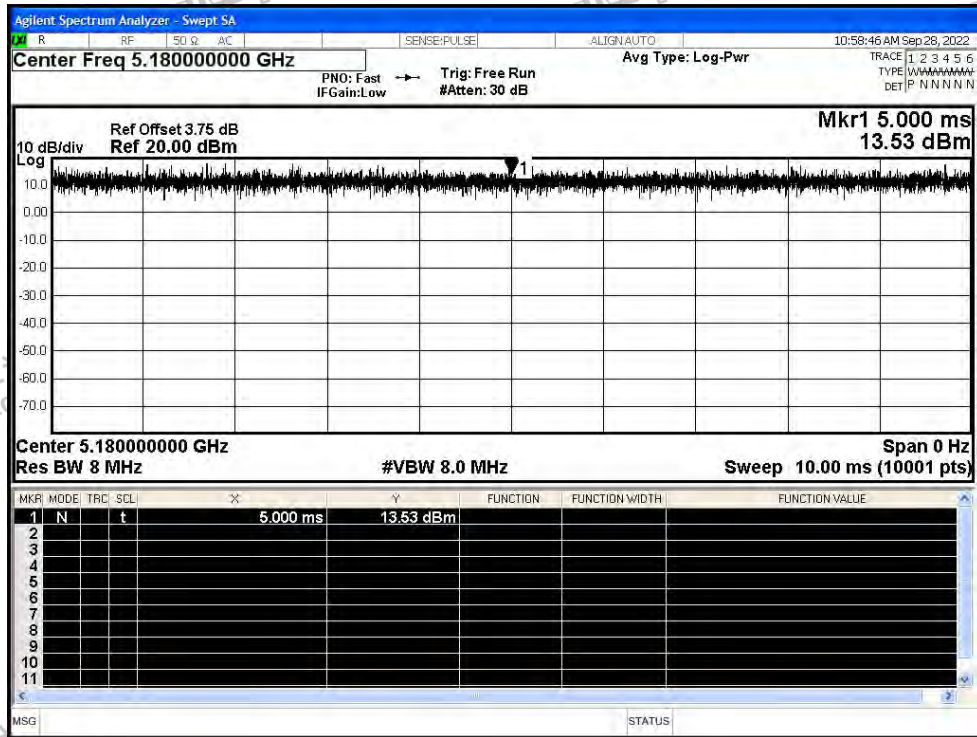


Duty Cycle NVNT a 5200MHz Ant0

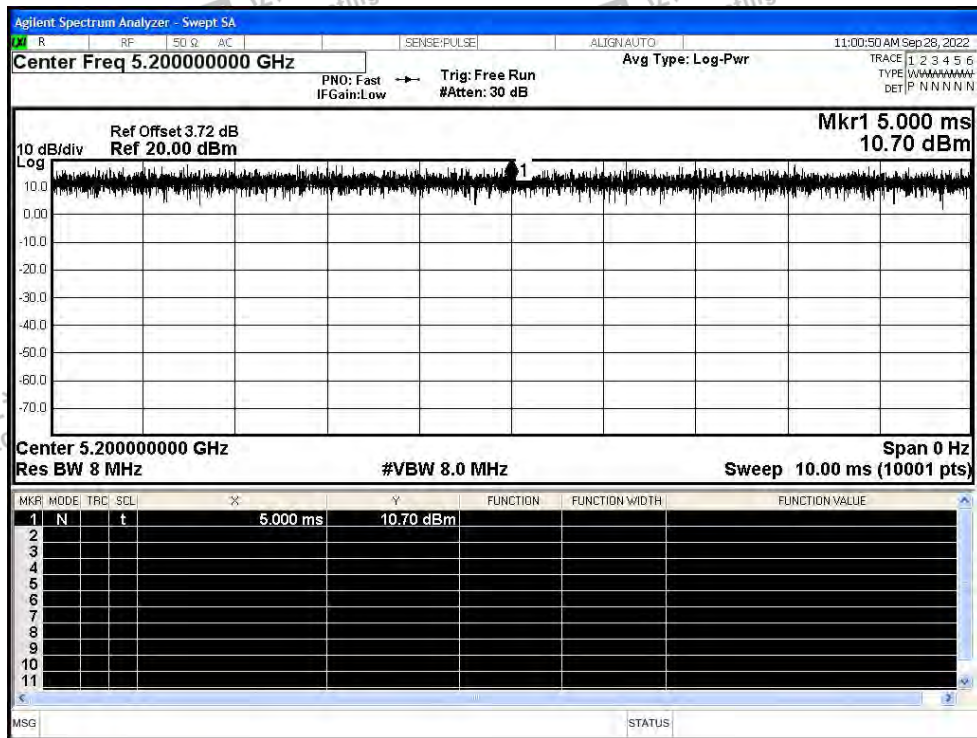




Duty Cycle NVNT a 5240MHz Ant0

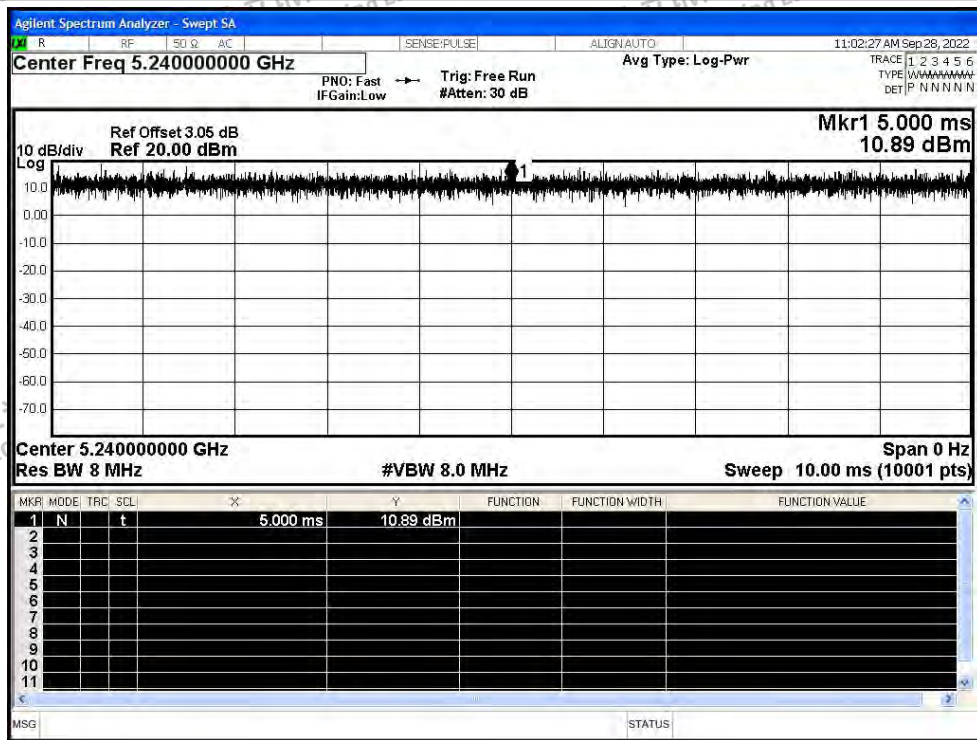


Duty Cycle NVNT n20 5180MHz Ant0

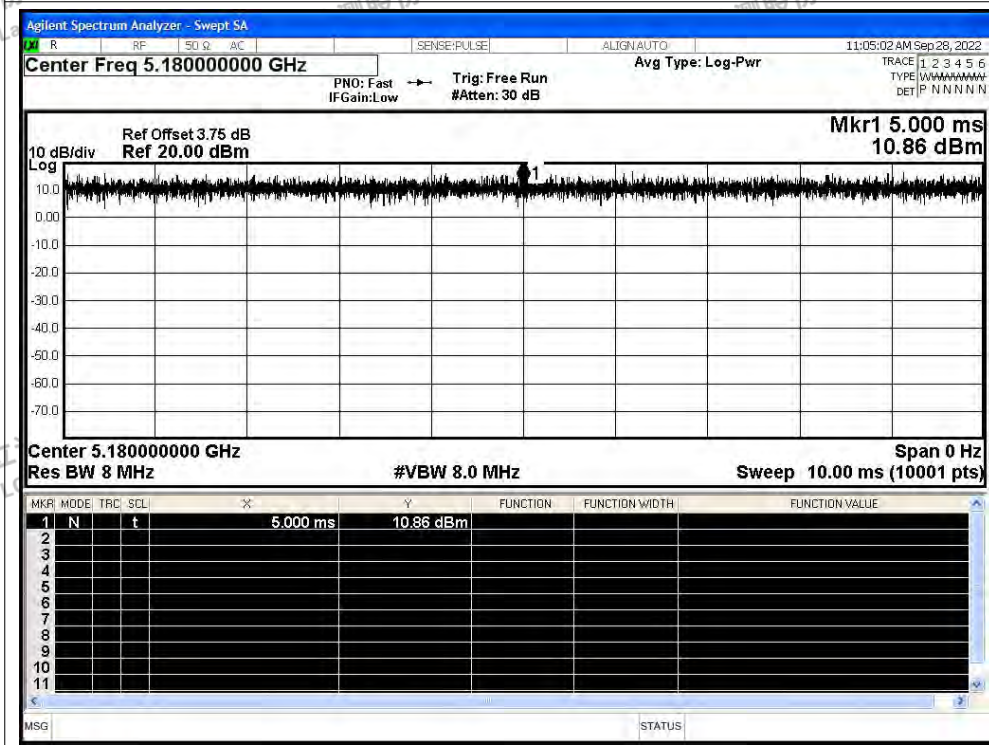




Duty Cycle NVNT n20 5200MHz Ant0

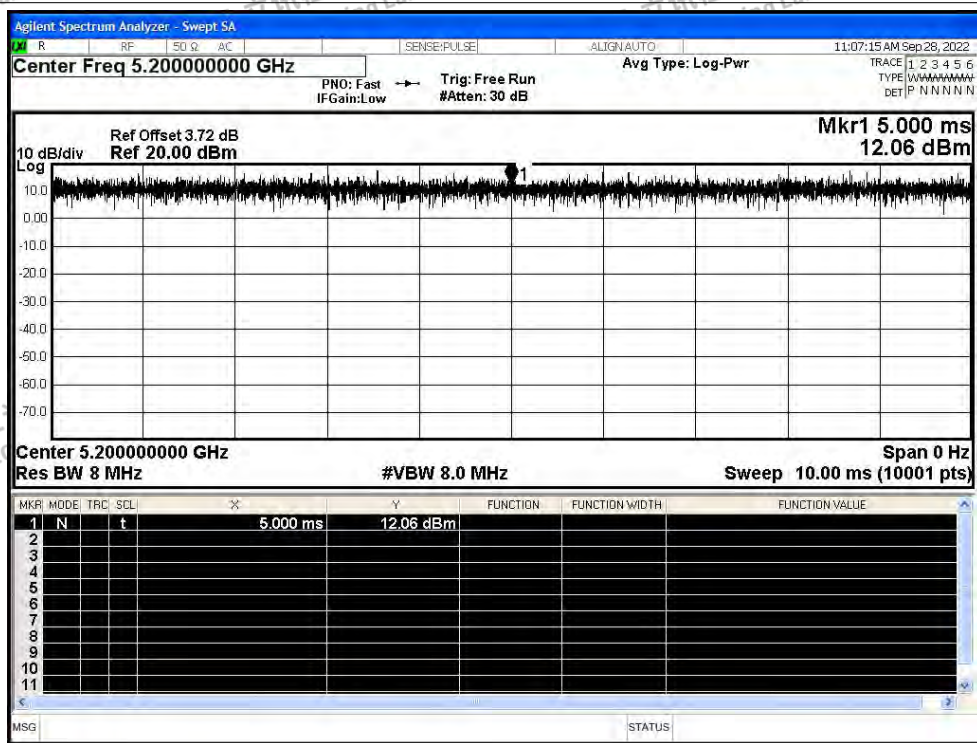


Duty Cycle NVNT n20 5240MHz Ant0

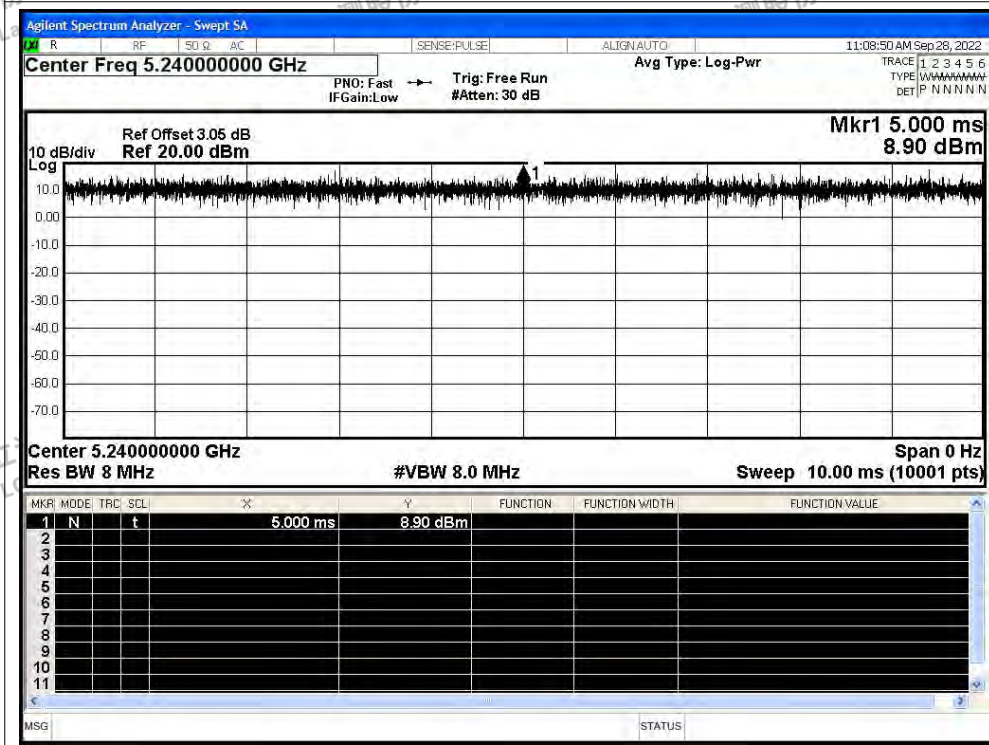




Duty Cycle NVNT n40 5190MHz Ant0

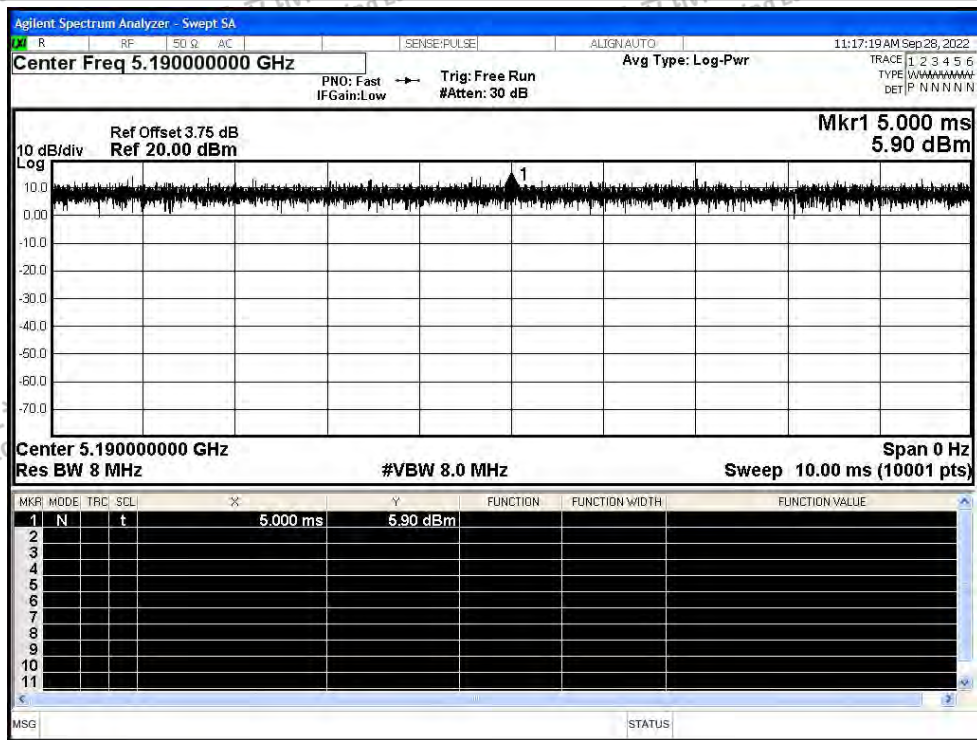


Duty Cycle NVNT n40 5230MHz Ant0

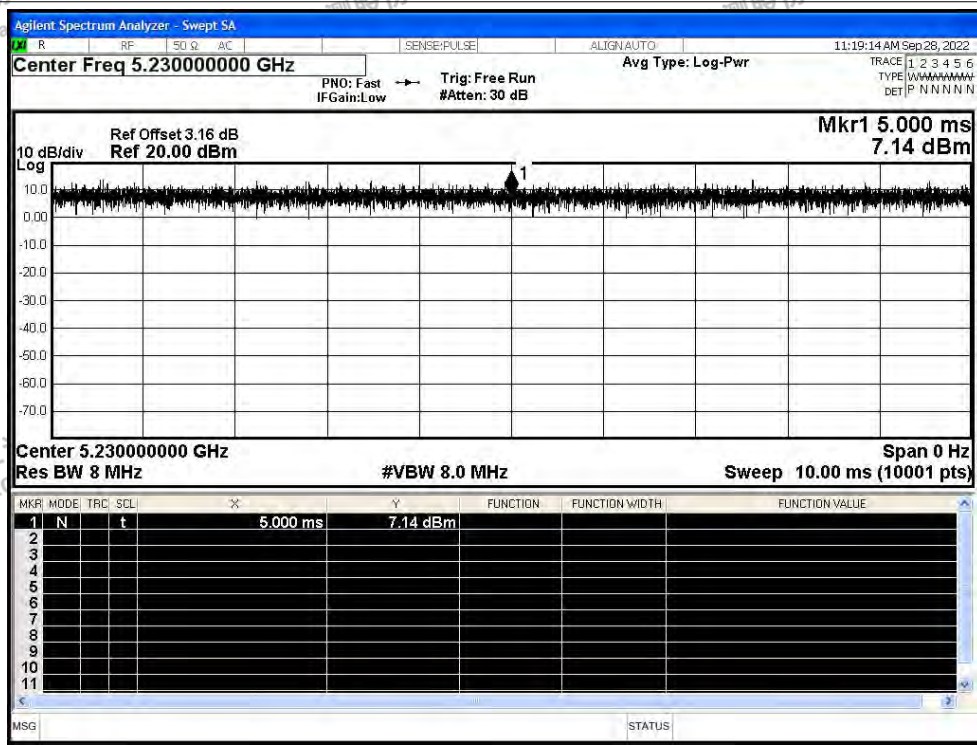




Duty Cycle NVNT ac20 5180MHz Ant0

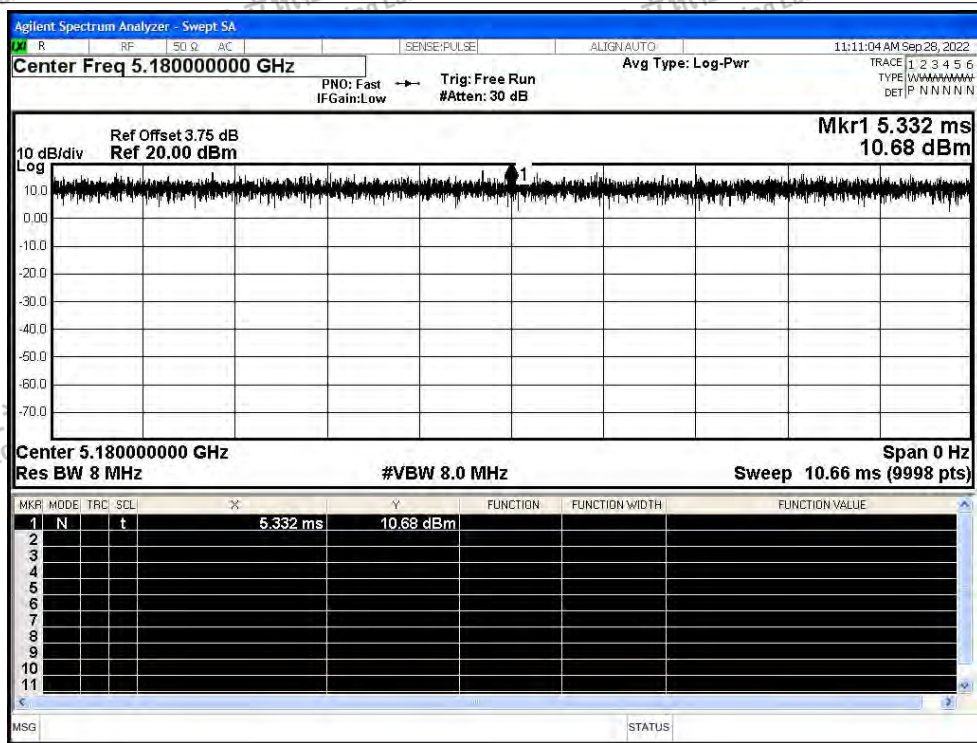


Duty Cycle NVNT ac20 5200MHz Ant0

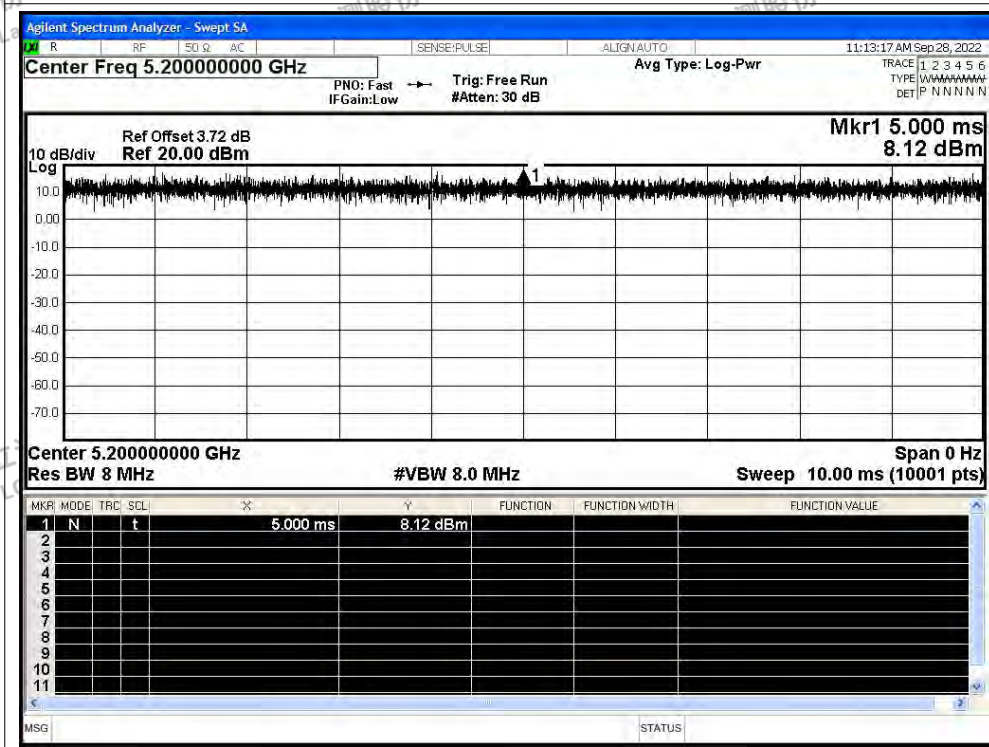




Duty Cycle NVNT ac20 5240MHz Ant0

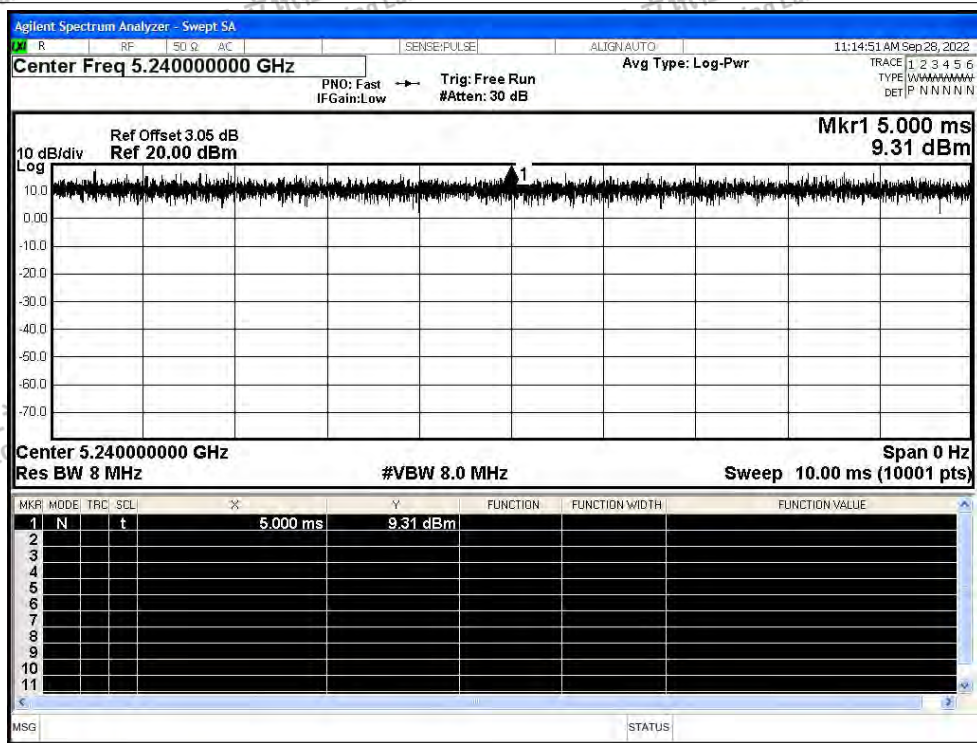


Duty Cycle NVNT ac40 5190MHz Ant0

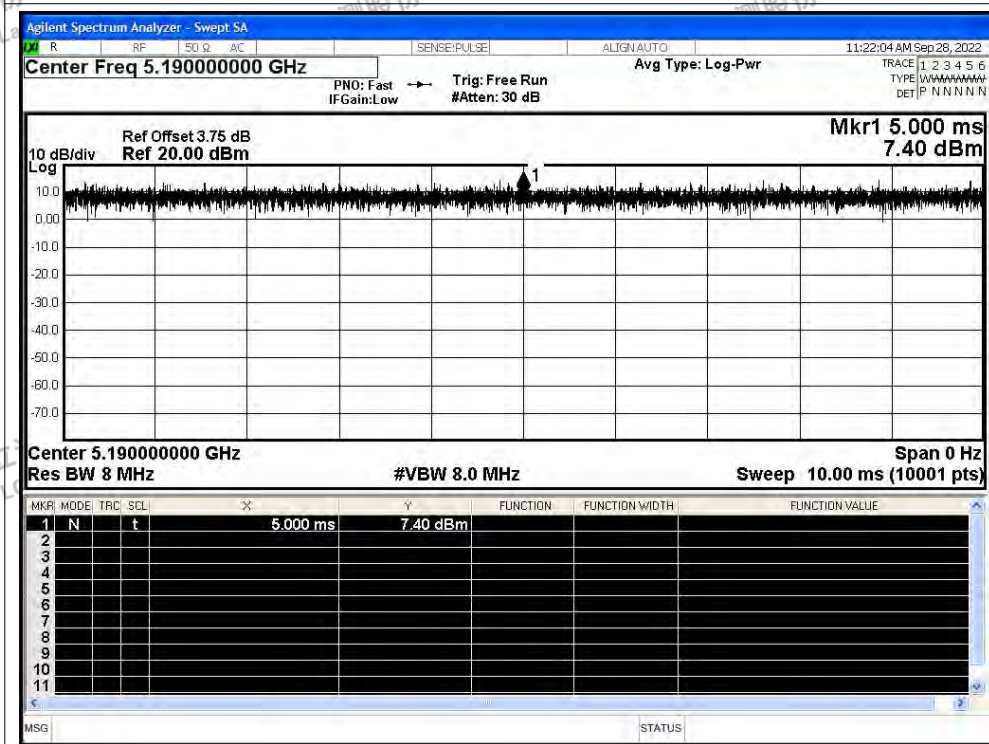




Duty Cycle NVNT ac40 5230MHz Ant0

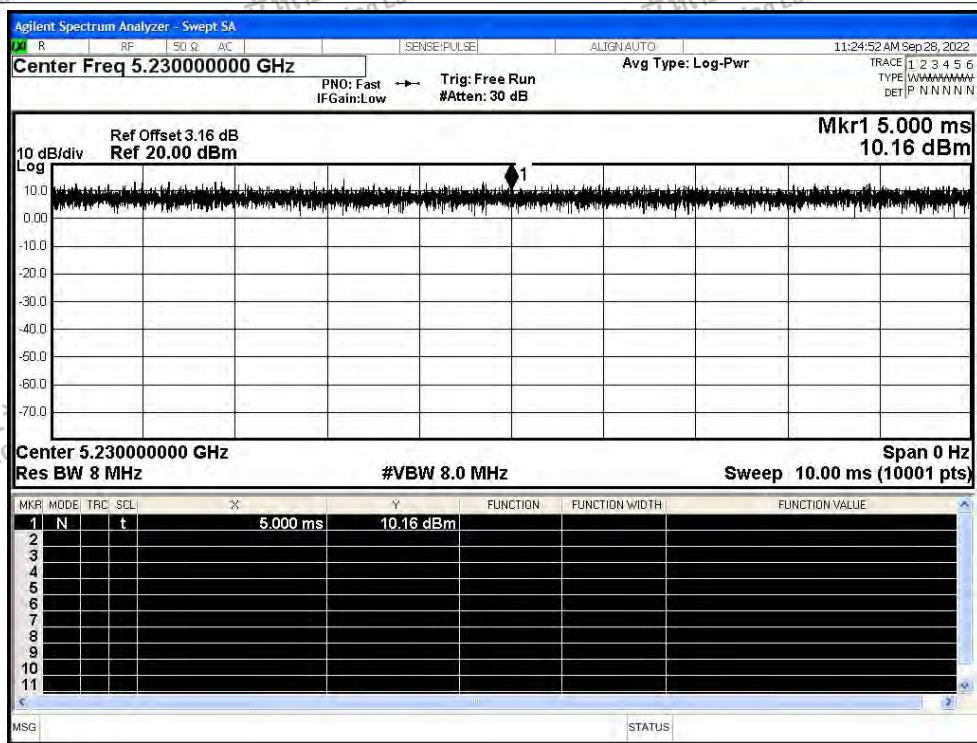

Duty Cycle NVNT ac80 5210MHz Ant0

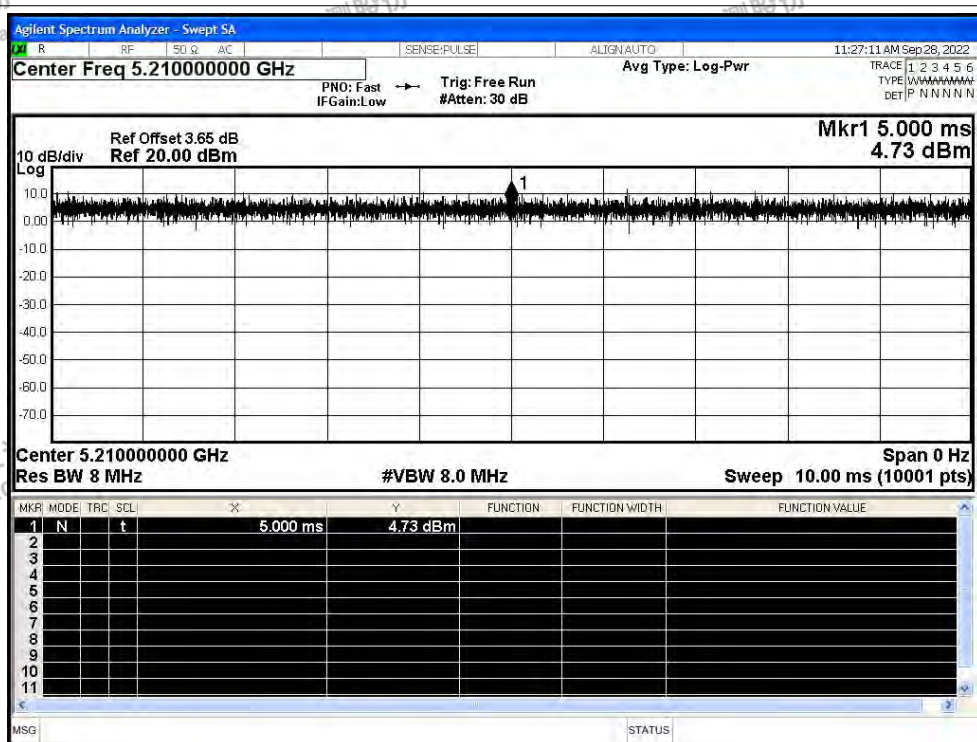



Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5180	Ant1	100	0	0
NVNT	a	5200	Ant1	100	0	0
NVNT	a	5240	Ant1	100	0	0
NVNT	n20	5180	Ant1	100	0	0
NVNT	n20	5200	Ant1	100	0	0
NVNT	n20	5240	Ant1	100	0	0
NVNT	n40	5190	Ant1	100	0	0
NVNT	n40	5230	Ant1	100	0	0
NVNT	ac20	5180	Ant1	100	0	0
NVNT	ac20	5200	Ant1	100	0	0
NVNT	ac20	5240	Ant1	100	0	0
NVNT	ac40	5190	Ant1	100	0	0
NVNT	ac40	5230	Ant1	100	0	0
NVNT	ac80	5210	Ant1	100	0	0




Shenzhen LCS Compliance Testing Laboratory Ltd.
 Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China
 Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
 Scan code to check authenticity




Test Graphs

Duty Cycle NVNT a 5180MHz Ant1

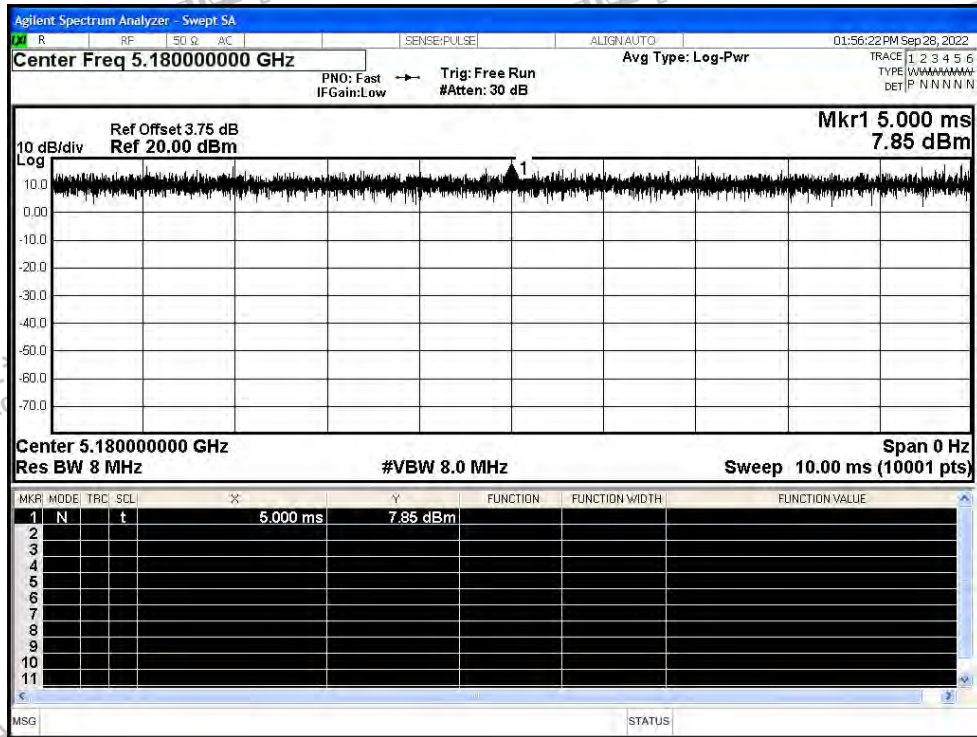


Duty Cycle NVNT a 5200MHz Ant1

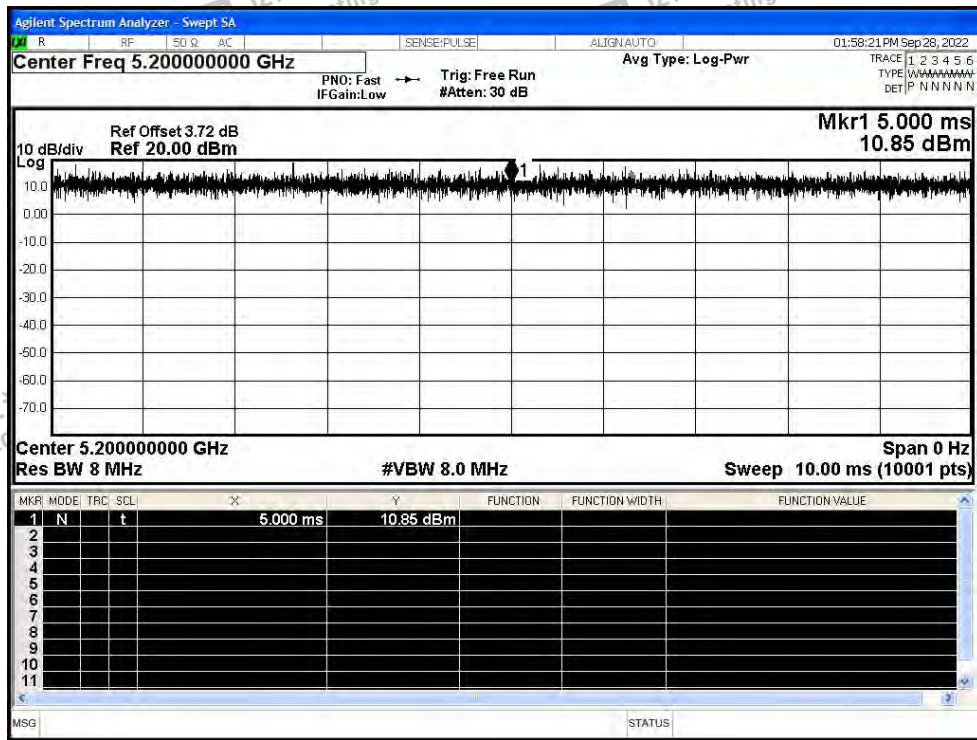




Duty Cycle NVNT a 5240MHz Ant1

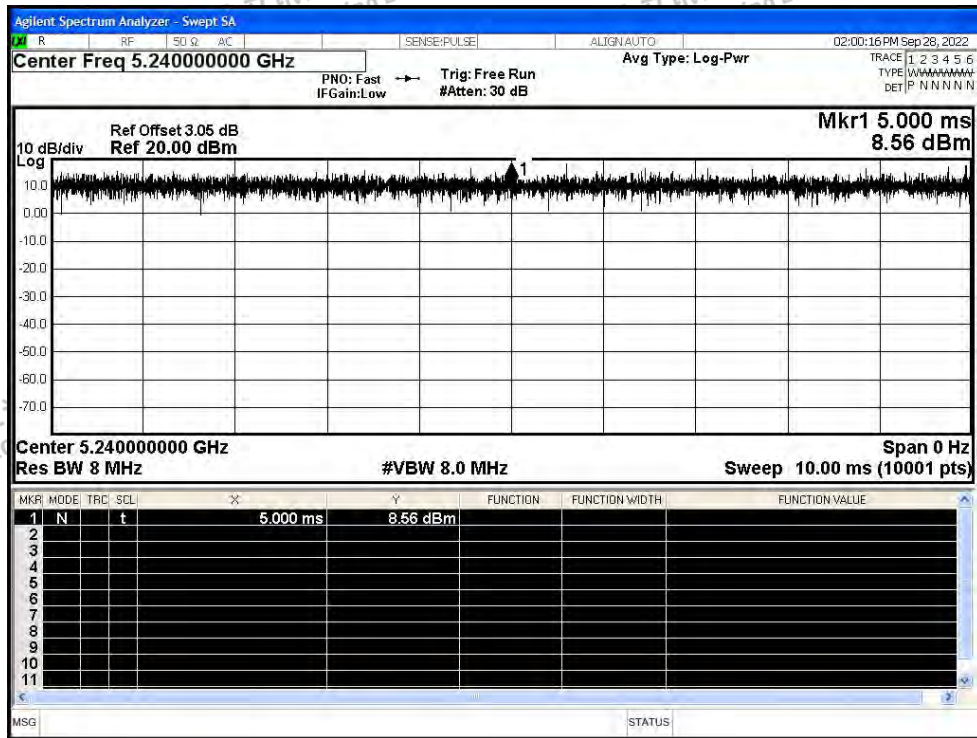


Duty Cycle NVNT n20 5180MHz Ant1

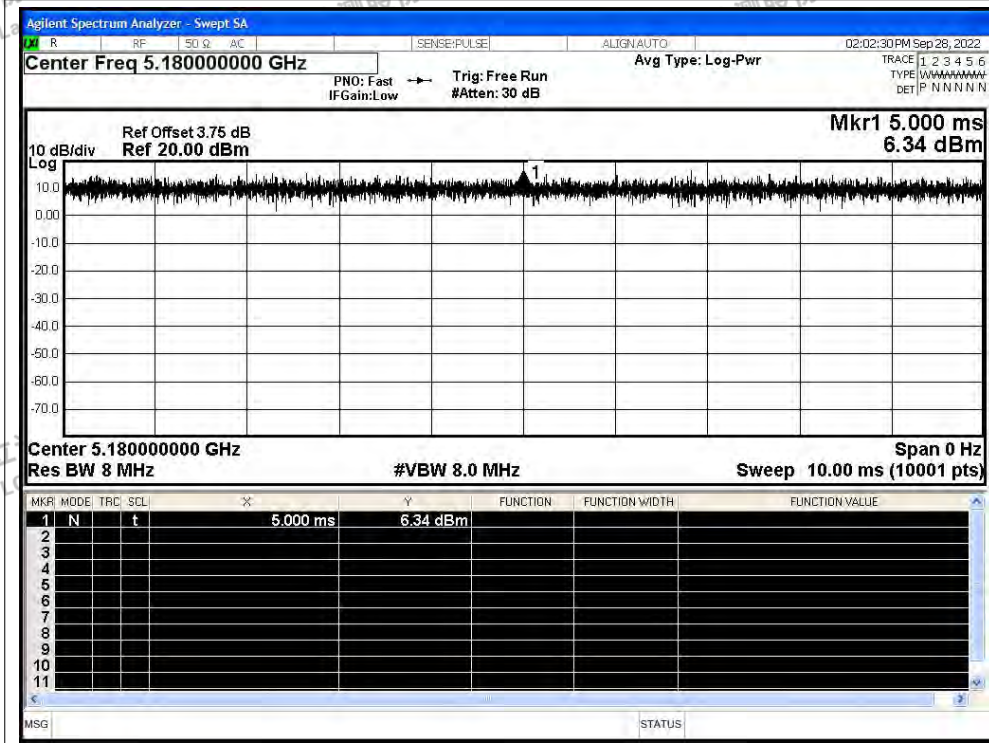




Duty Cycle NVNT n20 5200MHz Ant1

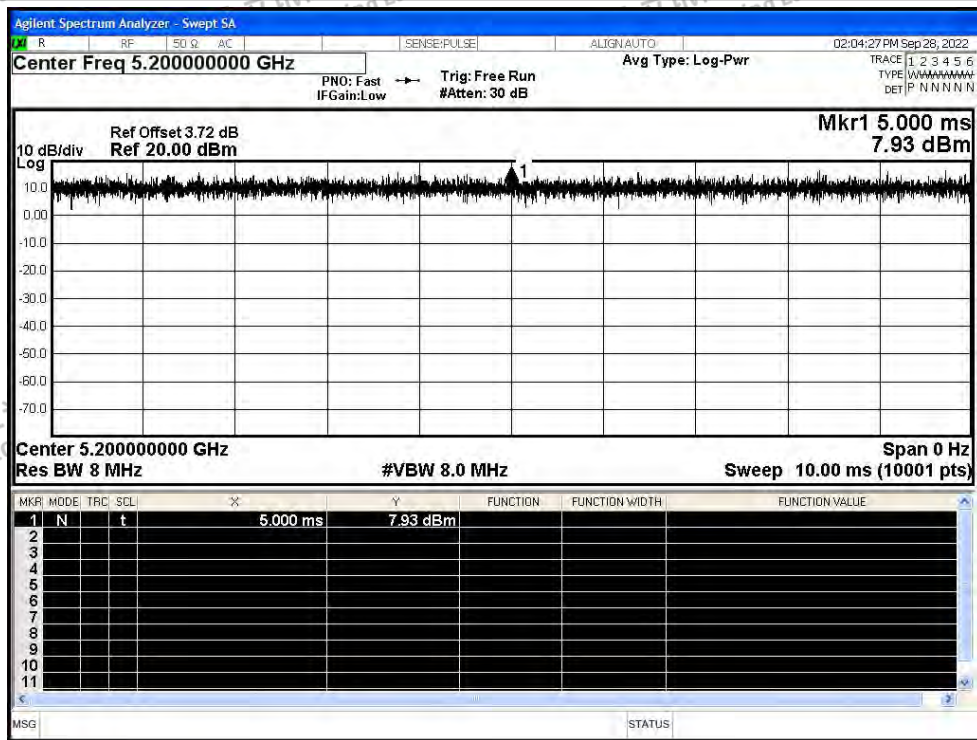


Duty Cycle NVNT n20 5240MHz Ant1

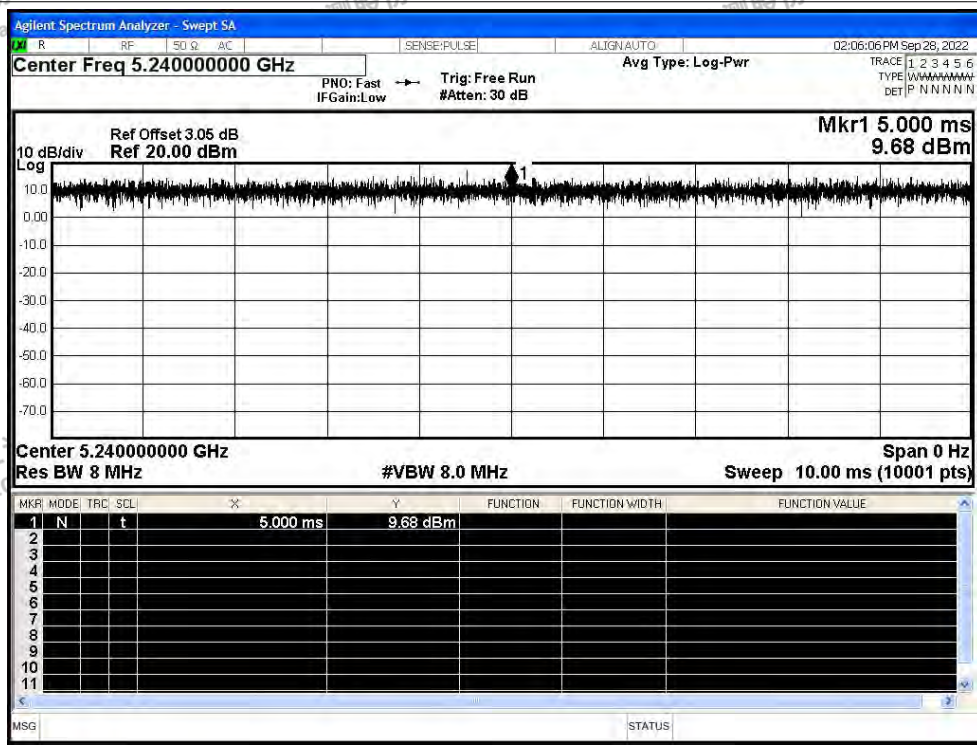




Duty Cycle NVNT n40 5190MHz Ant1

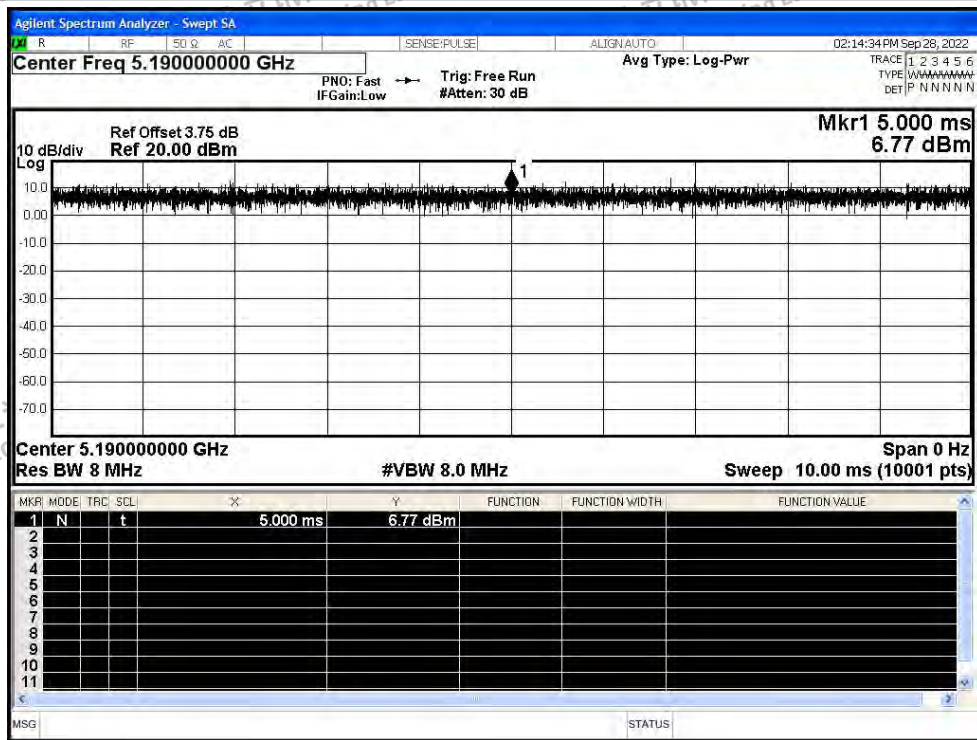


Duty Cycle NVNT n40 5230MHz Ant1

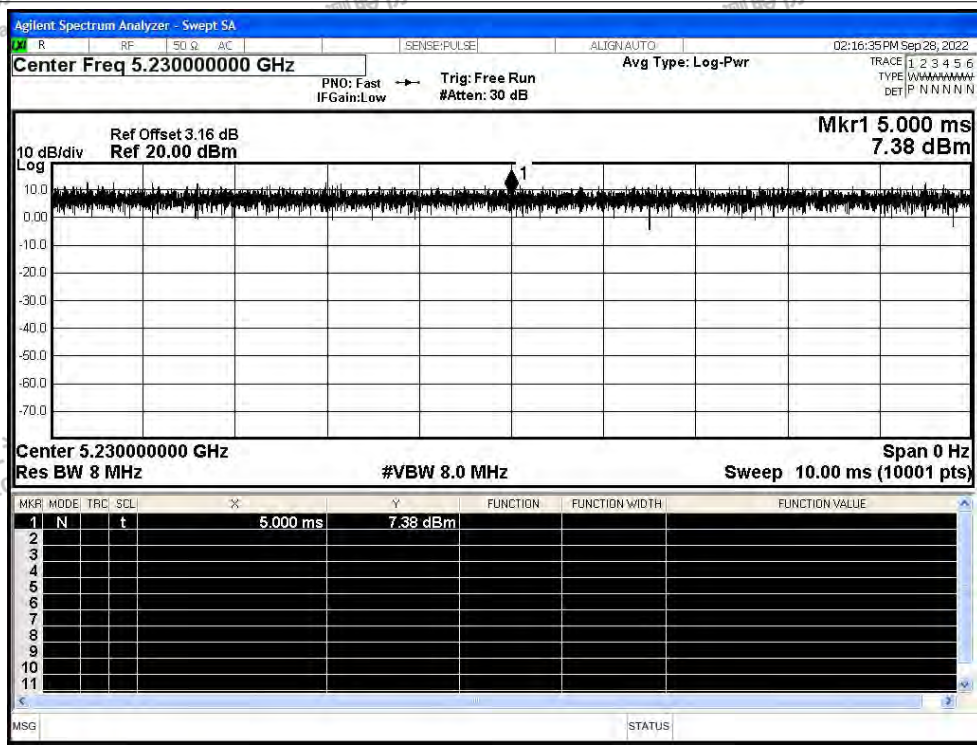




Duty Cycle NVNT ac20 5180MHz Ant1

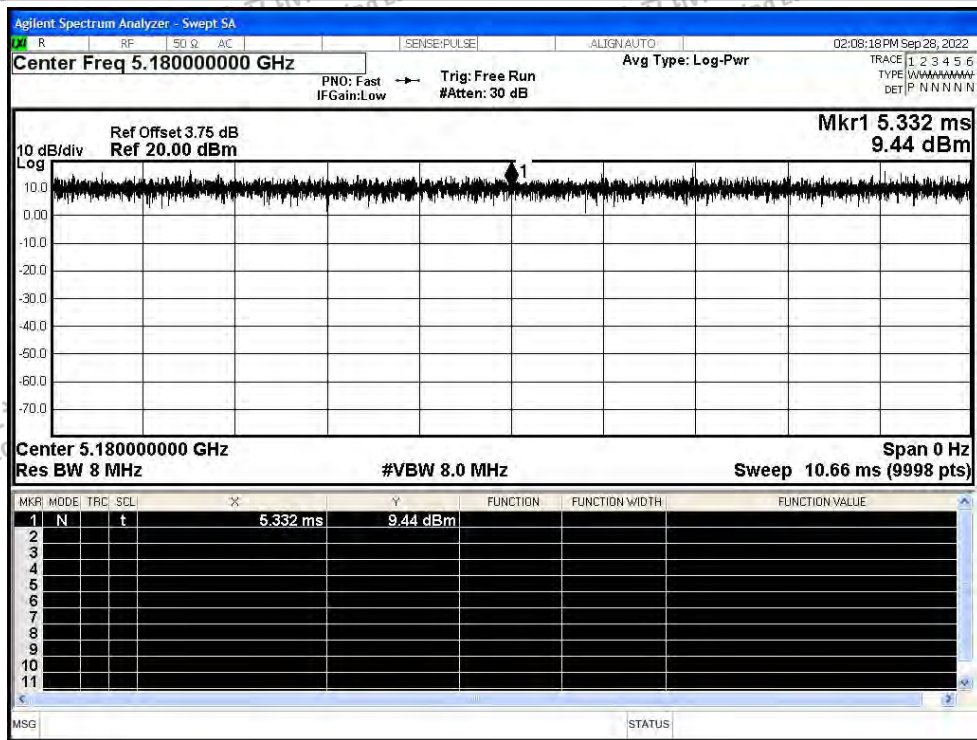


Duty Cycle NVNT ac20 5200MHz Ant1

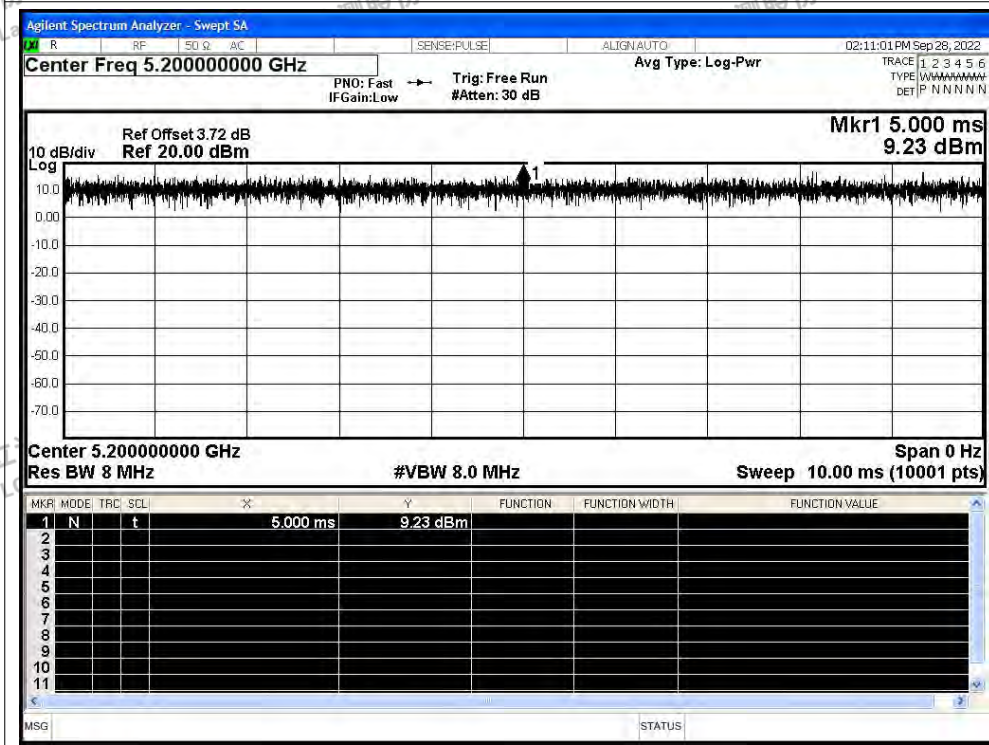




Duty Cycle NVNT ac20 5240MHz Ant1

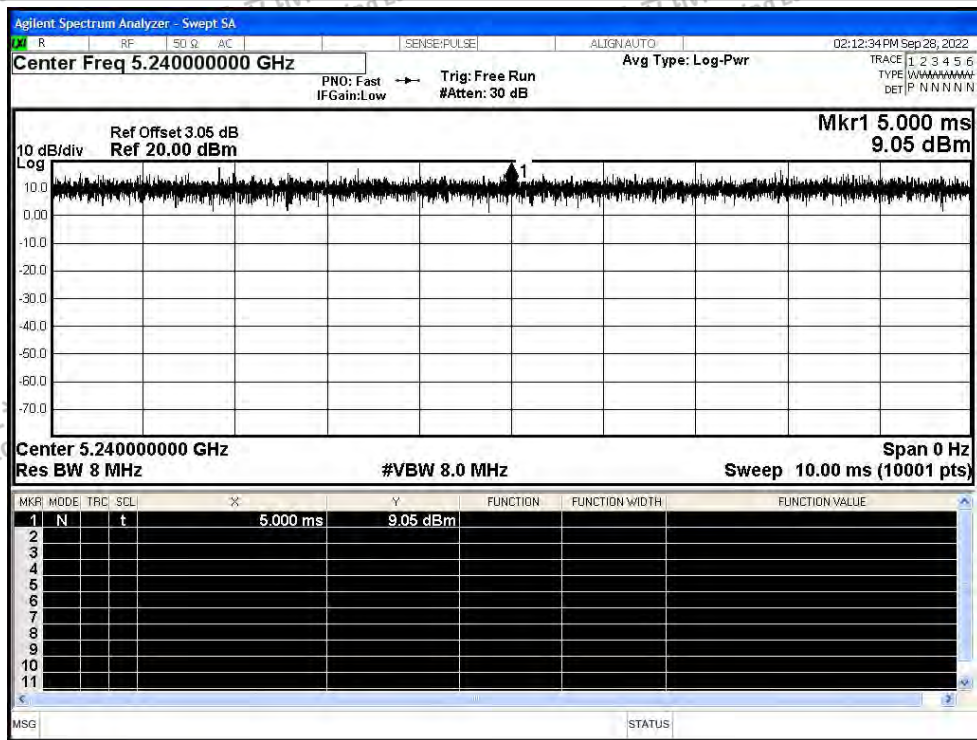


Duty Cycle NVNT ac40 5190MHz Ant1

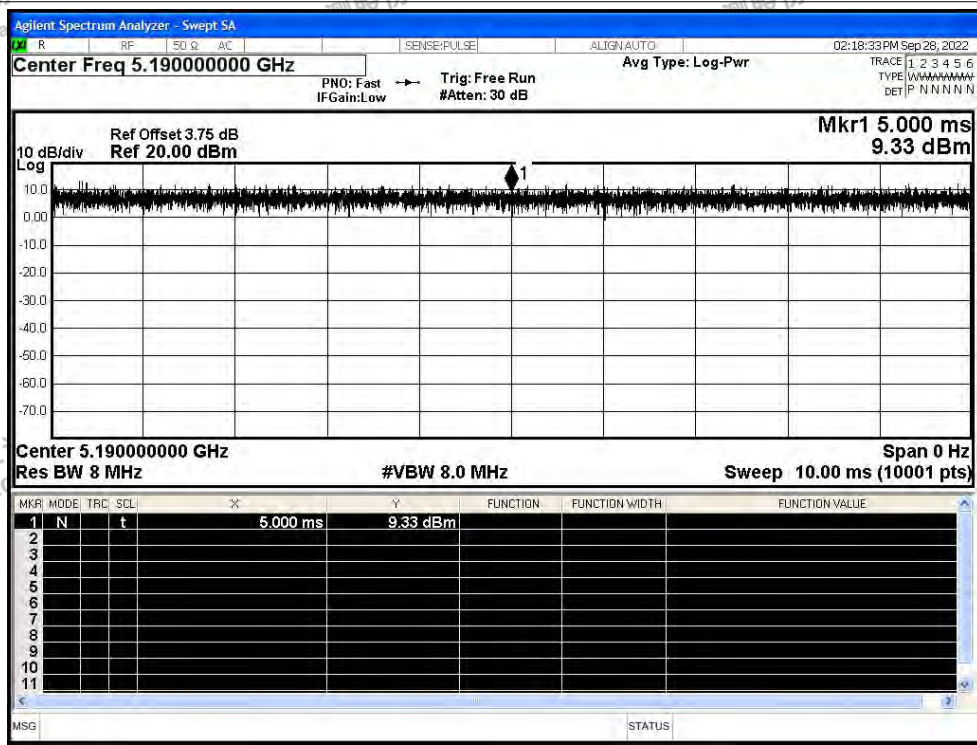



Duty Cycle NVNT ac40 5230MHz Ant1

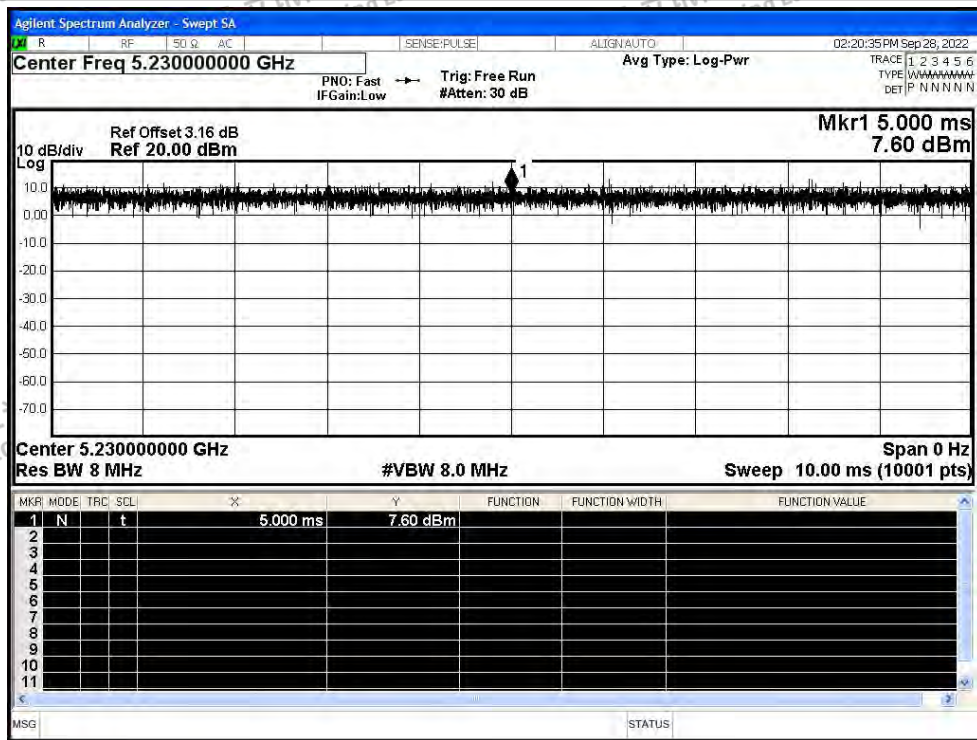

Duty Cycle NVNT ac80 5210MHz Ant1

