

尺寸：95mm*170mm

类型：骑马订

LUXEIRD



Temperature Controller Manual





Contents

01 INTRODUCTION

CAUTION	1
Features	1
Technical Parameters	1
Product Layout	2

02 OPERATING INSTRUCTIONS

Factory Reset	3
Quick Query of The Start Heating Temperature	4
Quick Setup of The Controlling Temperature	5
Temperature Unit Setting	6
Start Heating Temperature of P1 (ST1)	7
Stop Heating Temperature of P1 (SP1)	8
High Temperature Alarm of P1 (AH1)	9
Low Temperature Alarm of P1 (AL1)	9
The Setting of The P1 Calibration Value (CA1)	10
Start Heating Temperature of P2 (ST2)	11
Stop Heating Temperature of P2 (SP2)	12
High Temperature Alarm of P2 (AH2)	13
Low Temperature Alarm of P2 (AL2)	14
The Setting of The P2 Calibration Value (CA2)	15
Turn On/Off The Buzzer Sound Manually (ALM)	15
Temperature Display	16
Technical Assistance and Warranty	17

INTRODUCTION

CAUTION

- KEEP CHILDREN AWAY
- TO REDUCE THE RISK OF ELECTRIC SHOCK, USE ONLY INDOORS
- DO NOT PLUG INTO ANOTHER RELOCATABLE POWER TAPS OR AN EXTENSION CORD
- USE ONLY IN DRY LOCATION

Features

- Plug-n-Play, easy to use.
- Dual relay control, controls two sets of outputs. Users can set different target temperatures according to different environments.
- Supports both Celsius and Fahrenheit units.
- LCD display, displays the testing temperature, the target temperature and the output state.
- Supports temperature calibration.
- Supports high/low temperature limit alarm.
- Supports probe abnormal alarm.


Technical Parameters

- Power
Input: 100~240Vac 50/60Hz
Output: 100~240Vac 50/60Hz 500W Max
- Probe Type: R25°C=10K Ω ±1% R0°C=26.74~27.83K Ω
B25/85°C=3435K±1%
- Temperature Control Range: 0.0°C~45.0°C/32.0°F~113°F

- Temperature Measurement Range: -5.0°C~50.0°C /23.0°F~122°F
- Temperature Display Accuracy: 0.1°C/°F (T<100°C/°F), 1°C/°F (≥100°C/°F)
- Temperature Measurement Accuracy: ±1°C/±2°F
- Temperature Unit: Celsius °C or Fahrenheit °F
- Operating Ambient Temperature: -20°C~60°C/-4°F~140°F
- Storage Environment:
 - temperature range: 0°C~60°C/32°F~140°F
 - humidity range: 20~80%RH (not frozen or condensation)
- Warranty: 2 years for the controller and 1 year for the probes


Product Layout




LCD: Display the Current Temperature, the WORK1 Stop Heating Temperature, the Heating Indicator of WORK1, the WORK2 Stop Heating Temperature, and the Heating Indicator of WORK2.

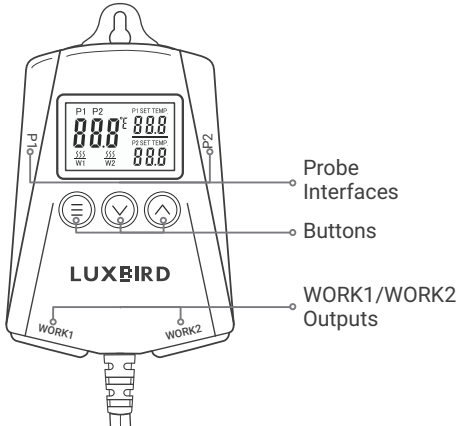


OPERATING INSTRUCTIONS

Factory Reset

- Unplug the controller, then hold  and plug in the power cord to reset the controller.

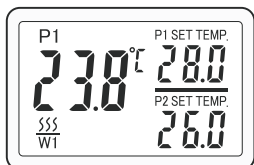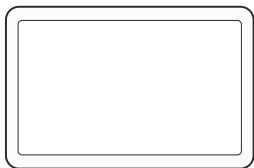

Display before the factory reset

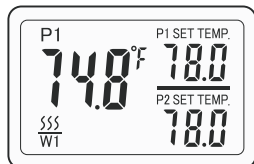


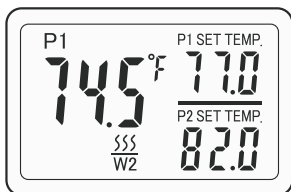
Display after the factory reset

Note: The buzzer will beep a short sound to remind you that all the parameters have been restored to the default data.


Quick Query of The Start Heating Temperature

For example, the start heating temperature of P1 is 77.0°F and the stop heating temperature is 78.0°F; the start heating temperature of P2 is 80.0°F, and the stop heating temperature of P2 is 82.0°F. The device displays the stop heating temperature of P1 and P2 by default.

- Press , the P1 SET TEMP. area will display the start heating temperature 77.0°F.



- Press , the P2 SET TEMP. area will display the start heating temperature 80.0°F.

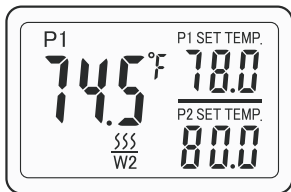


- The controller will return to normal display if there's no operation for 3 seconds, or you can press any button to return to normal display manually.


Quick Setup of The Controlling Temperature

For example, the start heating temperature of P1 is 77.0°F and the stop heating temperature is 78.0°F; the start heating temperature of P2 is 80.0°F, and the stop heating temperature of P2 is 82.0°F.


- Press ⏏ once, then the P1 SET TEMP 77.0 (the start heating temperature value) will flash.

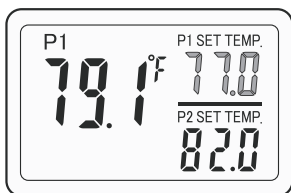


- Press ⏴ or ⏵ to adjust the start heating temperature value.
- Press ⏏ once, then the P1 SET TEMP 78.0 (the stop heating temperature value) will flash.

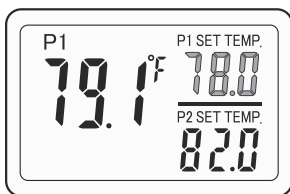

- Press ⏴ or ⏵ to adjust the stop heating temperature value.
- Press ⏏ once, then the P2 SET TEMP 80.0 (the start heating temperature value) will flash.

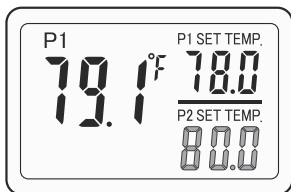


- Press \downarrow or \uparrow to adjust the start heating temperature value.
- Press \equiv once, then the P2 SET TEMP 82.0 (the stop heating temperature value) will flash.

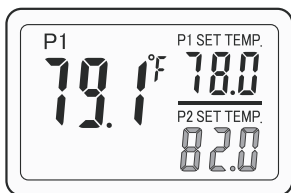

- Press \downarrow or \uparrow to adjust the stop heating temperature value.
- The controller will save the settings and exit automatically if there's no operation in 30 seconds, or you can hold \equiv for 2 seconds to exit settings manually.

Temperature Unit Setting

- Hold \equiv for 2 seconds and press \equiv once again to enter the setting menu, then select CF.

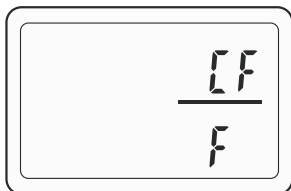


- Press \downarrow or \uparrow to select between $^{\circ}\text{C}$ and $^{\circ}\text{F}$.

Note: The buzzer will beep a short sound to remind you that all the parameters have been restored to the default data.


- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold \equiv for 2 seconds to exit settings manually.

Start Heating Temperature of P1(ST1)

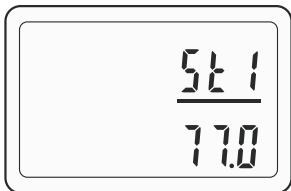

- Hold \equiv for 2 seconds and press \equiv once again to enter the setting menu, then select St1.




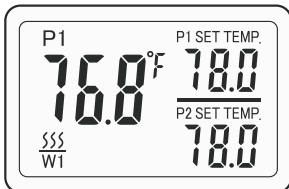




- Short press \downarrow or \uparrow to adjust the setting values, hold \downarrow or \uparrow to adjust the setting values quickly.
- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold \equiv for 2 seconds to exit settings manually.
- When the current temperature of P1 is less than or equal to the start heating temperature of P1, WORK1 will turn on the output and the heating symbol will light up.

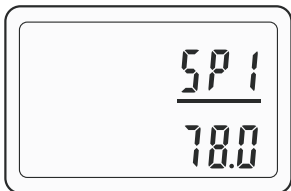


Stop Heating Temperature of P1(SP1)

- Hold  for 2 seconds and press  once again to enter the setting menu, then select SP1.




- Short press  or  to adjust the setting values, hold  or  to adjust the setting values quickly.
- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold  for 2 seconds to exit settings manually.
- When the current temperature of P1 is greater than or equal to the stop heating temperature of P1, WORK1 will turn off the output and the heating symbol will go out.

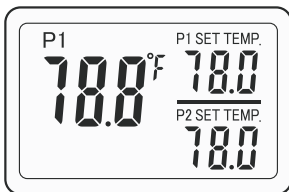


- **Note:** The minimum temperature difference value between ST1 and SP1 is 0.3°C/0.5°F. When both values of ST1 and SP1 are larger than or equal to 100°F, the minimum temperature difference value is 1.0°F.

High Temperature Alarm of P1(AH1)

- Hold \equiv for 2 seconds and press \equiv once again to enter the setting menu, then select AH1.

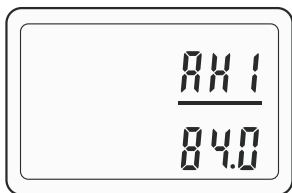


- Short press \downarrow or \uparrow to adjust the setting values, hold \downarrow or \uparrow to adjust the setting values quickly. For example 84.0°F
- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold \equiv for 2 seconds to exit settings manually.
- When the current temperature of P1 is greater than or equal to the high temperature alarm set value of P1, the high temperature alarm will be triggered, and AH will be displayed alternately with the current temperature.

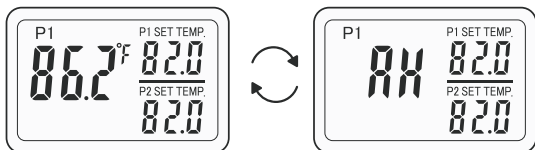


Note: If ALM = ON, the buzzer will sound Bi-Bi-Biii when the high temperature alarm is triggered, and it will stop when the temperature returns to normal. You can also press any button to manually cancel the alarm.

Low Temperature Alarm of P1(AL1)

- Hold \equiv for 2 seconds and press \equiv once again to enter the setting menu, then select AL1.

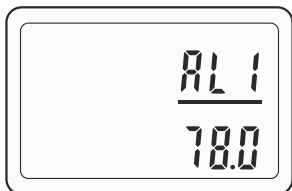


- Short press \odot or \odot to adjust the low temperature alarm value, hold \odot or \odot to adjust the setting values quickly. For example 78.0°F.
- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold \equiv for 2 seconds to exit settings manually.
- When the current temperature of P1 is less than or equal to the low temperature alarm set value of P1, the low temperature alarm will be triggered, and AL will be displayed alternately with the current temperature.

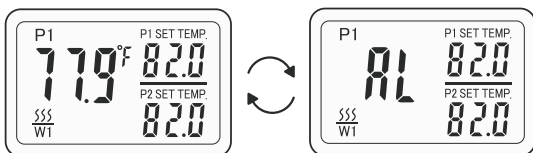


Note: If ALM = ON, the buzzer will sound Bi-Bi-Biii when the low temperature alarm is triggered, and it will stop when the temperature returns to normal. You can also press any button to manually cancel the alarm.

The Setting of The P1 Calibration Value(CA1)

- Hold \equiv for 2 seconds and press \equiv once again to enter the setting menu, then select CA1.

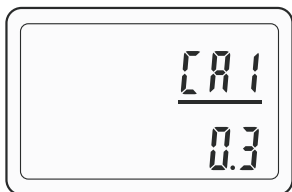


- Short press \downarrow or \uparrow to adjust the setting values, hold \downarrow or \uparrow to adjust the setting values quickly.
- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold \equiv for 2 seconds to exit settings manually.
- The current temperature of P2 is 74.3°F. After setting CA1 (the temperature calibration value of P1) to 0.3°F, the current temperature displays 74.6°F.

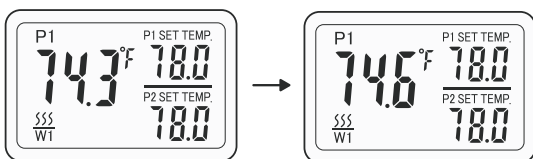


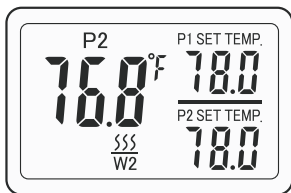
Start Heating Temperature of P2(ST2)

- Hold \equiv for 2 seconds and press \equiv once again to enter the setting menu, then select ST2.

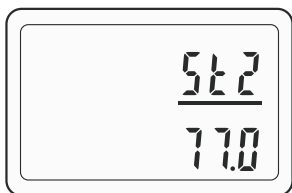




- Short press \downarrow or \uparrow to adjust the setting values, hold \downarrow or \uparrow to adjust the setting values quickly.






- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold  for 2 seconds to exit settings manually.
- When the current temperature of P2 is less than or equal to the start heating temperature of P2, WORK2 will turn on the output and the heating symbol will light up.

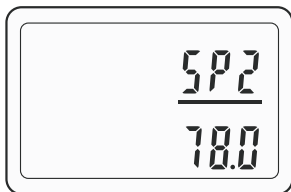


Stop Heating Temperature of P2(SP2)

- Hold  for 2 seconds and press  once again to enter the setting menu, then select SP2.




- Short press  or  to adjust the setting values, hold  or  to adjust the setting values quickly.
- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold  for 2 seconds to exit settings manually.
- When the current temperature of P2 is greater than or equal to the stop heating temperature of P2, WORK2 will turn off the output and the heating symbol will go out.

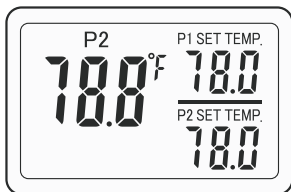


- **Note:** The minimum temperature difference value between ST2 and SP2 is 0.3°C/0.5°F. When both values of ST2 and SP2 are larger than or equal to 100°F, the minimum temperature difference value is 1.0°F.

High Temperature Alarm of P2(AH2)

- Hold for 2 seconds and press once again to enter the setting menu, then select AH2.

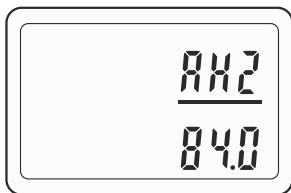

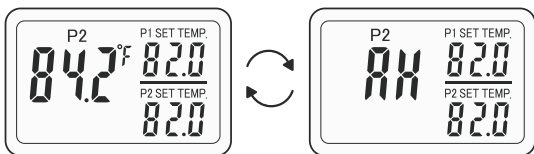


- Short press or to adjust the setting values, hold or to adjust the setting values quickly. For example 84.0°F
- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold for 2 seconds to exit settings manually.
- When the current temperature of P2 is greater than or equal to the high temperature alarm set value of P2, the high temperature alarm will be triggered, and AH will be displayed alternately with the current temperature.








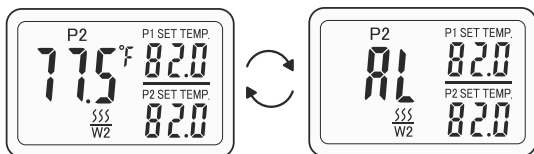
Note: If ALM = ON, the buzzer will sound Bi-Bi-Biii when the high temperature alarm is triggered, and it will stop when the temperature returns to normal. You can also press any button to manually cancel the alarm.

Low Temperature Alarm of P2(AL2)

- Hold  for 2 seconds and press  once again to enter the setting menu, then select AL2.

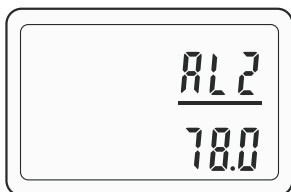


- Short press  or  to adjust the setting values, hold  or  to adjust the setting values quickly. For example 78.0°F.
- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold  for 2 seconds to exit settings manually.
- When the current temperature of P2 is less than or equal to the low temperature alarm set value of P2, the low temperature alarm will be triggered, and AL will be displayed alternately with the current temperature.




Note: If ALM = ON, the buzzer will sound Bi-Bi-Biii when the low temperature alarm is triggered, and it will stop when the temperature returns to normal. You can also press any button to manually cancel the alarm.

The Setting of The P2 Calibration Value(CA2)

- Hold ⏏ for 2 seconds and press ⏏ once again to enter the setting menu, then select CA2.

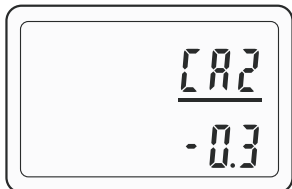


- Short press ⏏ or ⏏ to adjust the setting values, hold ⏏ or ⏏ to adjust the setting values quickly.
- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold ⏏ for 2 seconds to exit settings manually.
- The current temperature of P2 is 74.5°F. After setting CA2 (the temperature calibration value of P2) to -0.3°F, the current temperature displays 74.2°F.

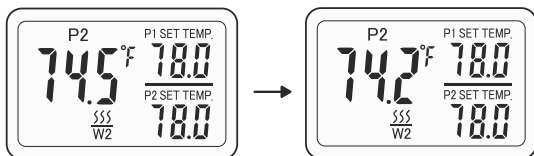

Turn On/Off The Buzzer Sound Manually(ALM)

Users can choose whether to turn on the buzzer sound when the abnormal alarm is triggered according to their actual usage. If ON is selected, the buzzer will sound when the abnormal alarm is triggered; if OFF is selected, then the buzzer will not sound.


- Hold ⏏ for 2 seconds and press ⏏ once again to enter the setting menu, then select ALM.

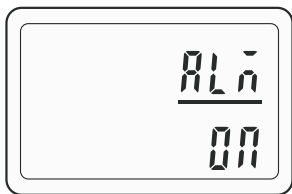


- Press \downarrow or \uparrow to choose ON or OFF.
- The controller will save the settings and exit automatically if there's no operation in 60 seconds, or you can hold \equiv for 2 seconds to exit settings manually.

Temperature Display


- The screen display when both probe1 and Probe2 are not inserted.

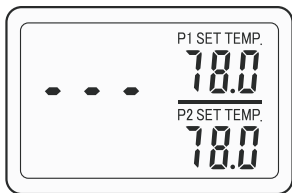

- The screen display when only one probe of Probe1 and Probe2 is inserted into the controller.

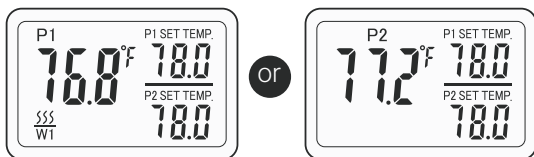


- The screen display when Probe1 and Probe2 are both inserted into the controller.

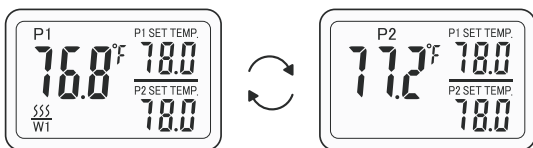

- The screen display when Probe1 or Probe2 is abnormal and the ALM=ON.

Note: The buzzer will sound at the same time.

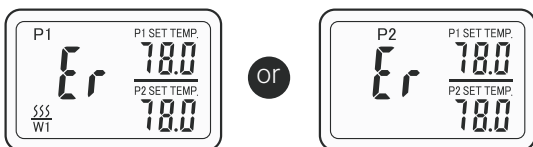

Technical Assistance and Warranty

- **Technical Assistance**

If you have any problems installing or using this controller, please carefully and thoroughly review the instruction manual. If you require assistance, please write to us at support@inkbird.com. We will reply to your emails in 24 hours from Monday through Saturday. You can also visit our website www.inkbird.com to find the answers to the common technical questions.

- **Warranty**

INKBIRD TECH. C.L. warrants that products are free from defects in manufacturing, materials and workmanship for a period of 2 years from the date of retail purchase. The warranty does not cover defects or malfunction caused by misuse, abuse, or improper maintenance, failure to follow operating instructions or use with equipment with which it is not intended to be used. Also, the warranty will not apply to damage caused by unauthorized alteration, modification or repair of the product. Inkbird does not warrant or provide service or support for any third party products.

Annex 1: Setting Parameters

Icons	Display	Function	Setting Range	Default Setting
CF	CF	Temperature Unit Setting	C/F	F
ST1	St1	Start Heating Temperature 1	0.0°C ~ 45.0°C	25.0°C
			32.0°F ~ 113.0°F	77.0°F
SP1	SP1	Stop Heating Temperature 1	0.0°C ~ 45.0°C	26.0°C
			32.0°F ~ 113.0°F	78.0°F
AH1	AH1	High Temperature Alarm Value 1	-5.0°C ~ 50.0°C	50.0°C
			23.0°F ~ 122°F	122°F
AL1	AL1	Low Temperature Alarm Value 1	-5.0°C ~ 50.0°C	0.0°C
			23.0°F ~ 122°F	32.0°F
CA1	CA1	Temperature Calibration Value 1	-4.9°C ~ 4.9°C	0.0°C
			-9.9°F ~ 9.9°F	0.0°F
ST2	St2	Start Heating Temperature 2	0.0°C ~ 45.0°C	25.0°C
			32.0°F ~ 113.0°F	77.0°F
SP2	SP2	Stop Heating Temperature 2	0.0°C ~ 45.0°C	26.0°C
			32.0°F ~ 113.0°F	78.0°F
AH2	AH2	High Temperature Alarm Value 2	-5.0°C ~ 50.0°C	50.0°C
			23.0°F ~ 122°F	122°F
AL2	AL2	Low Temperature Alarm Value 2	-5.0°C ~ 50.0°C	0.0°C
			23.0°F ~ 122°F	32.0°F
CA2	CA2	Temperature Calibration Value 2	-4.9°C ~ 4.9°C	0.0°C
			-9.9°F ~ 9.9°F	0.0°F
ALM	ALM	Turn on/off the buzzer sound	ON/OFF	ON

FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

INKBIRD TECH.C.L.

support@inkbird.com

Factory address: 6th Floor, Building 713, Pengji Liantang Industrial Area, NO.2 Pengxing Road, Luohu District, Shenzhen, China

Office address: Room 1803, Guowei Building, NO.68 Guowei Road, Xianhu Community, Liantang, Luohu District, Shenzhen, China

