

## User Manual


Delta

Langsdom®  
Wireless Gaming Earphone


We appreciate you for purchasing the Langsdom Delta Wireless Gaming Earphone, the following instructions will guide you to use it easily.

### Wearing


Put the earphone in your ears, rotate and adjust it to the best angle, be sure to wear comfortably and secure fit.

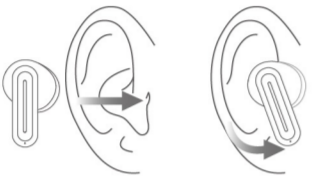

### Accessories




#### Diagram



**Earphone**  
① Smart touch  
② LED indicator  
③ Microphone


**Charging box**  
④ LED indicator  
⑤ Charging port

#### Auto On/Off




- When the earphone is off, open the charging box, the earphone will power on automatically.
- When the earphone is on, put the earphone into the charging box and close, the earphone will power off automatically.

#### Manually On/Off

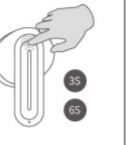

- When the earphone is off, long press the earphone touch area about 3 seconds to power on the earphone.
- When the earphone is on, long press the earphone touch area about 5 seconds to power off the earphone.

#### Pairing




#### How to pair

When pairing for the first time, please put the earphone into charging box first and keep the distance between earphone and phone within 1m. Open the charging box, the left and right earphone will power on and connect automatically. Turn on phone's Bluetooth function and enter the search pairing state, select "Delta" device to connect.

#### Auto pairing

- After powering on, the earphone will automatically search for the other one to reconnect and pair itself with the last connected device within 3 minutes, otherwise power off automatically.
- When the earphone is disconnected from the device beyond the effective distance, it will automatically reconnect after returning to the effective distance within 1 minute.

#### Touch Control



**Music Mode**  
Play/Pause(L/R) x2  
Long press 1.5s (L): Previous song  
Long press 1.5s (R): Next song  
Voice Assistant (Sir) x3

**Call Mode**  
Answer/Hang up (L/R) x2  
Long press 2s (L/R): Reject

**Game Mode** (Default to be game mode)  
Switch game mode / music mode (L) x3

### 产品合格证

CERTIFICATE OF QUALITY

产品型号: \_\_\_\_\_  
Product Model: \_\_\_\_\_

产品名称: \_\_\_\_\_  
Product Name: \_\_\_\_\_

执行标准: GB/T 14471-2013  
Executive Standard: Q/LSD 001-2021

检验日期: \_\_\_\_\_  
Inspection Date: \_\_\_\_\_

检验员: \_\_\_\_\_  
Inspector: \_\_\_\_\_

检验结果: \_\_\_\_\_  
Test: \_\_\_\_\_

Q.C.  
passed  
01  
检验合格

姓名: _____	地址: _____
购买日期: _____	联系电话: _____
产品名称: _____	产品型号: _____
保修内容: _____	保修日期: _____
故障处理方法: _____	Warranty Methods: _____

## 用户手册


Delta

Langsdom®  
真无线游戏耳机


感谢您的购买Langsdom Delta真无线游戏耳机,以下说明将指导您轻松使用它。

### 佩戴


请将耳机放置耳中,旋转并调整到最佳入耳角度,确保佩戴舒适稳固。

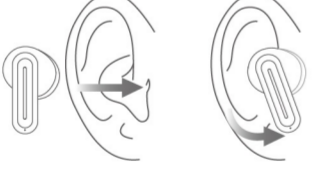

### 配件




#### 产品展示图



**耳机**  
① 触控区域  
② LED指示灯  
③ 麦克风


**充电盒**  
④ LED指示灯  
⑤ 充电口

#### 自动开机




- 在关机状态下,打开充电盒盖,耳机自动开机。
- 在开机状态下,将耳机放入充电盒内并合上盖子,耳机自动关机。

#### 手动开机

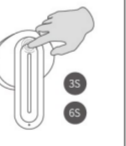

- 在关机状态下,分别长按左右耳机的触控区域约3秒,耳机开机。
- 在开机状态下,分别长按左右耳机的触控区域约6秒,耳机关机。

#### 配对




#### 蓝牙配对

蓝牙首次配对时,请先将耳机放回充电盒中,将蓝牙耳机和手机的距离控制在1米的范围内,打开充电盒盖,左右耳机会自动连接,打开手机蓝牙功能,搜索蓝牙耳机设备,选择"Delta"耳机,进行蓝牙耳机手机连接配对即可。

#### 自动回连

- 耳机开机后约3分钟内,会自动搜索另一边耳机回连,并自动配对最近一次连接过的设备,否则自动关机。
- 当耳机与设备超出有效距离断开连接后,在1分钟内回到有效距离内,耳机将自动重新连接。

#### 操作说明



**音乐模式**  
双触左/右耳机: 播放/暂停  
长触右耳机1.5秒: 上一曲  
三触右耳机: 语音助手 (Sir)

**通话模式**  
双触左/右耳机: 接听/挂断  
长触左/右耳机2秒: 拒接

**游戏模式** (开机默认为游戏模式)  
三触左耳机: 切换游戏模式/音乐模式

### 保修服务

WARRANTY SERVICE

一、保修政策/Warranty Policy  
1. 年度保修服务,凡属产品本身质量问题引起的故障原因,本公司将提供免费维修。  
One year warranty service. Provide free repair service if the failure is caused by such quality issues as caused by product.

二、保修服务/Non-Warranty Situation  
1. 超过三包有效期限;  
The warranty date is expired.  
2. 无订单凭证,无保修登记单信息不符;  
No valid warranty card or invoice or information doesn't match.  
3. 人为原因造成的外观和内在损坏;  
Appearance and internal damage caused by human factors.  
4. 不可预见因素造成的损坏;  
The breakdown and damage caused by the force majeure;  
5. 未按使用说明书的要求使用,保养及调整造成的任何损坏;  
The breakdown caused by the manipulation that hasn't follow the requests of the manual.  
6. 超出正常使用条件,强行使用本产品造成故障或损坏;  
Failure or damage caused by forced use of this product beyond normal use conditions.  
7. 未经过士顿授权的第三方私自拆卸或修理;  
The damage caused by the dismantle movement of a non-our company authorized maintainer.  
8. 恶意篡改和故意破坏保修期内信息,产品造成;  
Malicious damage and tampering with the warranty part of the manual or product information.  
9. 非产品质量设计、制造、调整等任何原因导致的故障或损坏;  
The breakdown and damage doesn't caused by such as design, manufacturing and quality of the product.

\* 士顿享有对故障原因的最终解释权。  
Langsdom has reserved the right of final explanation of the warranty terms.

## **FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.