



User Manual

Software Version: 2.12

Release Date: 2023/7/31



Directory

Directory	2
1 Picture	6
2 Table	9
3 Safety Instruction	10
3.1 Safety Instruction	10
3.2 FCC	11
4 Overview	12
4.1 Overview	12
4.2 Packing Contents	12
5 Install Guide	13
5.1 Use PoE or external Power Adapter	13
5.2 Desktop Installation	13
5.2.1 Peripheral connection	13
6 Appendix Table	15
6.1 Appendix I - Icon	15
6.2 Appendix II –Function key state definition	17
7 User Getting Started	18
7.1 Introduction to the User	18
7.1.1 Standby interface	18
7.1.2 Dial interface	18
7.1.3 Commonly used icons on the interface	20
7.2 Use of touch keyboard	20
7.3 Device Status	21
7.4 Web Management	22
7.5 Network Configurations	23
7.6 SIP Configurations	24
8 Basic Function	26
8.1 Making Phone Calls	26
8.2 Answer a call	27
8.3 Talking Interface	27
8.4 End of call	29
8.5 Open Door	29
8.5.1 Open the door under standby	29
8.5.2 Settings of open the door under standby	30

8.5.3 Open the door during a call	30
8.5.4 Settings of open the door during a call	31
8.6 Video Preview	31
8.7 Security(Input Settings)	32
8.7.1 Security Setting	33
8.7.2 Alarm Info	34
8.7.3 Security State	34
8.8 Dial Query	35
8.9 Auto Answer	35
8.10 Mute	36
8.10.1 Mute during a call	36
8.10.2 Mute when ringing	37
8.11 DND	37
8.12 Call Forward	40
9 Advance Function	41
9.1 Intercom	41
9.2 MCAST	41
9.3 SMS	43
9.3.1 SMS	43
9.3.2 MWI (Message Waiting Indicator)	43
9.4 SIP Hotspot	45
10 Phone Settings	47
10.1 Basic Settings	47
10.1.1 Language	47
10.1.2 Time & Date	48
10.1.3 Screen	49
10.1.3.1 Brightness and backlight	50
10.1.3.2 Screen Saver	51
10.1.4 Ring	51
10.1.5 Voice Volume	51
10.1.6 Greeting words	51
10.1.7 Reboot	52
10.2 Phonebook	52
10.2.1 Local Contacts	52
10.2.1.1 Add / Edit / Delete Contact	53
10.2.1.2 Add / Edit / Delete Group	54
10.2.1.3 Add / Edit / Delete contact in Group	54
10.2.2 Blocked list	55

10.2.3 Cloud Phone Book	56
10.2.3.1 Configure Cloud Phone book	56
10.2.3.2 Downloading Cloud Phone book	57
10.3 Call Log	57
10.4 Function Key	58
10.5 Wi-Fi	59
10.5.1 Wireless network	59
10.6 Advanced	61
10.6.1 Line Configurations	61
10.6.2 Network Settings	62
10.6.2.1 Network Settings	62
10.6.2.2 QoS & VLAN	65
10.6.2.3 VPN	66
10.6.2.4 Web Server Type	67
10.6.3 Set The Secret Key	68
10.6.4 Wireless Key	69
10.6.5 Maintenance	70
10.6.6 Firmware Upgrade	73
10.6.7 Factory Reset	75
11 Web Configurations	76
11.1 Web Page Authentication	76
11.2 System >> Information	76
11.3 System >> Account	77
11.4 System >> Configurations	77
11.5 System >> Upgrade	77
11.6 System >> Auto Provision	78
11.7 System >> Tools	78
11.8 System >> Reboot Phone	78
11.9 Network >> Basic	78
11.10 Network >> Wi-Fi Settings	79
11.11 Network >> Service Port	80
11.12 Network >> VPN	81
11.13 Line >> SIP	81
11.14 Line >> SIP Hotspot	87
11.15 Line >> Dial Plan	87
11.16 Line >> Action Plan	90
11.17 Line >> Basic Settings	90
11.18 Lines >> RTCP-XR	91

11.19 Hotspot Managed Extension	92
11.20 Device Settings >> Features	94
11.21 Settings >> Media Settings	97
11.22 Settings >> MCAST	99
11.23 Settings >> Action	99
11.24 Settings >> Time/Date	100
11.25 Setting >> Time plan	101
11.26 Settings >> Tone	102
11.27 Settings >> Advanced	103
11.28 Phonebook >> Contact	103
11.29 Phonebook >> Cloud phonebook	103
11.30 Phonebook >> Call List	105
11.31 Phonebook >> Web Dial	105
11.32 Phonebook >> Advanced	105
11.33 Call Logs	106
11.34 Function Key >> Side Key	106
11.35 Function Key >> Advanced	107
11.36 Function Key >> Wireless Key	108
11.37 Application >> Doorphone Settings	109
11.38 Security >> Web Filter	110
11.39 Security >> Trust Certificates	110
11.40 Security >> Device Certificates	111
11.41 Device Log >> Device Log	111
11.42 Security Settings	112
12 Trouble Shooting	115
12.1 Get Device System Information	115
12.2 Reboot Device	115
12.3 Reset Device to Factory Default	115
12.4 Screenshot	115
12.5 Network Packets Capture	116
12.6 Get Log Information	117
12.7 Common Trouble Cases	117

1 Picture

Picture 1 - Peripheral connection diagram	13
Picture 2 - interface	14
Picture 3 - Standby interface	18
Picture 4 - Menu Interface	19
Picture 5 - Keyboard	20
Picture 6 - Keyboard numbers & characters	21
Picture 7 - Device status	22
Picture 8 - Device status	22
Picture 9 - Login page	23
Picture 10 - Web Line Registration	25
Picture 11 - Dial interface	26
Picture 12 - Call interface	27
Picture 13 - Audio Call Interface	27
Picture 14 - Taking interface	28
Picture 15 - Call end interface	29
Picture 16 - OpenDoor Sidekey	29
Picture 17 - Add a doorlock	30
Picture 18 - Edit Popup	30
Picture 19 - Add DoorAccess Device	31
Picture 20 - Web page configuration	32
Picture 21 - Standby interface display after configuration	32
Picture 22 - Security Page	32
Picture 23 - Security Setting	33
Picture 24 - Web Settings	33
Picture 25 - Alarm Info	34
Picture 26 - Security State	34
Picture 27 - Line 1 enables auto-answering	35
Picture 28 - Web page to start auto-answering	36
Picture 29 - Mute the call	36
Picture 30 - Ringing mute	37
Picture 31 - DND Display	38
Picture 32 - DND setting interface	38
Picture 33 - DND timer	39
Picture 34 - DND Settings	39
Picture 35 - Line DND	39
Picture 36 - Set call forward	40

Picture 37 - Set call forward	40
Picture 38 - Web Intercom configure	41
Picture 39 - Multicast Settings Page	42
Picture 40 - SMS icon	43
Picture 41 - New Voice Message Notification	44
Picture 42 - Voice message interface	44
Picture 43 - Register SIP account	45
Picture 44 - SIP hotspot server configuration	46
Picture 45 - SIP hotspot client configuration	46
Picture 46 - Set language	47
Picture 47 - web page language setting	47
Picture 48 - set time & date	48
Picture 49 - Webpage set time &date	48
Picture 50 - set screen Parameters	50
Picture 51 - set screen on webpage	50
Picture 52 - Screensaver	51
Picture 53 - Local Contacts	52
Picture 54 - add contact	53
Picture 55 - edit contact	53
Picture 56 - groups	54
Picture 57 - browse the contact in group	55
Picture 58 - Add Blocked List	55
Picture 59 - Web Blocked List	56
Picture 60 - Cloud Contacts	56
Picture 61 - call log	57
Picture 62 - Filter callog types	58
Picture 63 - Dss key settings	58
Picture 64 - WLAN Settings	60
Picture 65 -wireless network	60
Picture 66 - webpage wireless connect	61
Picture 67 -line configurations	61
Picture 68 - Configure Advanced Line Options	62
Picture 69 - IP Mode	62
Picture 70 - DHCP network mode	63
Picture 71 - PPPoE network mode	63
Picture 72 - Static IP network mode	64
Picture 73 - IPv6 Static IP network mode	65
Picture 74 - The phone configures the web server type	67

Picture 75 - Menu Password	68
Picture 76 - Menu password setting	68
Picture 77 - Wireless key web settings	69
Picture 78 - LCD wireless key settings	69
Picture 79 - LCD wireless key settings	70
Picture 80 - Page auto provision Settings	70
Picture 81 - Phone auto provision settings	71
Picture 82 - Web page firmware upgrade	73
Picture 83 - Factory reset	75
Picture 84 - web login	76
Picture 85 - default password prompt	76
Picture 86 - Network settings	79
Picture 87 - Wi-Fi settings	79
Picture 88 - Service Port Settings	80
Picture 89 - Dial plan settings	87
Picture 90 - Custom setting of dial - up rules	88
Picture 91 - Dial rules table (1)	89
Picture 92 - Dial rules table (2)	89
Picture 93 - VQ RTCP-XR Settings	92
Picture 94 - Hotspot Managed Extension Settings	93
Picture 95 - Action Url web settings	100
Picture 96 - time plan	102
Picture 97 - Time plan pause list	102
Picture 98 - Webpage Tone	102
Picture 99 - Web cloud phone book Settings	105
Picture 100 - Function key settings	106
Picture 101 - IP Camera List	107
Picture 102 - Advanced Settings Parameters	107
Picture 103 - Web Wireless Key	108
Picture 104 - Doorphone Settings	110
Picture 105 - Web Filter settings	110
Picture 106 - Web Filter Table	110
Picture 107 - Certificate of settings	111
Picture 108 - Device certificate setting	111
Picture 109 - Input and output settings	112
Picture 110 - Input and output settings	116
Picture 111 - Web capture	116

2 Table

Table 1 - interface	14
Table 2 - Status Prompt and Notification Icons	15
Table 3 - DSSkey Icons	16
Table 4 - Look-up Table of Characters	17
Table 5 - Standby interface	18
Table 6 - Dial Interface	19
Table 7 - Commonly used icons	20
Table 8 - Keyboard	20
Table 9 - Keyboard numbers & characters	21
Table 10 - Taking interface	28
Table 11 - DoorAccess Parameters	31
Table 12 - Intercom configure	41
Table 13 - MCAST Parameters on Web	42
Table 14 - set time Parameters	49
Table 15 - QoS & VLAN	65
Table 16 - Auto Provision	71
Table 17 - firmware upgrade	73
Table 18 - Wi-Fi settings	79
Table 19 - Service port	80
Table 20 - Line configuration on the web page	81
Table 21 - Phone 7 dialing methods	87
Table 22 - Dial - up rule configuration table	88
Table 23 - action plan	90
Table 24 - Set the line global configuration on the web page	91
Table 25 - VQ RTCP-XR parameters	92
Table 26 - Hotspot managed extension parameters	93
Table 27 - General function Settings	94
Table 28 - Voice settings	97
Table 29 - Multicast parameters	99
Table 30 - Time & Date settings	100
Table 31 - time plan	101
Table 32 - Side key settings	106
Table 33 - Advanced Settings Parameters	107
Table 34 - Wireless Key Settings	108
Table 35 - Input/Output parameters	112
Table 37 - Trouble Cases	117

3 Safety Instruction

3.1 Safety Instruction

Please read the following safety notices before installing or using this unit. They are crucial for the safe and reliable operation of the device.

- Please use the product-specified power adapter. If you need to use a power adapter provided by another manufacturer due to special circumstances, please confirm that the voltage and current of the provided adapter meet the specifications of this product, and it is recommended to use a product that has passed safety certification, otherwise it may cause fire or electric shock accidents. When using this product, do not damage the power cord, do not twist, stretch and strap it, and do not press it under heavy objects or sandwich between items, otherwise it may cause fire or electric shock caused by broken power cord.
- Before using the product, please confirm that the temperature and humidity of the environment in which it is located meet the working needs of the product. (Moving this product from the air-conditioner to the natural temperature, the surface or internal components of this product may produce condensate vapor, and the product needs to be dried naturally before turning on the power supply.))
- Do not attempt to open it. Non-expert handling of the device could damage it. Consult your authorized dealer for help, or else it may cause fire, electric shock and breakdown.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth that has been slightly dampened in a mild soap and water solution.
- When lightning, do not touch power plug, it may cause an electric shock.
- Do not install this phone in an ill-ventilated place. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

3.2 FCC

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

4 Overview

4.1 Overview

The equipment is an indoor station with 7-inch or 10.1-inch color touch screen and rich interfaces.

It is mainly used in residential area, villa, office building and other places for receiving calls and communicating through the door phone and achieving remote door-opening. It provides more reliable security assurance and the easier access control for the users, creating a safe and comfortable living environment.

In order to help some interested users to better understand the details of the product, the user manual can be used as a reference guide for the use of equipment This document may not apply to the latest version of the software.

If you have any questions, you can use the help prompt interface that comes with the device, or download and update your user manual from the official website.

4.2 Packing Contents



5 Install Guide

5.1 Use PoE or external Power Adapter

Equipment support two power supply modes: external power adapter and Ethernet (PoE) switch power supply mechanism

PoE power supply saves the space and cost of providing the device additional power outlet. With a PoE switch, the device can be powered through a single Ethernet cable which is also used for data transmission. By attaching UPS system to PoE switch, the device can keep working at power outage just like traditional PSTN telephone which is powered by the telephone line.

For users who do not have PoE equipment, the traditional power adaptor should be used. If the device is connected to a PoE switch and power adapter at the same time, the power adapter will be used in priority and will switch to PoE power supply once it fails.


Please use the power adapter supplied by Fanvil and the PoE switch met the specifications to ensure the device work properly.

5.2 Desktop Installation

5.2.1 Peripheral connection



Picture 1 - Peripheral connection diagram

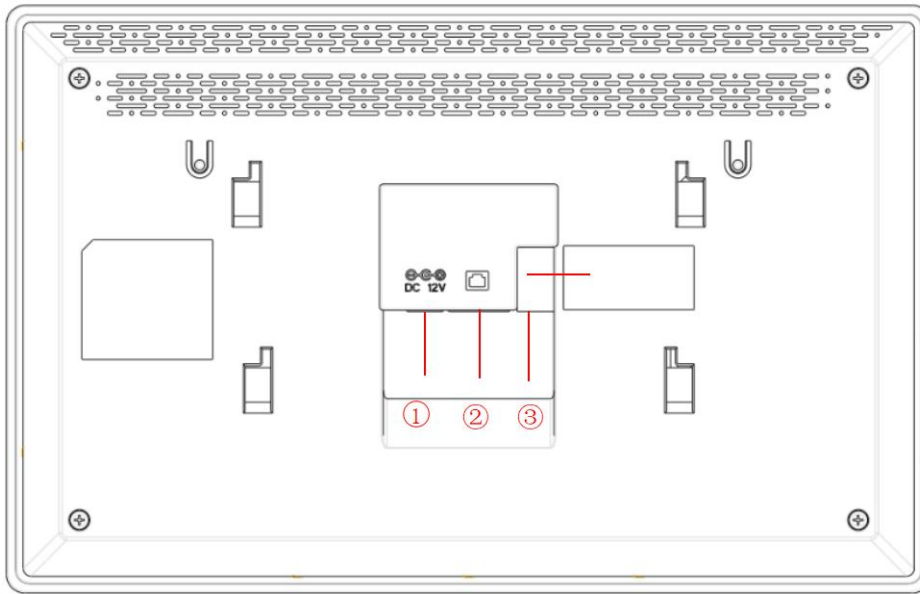

Picture 2 - interface

Table 1- interface

No.	Description	Interface
1	Power interface: 12V/1A input	
2	Ethernet interface: standard RJ45 interface, 10/100M adaptive, it is recommended to use CAT5 or CAT5E network cable	
3-1	Power interface: 12V/1A input	<input type="radio"/> GND <input type="radio"/> 12V
3-2	1 sets of doorbell interfaces	<input type="radio"/> DB_IN1
3-3	1 sets of short-circuit output interfaces: can be connected to electric locks, alarms etc.	<input type="radio"/> NC1 <input type="radio"/> COM1 <input type="radio"/> NO1
3-4	8 sets of alarm input interfaces: input devices for connecting switches, infrared sensor, door sensor, vibration sensors etc.	<input type="radio"/> ALM IN 1 <input type="radio"/> ALM IN 2 <input type="radio"/> ALM IN 3 <input type="radio"/> ALM IN 4 <input type="radio"/> ALM IN 5 <input type="radio"/> ALM IN 6 <input type="radio"/> ALM IN 7 <input type="radio"/> ALM IN 8
3-5	1 sets of RS485 interfaces: can be connected to card reader, sensor etc.	<input type="radio"/> 485 B <input type="radio"/> 485 A

6 Appendix Table

6.1 Appendix I - Icon

Table 2 - Status Prompt and Notification Icons

	Call out
	Call in
	Mute Microphone
	Call voice quality
	Call voice encryption
	Call Hold
HD	HD Audio
	Network Disconnected
	Enable VLAN
	Enable VPN
	Keyboard locked
	Call forward activated
	Auto-answering activated
	Connecting WIFI
	Wi-Fi network abnormal
	SIP Hotspot
	DND









	Missed call
	SMS
	Unread voice message
	Network storm

Table 3- DSSkey Icons

Icon	Explanation
	Speed Dial
	Intercom
	Key Event
	URL/Action URL
	BLF List
	Multicast
	Memory Key None
	None
	Line
	DTMF

6.2 Appendix II –Function key state definition


Table 4 - Look-up Table of Characters

Type	Icon	State	Description
Line Key		Gray	Line is not configured
		Green On	Line ready (Registered)
		Red Blinking	Line is trying to register
		Red Blinking	Line error (Registration failure)
DND		Red On	Enable DND
		Off	Disable DND
MWI		Green Blinking	New voice message waiting
		Off	No new voice message

7 User Getting Started

7.1 Introduction to the User

7.1.1 Standby interface

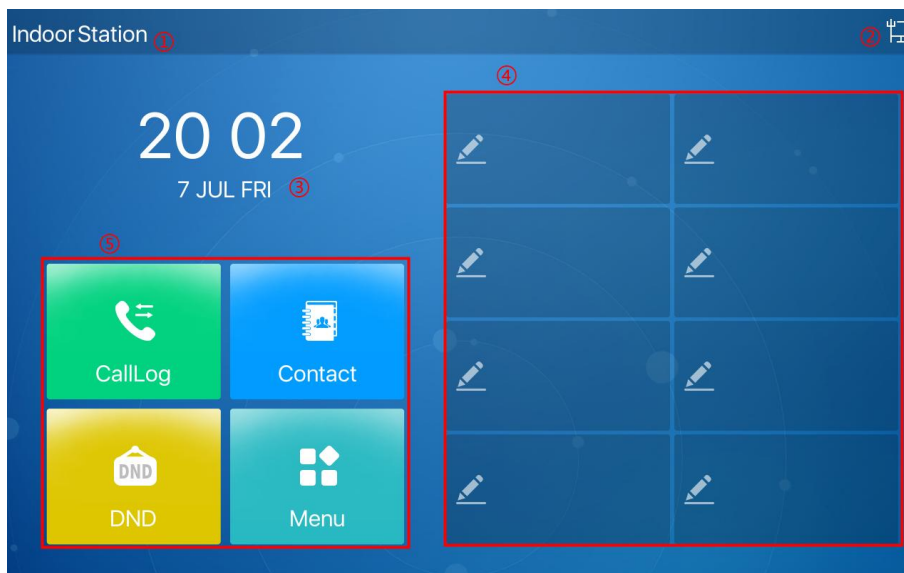

Picture 3- Standby interface

The figure above shows the default standby screen interface, which is the state of the user interface most of the time.

The upper half of the main screen displays the welcome message, time and date, and status information (such as automatic answer, network connection status, etc.).

Table 5- Standby interface

Number	Description
1	Welcome word, number
2	Status icon
3	Time, Date
4	Custom function
5	Common Functions

Icon descriptions are described in [6.1 Appendix I](#).

7.1.2 Dial interface

The dial interface is mainly used to make calls, enter the contacts, call history

interface.



Picture 4 - Menu Interface

Table 6 - Dial Interface

Number	Features	Description
1	Dialpad	Enter the dial interface
2	Contact	Enter the contact interface, view/edit contacts
3	Call records	Enter the call log interface, view the call log
4、5	Turn page	When the list supports multiple pages, page up and down
6	Home	Back to main interface
7	Volume Down Key	Volume Adjustment
8	Volume Up Key	Volume Adjustment
9	Number matching record	After entering the number, the query record displays
10	Input box	Enter number
11	Numeric keypad	0-9, *, #
12	Input method	Switch input method, 123/abc/ABC/Abc/2aB
13	Switch Line	Switch the line from which to dial
14	Redial	After entering the number, press it to redial the number; If the number is not entered, press the number that last called out
15	Dial key	After entering the number, press to call out

7.1.3 Commonly used icons on the interface


Introduction to icons commonly used by equipment.

Table 7- Commonly used icons

Icon	Description	Icon	Description
	Back to main interface		Previous page
	Next page		Return
	Search for contacts		Add
	Save		

7.2 Use of touch keyboard

The device supports using the touch keyboard to enter data.

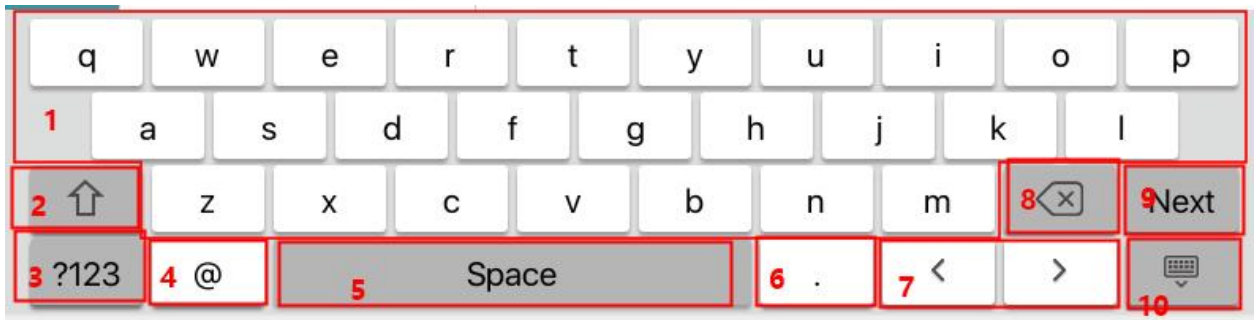


Picture 5 - Keyboard

Table 8 - Keyboard

Number	Function keys	Description
1	26 English letters	Type letters
2		Switch to uppercase letter input mode
3		Switch to number, special character input mode
4、6	Special characters	@、.
5	Space Bar	Enter a Space
7	Switch	Switch input characters left and right
8	Delete	Delete entered characters

9	Next	Switch to the next edit box
	Done	Save operation
10		Hide keyboard

Tap **?123** on the screen to switch to number and special character input mode.

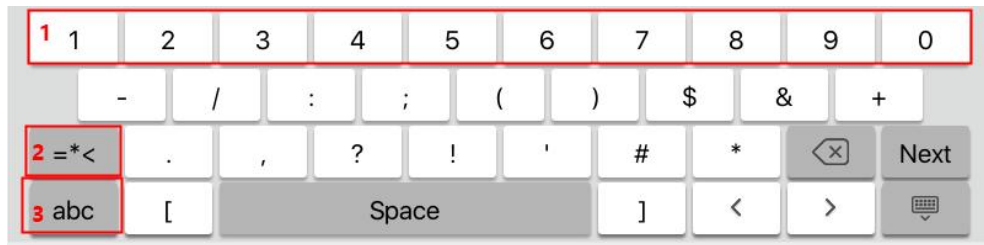

Picture 6 - Keyboard numbers & characters

Table 9 - Keyboard numbers & characters

Number	Function keys	Description
1	Number Key	Type in data
2		Switch to special character input mode
3		Switch lowercase English letter input mode

7.3 Device Status

The phone status includes the following information:

- Network Status
- The Phone Device Information
- SIP Account Information
- TR069 Connection Status (Displayed only in [State] on LCD)

The user can view the phone status through the phone interface and the web interface.

Device interface: When the device is in standby, press **[Menu]** >> **[Status]**, select options to view corresponding information, as shown in the picture:

Network	1. VlanId	None
Phone	2. Wi-Fi IP	N/A
Account	3. SSID	N/A
TR069	4. Mode	DHCP/IPv4
	5. IPv4	172.16.7.188

Picture 7- Device status

- WEB interface: Refer to [7.4 Web management](#) to log in the phone page, enter the [System] >> [Information] page, and check the phone status, as shown in the picture:

Picture 8- Device status

7.4 Web Management

Phone can be configured and managed on the web page of the phone. The user needs to enter the IP address of the phone in the browser at first and open the web page of the phone.

The user can check the IP address of the phone by pressing **[Menu]** >> **[Status]**.



Picture 9- Login page

Users must correctly enter the user name and password to log in to the web page. The default user name and password are "admin". For the specific details of the operation page, please refer to page [11 Web configurations](#).


7.5 Network Configurations

The i504&i506&i504W&i506W device supports two network connection methods: wired network connection and wireless network connection. Users need to choose the corresponding connection method according to their own situation.

The device uses an IP network connection to provide services. Unlike traditional devices based on line circuit technology, IP devices are connected to each other through the network to exchange data packets and data based on the device's IP address.

To enable the device, the network configuration must first be properly configured. To configure the network, users need to find the device function menu button **[Menu]** >> **[Advanced Settings]** >> **[Network]** >> **[Network Settings]**.

The default password for entering advanced settings is "123".

NOTICE! If user saw a  'WAN Disconnected' icon flashing in the middle of screen, it means the network cable was not correctly connected to the device's network port. Please check the cable is connected correctly to the device and to the network switch, router, or modem.

The device supports three network types, IPv4/IPv6/IPv4&IPv6

There are three common IP configuration types for IPv4

- DHCP – This is the mode that automatically obtains the network configuration from the server. The user does not need to manually configure any parameters. Suitable

for most users.

- Static IP configuration – This option allows users to manually configure each IP parameter, including IP address, mask, gateway and primary DNS server and backup DNS server. This usually applies to some professional network user environments.
- PPPoE – This option is usually suitable for users who connect to the network through a broadband service account. To establish a PPPoE connection, the user should provide the user name and password provided by the operator.
- The default configuration of the device is the network mode of automatic configuration

There are two common IP configuration types for IPv6

- DHCP – This is the mode that automatically obtains the network configuration from the server. The user does not need to manually configure any parameters. Suitable for most users.
- Static IP configuration – This option allows users to manually configure each IP parameter, including IP address, mask, gateway, and primary and secondary domain names. This usually applies to some professional network user environments.

For specific configuration and use, please refer to [10.6.2.1 Network Settings](#) and [10.5 WiFi](#)

7.6 SIP Configurations

There must be at least one line is configured properly in order to provide telephony service. The line configuration is like a virtualized SIM card. Just like a SIM card on a mobile phone, it stores the service provider and the account information used for registration and authentication. When the device is applied with the configuration, it will register the device to the service provider with the server's address and user's authentication as stored in the configurations.

The user can conduct line configuration on the interface of the phone or the webpage, and input the corresponding information at the registered address, registered user name, registered password and SIP user, display name and registered port respectively, which are provided by the SIP server administrator.

Web interface: After logging in the Web, enter [Line] >> [SIP] to configure each line, and click Apply to save the configuration.

Line

Register Settings >>

Line Status:	Registered	Activate:	<input checked="" type="checkbox"/> ?
Username:	<input type="text" value="0305"/> ?	Authentication User:	<input type="text"/> ?
Display name:	<input type="text" value="0305"/> ?	Authentication Password:	<input type="password" value="....."/> ?
Realm:	<input type="text"/> ?	Server Name:	<input type="text"/> ?

SIP Server 1:		SIP Server 2:	
Server Address:	<input type="text" value="172.16.1.2"/> ?	Server Address:	<input type="text"/> ?
Server Port:	<input type="text" value="5060"/> ?	Server Port:	<input type="text" value="5060"/> ?
Transport Protocol:	<input type="text" value="UDP"/> ?	Transport Protocol:	<input type="text" value="UDP"/> ?
Registration Expiration:	<input type="text" value="3600"/> second(s) ?	Registration Expiration:	<input type="text" value="3600"/> second(s) ?

Proxy Server Address:	<input type="text"/> ?	Backup Proxy Server Address:	<input type="text"/> ?
Proxy Server Port:	<input type="text" value="5060"/> ?	Backup Proxy Server Port:	<input type="text" value="5060"/> ?
Proxy User:	<input type="text"/> ?		
Proxy Password:	<input type="text"/> ?		

Picture 10- Web Line Registration

8 Basic Function

8.1 Making Phone Calls

■ Default Line

The equipment provides 6 SIP line services. If all the 6 lines are configured successfully, the user can use any line to make or receive calls. If the user has set a default line, the number or name currently used by default will be displayed in the upper left corner of the screen interface. To enable or disable the default line function, the user can go through **[Menu] >> [Function] >> [Basic Settings] >> [General]** or complete the settings on the web page (**[Web Page] >> [Settings] >> [Function Settings] >> [Basic Settings]**).

■ Dialing Methods


User can dial a number by:

- Entering the number directly
- Press the Redial to make a call
- Selecting a phone number from phonebook contacts (Refer to [10.2 Phonebook](#))
- Selecting a phone number from cloud phonebook contacts (Refer to [10.2.3 Cloud Phone Book](#))
- Selecting a phone number from call logs (Refer to [10.3 Call Log](#))



Picture 11 - Dial interface


When calling a number, the user can press **[End]** to cancel the call.

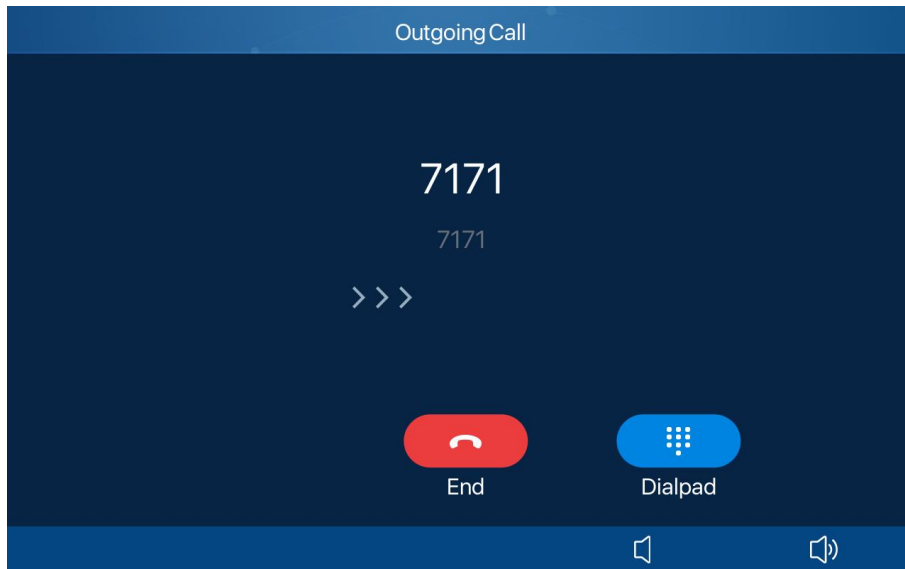

Picture 12 - Call interface

8.2 Answer a call

When the device is idle and there is an incoming call, the user will see the following call reminder screen.

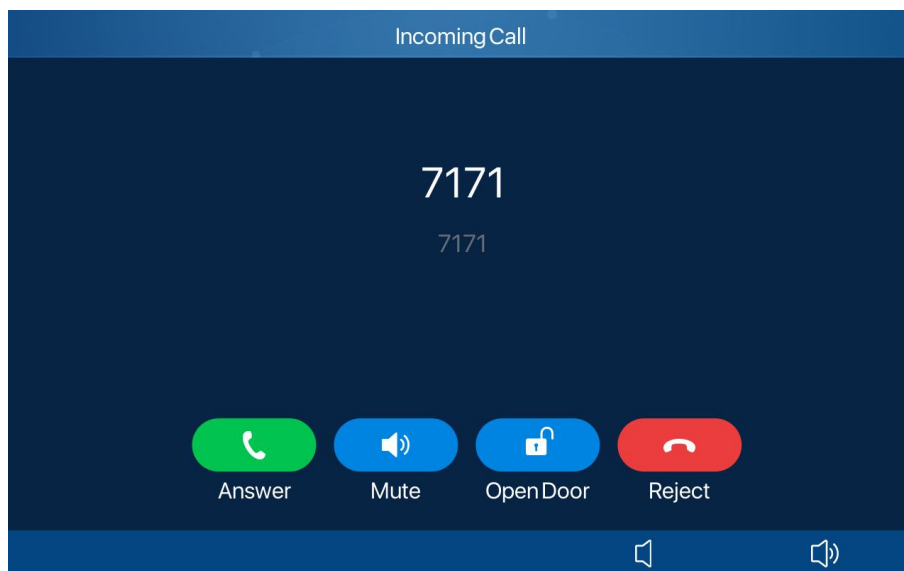


Picture 13 - Audio Call Interface

The user can answer the call by pressing [**Answer**]. To reject an incoming call, the user can press [**Reject**] button on the interface.

8.3 Talking Interface

When the call is established, the user will see the calling interface as shown below:

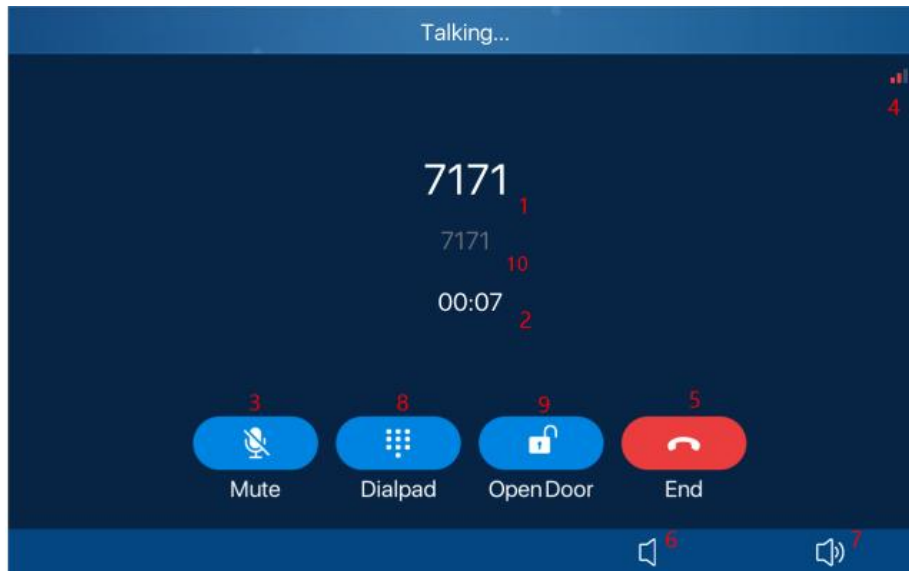


Picture 14- Taking interface

Table 10 - Taking interface

Number	The keypad names	Instruction
1	Contact Name	The name of the other party
2	Call duration	Call duration
3	Mute icon	Icon indication after the call is muted
4	Voice quality, HD, voice encryption	Display the current call voice quality, voice call encryption and other icon indicators
5	End	Hang up
6、 7	Volume addition and subtraction	Adjust call volume
8	Dailpad	A dialpad will pop out after it's clicked during a call. Users can enter DTMF to open a door.
9	OpenDoor	Open the door after one click.
10	Contact Number	Call the other party's number

8.4 End of call

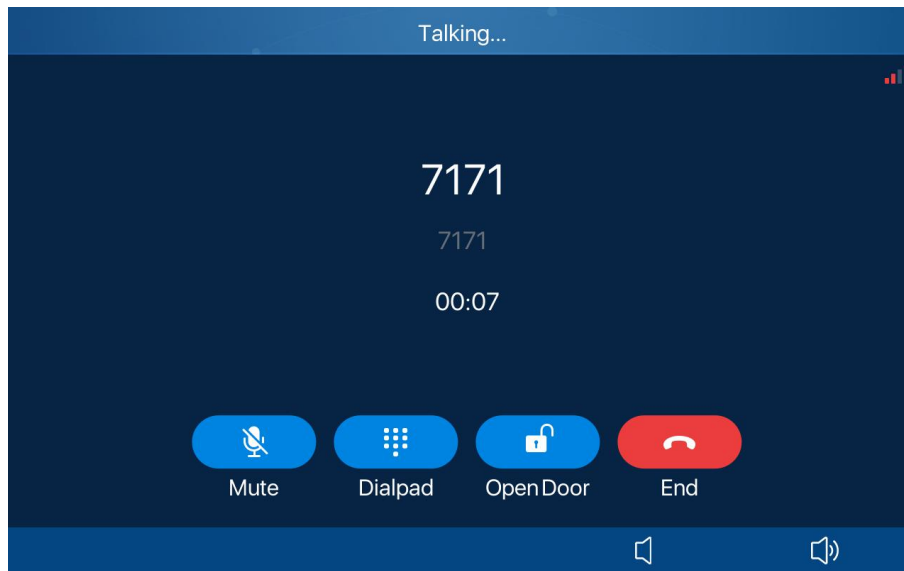


Picture 15- Call end interface

When the user's call ends, you can press [End] on the interface

8.5 Open Door

8.5.1 Open the door under standby

Click the set side key to open a door directly.

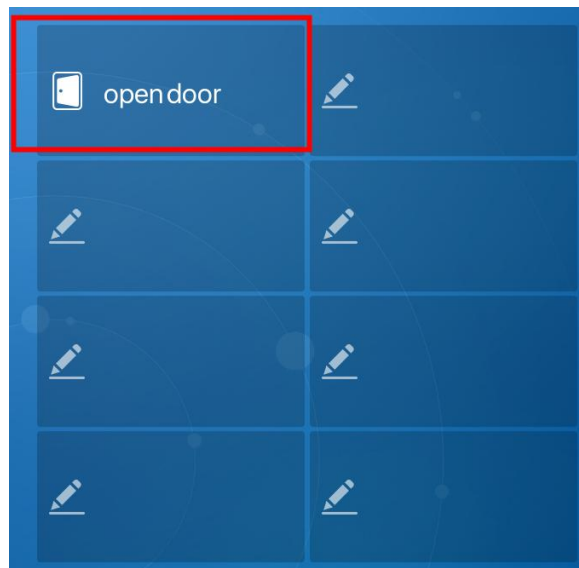

Picture 16 - OpenDoor Sidekey

8.5.2 Settings of open the door under standby

On the Website, enter [Function Key]>>[Side Key], choose Type as [URL] and Subtype as [Open Door].

Function Key Settings

Dsskey Font Size: (0-5)

Dsskey

Key	Type	Name	Value			Subtype	Line	Media	PickUp Number
F 1	URL	open door	http://admin:028Fa	+	-	Open Door	AUTO	DEFAULT	
F 2	None			+	-	None	AUTO	DEFAULT	
F 3	None			+	-	None	AUTO	DEFAULT	
F 4	None			+	-	None	AUTO	DEFAULT	
F 5	None			+	-	None	AUTO	DEFAULT	
F 6	None			+	-	None	AUTO	DEFAULT	
F 7	None			+	-	None	AUTO	DEFAULT	
F 8	None			+	-	None	AUTO	DEFAULT	

Picture 17 - Add a doorlock

When you add a value, an edit pop-up box pops up. If it is a Fanvil access control device, enter the device IP, user name, and password to automatically synthesize the URL; For third-party devices, you need to enter the full URL. As shown in the following figure:

Edit

URL or IP:

Username:

Password:

Picture 18 - Edit Popup

8.5.3 Open the door during a call

■ Enter DTMF

During a call, the user can press the dialpad. After the dialpad pops up, the user can enter the DTMF (Open Door Code).


■ OpenDoor

During a call, the user can press [OpenDoor] to open the door by one-click.

8.5.4 Settings of open the door during a call

When the doorphone establishes a call with the device, press the **[OpenDoor]** button, and the corresponding access code or door opening password will be sent to the doorphone to open the door.

■ Settings on LCD

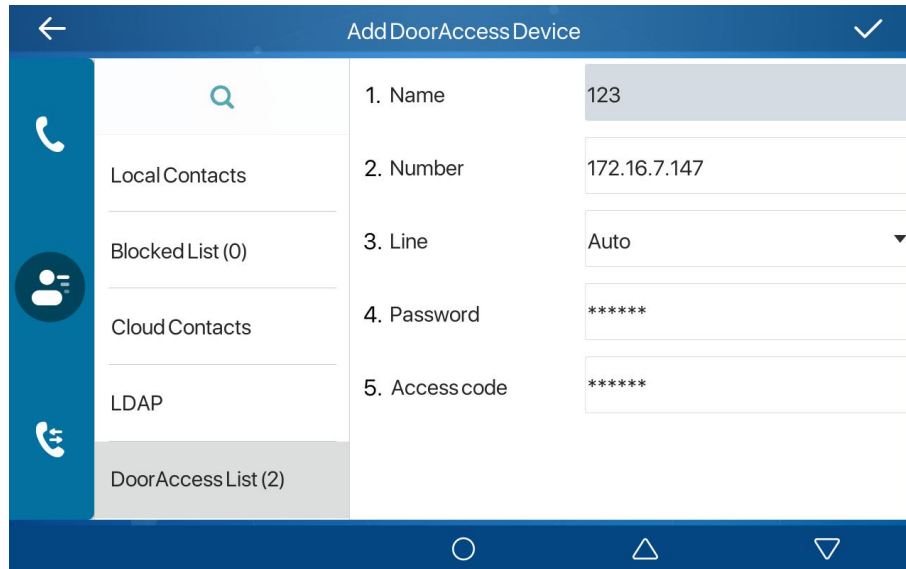

Picture 19 - Add DoorAccess Device

Table 11 - DoorAccess Parameters

Number	Parameters	Descriptions
①	Name	Set the name of the device
②	Number	Set the number of the device
③	Line	Set the line of the device
④	Password	Set the password of the device
⑤	Access code	Set the access code of the device (same as password)

8.6 Video Preview

The user can bind the video stream of the camera of the door phone and view the situation outside the house with one click.


Web: **[Function Key]** >> **[Side Key]**>>**[Dsskey]**. Choose a key, set Type to URL, Subtype to **[IP Camera]**, and fill in the Value blank with the RTSP URL of the camera. Press Apply to save and submit the configuration.

Dsskey

Key	Type	Name	Value			Subtype	Line	Media	PickUp Number
F 1	URL		rtsp://admin:admin	+	-	IP Camera	AUTO	DEFAULT	
F 2	None			+	-	None	AUTO	DEFAULT	
F 3	None			+	-	None	AUTO	DEFAULT	
F 4	None			+	-	None	AUTO	DEFAULT	
F 5	None			+	-	None	AUTO	DEFAULT	
F 6	None			+	-	None	AUTO	DEFAULT	
F 7	None			+	-	None	AUTO	DEFAULT	
F 8	None			+	-	None	AUTO	DEFAULT	

Apply

Picture 20 - Web page configuration

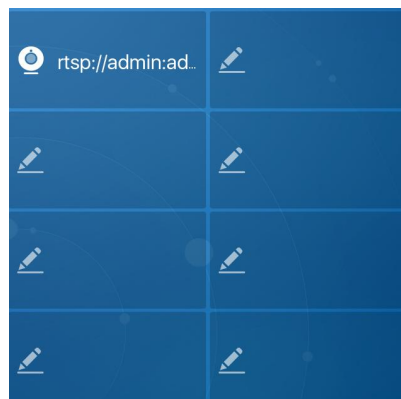

Picture 21- Standby interface display after configuration

8.7 Security(Input Settings)

Users can click [**Menu**] on the standby interface to enter the [**Security**] page, as shown in the figure.

← Security Setting	
Security Setting	1. Input1
Alarm Info	2. Input2
Security State	3. Input3
	4. Input4
	5. Input5
	6. Input6

Picture 22 - Security Page

8.7.1 Security Setting

- Set at the device

The user clicks the menu on the standby interface and selects **[Security]>> [Security Setting] >> [Input1]** to enter the configuration of alarm settings. The device supports 8 alarm settings, the user can set their name, trigger mode, whether to enable, alarm delay time, after the setting is completed and saved, the security settings will take effect.

Category	Setting	Value
Security Setting	1. Name	Alarm Input1
Alarm Info	2. Triggered Mode	Low Level Trigger
Security State	3. Enabled	Enabled
	4. Delay Time	0

Picture 23 - Security Setting

- Set on the web page

Users can select the input port and trigger mode on the website **[Security Settings] >> [Input Alarm Settings]**.


Input	Name	Triggered By	Triggered Action	Input Reset Code	Input Duration	Triggered Ringtone
Input1	Alarm Input1	Low Level Trigger(Close Trigger)	<input type="checkbox"/> Send SMS Dss Key: None	1234	0 (0.00~3600)s	None
Input2	Alarm Input2	Low Level Trigger(Close Trigger)	<input type="checkbox"/> Send SMS Dss Key: None	1234	0 (0.00~3600)s	None
Input3	Alarm Input3	Low Level Trigger(Close Trigger)	<input type="checkbox"/> Send SMS Dss Key: None	1234	0 (0.00~3600)s	None
Input4	Alarm Input4	Low Level Trigger(Close Trigger)	<input type="checkbox"/> Send SMS Dss Key: None	1234	0 (0.00~3600)s	None
Input5	Alarm Input5	Low Level Trigger(Close Trigger)	<input type="checkbox"/> Send SMS Dss Key: None	1234	0 (0.00~3600)s	None

Picture 24 - Web Settings

8.7.2 Alarm Info

After setting the security settings, the user can use the device to monitor and manage the Area. When the type of setting is triggered, the device can alarm according to the set trigger mode and alarm delay time.


Under the standby interface, the user selects **[Menu]>> [Security] >> [Alarm Information]** to view the alarm information.

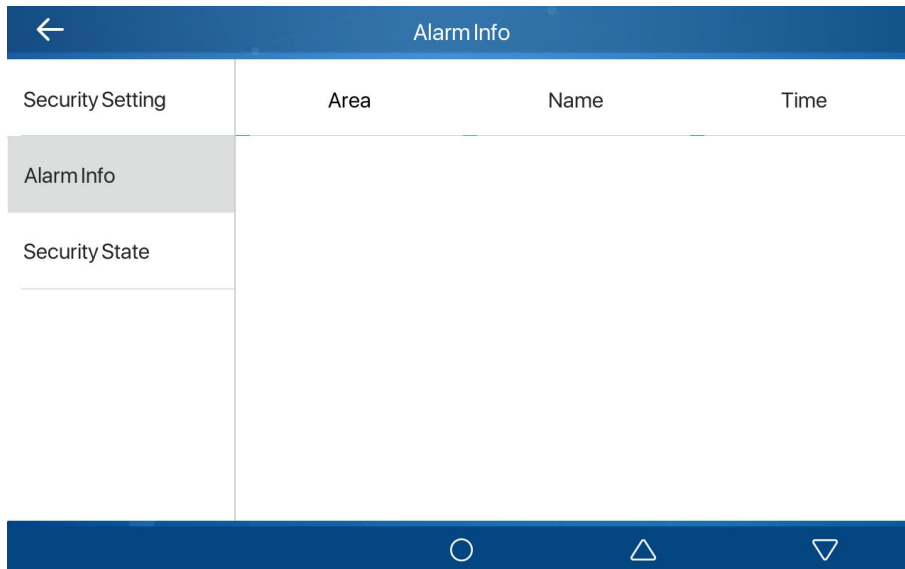

Picture 25 - Alarm Info

8.7.3 Security State

Users select **[Menu]>> [Security] >> [Security State]** to view the name, status, and alarm delay information of each Area.

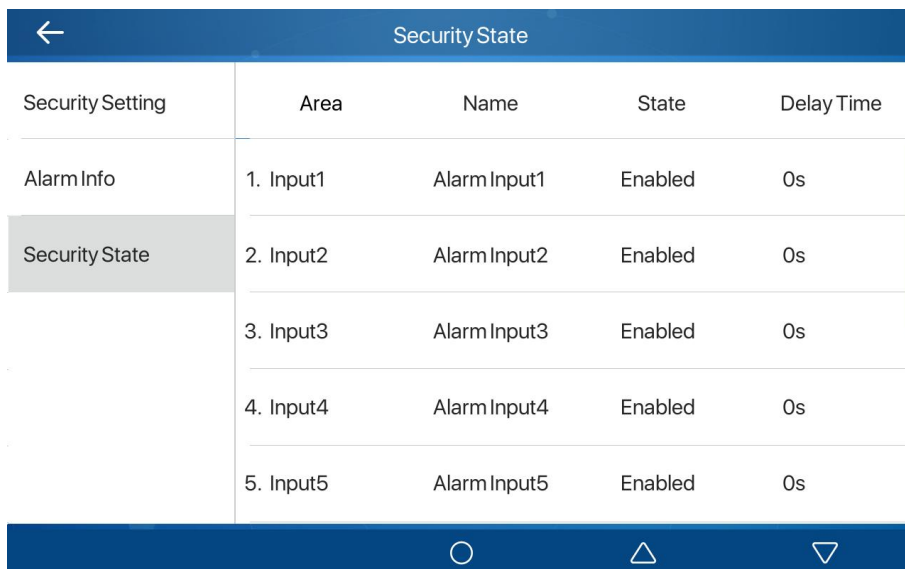

Picture 26 - Security State

8.8 Dial Query

The device defaults to enable the dial query function, open the dial pad to dial, enter one or more numbers, the dial interface will automatically match the call record, the number list in the contact, click to select the number and call out.

8.9 Auto Answer

The user can enable the automatic answering function on the device, and the device can automatically answer after a call comes in. Auto answer can be activated by distinguishing lines.

The user can start the automatic answer function on the device interface or the web interface.


- **Device interface:**

Press **[Menu]>>[Function]>>[Auto Answer]** button;

Press the button to select the line, use the left/right navigation key to turn on/off the auto answer option, set the auto answer time, the default is 5 seconds

Press to save when finished

The icon in the upper right corner of the screen indicates that auto answer is enabled.

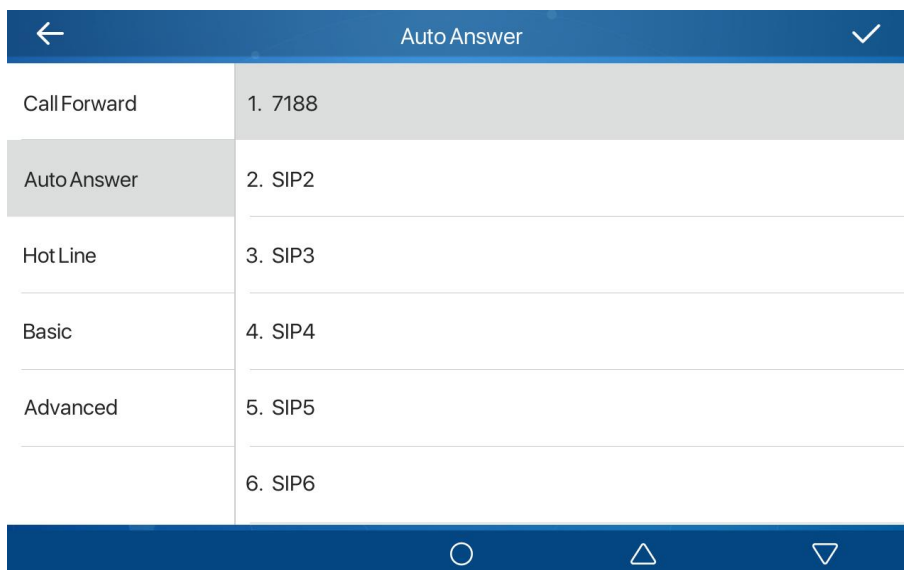


Picture 27 - Line 1 enables auto-answering

- **Web interface :**

Log into the device webpage, enter **[Line]>>[SIP]**, Select **[Basic Settings]**,

enabled automatic answering, set the automatic answering time and click submit.

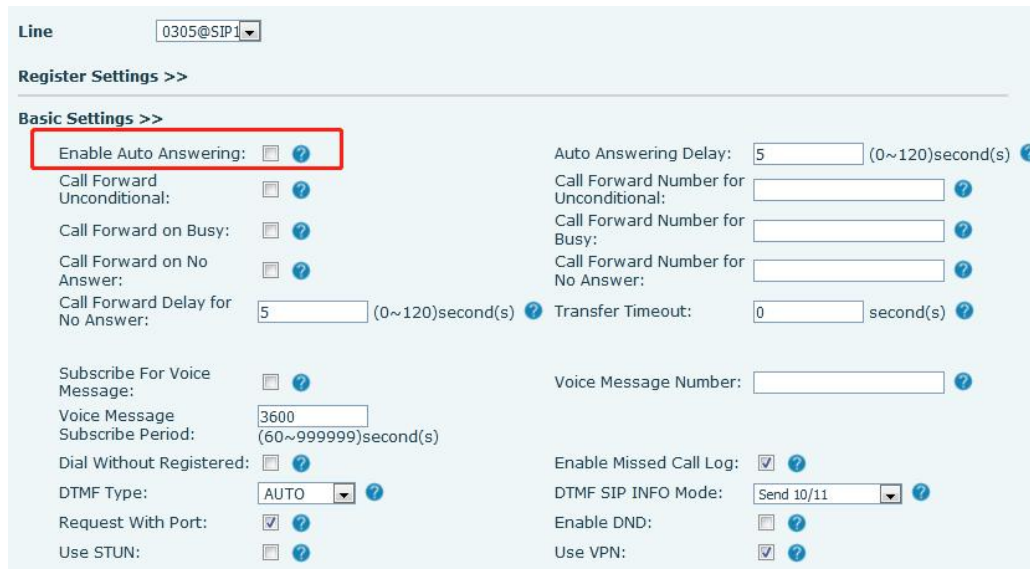


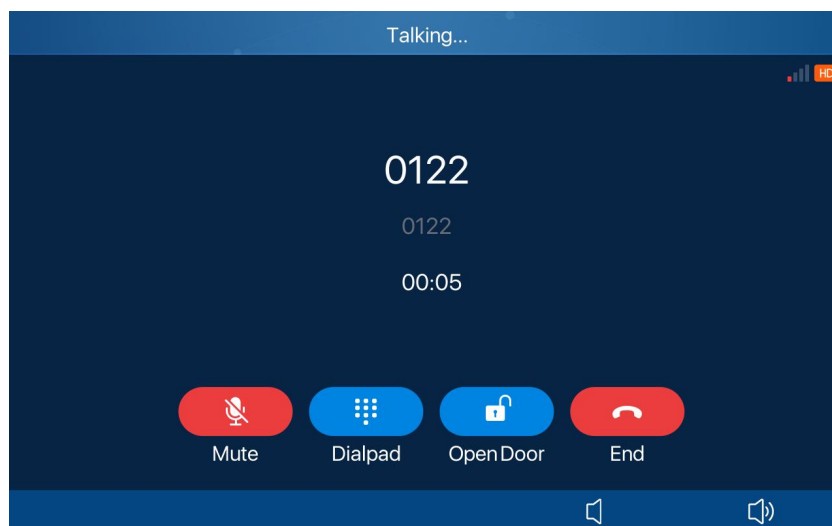
Picture 28- Web page to start auto-answering

8.10 Mute


You can turn on the silent mode and turn off the microphone of the device during a call, so that the other party cannot hear the local voice. Under normal circumstances, the silent mode is automatically turned off as the call ends.

8.10.1 Mute during a call

Press the mute button  on the call interface during a call: The mute button on the device turns red.




Picture 29- Mute the call

- Unmute the call: Press the mute  on the device again. The red light of the device mute button turns off.

8.10.2 Mute when ringing

- Turn on mute ringing: press the mute button on the incoming call interface when the device is ringing
The mute icon on the incoming call interface of the device turns red and there is no ringtone. After hanging up, the device will still ring the next time there is an incoming call.

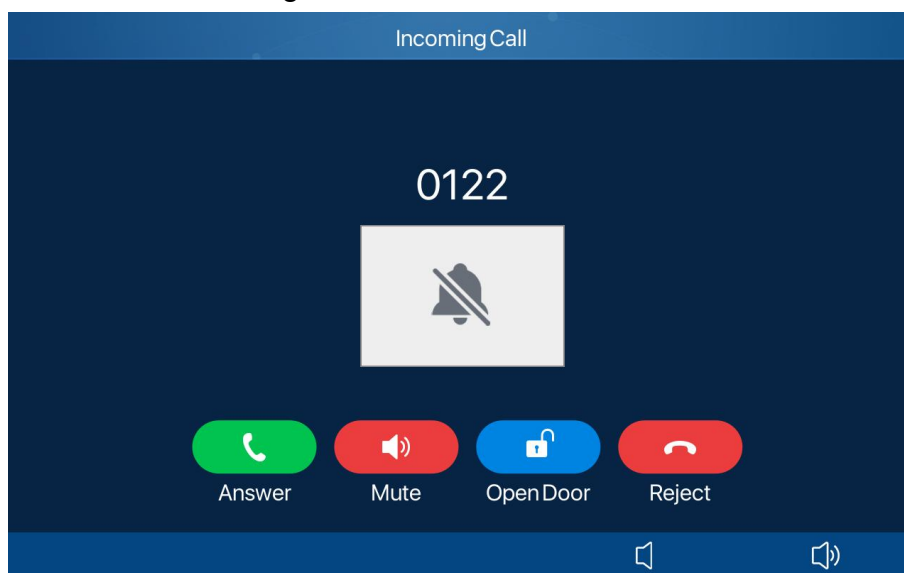


Picture 30 - Ringing mute

8.11 DND

User may enable Do-Not-Disturb (DND) on the device to reject incoming calls. DND can be enabled on line basis.

Enable/Disable phone all lines DND, steps are the following:


- Phone interface: Default standby mode,
Press [**DND**] button to enable DND, the icon will become red. The phone status prompt bar will have a DND icon.

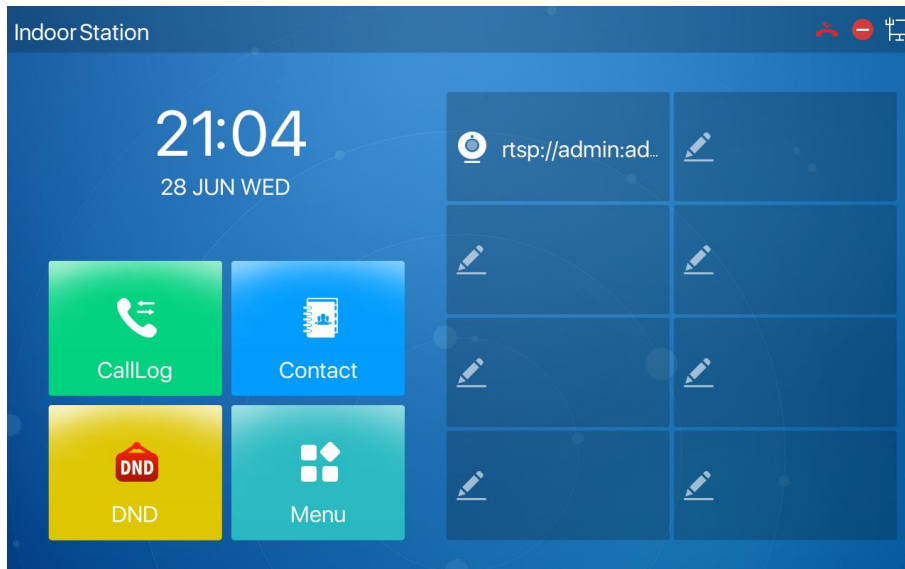

Picture 31 - DND Display


If the user wants to turn on/off the Do Not Disturb feature on a specific line, the user can configure the Do Not Disturb feature on the Configure Line page.

- 1) Press the **[Menu]**>> **[Features]**>> **[Basic]** >> **[DND]** button to enter the editing page;
- 2) Select **[Line]** to adjust the DND mode and status, and press the to save it after completion;
- 3) The user will see the DND icon turn red and the SIP line has DND mode enabled.

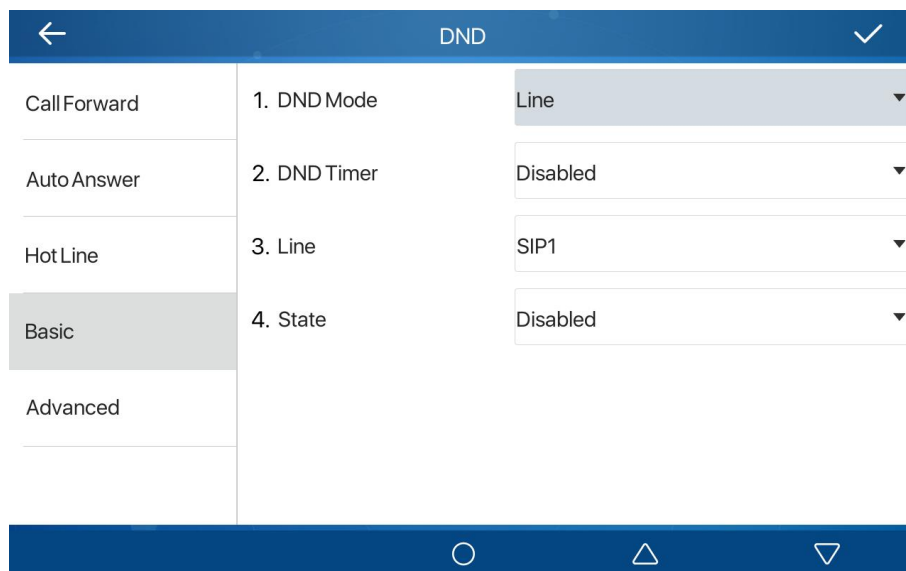

Picture 32- DND setting interface

Users can also use the DND timer. After setting, within the time range, the Do Not Disturb function will be automatically turned on and the DND icon will turn red.

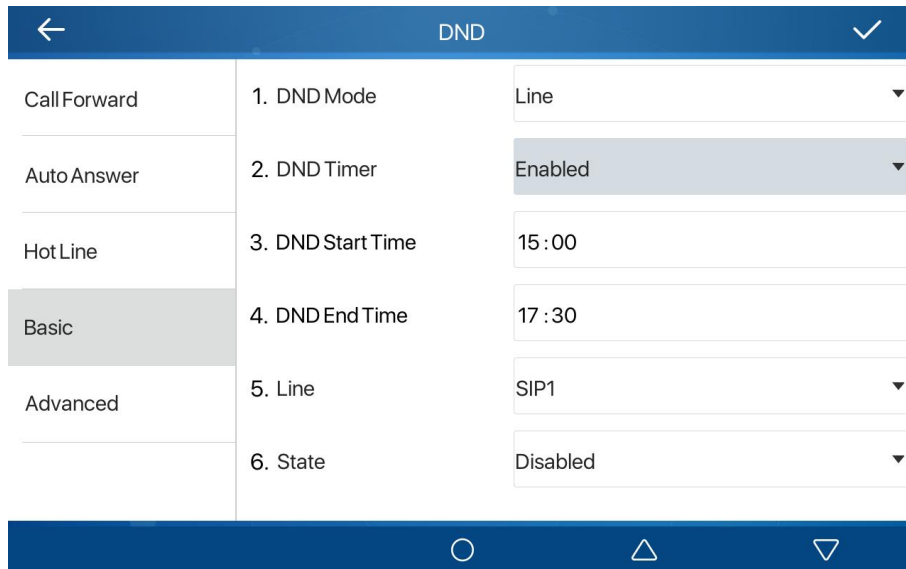


Picture 33- DND timer

Web interface: Go to [Settings] >> [Function Settings] >> [DND Settings], set the type of DND (off, phone, line), and DND timing function.



Picture 34- DND Settings

The user opens the DND of a specific line on the webpage: enter [Line] >> [SIP] >> [Basic Settings], and enable DND.

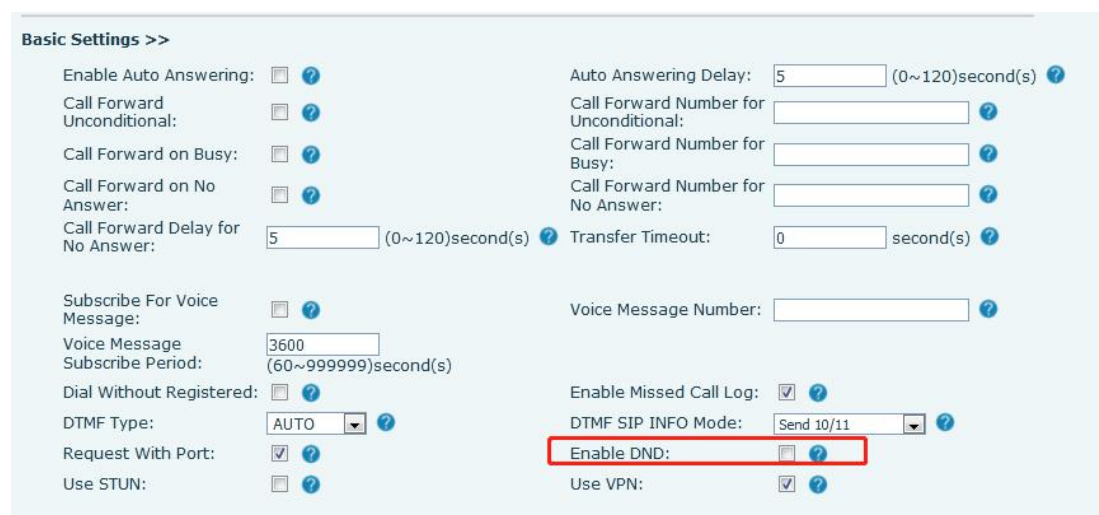

Picture 35 - Line DND

8.12 Call Forward

Call forward is also known as 'Call Divert' which is to divert the incoming call to a specific number based on the conditions and configurations. User can configure the call forward settings of each line.


There are two types:

- **Unconditional Call Forward** – Forward any incoming call to the configured number.
- **Call Forward on No Answer** – When user does not answer the incoming call after the configured delay time, the incoming call will be forwarded to the configured number.
- Phone interface: Default standby mode

1) Press **[Menu]** >> **[Function]** >> **[Call Forward]** to select the line


2) Select the type of call forwarding. Turn on and set the number to be transferred, etc.

3) Click the to save the changes.

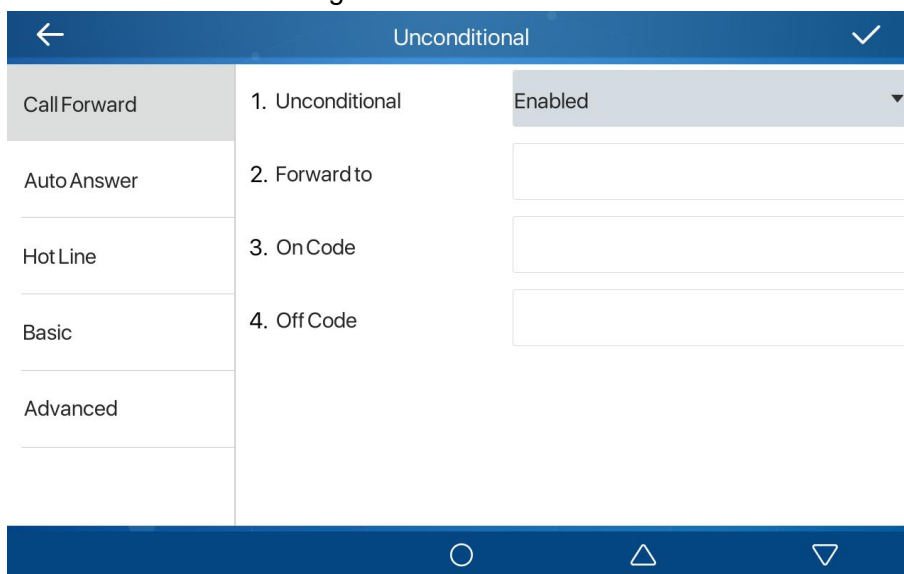

Picture 36- Set call forward

Web interface: Enter **[Line]** >> **[SIP]**>> **[Basic Settings]**, and set the forward type, number, and time.

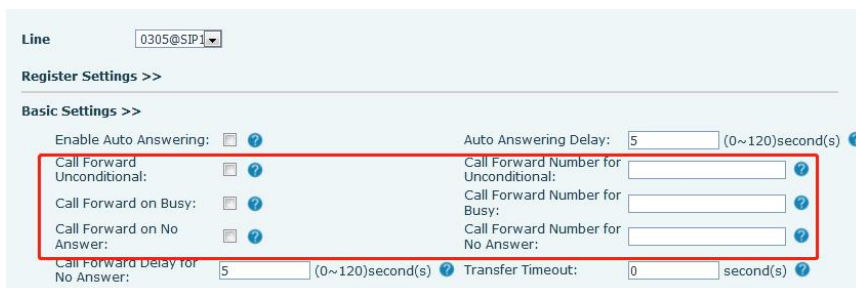


Picture 37- Set call forward

9 Advance Function

9.1 Intercom

After the device enables intercom, it can automatically answer intercom calls.

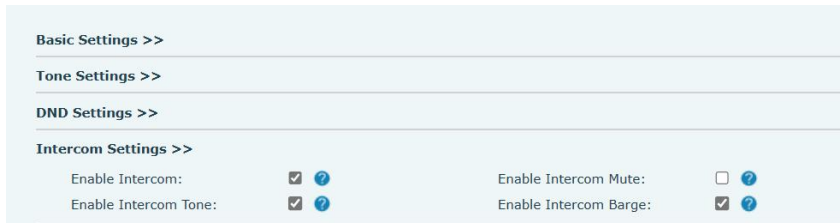

Picture 38- Web Intercom configure

Table 12 - Intercom configure

Parameter	Description
Enable Intercom	When intercom is enabled, the device will accept the incoming call request with a SIP header of Alert-Info instruction to automatically answer the call after specific delay.
Enable Intercom Mute	Enable mute mode during the intercom call
Enable Intercom Tone	If the incoming call is intercom call, the phone plays the intercom tone
Enable Intercom Barge	Enable Intercom Barge by selecting it, the phone auto answers the intercom call during a call. If the current call is intercom call, the phone will reject the second intercom call

9.2 MCAST

This feature allows user to make some kind of broadcast call to people who are in multicast group. User can configure a multicast DSS Key on the phone, which allows user to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address without involving SIP signaling. You can also configure the phone to receive an RTP stream from pre-configured multicast listening address without involving SIP signaling. You can specify up to 10 multicast listening addresses.

Picture 39- Multicast Settings Page

Table 13 - MCAST Parameters on Web

Parameters	Description
Enable Prio Chan	Once enabled, the same port and channel can only be connected. Channel 24 is the priority channel, higher than 1-23; A channel of 0 indicates that no channel priority is used
Enable Emer Chan	When enabled, channel 25 has the highest priority
Multicast Tone	Listened multicast server name

Multicast:

- Go to web page of **[Function Key]** >> **[Side Key]** , select the type to MCAST Paging, set the multicast address, and select the codec.
- Click Apply.
- Set up the name, host and port of the receiving multicast on the web page of **[Phone Settings]** >> **[MCAST]**.
- Press the DSSKEY you set.
- Receiver will receive multicast call and play multicast automatically.


Dynamic multicast:

Function description: Send multicast configuration information through Sip Notify signaling. After receiving the information, the device configures it in the system for multicast monitoring or cancels multicast monitoring in the system

9.3 SMS

9.3.1 SMS

If the service of the line supports the function of the short message, when the other end sends a text message to the number, the user will receive the notification of the short message and display the icon of the new SMS on the standby screen interface.

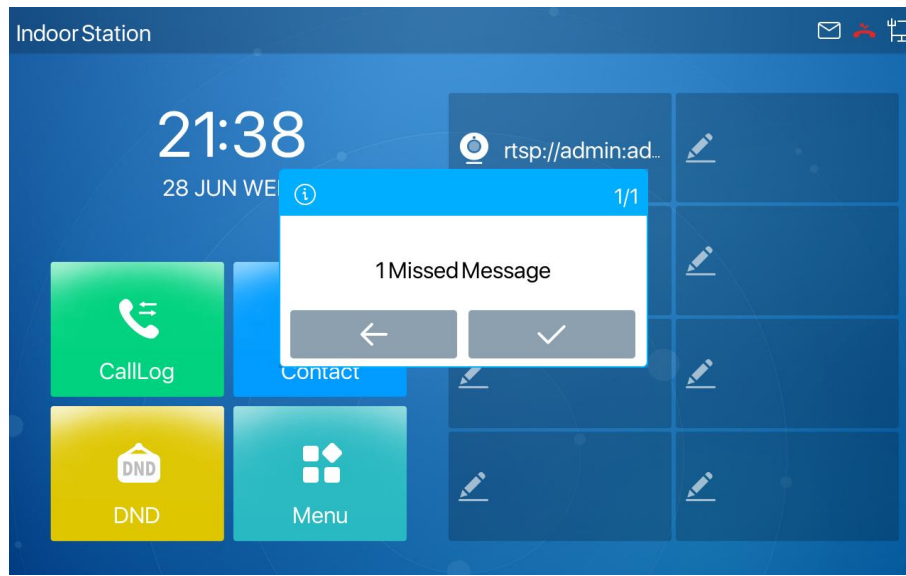

Picture 40- SMS icon

Send messages:


- Go to **[Menu]** >> **[Message]**>>**[SMS]**.
- Users can create new messages, select lines and send numbers.
- After editing is completed, click Send.

View SMS:

- Go to **[Menu]** >> **[Message]**.
- Check **[Inbox]** to read the unread message.

9.3.2 MWI (Message Waiting Indicator)

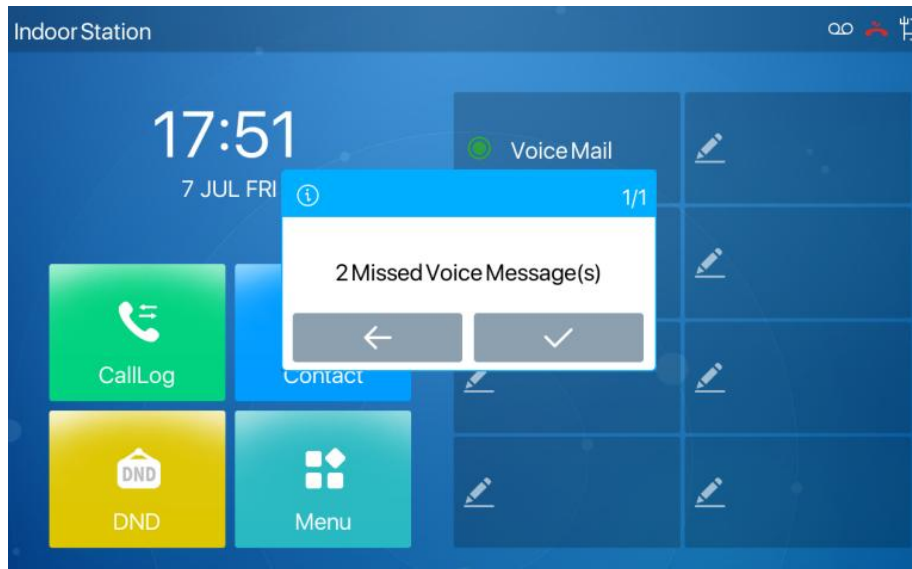

If the service of the lines supports voice message feature, when the user is not available to answer the call, the caller can leave a voice message on the server to the user. User will receive voice message notification from the server and device will prompt a voice message waiting icon on the standby screen.




Picture 41- New Voice Message Notification

To listen to a voice message, the user must first configure the voicemail number. After the voicemail number is configured, the user can retrieve the voicemail of the default line.

When the phone is in the default standby state,

- Select **[Message]** under **[Menu]**
- Enter **[Voice Message]** under **[Message]**
- The "2" in brackets on the SIP1 line represents unread voice messages, and "5" represents the total number of voice messages.
- Select the line to enter, enable the message and set the message number, press the upper right corner  to save
- After setting the message number, press  to listen to the message.

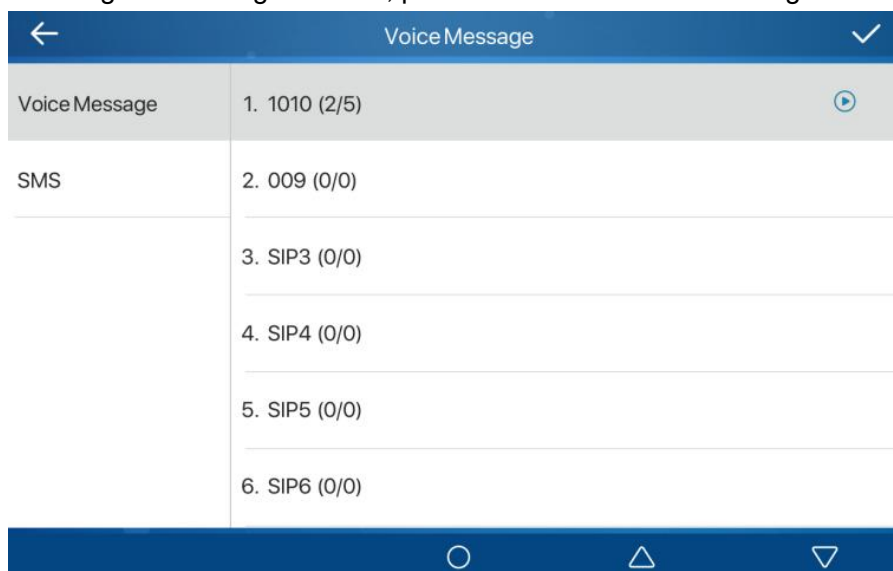

Picture 42 - Voice message interface

9.4 SIP Hotspot

SIP hotspot is a simple yet practical function. With simple configurations, the SIP hotspot function can implement group ringing. SIP accounts can be expanded.


Set a phone as a SIP hotspot and other phones (B and C) as SIP hotspot clients. When somebody calls phone A, phone A, B, and C all ring. When any phone answers the call, other phones stop ringing. The call can be answered by only one phone. When B or C initiates a call, the SIP number registered by phone A is the calling number.

Picture 43- Register SIP account

Table 15- SIP hotspot Parameters

Parameters	Description
Enable Hotspot	Set it to be Enable to enable the feature.
Mode	Choose hotspot, phone will be a “SIP hotspot server”; Choose Client, phone will be a “SIP hotspot Client”
Monitor Type	Either the Multicast or Broadcast is ok. If you want to limit the broadcast packets, you’d better use broadcast. But, if client choose Broadcast, the SIP hotspot phone must be broadcast.
Monitor Address	The address of broadcast, hotspot server and hotspot client must be same.
Local Port	Fill in the custom hotspot communication port. The server and client ports need to be consistent.
Name	Fill in the name of the SIP hotspot, this configuration is used to distinguish different hotspots under the network to avoid connection conflicts.
Ring Mode	Set the ring mode for incoming calls, deciding when there’s an incoming call, whether to ring on All/Extension/Hotspot devices.
Line Settings	Set whether to associate the SIP hotspot function on the corresponding SIP line.


Configure SIP hotspot server:

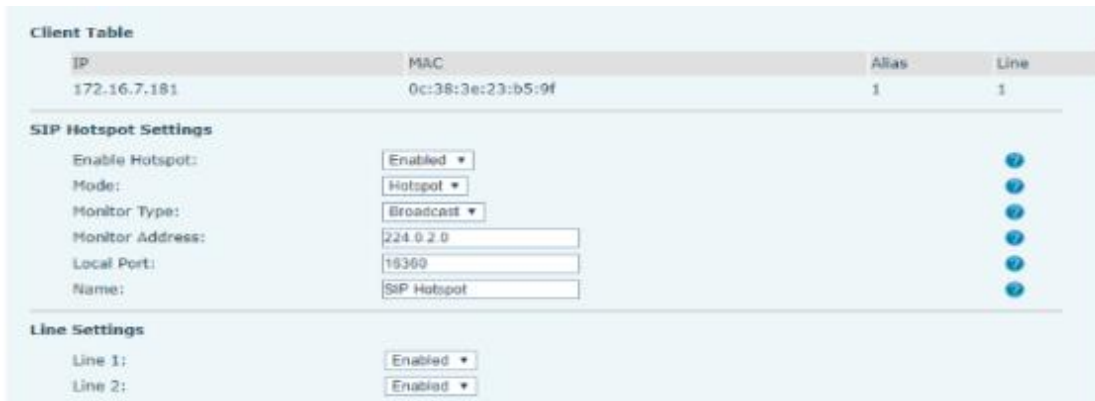

Picture 44- SIP hotspot server configuration

Configure SIP hotspot client:

As a SIP hotspot client, no SIP account needs to be set. The Phone set will automatically obtain and be configured a SIP account. On the SIP Hotspot tab page, set Mode to Client. The values of other options are the same as those of the hotspot.

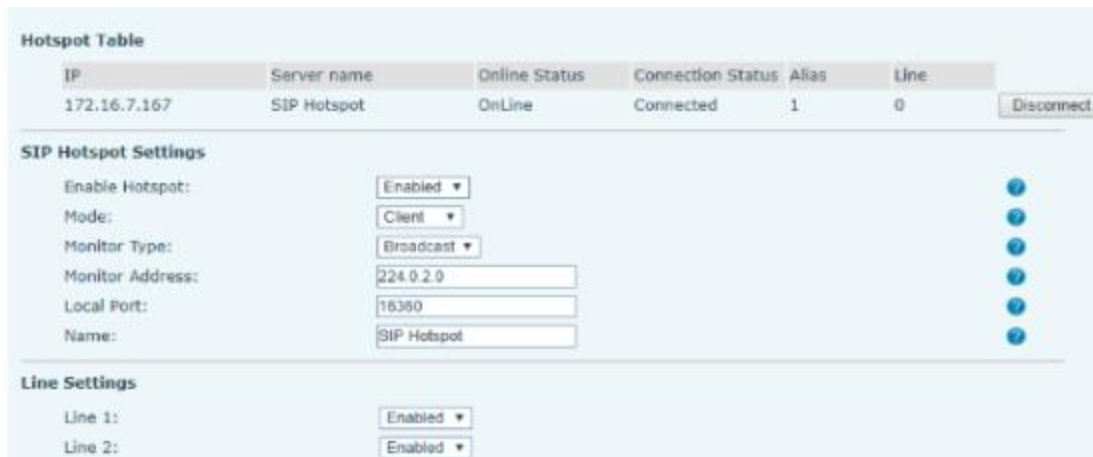

Picture 45- SIP hotspot client configuration

As the hotspot server, the default extension number is 0. When the phone is used as the client, the extension number is increased from 1, you can view the extension number through the [SIP Hotspot] page.

Call extension number:

- The hotspot server and the client can dial each other through the extension number.
- For example, extension 1 dials extension 0.

10 Phone Settings

10.1 Basic Settings

10.1.1 Language


The user can set the phone language through the phone interface or web interface.

- Phone interface : After resetting the factory settings, the user needs to set the language; when setting the language during standby, go to **[Menu] >> [Basic Setting] >> [UI Preference]>> [Language]** Settings, as shown in the figure.



Picture 46 - Set language

- Web interface: Log in to the phone webpage and set the language in the drop-down box at the top right corner of the page, as shown in the figure:

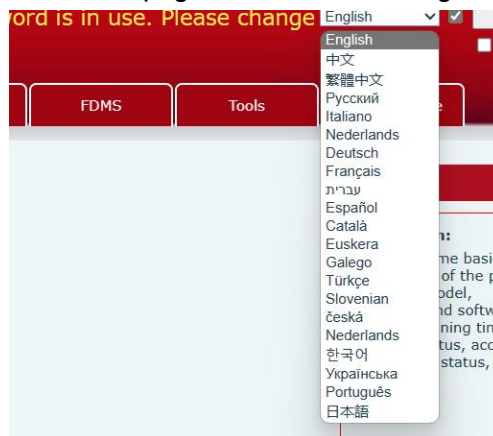


Picture 47- web page language setting

- The function box on the right side of the web interface language setting box is “Synchronize language to device”; if selected, the phone language will be synchronized with the webpage language. If it is not selected, it will not be synchronized.

10.1.2 Time & Date


Users can set the phone time through the phone interface and web interface.

- Phone end: When the phone is in the default standby state, press the **[Menu]** >> **[Basic settings]** >> **[UI Preference]** >> **[Time & Date]** , use the up/down navigation button to edit parameters, press the to save after completion, as shown in the figure:

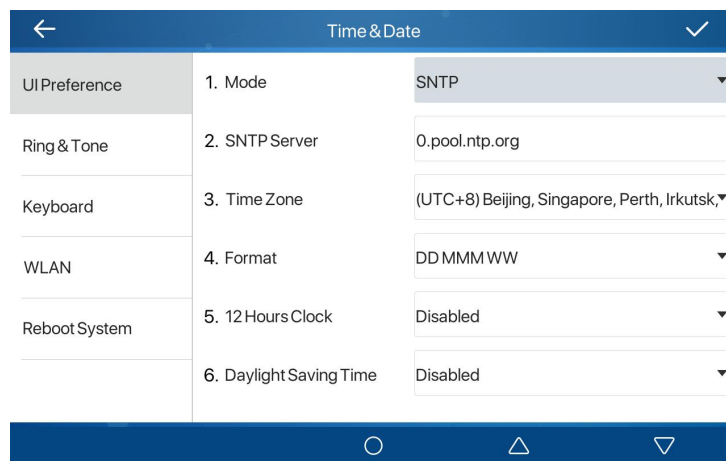

Picture 48 - set time & date

- Web end: Log in to the phone webpage and enter **[Device Settings]** >> **[Time/Date]** , as shown in the figure:

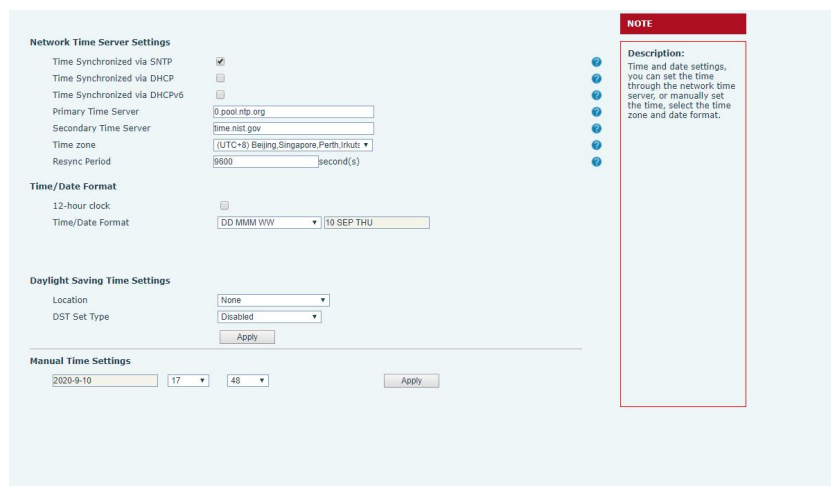


Picture 49 - Webpage set time &date


Table 14 - set time Parameters

Parameters	Description
Mode	Auto/Manual Auto: Enable network time synchronization via SNTP protocol, default enabled. Manual: User can modify data manually.
SNTP Server	SNTP server address
Time zone	Select the time zone
Time format	Select time format from one of the followings: <ul style="list-style-type: none"> ■ 1 JAN, MON ■ 1 January, Monday ■ JAN 1, MON ■ January 1, Monday ■ MON, 1 JAN ■ Monday, 1 January ■ MON, JAN 1 ■ Monday, January 1 ■ DD-MM-YY ■ DD-MM-YYYY ■ MM-DD-YY ■ MM-DD-YYYY ■ YY-MM-DD ■ YYYY-MM-DD
Separator	Choose the separator between year and moth and day
12-Hour Clock	Display the clock in 12-hour format
Daylight Saving Time	Enable or Disable the Daylight Saving Time

10.1.3 Screen

The user can adjust the brightness of phone screen in LCD in two ways.

- Slide down the outgoing status bar page in standby mode. Slide down again to adjust phone brightness conveniently.
- Enter the [Menu] >> [Basic Settings]>> [UI Preference]>>[Screen] and then adjust the brightness. Click  to save.

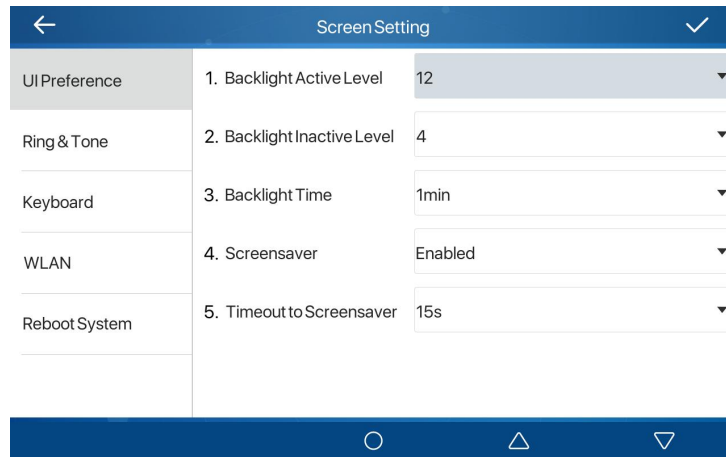

Picture 50- set screen Parameters

- Web interface: Enter [**Settings**] >> [**Advanced**], edit screen parameters, and click Submit to save

10.1.3.1 Brightness and backlight

Set the brightness level in the use state from 1 to 16.

Set the brightness level in energy saving mode from 0 to 16 optional.

Set the backlight time, the default is 1 minute, you can turn it off or choose 15 seconds/30 seconds/1min/2min/...../15h.


The screen saver can be turned on or off, and it is turned on by default.

Web interface: Enter [**Device Settings**] >> [**Advanced**], edit the screen parameters, and click Submit to save.



Picture 51- set screen on webpage

10.1.3.2 Screen Saver


- Press [**Screen Settings**] to find the [Screen Saver] button, turn on/off the screen saver, set the timeout time, the default is 120S, press  to save after finished.
- Return to standby after saving, screen saver will display after 120s as follows:



Picture 52 - Screensaver


10.1.4 Ring

When the device is in the default standby mode,

- Enter [**Menu**] >> [**Basic settings**].
- Enter [**Ring&Tone**] >> [**Ring**].
- Set ring type and save it by pressing .

10.1.5 Voice Volume

When the device is in the default standby mode

- Enter [**Menu**] >> [**Basic settings**].
- Enter [**Ring&Tone**] >> [**Voice Volume**]
- Set volume and save it by pressing .

10.1.6 Greeting words

The device is in the default standby state.

- Press [**Menu**] to find the [**Basic Settings**] button.
- Press the [**UI Preference**] button to find the [**Welcome**] button.

- Enter the setting interface, press to save after completion

Note: Only after the default line selection function is disabled, the welcome message can be displayed in the upper left corner of the standby

10.1.7 Reboot

When the device is in the default standby mode,

- Enter [Menu] >> [Basic setting] >> [Reboot] item.
- Click [Reboot] to indicate whether to restart the phone.
- Press to restart the phone or press to exit the prompt box to return to the configuration interface.


10.2 Phonebook

10.2.1 Local Contacts

Users can save contact information in the phone book and dial the contact's phone number directly in the phone book. The user can open the phone book by pressing the "PhoneBook" in the Menu or press the button "Contact" on the phone in the default main interface.

By default, the phone book is empty, and users can add manually or add contacts to the phone book from the call log (or cloud phone book).

NOTICE! The device can save up to total 1000 contact records.

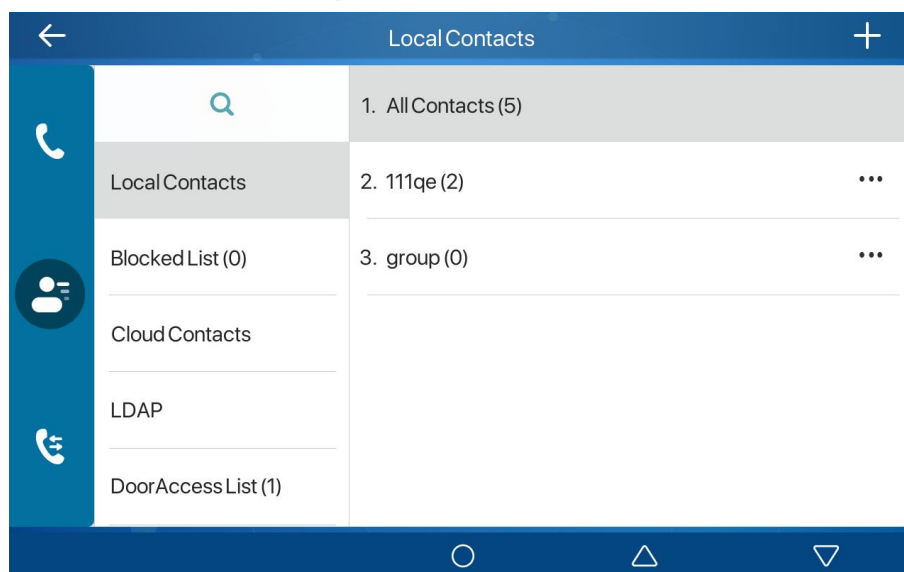


Picture 53 - Local Contacts

When there are contact records in the phone book, the contact records will be arranged in the alphabetic order. User may browse the contacts with up/down navigator keys. The

record indicator tells user which contact is currently focused.


10.2.1.1 Add / Edit / Delete Contact

Add a contact, click to enter the contact interface, select the first icon (contact icon, selected by default) and add the following contact information.

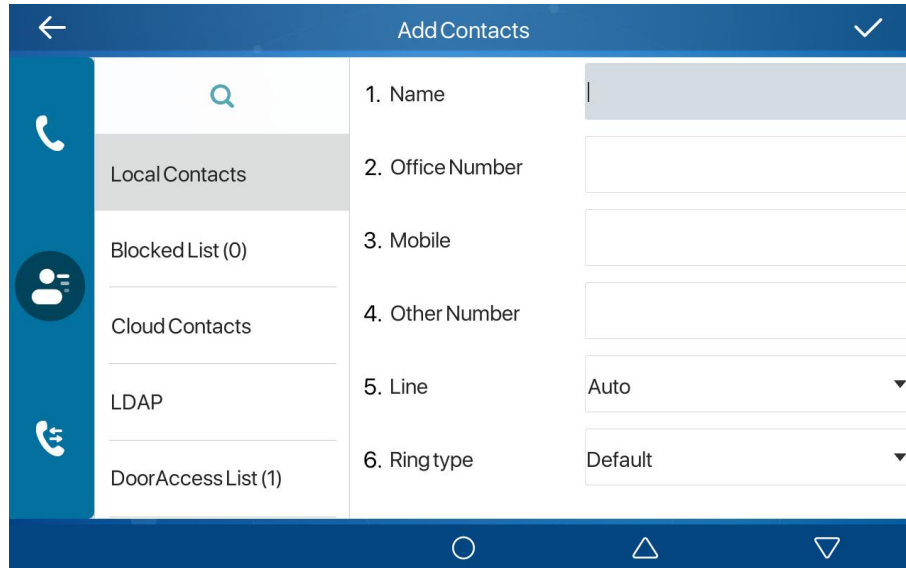

Picture 54- add contact

User can edit a contact by pressing button **...**.

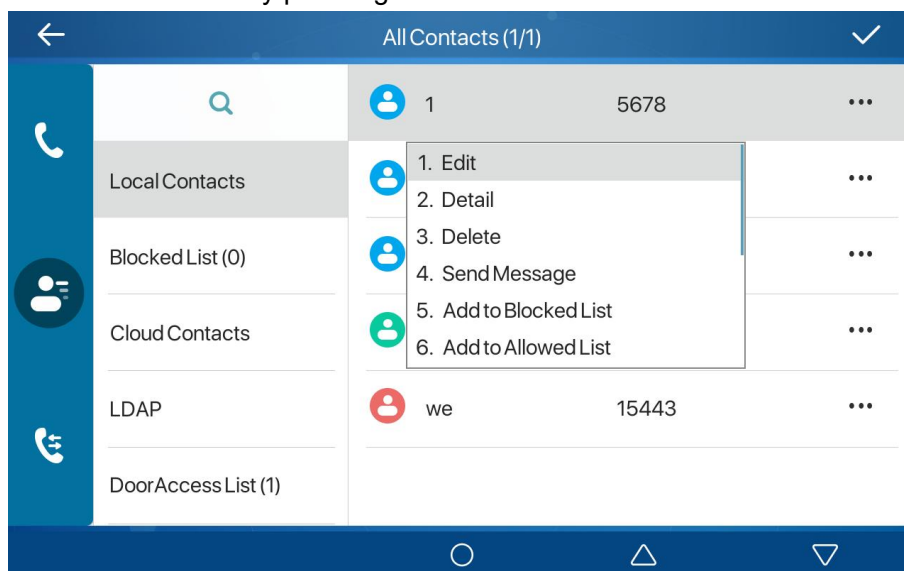

Picture 55- edit contact


Delete the contact, press **...** to delete the contact, when press it will prompt whether to delete, press **✓** to delete.

10.2.1.2 Add / Edit / Delete Group

By default, the group list is empty. Users can create their own group, edit group names, add or remove contacts from the group, and delete groups.

- Add group. Enter contact list interface, press **+** to create groups.
- Delete groups, press **...** to delete
- To edit the group, press **...** to edit.


The brackets indicate the total number of records in the group.

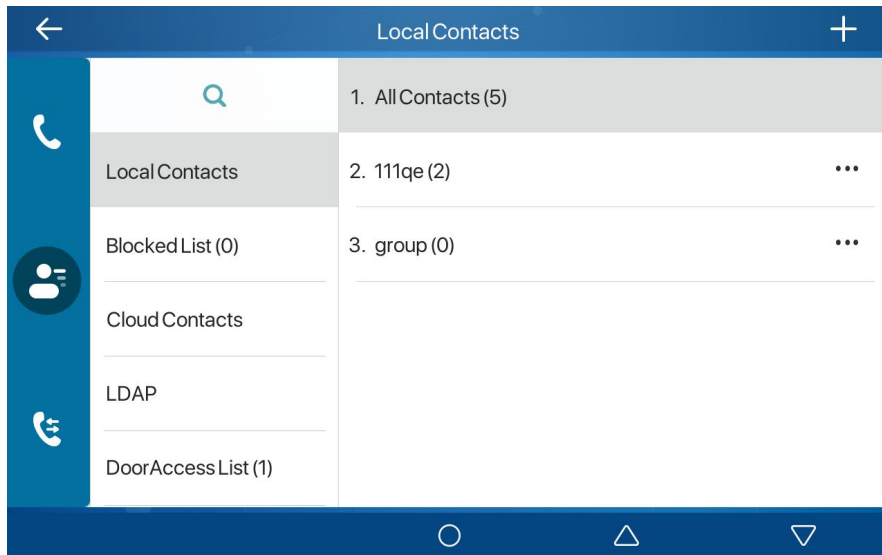




Picture 56 - groups

10.2.1.3 Add / Edit / Delete contact in Group

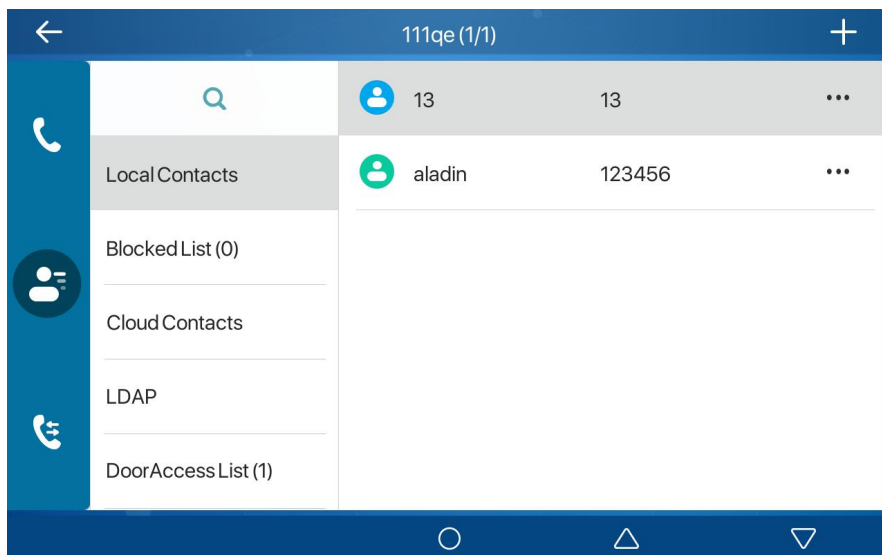User can browse the contact in group




Picture 57- browse the contact in group

When the user browses the contacts in the group, he can press  to enter the add contact interface, and then press  to save the contact, the contact will also be synchronized to the local phone book. You can also delete contacts in the group by press .

10.2.2 Blocked list


The device supports blacklist, such as the number added to the blacklist, the number of calls directly refused to the end, the end of the phone shows no incoming calls. (Blacklisted Numbers can be called out normally)

- There are multiple ways to add a number to Blacklist on the device. It can be added directly on **[Menu] >> [Phone book] >> [Blocked List]**.
- Select any number in the phone book (both local and network) for configuration addition.
- Select any number in the call log for configuration addition.

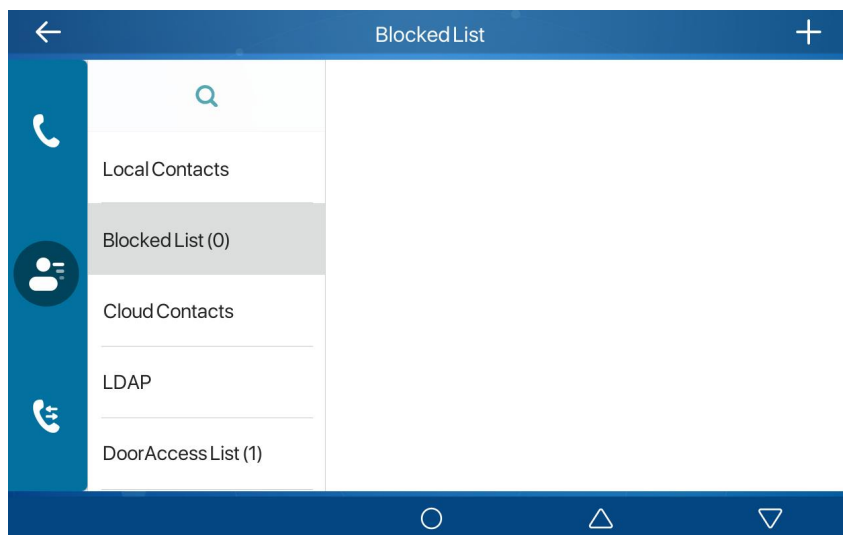

Picture 58- Add Blocked List

- There are various ways to add number to the blacklist on web page, which can be added in the **[Phone book] >> [Call list] >> [Restricted Incoming Calls]**.
- Select any number in the phone book (both local and network) for configuration addition.
- Select any number in the call log and add it to blocked list.

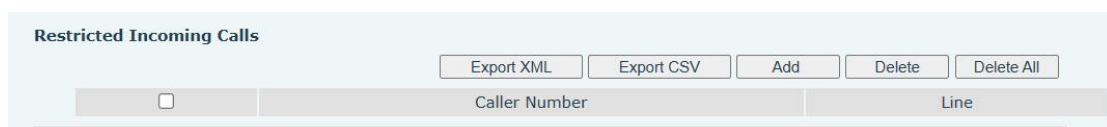

Picture 59 - Web Blocked List

10.2.3 Cloud Phone Book


10.2.3.1 Configure Cloud Phone book

Cloud phonebook allows user to configure the device by downloading a phonebook from a cloud server. This is convenient for office users to use the phonebook from a single source and save the effort to create and maintain the contact list individually. It is also a useful tool to synchronize his/her phonebook from a personal mobile phone to the device with Fanvil Cloud Phonebook Service and App which is to be provided publicly soon.

NOTICE! *The cloud phonebook is ONLY temporarily downloaded to the device each time when it is opened on the device to ensure the user get the latest phonebook. However, the downloading may take a couple seconds depending on the network condition. Therefore, it is highly recommended for the users to save important contacts from cloud to local phonebook for saving download time.*

Open cloud phonebook list, press [Menu] >> [PhoneBook] >> [Cloud Contacts] in phonebook screen.

TIPS! *The first configuration on cloud phone should be completed on Web page by selecting [PhoneBook] >> [Cloud Contacts]. The setting of addition/deletion on device could be done after the first setting on Web page.*

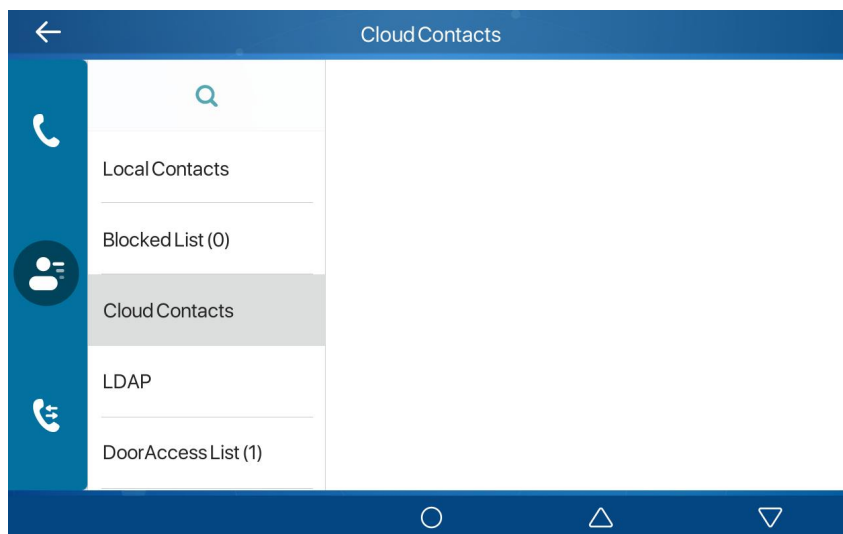

Picture 60 - Cloud Contacts

10.2.3.2 Downloading Cloud Phone book

In cloud phone book screen, user can open a cloud phone book by pressing the network phonebook. The device will start downloading the phone book. The user will be prompted with a warning message if the download fails, Once the cloud phone book is downloaded completely, the user can browse the contact list and dial the contact number same as in local phonebook.


10.3 Call Log

The device can store up to 1000 call log records and user can open the call logs to check all incoming, outgoing, and missed call records by pressing [**CallLog**] icon.

In the call logs screen, user may browse the call logs with up/down navigator keys.

Each call log record is presented with 'call type' and 'call party number / name'. User can check further call log detail by pressing icon and dial the number with pressing the call log, or add the call log number to phonebook with pressing Icon >> [**Add to Contact**].



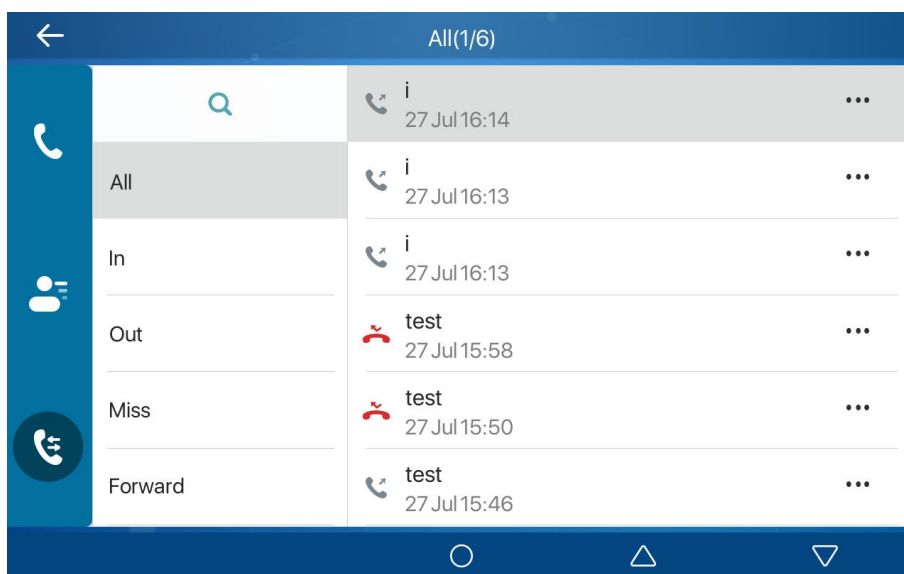

User can delete a call log by pressing [**Delete**] button and can clear all call logs by pressing [**Delete All**] button from .




Picture 61- call log

Users can also filter the call records of specific call types to narrow down the scope of

search records, and select a call record type by left and right navigation keys.


-  - Missed Call Log
-  - Incoming Call Log
-  - Outgoing Call Log
-  - Forward Call Log

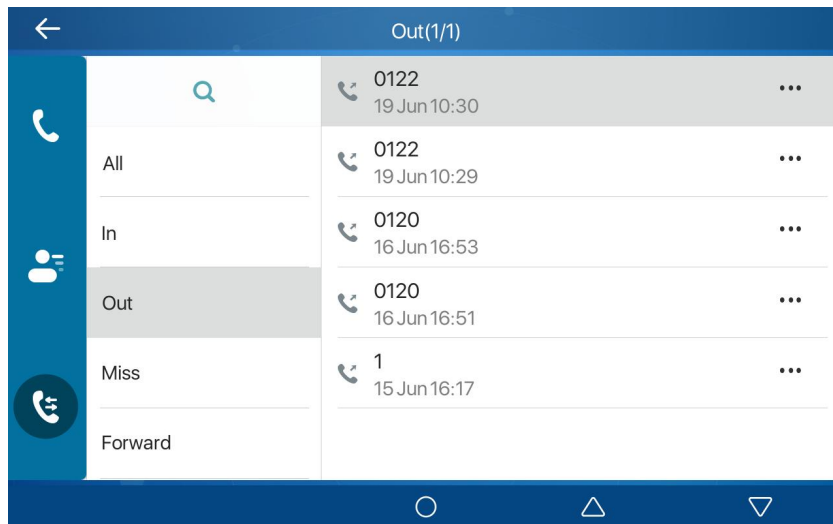

Picture 62- Filter callog types

10.4 Function Key

It shows 8 DSSKEY keys in standby mode on Screen, each of which can be customized.

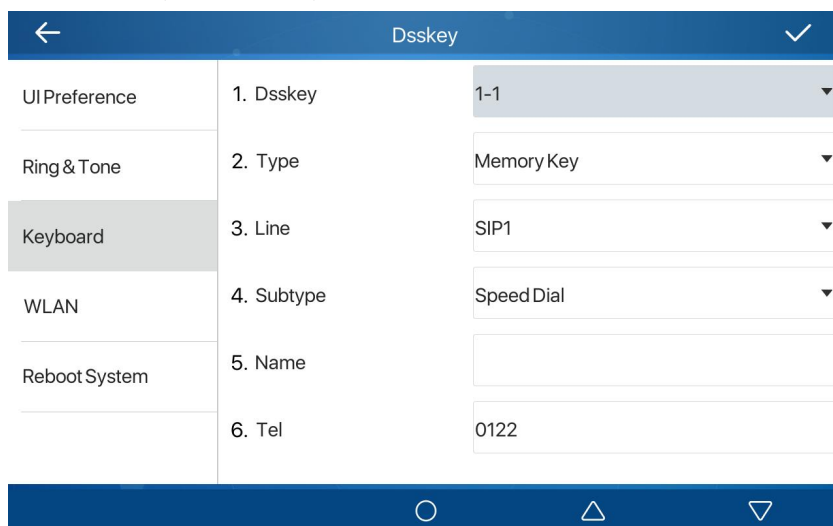

Picture 63- Dss key settings

The DSS Key could be configured as followings,

- ◆ Memory Key
 - Speed Dial/Intercom/BLF/Presence/Call Park/Call Forward (to someone)
- ◆ Line
- ◆ Key Event
 - MWI/DND/Hold/Transfer/Phonebook/Redial/Pickup/Call Forward (to specified line)/Headset/ SMS/Release
- ◆ DTMF
- ◆ URL
- ◆ BLF List Key
- ◆ MCAST Paging
- ◆ MCAST Listening
- ◆ Action URL

Moreover, user also can add the user-defined title for the DSS Keys, which is configured as Memory Key / Line / URL / MCAST Paging.

NOTICE! *User-defined title is up to 10 characters.*

More detailed information *refers to* [12.34 Function Key >> Side Key](#) and [6.2 ppendix ii](#)

10.5 Wi-Fi

The device supports wireless Internet access and has built-in Wi-Fi without external devices.

10.5.1 Wireless network


When the device is in the default standby state, search for wireless networks

Press menu **[Menu]** >> **[Basic Settings]** .

Click **[Basic Settings]** >> **[WLAN]**.




Click **[WLAN]** to enter the setting interface.

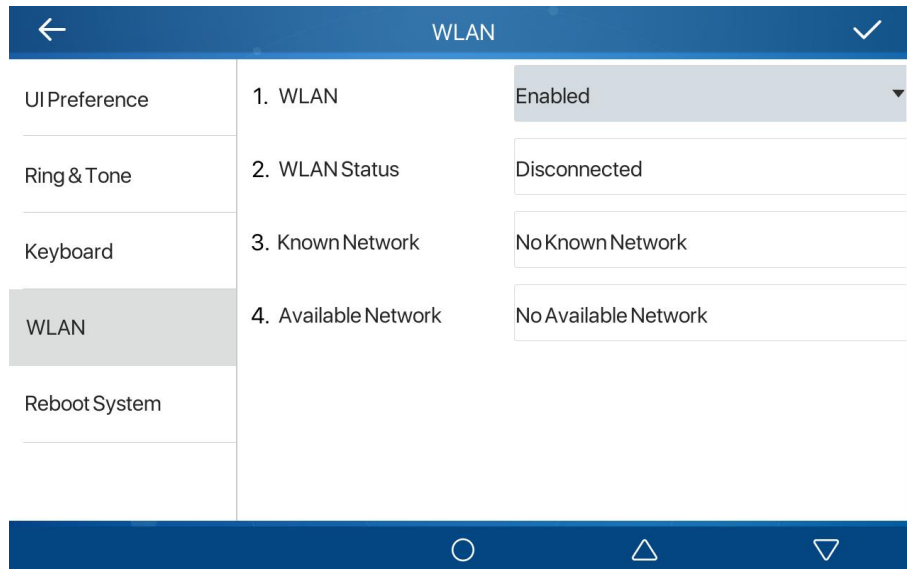
Turn on the wireless network, click to save, and the device will automatically search for wireless networks under the current network after enabling.



Picture 64 – WLAN Settings

To connect to the wireless network


- Select the available network, select wireless after entering, click  , enter username, password to connect
- After connection successful  will change to 

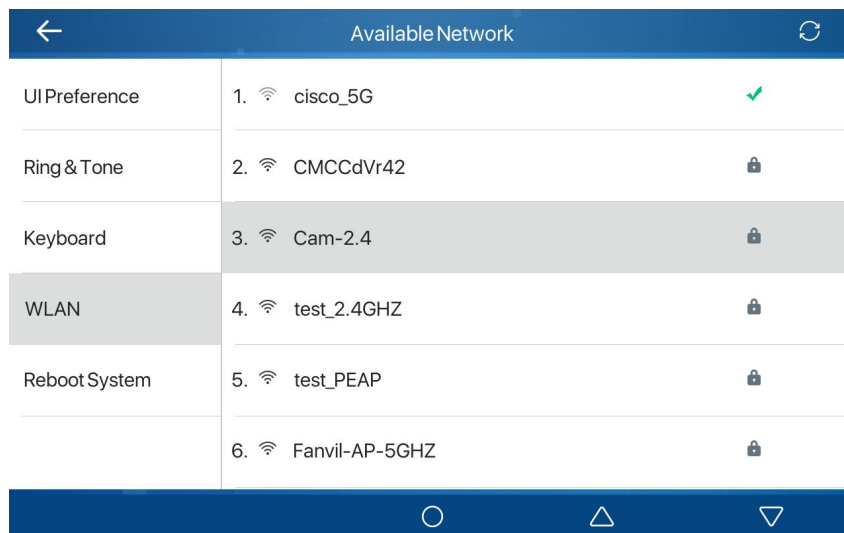

Picture 65-wireless network

Connection to wireless network

- Log in to the webpage, [Network]>>[Wi-Fi Settings]
- Configure Wi-Fi information, after the configuration is complete, click Add
- Turn on Wi-Fi and click Submit.

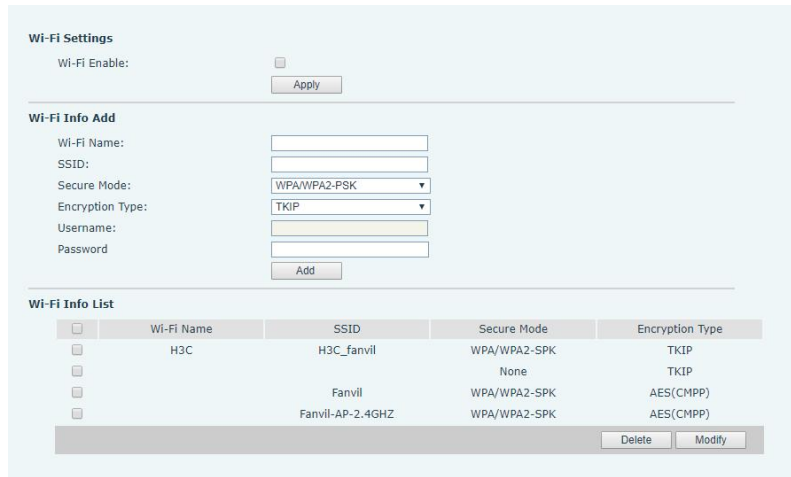

Picture 66- webpage wireless connect

10.6 Advanced


10.6.1 Line Configurations

Phone access [**Phone settings**] >> [**Accounts**] , select [**Basic**] to configure the SIP line on the phone.



Picture 67-line configurations

For users who want to configure more options, user should use web management portal to modify or [**More Register Settings**] in accounts on the individual line to configure those options.

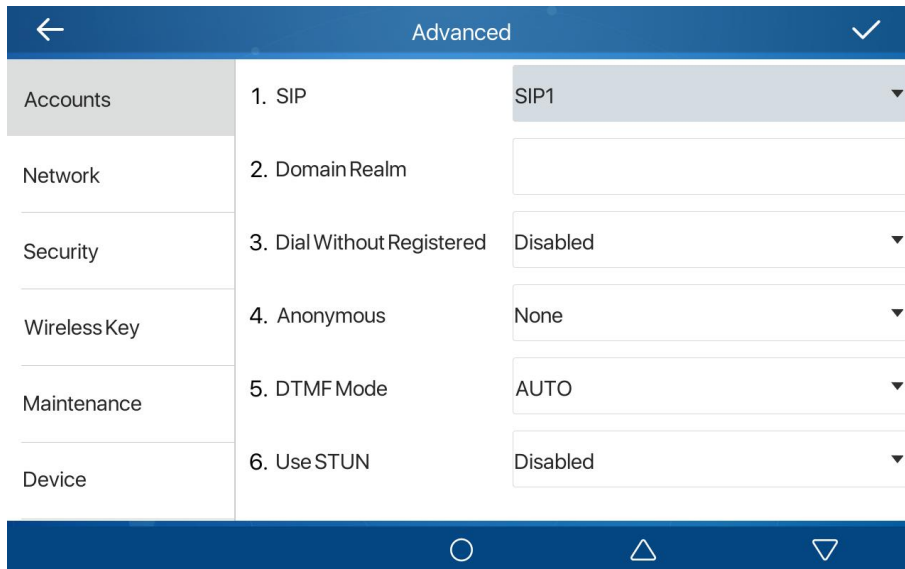

Picture 68 - Configure Advanced Line Options

10.6.2 Network Settings


10.6.2.1 Network Settings

Phone access **[Phone Settings]** >> **[Network]** >> **[Network]**, you can configure the SIP line on the phone.

■ IP Mode

There are 3 connection mode options: IPv4、IPv6、IPv4&IPv6


Click to switch IP mode

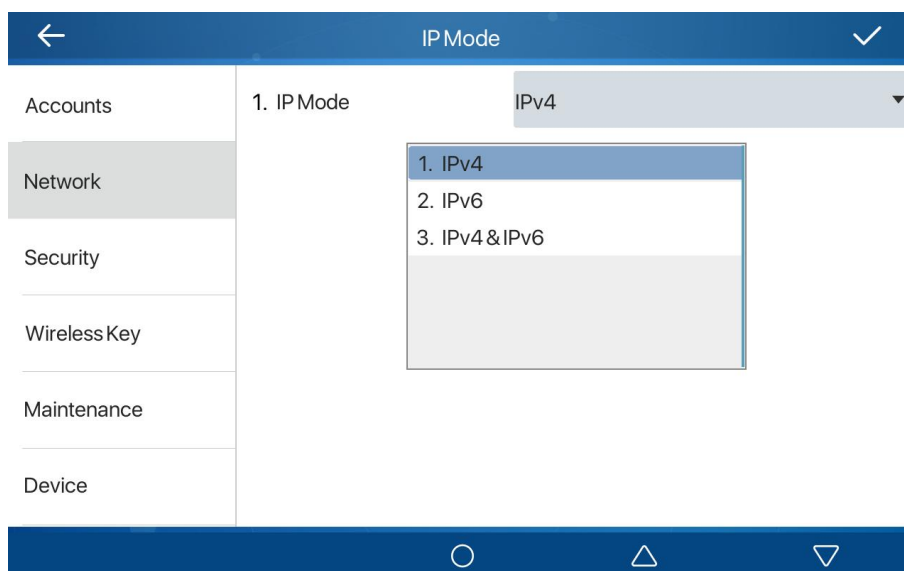

Picture 69 - IP Mode

■ IPv4


The network type has three modes: DHCP, PPPoE, and static IP.

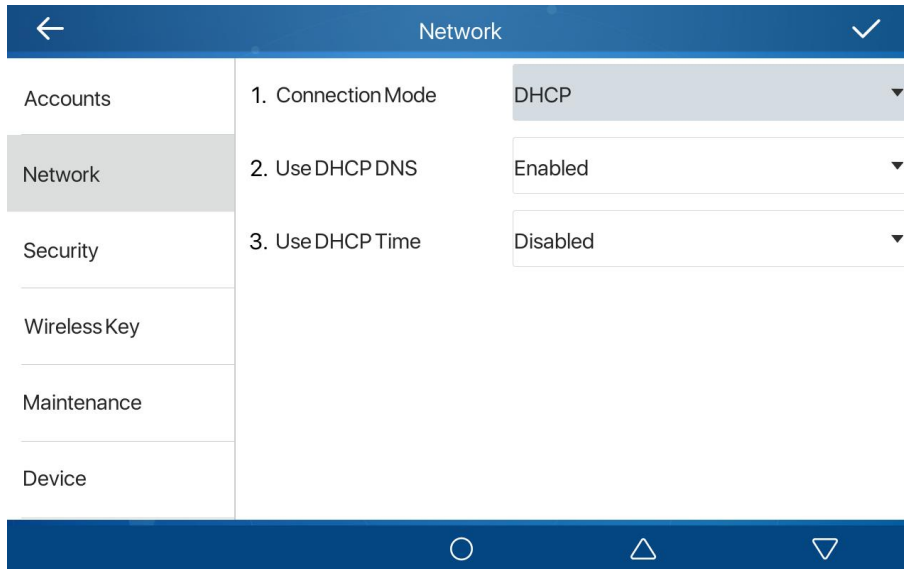

Picture 70 - DHCP network mode

When using DHCP mode, phone will get the IP address from DHCP server (router).

- Obtain DNS Server automatically: It is enabled as default. "Enable" means phone will get DNS address from DHCP server and "disable" means not.

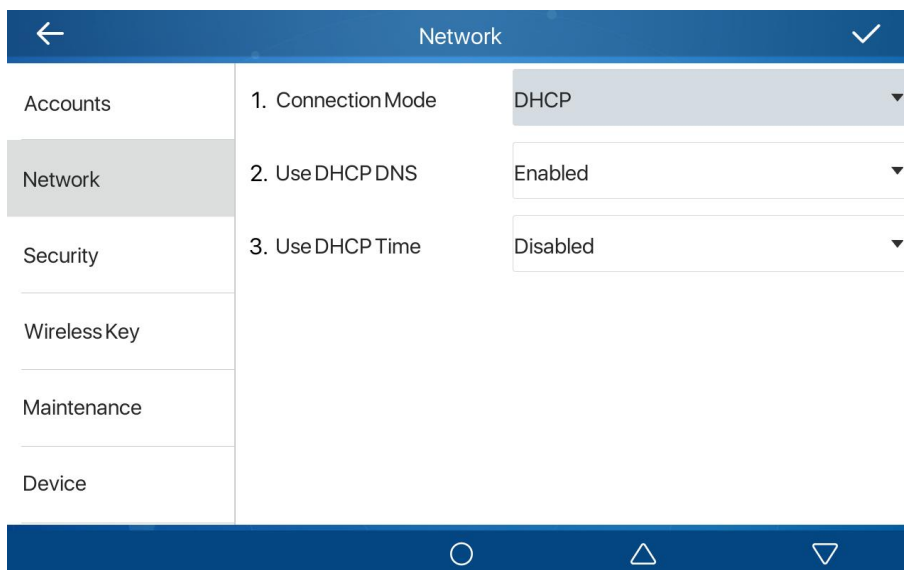

Picture 71 - PPPoE network mode

When the network is set to PPPoE, the PPPoE server issues the network IP address of the device.

User: Fill in the username of the PPPoE server.

Password: Fill in the password of the PPPoE server

Category	Setting	Value
Accounts	1. Connection Mode	Static IP
Network	2. IP Address	192.168.1.179
Security	3. Mask	255.255.255.0
WirelessKey	4. Gateway	192.168.1.1
Maintenance	5. Primary DNS	8.8.8.8
Device	6. Secondary DNS	202.96.134.133


Picture 72- Static IP network mode

When using Static IP mode, user must configure the IP address manually.

- IP Address: Phone IP address.
- Subnet Mask: sub mask of your LAN.
- IP Gateway: The gateway IP address. Phone could access the other network via it.
- Primary DNS: Primary DNS address. The default is 8.8.8.8, Google DNS server address.
- Secondary DNS: Secondary DNS. When primary DNS is not available, it will work.

■ **IPv6**

- The network type has two modes to : DHCP and static IP.
- DHCP network settings are the same as IPv4.
- The static IP network settings are compatible with IPv4, just need to fill in the prefix in IPv6 Prefix.
- IPv6 Prefix: IPv6 prefix digits, the prefix represents the network bit, similar to the IPv4 subnet mask.

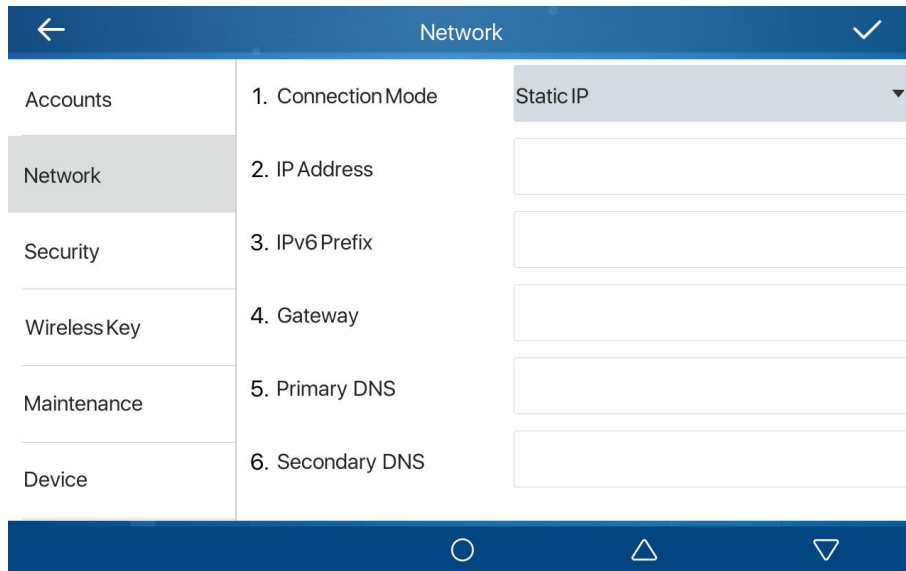

Picture 73- IPv6 Static IP network mode

10.6.2.2 QoS & VLAN

■ LLDP

Link Layer Discovery Protocol. LLDP is a vendor independent link layer protocol used by network devices for advertising their identity, capabilities to neighbors on a LAN segment.

Phone could use LLDP to find the VLAN switch or other VLAN devices and use LLDP to learn feature to apply the VLAN ID from VLAN switch to phone its self.

■ CDP

Cisco Discovery Protocol. CDP is a not-for-profit charity that runs the global disclosure system for investors, companies, cities, states and regions to manage their environmental impacts. According to the CDP, Cisco devices could share the OS version, IP address, hardware version and so on.

Table 15 - QoS & VLAN

Parameters	Description
LLDP setting	
Report	Enable LLDP
Interval	LLDP requests interval time
Learning	apply the learned VLAN ID to the phone configuration
QoS	
QoS Mode	configure SIP DSCP and audio DSCP

WAN VLAN	
WAN VLAN	WAN port VLAN configuration
LAN VLAN	
LAN VLAN	LAN port VLAN configuration
CDP	
CDP	CDP enable/disable , CDP interval time

10.6.2.3 VPN

Virtual Private Network (VPN) is a technology to allow device to create a tunneling connection to a server and becomes part of the server's network. The network transmission of the device may be routed through the VPN server.

For some users, especially enterprise users, a VPN connection might be required to be established before activate a line registration. The device supports two VPN modes, Layer 2 Transportation Protocol (L2TP) and OpenVPN.

The VPN connection must be configured and started (or stopped) from the device web portal.

■ L2TP

NOTICE! The device only supports non-encrypted basic authentication and non-encrypted data tunneling. For users who need data encryption, please use OpenVPN instead.

To establish a L2TP connection, users should log in to the device web portal, open page [Network] -> [VPN]. In VPN Mode, check the "Enable VPN" option and select "L2TP", then fill in the L2TP server address, Authentication Username, and Authentication Password in the L2TP section. Press "Apply" then the device will try to connect to the L2TP server.

When the VPN connection established, the VPN IP Address should be displayed in the VPN status. There may be some delay of the connection establishment. User may need to refresh the page to update the status.

Once the VPN is configured, the device will try to connect to the VPN automatically when the device boots up every time until user disable it. Sometimes, if the VPN connection does not established immediately, user may try to reboot the device and check if VPN connection established after reboot.

■ OpenVPN

To establish an OpenVPN connection, user should get the following authentication and configuration files from the OpenVPN hosting provider and name them as the following,


OpenVPN Configuration file:	client.ovpn
CA Root Certification:	ca.crt
Client Certification:	client.crt
Client Key:	client.key

User then upload these files to the device in the web page [Network] -> [VPN], Section OpenVPN Files. Then user should check “Enable VPN” and select “OpenVPN” in VPN Mode and click “Apply” to enable OpenVPN connection.

Same as L2TP connection, the connection will be established every time when system rebooted until user disable it manually.

10.6.2.4 Web Server Type

Configure the Web Server mode to be HTTP or HTTPS and will be activated after the reboot. Then user could use http/https protocol to access pone web page.

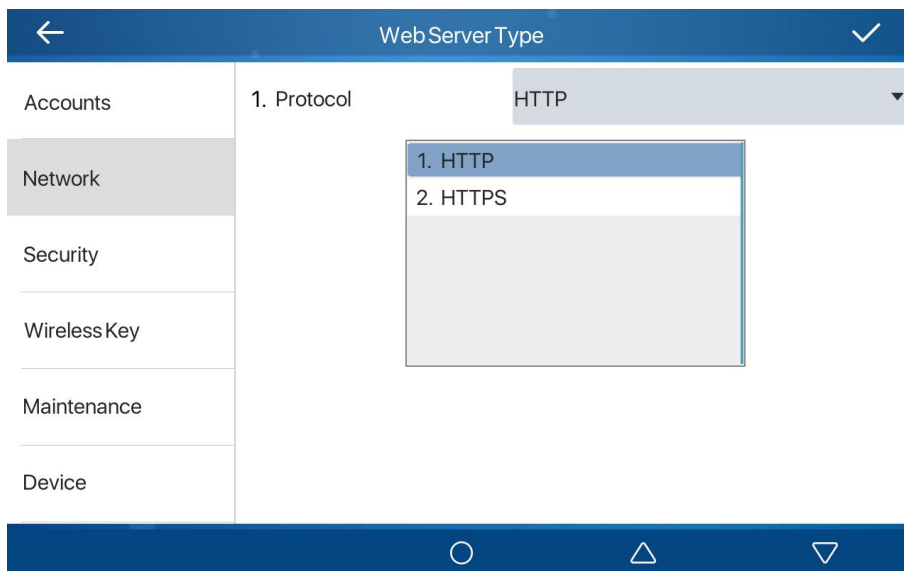


Picture 74 - The phone configures the web server type


10.6.3 Set The Secret Key

When the device is in the default standby mode,

- Select **[Menu]>> [Advanced]>> [Security]**
- Click **[Menu Password]** to change the password.

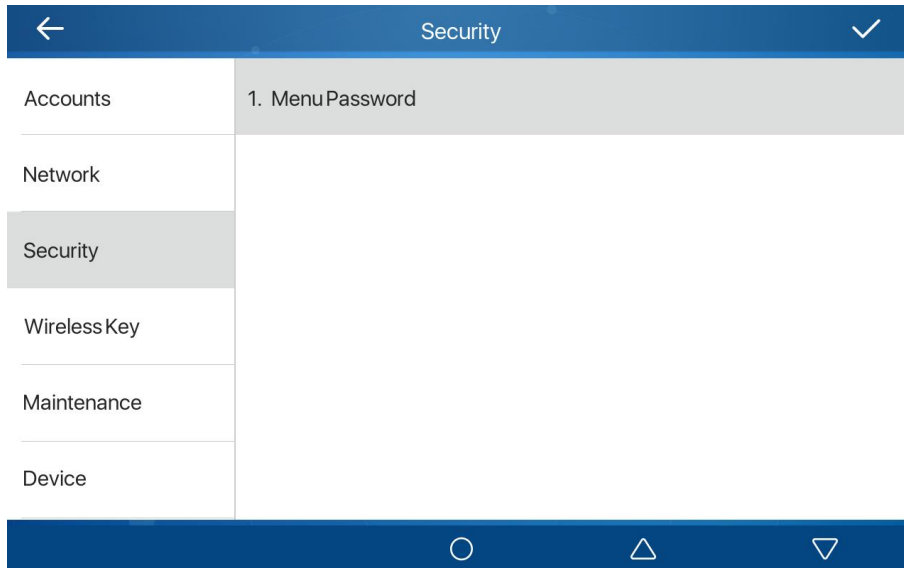

Picture 75 - Menu Password

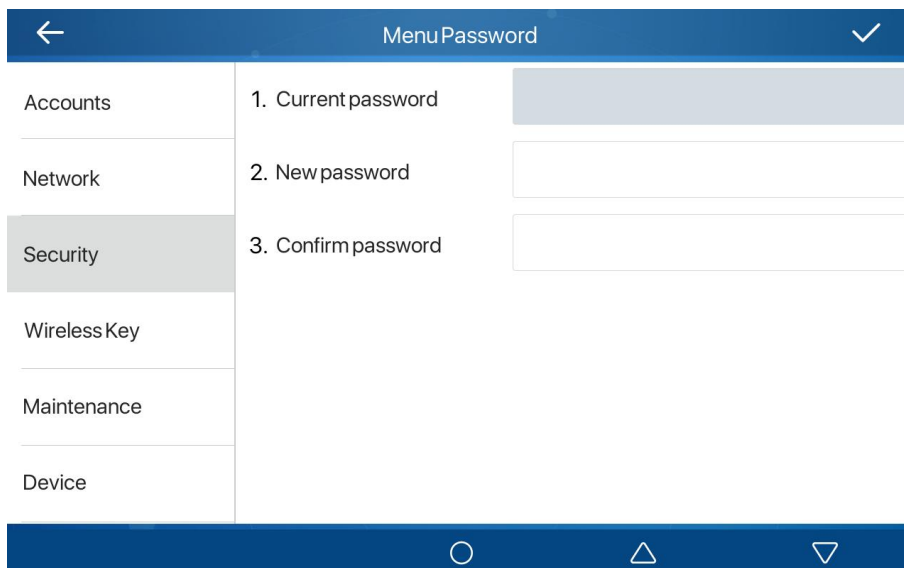

Picture 76 - Menu password setting

The menu password is the advanced setting password.

[Current password] If you not set password, the default password is 123.

[New password] The password you want to reset.

The password immediately takes effect after the setting is completed, and the password is not displayed in plain text after being entered.

10.6.4 Wireless Key

The device is in standby, and by pressing the configured wireless button, you can play a ringtone on the device or make outgoing calls through the registration line.

Web interface: Log in to the device webpage and enter the **[Function Keys]** >> **[Wireless Key]** page. A device can bind up to ten wireless buttons.

<input type="checkbox"/>	Index	Name	Addr ID	Type	Subtype	Value	Pairing Status	Operation
<input type="checkbox"/>	1		0000512e	None	AUTO		Paired	Disconnect
<input type="checkbox"/>	2			None	AUTO		No Paired	Binding
<input type="checkbox"/>	3			None	AUTO		No Paired	Binding
<input type="checkbox"/>	4			None	AUTO		No Paired	Binding
<input type="checkbox"/>	5			None	AUTO		No Paired	Binding
<input type="checkbox"/>	6			None	AUTO		No Paired	Binding
<input type="checkbox"/>	7			None	AUTO		No Paired	Binding
<input type="checkbox"/>	8			None	AUTO		No Paired	Binding
<input type="checkbox"/>	9			None	AUTO		No Paired	Binding
<input type="checkbox"/>	10			None	AUTO		No Paired	Binding


Picture 77 - Wireless key web settings

Device interface: Enter **[Menu]**>>**[Advanced]**>>**[Wireless Key]**.

	Index	Name	Pairing Status	Operation
Accounts	1.	Wp1	Paired	...
Network	2.	Wp2	No Paired	...
Security	3.	Wp3	No Paired	...
WirelessKey	4.	Wp4	No Paired	...
Maintenance	5.	Wp5	No Paired	...
Device	6.	Wp6	No Paired	...

Picture 78 - LCD wireless key settings


Select any of the wireless buttons 1-10 to scan binding or manually add wireless buttons, and then set the name, type, subtype, value, etc. of the wireless buttons.

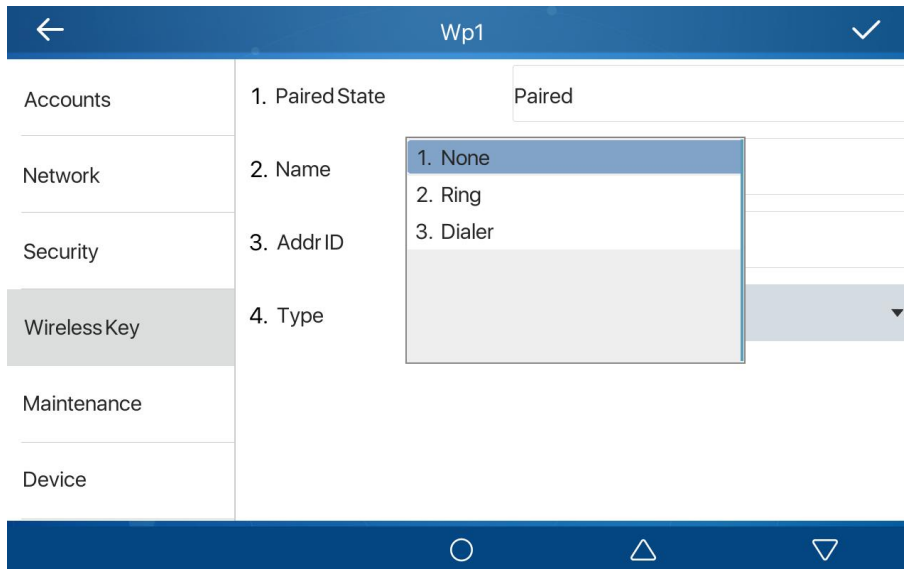

Picture 79 - LCD wireless key settings


10.6.5 Maintenance

Phone Webpage: Login and go to **[System]** >> **[Auto provision]**.

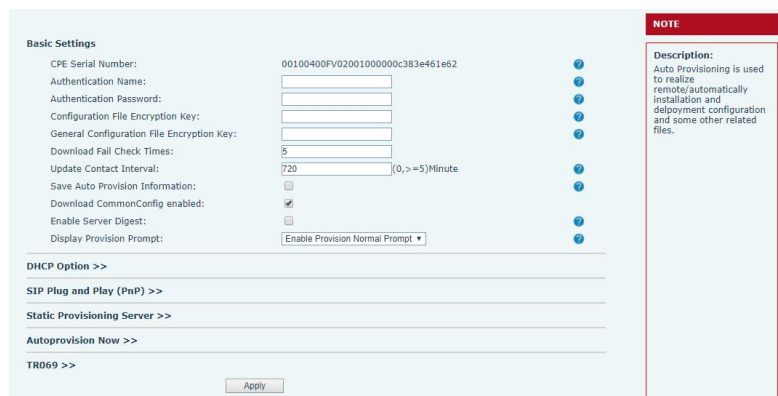

Picture 80- Page auto provision Settings

LCD: Enter **[Advanced]** >> **[Maintain]** >> **[Auto Provision]**.

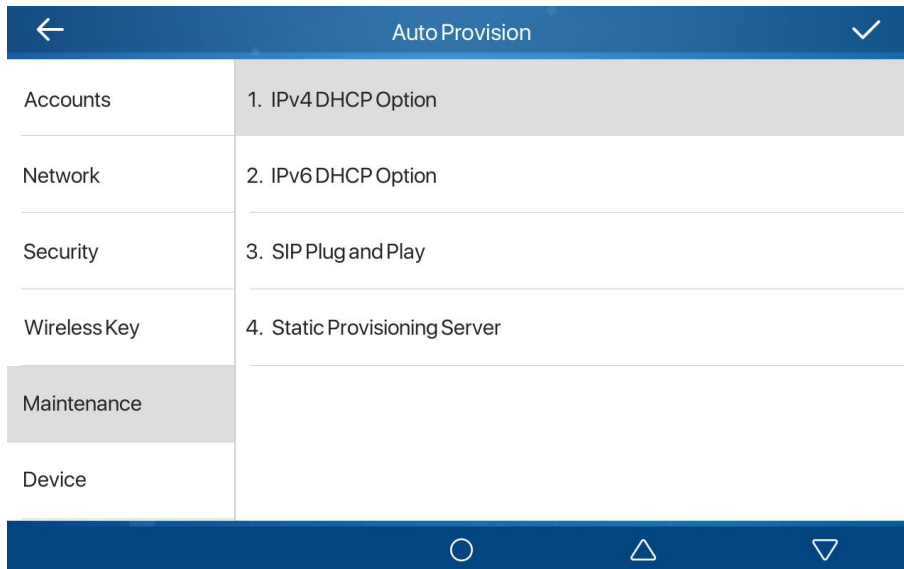

Picture 81- Phone auto provision settings

Fanvil devices support SIP PnP, DHCP options, Static provision, TR069.
Transferring protocol: FTP、 TFTP、 HTTP、 HTTPS

Table 16 - Auto Provision


Parameters	Description
Basic settings	
CPE Serial Number	Display the device SN
Authentication Name	The user name of provision server
Authentication Password	The password of provision server
Configuration File Encryption Key	If the device configuration file is encrypted , user should add the encryption key here
General Configuration File Encryption Key	If the common configuration file is encrypted, user should add the encryption key here
Download Fail Check Times	If there download is failed, phone will retry with the configured times.
Update Contact Interval	Phone will update the phonebook with the configured interval time. If it is 0, the feature is disabled.
Save Auto Provision Information	Save the HTTP/HTTPS/FTP user name and password. If the provision URL is kept, the information will be kept.
Download Common Config enabled	Whether phone will download the common configuration file.
Enable Server Digest	When the feature is enable, if the configuration of server is changed, phone will download and update.
DHCP Option	

Option Value	Configure DHCP option, DHCP option supports DHCP custom option DHCP option 66 DHCP option 43, 3 methods to get the provision URL. The default is Option 66.
Custom Option Value	Custom Option value is allowed from 128 to 254. The option value must be same as server define.
Enable DHCP Option 120	Use Option120 to get the SIP server address from DHCP server.
SIP Plug and Play (PnP)	
Enable SIP PnP	Whether enable PnP or not. If PnP is enable, phone will send a SIP SUBSCRIBE message with broadcast method. Any server can support the feature will respond and send a Notify with URL to phone. Phone could get the configuration file with the URL.
Server Address	Broadcast address. As default, it is 224.0.0.0.
Server Port	PnP port
Transport Protocol	PnP protocol, TCP or UDP.
Update Interval	PnP message interval.
Static Provisioning Server	
Server Address	Provisioning server address. Support both IP address and domain address.
Configuration File Name	The configuration file name. If it is empty, phone will request the common file and device file which is named as its MAC address. The file name could be a common name, \$mac.cfg, \$input.cfg. The file format supports CFG/TXT/XML.
Protocol Type	Transferring protocol type , supports FTP、TFTP、HTTP and HTTPS
Update Interval	Configuration file update interval time. As default it is 1, means phone will check the update every 1 hour.
Update Mode	Provision Mode. 1. Disabled. 2. Update after reboot. 3. Update after interval.
TR069	
Enable TR069	Enable TR069 after selection
ACS Server Type	There are 2 options Serve type, common and CTC.
ACS Server URL	ACS server address
ACS User	ACS server username (up to is 59 character)

ACS Password	ACS server password (up to is 59 character)
Enable TR069 Warning Tone	If TR069 is enabled, there will be a prompt tone when connecting.
TLS Version	TLS version (TLS 1.0, TLS 1.1, TLS 1.2)
INFORM Sending Period	INFORM signal interval time. It ranges from 1s to 999s
STUN Server Address	Configure STUN server address
STUN Enable	To enable STUN server for TR069

10.6.6 Firmware Upgrade

- Web page: Login phone web page, go to **[System] >> [Upgrade]**.

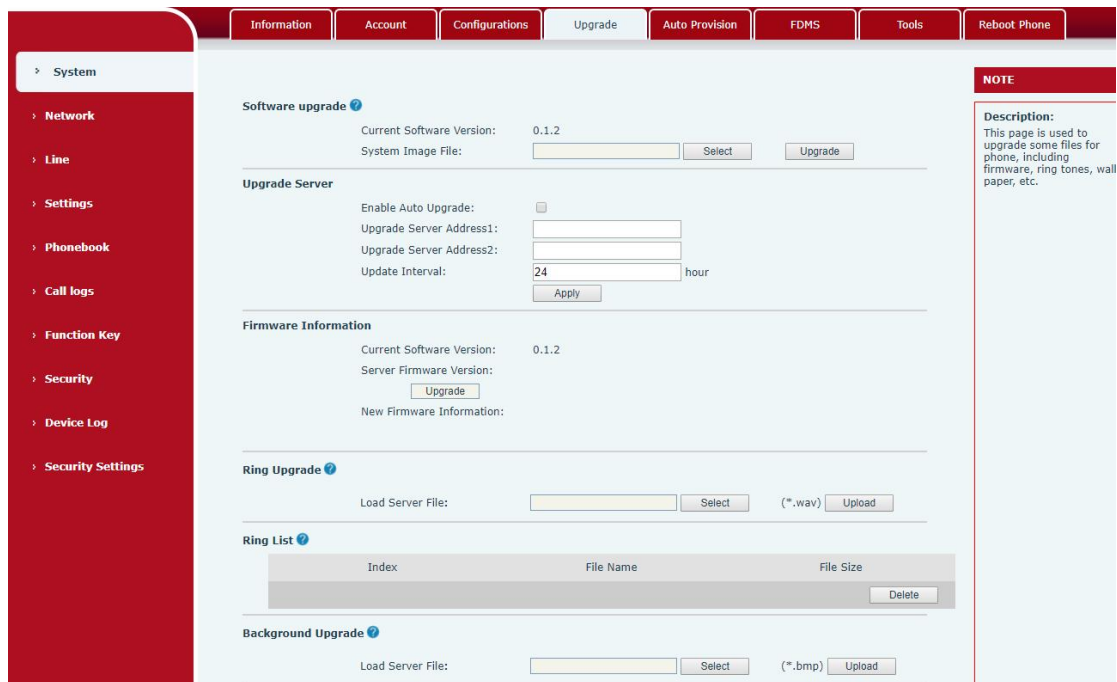

Picture 82- Web page firmware upgrade

- LCD interface: go to **[Menu] >> [Maintain] >> [Upgrade]** .

Table 17- firmware upgrade

Parameter	Description
Upgrade server	
Enable Auto Upgrade	Enable automatic upgrade, If there is a new version txt and new software firmware on the server, phone will show a prompt upgrade message after Update Interval.
Upgrade Server Address1	Set available upgrade server address.
Upgrade Server Address2	Set available upgrade server address.

Update Interval	Set Update Interval.
Firmware Information	
Current Software Version	It will show Current Software Version.
Server Firmware Version	It will show Server Firmware Version.
[Upgrade] button	If there is a new version txt and new software firmware on the server, the page will display version information and upgrade button will become available; Click [Upgrade] button to upgrade the new firmware.
New version description information	When there is a corresponding TXT file and version on the server side, the TXT and version information will be displayed under the new version description information.

- The file requested from the server is a TXT file called vendor_model_hw10.txt. It will be written as hw10 if no difference on hardware. All Spaces in the filename are replaced by underline.
- The URL requested by the phone is HTTP:// server address/vendor_Model_hw10.txt: The new version and the requested file should be placed in the download directory of the HTTP server, as shown in the figure:

名称	修改日期	类型	大小
fanvil_x6_hww1_0.txt	2018/9/11 17:57	文本文档	1 KB
fanvil_x6_hww1_1.txt	2018/9/11 17:57	文本文档	1 KB
fanvil_x6_hww1_2.txt	2018/9/11 17:57	文本文档	1 KB
fanvil_x6_hww1_3.txt	2018/9/11 17:57	文本文档	1 KB
x6-6904-P0.12.12-1.6.3-2502T2018-0...	2018/8/21 19:52	WinRAR 压缩文...	35,847 KB

- TXT file format must be UTF-8
- vendor_model_hw10.TXT The file format is as follows:
Version=1.6.3 #Firmware
Firmware=xxx/xxx.z #URL, Relative paths are supported and absolute paths are possible, distinguished by the presence of protocol headers.
BuildTime=2018.09.11 20:00
Info=TXT|XML

Xxxxx
Xxxxx
Xxxxx
Xxxxx
- After the interval of update cycle arrives, if the server has available files and


versions, the phone will prompt as shown below. Click [view] to check the version information and upgrade.

10.6.7 Factory Reset

The phone is in default standby mode.

- Press [**Advanced**] >> [**Maintain**]>> [**Factory Reset**].
- Press the [**Reset**] button to select the file to be cleared.

Press [**OK**] to clear after completion. When you select clear configuration file and clear all, the phone will restart automatically after clearing.

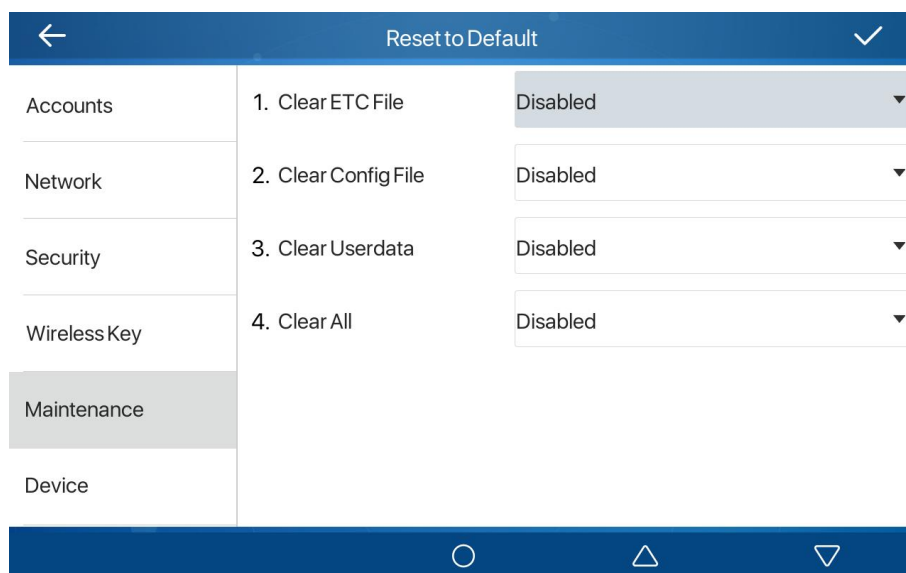

Picture 83 - Factory reset

11 Web Configurations

11.1 Web Page Authentication

The user can log into the web page of the phone to manage the user's phone information and operate the phone. Users must provide the correct user name and password to log in.

When logging in to the web page with the same or different IP, if the user name/password is entered incorrectly three times, the web page will be locked and you can log in again after 5 minutes.

A screenshot of a web login interface. It features a light blue background with a rounded rectangle containing the login form. The form has three input fields: 'User:' with a text box, 'Password:' with a text box, and 'Language:' with a dropdown menu set to 'English' and a small square checkbox to its right. Below these fields is a 'Login' button.

Picture 84- web login

When the user logs in for the first time, the default user name and password are used. If the password is not changed after login, the web page will prompt "The default password is being used, please change it". After clicking, you can jump to the modify password interface to modify the login password.



Picture 85 - default password prompt

11.2 System >> Information

User can get the system information of the device in this page including,

- Model
- Hardware Version
- Software Version
- Uptime

- Memory Information

And summarization of network status,

- Network Mode
- MAC Address
- IP
- Subnet Mask
- Default Gateway

Besides, summarization of SIP account status,

- SIP User
- SIP account status (Registered / Unapplied / Trying / Timeout)

11.3 System >> Account

On this page the user can change the password for the login page.

Users with administrator rights can also add or delete users, manage users, and set permissions and passwords for new users.

11.4 System >> Configurations

On this page, users with administrator privileges can view, export, or import the phone configuration, or restore the phone to factory Settings.

■ Clear Configurations

Select the module in the configuration file to clear.

SIP: account configuration.

AUTOPROVISION: automatically upgrades the configuration

TR069:TR069 related configuration

MMI: MMI module, including authentication user information, web access protocol, etc.

DSS Key: DSS Key configuration

■ Clear Tables

Select the local data table to be cleared, all selected by default.

■ Reset Phone

The phone data will be cleared, including configuration and database tables.

11.5 System >> Upgrade

Upgrade the phone software version, customized ringtone, background, logo, etc., can also be upgraded to delete the file. Ring tone support “.wav” format.

11.6 System >> Auto Provision

The Auto Provision settings help IT manager or service provider to easily deploy and manage the devices in mass volume. If these four methods are configured at the same time, the terminal will be automatically deployed in the order in which the configuration is obtained first, and the first obtained configuration will be used first.

Supporting protocols: FTP、 TFTP、 HTTP、 HTTPS.

11.7 System >> Tools


Tools provided in this page help users to identify issues at trouble shooting. Please refer to [12 Trouble Shooting](#) for more detail.

11.8 System >> Reboot Phone

This page can restart the phone.

11.9 Network >> Basic

This page allows users to configure network connection types and parameters.

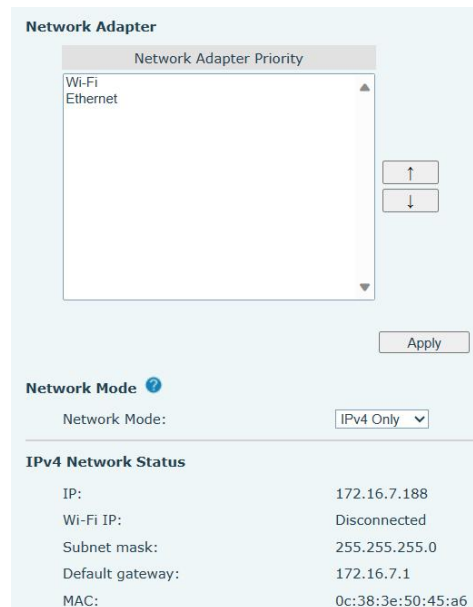

Picture 86- Network settings


Network priority: When wired and wireless are enabled at the same time, you can choose to use wired or wireless first.

Network type: you can view the information of wired/wireless network

11.10 Network >> Wi-Fi Settings

Only for i504W and i506W.

This page allows you to enable WiFi, add WiFi information, and manage the Wi-Fi info list.

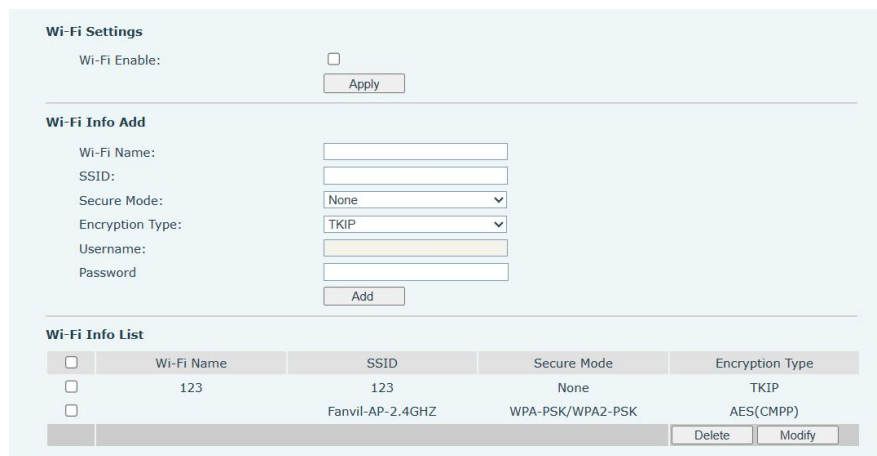

Picture 87 - Wi-Fi settings

Table 18 - Wi-Fi settings

Parameter	Description
-----------	-------------

Wi-Fi Settings	
Wi-Fi Enable	Enable/disable Wi-Fi
Wi-Fi Info Add	
Wi-Fi Name	Customize the name of Wi-Fi
SSID	The exact SSID of the Wi-Fi users want to add
Secure Mode	The secure mode of the Wi-Fi
Encryption Mode	The encryption mode of the Wi-Fi
Username	Under some secure mode, the user needs to input an username
Password	Input the password the Wi-Fi needs.

11.11 Network >> Service Port

This page provides settings for Web page login protocol, protocol port settings and RTP port.

Picture 88- Service Port Settings

Table 19 - Service port

Parameter	Description
Web Server Type	Reboot to take effect after settings. Optionally, the web page login is HTTP/HTTPS.
Web Logon Timeout	Default as 15 minutes, the timeout will automatically exit the login page, need to login again.
Web auto login	After the timeout does not need to enter a user name password, will automatically login to the web page.
HTTP Port	The default is 80. If you want system security, you can set ports other than 80. Such as :8080, webpage login: HTTP://ip:8080
HTTPS Port	The default is 443, the same as the HTTP port.
RTP Port Range Start	The value range is 1025 to 65535. The value of RTP port starts from the initial value set. For each call, the value of voice and

	video port is added 2.
RTP Port Quantity	Number of calls.

11.12 Network >> VPN

Users can configure VPN connections on this page. Please refer to [10.6.2.3 VPN](#) and get more details.

11.13 Line >> SIP

Configure the Line service configuration on this page.

Table 20- Line configuration on the web page

Parameter	Description
Register Settings	
Line Status	Display the current line status at page loading. To get the up to date line status, user has to refresh the page manually.
Activate	Whether the service of the line is activated
Username	Enter the username of the service account.
Authentication User	Enter the authentication user of the service account
Display Name	Enter the display name to be sent in a call request.
Authentication Password	Enter the authentication password of the service account
Realm	Enter the SIP domain if requested by the service provider
Server Name	Input server name.
SIP Server 1	
Server Address	Enter the IP or FQDN address of the SIP server
Server Port	Enter the SIP server port, default is 5060
Transport Protocol	Set up the SIP transport line using TCP or UDP or TLS.
Registration Expiration	Set SIP expiration date.
SIP Server 2	

Server Address	Enter the IP or FQDN address of the SIP server
Server Port	Enter the SIP server port, default is 5060
Transport Protocol	Set up the SIP transport line using TCP or UDP or TLS.
Registration Expiration	Set SIP expiration date.
SIP Proxy Server Address	Enter the IP or FQDN address of the SIP proxy server.
Proxy Server Port	Enter the SIP proxy server port, default is 5060.
Proxy User	Enter the SIP proxy user.
Proxy Password	Enter the SIP proxy password.
Backup Proxy Server Address	Enter the IP or FQDN address of the backup proxy server.
Backup Proxy Server Port	Enter the backup proxy server port, default is 5060.
Basic Settings	
Enable Auto Answering	Enable auto-answering, the incoming calls will be answered automatically after the delay time
Auto Answering Delay	Set the delay for incoming call before the system automatically answered it
Call Forward Unconditional	Enable unconditional call forward, all incoming calls will be forwarded to the number specified in the next field
Call Forward Number for Unconditional	Set the number of unconditional call forward
Call Forward on Busy	Enable call forward on busy, when the phone is busy, any incoming call will be forwarded to the number specified in the next field.
Call Forward Number for Busy	Set the number of call forward on busy .
Call Forward on No Answer	Enable call forward on no answer, when an incoming call is not answered within the configured delay time, the call will be forwarded to the number specified in the next field.
Call Forward Number for No Answer	Set the number of call forward on no answer.
Call Forward Delay for No Answer	Set the delay time of not answered call before being forwarded.
Transfer Timeout	Set the timeout of call transfer process.
Subscribe For Voice Message	Enable the device to subscribe a voice message waiting notification, if enabled, the device will receive notification from the server if there is

	voice message waiting on the server
Voice Message Number	Set the number for retrieving voice message
Voice Message Subscribe Period	Set the interval of voice message notification subscription
Enable Hotline	Enable hotline configuration, the device will dial to the specific number immediately at audio channel opened by off-hook handset or turn on hands-free speaker or headphone
Hotline Delay	Set the delay for hotline before the system automatically dialed it
Hotline Number	Set the hotline dialing number
Dial Without Registered	Set call out by proxy without registration
Enable Missed Call Log	If enabled, the phone will save missed calls into the call history record.
DTMF Type	Set the DTMF type to be used for the line
DTMF SIP INFO Mode	Set the SIP INFO mode to send '*' and '#' or '10' and '11'
Enable DND	Enable Do-not-disturb, any incoming call to this line will be rejected automatically
Subscribe For Voice Message	Enable the device to subscribe a voice message waiting notification, if enabled, the device will receive notification from the server if there is voice message waiting on the server
Use VPN	Set the line to use VPN restrict route
Use STUN	Set the line to use STUN for NAT traversal
Enable Failback	Whether to switch to the primary server when it is available.
Failback Interval	A Register message is used to periodically detect the time interval for the availability of the main Proxy.
Signal Failback	Multiple proxy cases, whether to allow the invite/register request to also execute failback.
Signal Retry Counts	The number of attempts that the SIP Request considers proxy unavailable under multiple proxy scenarios.
Codecs Settings	Set the priority and availability of the codecs by adding or remove them from the list.
Video Codecs	Select video code to preview video.

Advanced Settings	
Use Feature Code	When this setting is enabled, the features in this section will not be handled by the device itself but by the server instead. In order to control the enabling of the features, the device will send feature code to the server by dialing the number specified in each feature code field.
Enable DND	Set the feature code to dial to the server
Disable DND	Set the feature code to dial to the server
Enable Call Forward Unconditional	Set the feature code to dial to the server
Disable Call Forward Unconditional	Set the feature code to dial to the server
Enable Call Forward on Busy	Set the feature code to dial to the server
Disable Call Forward on Busy	Set the feature code to dial to the server
Enable Call Forward on No Answer	Set the feature code to dial to the server
Disable Call Forward on No Answer	Set the feature code to dial to the server
Enable Blocking Anonymous Call	Set the feature code to dial to the server
Disable Blocking Anonymous Call	Set the feature code to dial to the server
Call Waiting On Code	Set the feature code to dial to the server
Call Waiting Off Code	Set the feature code to dial to the server
Send Anonymous On Code	Set the feature code to dial to the server
Send Anonymous Off Code	Set the feature code to dial to the server
SIP Encryption	Enable SIP encryption such that SIP transmission will be encrypted
RTP Encryption	Enable RTP encryption such that RTP transmission will be encrypted
Enable Session Timer	Set the line to enable call ending by session timer refreshment. The call session will be ended if there is not new session timer event update received after the timeout period
Session Timeout	Set the session timer timeout period
Enable BLF List	Enable/Disable BLF List
BLF List Number	BLF List allows one BLF key to monitor the status of a group. Multiple BLF lists are supported.
Response Single Codec	If setting enabled, the device will use single codec in response to an incoming call request
BLF Server	The registered server will receive the subscription package from ordinary application

	<p>of BLF phone.</p> <p>Please enter the BLF server, if the sever does not support subscription package, the registered server and subscription server will be separated.</p>
Keep Alive Type	Set the line to use dummy UDP or SIP OPTION packet to keep NAT pinhole opened
Keep Alive Interval	Set the keep alive packet transmitting interval
Keep Authentication	Keep the authentication parameters from previous authentication
Blocking Anonymous Call	Reject any incoming call without presenting caller ID
User Agent	Set the user agent, the default is Model with Software Version.
Specific Server Type	Set the line to collaborate with specific server type
SIP Version	Set the SIP version
Anonymous Call Standard	Set the standard to be used for anonymous
Local Port	Set the local port
Ring Type	Set the ring tone type for the line
Enable user=phone	Sets user=phone in SIP messages.
Use Tel Call	Set use tel call
Auto TCP	Using TCP protocol to guarantee usability of transport for SIP messages above 1500 bytes
Enable Rport	Set the line to add rport in SIP headers
Enable PRACK	Set the line to support PRACK SIP message
DNS Mode	Select DNS mode, A, SRV, NAPTR
Enable Long Contact	Allow more parameters in contact field per RFC 3840
Enable Strict Proxy	Enables the use of strict routing. When the phone receives packets from the server, it will use the source IP address, not the address in via field.
Convert URI	Convert not digit and alphabet characters to %hh hex code
Use Quote in Display Name	Whether to add quote in display name, i.e. "Fanvil" vs Fanvil
Enable GRUU	Support Globally Routable User-Agent URI (GRUU)

Sync Clock Time	Time Sync with server
Enable Inactive Hold	With the post-call hold capture package enabled, you can see that in the INVITE package, SDP is inactive.
Caller ID Header	Set the Caller ID Header
Use 182 Response for Call waiting	Set the device to use 182 response code at call waiting response
Enable Feature Sync	Feature Sync with server
Enable SCA	Enable/Disable SCA (Shared Call Appearance)
CallPark Number	Set the CallPark number.
Server Expire	Set the timeout to use the server.
TLS Version	Choose TLS Version.
uaCSTA Number	Set uaCSTA Number.
Enable Click To Talk	With the use of special server, click to call out directly after enabling.
Enable Chgport	Whether port updates are enabled.
VQ Name	Open the VQ name for VQ RTCP-XR.
VQ Server	Open VQ server address for VQ RTCP-XR.
VQ Port	Open VQ port for VQ RTCP-XR.
VQ HTTP/HTTPS Server	Enable VQ server selection for VQ RTCP-XR.
Flash mode	Chose Flash mode, normal or SIP info.
Flash Info Content-Type	Set the SIP info content type.
Flash Info Content-Body	Set the SIP info content body.
PickUp Number	Set the scramble number when the Pickup is enabled.
JoinCall Number	Set JoinCall Number.
Intercom Number	Set Intercom Number.
Unregister On Boot	Whether to enable logout function.
Enable MAC Header	Whether to open the registration of SIP package with user agent with MAC or not.
Enable Register MAC Header	Whether to open the registration is user agent with MAC or not.
BLF Dialog Strict Match	Whether to enable accurate matching of BLF sessions.
PTime(ms)	Set whether to bring ptime field, default no.
SIP Global Settings	
Strict Branch	Set up to strictly match the Branch field.

Enable Group	Set open group.
Enable RFC4475	Set to enable RFC4475.
Enable Strict UA Match	Enable strict UA matching.
Registration Failure Retry Time	Set the registration failure retry time.
Local SIP Port	Modify the phone SIP port.
Enable uaCSTA	Set to enable the uaCSTA function.

11.14 Line >> SIP Hotspot

Please refer to [9.4 SIP Hotspot](#).

11.15 Line >> Dial Plan

Basic Settings

- Press # to invoke dialing
- Dial Fixed Length to Send
- Send after second(s)(3~30)
- Enable E.164

Picture 89- Dial plan settings

Table 21- Phone 7 dialing methods

Parameters	Description
Press # to invoke dialing	The user dials the other party's number and then adds the # number to dial out;
Dial Fixed Length	The number entered by the user is automatically dialed out when it reaches a fixed length
Timeout dial	The system dials automatically after timeout
Enable E.164	Please refer to e. 164 standard specification

Add dialing rules:

Picture 90 - Custom setting of dial - up rules

Table 22 - Dial - up rule configuration table

Parameters	Description
Dial rule	<p>There are two types of matching: Full Matching or Prefix Matching. In Full matching, the entire phone number is entered and then mapped per the Dial Peer rules.</p> <p>In prefix matching, only part of the number is entered followed by T. The mapping with then take place whenever these digits are dialed. Prefix mode supports a maximum of 30 digits.</p>
<p>Note: Two different special characters are used.</p> <ul style="list-style-type: none"> ■ x -- Matches any single digit that is dialed. ■ [] -- Specifies a range of numbers to be matched. It may be a range, a list of ranges separated by commas, or a list of digits. 	
Destination	Set Destination address. This is for IP direct.
Port	Set the Signal port, and the default is 5060 for SIP.
Alias	Set the Alias. This is the text to be added, replaced or deleted. It is an optional item.
<p>Note: There are four types of aliases.</p> <ul style="list-style-type: none"> ■ all: xxx – xxx will replace the phone number. ■ add: xxx – xxx will be dialed before any phone number. ■ del –The characters will be deleted from the phone number. ■ rep: xxx – xxx will be substituted for the specified characters. 	

Suffix	Characters to be added at the end of the phone number. It is an optional item.
Length	Set the number of characters to be deleted. For example, if this is set to 3, the phone will delete the first 3 digits of the phone number. It is an optional item.

This feature allows the user to create rules to make dialing easier. There are several different options for dialing rules. The examples below will show how this can be used.

Example 1: All Substitution -- Assume that it is desired to place a direct IP call to IP address 172.168.2.208. Using this feature, 123 can be substituted for 172.168.2.208.

Index	Digit Map	Call	Match to Send	Line	Alias Type: Number(length)	Suffix	Media
1	"123"	Out	No	SIP DIALPEER(172.16.1.15:5560)			Default

Picture 91- Dial rules table (1)

Example 2: Partial Substitution -- To dial a long distance call to Beijing requires dialing area code 010 before the local phone number. Using this feature 1 can be substituted for 010. For example, to call 62213123 would only require dialing 162213123 instead of 01062213123.

Index	Digit Map	Call	Match to Send	Line	Alias Type: Number(length)	Suffix	Media
1	"1T"	Out	No	Fanvil@SIP1	rep:010(1)		Default

Picture 92- Dial rules table (2)

Example 3: Addition -- Two examples are shown. In the first case, it is assumed that 0 must be dialed before any 11 digit number beginning with 13. In the second case, it is assumed that 0 must be dialed before any 11 digit number beginning with 135, 136, 137, 138, or 139. Two different special characters are used.

x -- Matches any single digit that is dialed.

[] -- Specifies a range of numbers to be matched. It may be a range, a list of ranges

separated by commas, or a list of digits.

11.16 Line >> Action Plan

Action Plan application: a technical implementation defined and designed by Fanvil for remote control and behavior linkage between Fanvil terminal equipment and other equipment. That is, when an event occurs on the Fanvil terminal, the terminal can perform an action, and this action is completed according to a Plan rule.

Table 23- action plan

Parameter	Description
Action	Default: when the rule is triggered, the phone displays video or converts multicast according to the RTSP URL or multicast address port set by the website. Video: when the rule is triggered, the phone accesses the RTSP URL configured by the URL to display the video. MCAST-XFER: when the rule is triggered, the phone converts the incoming call or multicast into multicast and sends it to the set multicast address port. Record: the phone automatically turns on their recording function when the rule is triggered. Mute: the phone will mute automatically When the rule is triggered. Answer: when the rule is triggered, the phone automatically answers the incoming call.
Number	Auxiliary phone number (support video)
Type	Early: trigger execution before call establishment. Connected: trigger execution after call establishment
Direction	For call mode, incoming/outgoing call
Line	Set up outgoing lines.
Username	Bind the user name of the IP camera.
Password	Bind IP camera password.
URL	Video streaming information or MCAST IP address.
User Agent	Set user agent information
MCAST Codec	The multicast code that is sent when the multicast conversion rule is triggered

11.17 Line >> Basic Settings

Set up the register global configuration.

Table 24- Set the line global configuration on the web page

Parameters	Description
STUN Settings	
Server Address	Set the STUN server address
Server Port	Set the STUN server port, default is 3478
Binding Period	Set the STUN binding period which can be used to keep the NAT pinhole opened.
SIP Waiting Time	Set the timeout of STUN binding before sending SIP messages
SIP P2P Settings	
Enable Auto Answering	Enable auto-answering, the incoming calls will be answered automatically after the delay time
Auto Answering Delay	Set the delay for incoming call before the system automatically answered it
DTMF Type	Set the DTMF type to be used for the line
DTMF SIP INFO Mode	Set the SIP INFO mode to send '*' and '#' or '10' and '11'
Enable Preview	After enabling it, preview will be turned on during IP calls.
Preview Mode	Set the preview mode to 18x or 2xx.
Call-ID Format	Default format is \$id@\$ip
Display name	The name that is displayed when the calling request is sent.
User name	Set the User name

11.18 Lines >> RTCP-XR

Log in to the phone webpage and visit the Line >> RTCP-XR >> VQ RTCP-XR Settings page.

VQ RTCP-XR Settings

VQ RTCP-XR Session Report:

VQ RTCP-XR Interval Report:

Period for Interval Report(5~99):

Warning threshold for Moslq(15~40):

Critical threshold for Moslq(15~40):

Warning threshold for Delay(10~2000):

Critical threshold for Delay(10~2000):

Display Report options on Web:

Picture 93 - VQ RTCP-XR Settings

Table 25 - VQ RTCP-XR parameters

参数	描述
VQ RTCP-XR Settings	
VQ RTCP-XR Session Report	Whether to enable VQ report sending in Session mode
VQ RTCP-XR Interval Report	Whether to enable VQ report sending in Interval mode
Period for Interval Report	The interval at which VQ reports are sent periodically
Warning threshold for Moslq	When the phone calculates that the Moslq value x10 is below the set threshold, it issues a warning report
Critical threshold for Moslq	When the phone calculates that the Moslq value x10 falls below the set threshold, a critical report is issued
Warning threshold for delay	When the phone calculates that the Moslq value x10 is higher the set threshold, it issues a warning report
Critical threshold for delay	When the phone calculates that the one-way delay is greater than the set threshold, a critical report is issued
Display report options on Web	Whether to display the VQ report data of the last call through the web

11.19 Hotspot Managed Extension

Log in to the phone webpage and visit the Line >> Hotspot Managed Extension page.

Managed Extension Settings
 Enable Manage Mode: Apply

Local Extension Information

Ext	Group	Registration Number	Edit
0	22;	7188;	<input type="button" value="Edit"/>

Managed Extension Information

<input type="checkbox"/>	Index	Extension Name	Mac	Model	SoftVersion	Ip	Ext	Group	Status	Registration Number	Edit
<input type="checkbox"/>	1		0c:38:3e:2f:7a:eb	i57A	1.0.0.29	172.16.7.121	1		OnLine	7188;	
<input type="checkbox"/>	2		00:a8:59:fb:19:19	DT-200U	2.6.10.215.39	172.16.1.217			OnLine		
<input type="checkbox"/>	3		0c:38:3e:3c:15:0c	FH-S01	T2.12.43.2	172.16.7.177	2		OnLine		

UnManaged Extension Information

<input type="checkbox"/>	Index	Mac	Model	SoftVersion	Ip	Ext	Status	Registration Number
<input type="checkbox"/>	1	0c:38:3e:2f:7a:eb	i57A	1.0.0.29	172.16.7.121	1	OnLine	7188;
<input type="checkbox"/>	2	00:a8:59:fb:19:19	DT-200U	2.6.10.215.39	172.16.1.217		OnLine	
<input type="checkbox"/>	3	0c:38:3e:3c:15:0c	FH-S01	T2.12.43.2	172.16.7.177	2	OnLine	

Hotspot Group Information

Picture 94 - Hotspot Managed Extension Settings

Table 26 - Hotspot managed extension parameters

Parameter	Description
Hotspot managed extension settings	
Enable Manage Mode	Enable the extension manage mode, and only devices added to the managed extension information can be used as extensions
Local Extension Information	
Ext	The extension number of the device
Group	The group to which the device belongs
Edit	Edit the device so that it belongs or does not belong to any group
Managed Extension Information	
Index	Displays the sequence number of the extension
Extension Name	Displays the name of the extension
Ext	The extension number of the extension
Status	Displays the current status of the extension
Registration Number	Displays the registration number of the extension
Edit	Click to edit the extension, group, line custom number, and other information of the extension
Add	Click Add to manually add extension information
ReProvision	You can upgrade the version to the selected extension
Add to Group	You can add selected extensions to selected groupings
Move To UnManaged	You can move selected extensions to the Unmanaged Extensions list
UnManaged Extension Information	

Move To Managed	You can move selected extensions to the Managed Extensions list
Hotspot Group Information	
Index	Displays the ordinal number of the group
Name	Displays the name of the group
Number	Displays the number of the group
Add	Click to add new group information

11.20 Device Settings >> Features

Configuration phone features.

Table 27- General function Settings

Parameters	Description
Basic Settings	
Enable Auto Onhook	The phone will hang up and return to the idle automatically at hands-free mode
Auto Onhook Time	Specify Auto Onhook time, the phone will hang up and return to the idle automatically after Auto Hand down time at hands-free mode, and play dial tone Auto Onhook time at handset mode
Enable Silent Mode	When enabled, the phone is muted, there is no ringing when calls, you can use the volume keys and mute key to unmute.
Disable Mute for Ring	When it is enabled, you can't mute the phone
Enable Default Line	If enabled, user can assign default SIP line for dialing out rather than SIP1.
Enable Auto Switch Line	Enable phone to select an available SIP line as default automatically
Default Ext Line	Select the default line to use for outgoing calls
Ban Outgoing	If you select Ban Outgoing to enable it, and you cannot dial out any number.
Hide DTMF	Configure the hide DTMF mode.
Enable CallLog	Select whether to save the call log.
Enable Restricted Incoming List	Whether to enable restricted call list.
Enable Allowed Incoming List	Whether to enable the allowed call list.
Enable Restricted Outgoing List	Whether to enable the restricted allocation list.

Enable Country Code	Whether the country code is enabled.
Country Code	Fill in the country code.
Area Code	Fill in the area code.
Enable Number Privacy	Whether to enable number privacy.
Match Direction	Matching direction, there are two kinds of rules from right to left and from left to right.
Start Position	Open number privacy after the start of the hidden location.
Hide Digits	Turn on number privacy to hide the number of digits.
Allow IP Call	If enabled, user can dial out with IP address
P2P IP Prefix	Prefix a point-to-point IP call.
Caller Name Priority	Change caller ID display priority.
Search path	Select the search path.
LDAP Search	Select from with one LDAP for search
Emergency Call Number	Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number
Restrict Active URI Source IP	Set the device to accept Active URI command from specific IP address. More details please refer to this link
Push XML Server	Configure the Push XML Server, when phone receives request, it will determine whether to display corresponding content on the phone which sent by the specified server or not.
Enable Pre-Dial	Disable this feature, user enter number will open audio channel automatically. Enable the feature, user enter the number without opening audio channel.
Enable Multi Line	If enabled, up to 10 simultaneous calls can exist on the phone, and if disabled, up to 2 simultaneous calls can exist on the phone.
Line Display Format	Custom line format: SIPn/SIPn: xxx/xxx@SIPn
Contact As White List Type	NONE/BOTH/DND White List/FWD White List
Block XML When Call	Disable XML push on call.
SIP notify	When enabled, the phone displays the information when it receives the relevant notify content.
Call Number Filter	Configure a special character ampersand (&) to

	filter out ampersand when you call a caller whose number is 78&9
Auto Resume Current	If the current path changes, the HOLD is lifted automatically
Call Timeout	Automatically hang up after how long the call lasts
Ring Timeout	Ring duration of an incoming call
Enable Push XML Auth	After this function is enabled, push xml requires user name and password authentication
Description	Description displayed on the IP scan tool
Tone Settings	
Enable Holding Tone	When turned on, a tone plays when the call is held
Enable Call Waiting Tone	When turned on, a tone plays when call waiting
Play Dialing DTMF Tone	Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled.
Play Talking DTMF Tone	Play DTMF tone on the device when user pressed a phone digits during taking, default enabled.
Auto Answer Tone	After this function is enabled, the automatic answer will hear a beep sound
Ring Back Tone	Customize the outgoing call tone
Busy Tone	Customize the hang-up tone
DND Settings	
DND Option	Select to take effect on the line or on the phone or close.
Enable DND Timer	Enable DND Timer, If enabled, the DND is automatically turned on from the start time to the off time.
DND Start Time	Set DND Start Time
DND End Time	Set DND End Time
Intercom Settings	
Enable Intercom	When intercom is enabled, the device will accept the incoming call request with a SIP header of Alert-Info instruction to automatically answer the call after specific delay.
Enable Intercom Mute	Enable mute mode during the intercom call
Enable Intercom Tone	If the incoming call is intercom call, the phone plays the intercom tone
Enable Intercom Barge	Enable Intercom Barge by selecting it, the phone auto answers the intercom call during a call. If the

	current call is intercom call, the phone will reject the second intercom call
Response Code Settings	
DND Response Code	Set the SIP response code on call rejection on DND
Busy Response Code	Set the SIP response code on line busy
Reject Response Code	Set the SIP response code on call rejection
Password Dial Settings	
Enable Password Dial	Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stands for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.
Encryption Number Length	Configure the Encryption Number length
Password Dial Prefix	Configure the prefix of the password call number
Notification Popups	
Display Missed Call Popup	No incoming call popup prompt after opening, no popup prompt when closing, open by default.
Display MWI Popup	Voice message popup prompt is not answered after opening, and it is opened by default if there is no popup prompt when closing.
Display SMS Popup	There is popup prompt for unread messages after opening, and there is no popup prompt when closing. It is opened by default.
Display Other Popup	When the handle is not hung back after opening, registration fails, IP acquisition fails, Tr069 connection fails and other abnormalities, there will be popup prompt when it is opened; otherwise, there will be no prompt when it is closed, and it will be opened by default.

11.21 Settings >> Media Settings

Change audio and video-related settings.

Table 28 - Voice settings

Parameter	Description
Codecs Settings	Select enable or disable voice encoding: G.711A/U, G.722, G.723.1, G.726-16/24/32/40, G.729AB, ILBC, opus, MPA
Video codec	
Video codec	Select to enable video encoding:H264
Media Setting	
Default Ring Type	Configure default ringtones. If no special ringtone is set for thephonenumber, the default ringtone will be used
Speakerphone Volume	Set the hands-free volume to 1-9
Speakerphone Ring Volume	Set the volume of hands-free ringtone to 0~9
Speakerphone SignalTone Volume	Set the volume of hands-free tone to 1~9
G.723.1 Bit Rate	5.3kb/s or 6.3kb/s is available
AMR Payload Type	Enter the AMR payload type, the value must be 96~127
DTMF Payload Type	Enter the DTMF payload type, the value must be 96~127.
Headset Mic Gain	Set the earphone's radio volume gain to fit different models of earphones.
Opus payload type	Set Opus load type, range 96~127.
OPUS Sample Rate	Set Opus sampling rate, including opus-nb (8KHz) and opus-wb (16KHz).
ILBC Payload Type	Set the ILBC Payload Type, the value must be 96~127.
ILBC Payload Length	Set the ILBC Payload Length
Enable VAD	Whether voice activity detection is enabled.
Enable Voice Mail Tone	When there is a new voice message message, the phone will start aspecial dial tone
Rtp Detection Timeout	If no RTP is received at the specified time, the call ends automatically
Enable the patting spring to generate Flash	Whether to turn on the plug spring to generate Flash
Video bit rate	Set the bit rate of video:64kbps, 192kbps, 256kbps, 384kbps, 512kbps, 768kbps, 1Mbps, 1.6Mbps, 2Mbps, 3Mbps, 4Mbps
Video frame rate	Set the video frame rate: 5fps, 10fps, 15fps, 20fps,

	25fps, 30fps
Video resolution	Set Video resolution: CIF,VGA,4CIF,720P,1080P
H.264 Payload Type	Set the H264 Payload Type , the value must be 96~127.
Video Direction	Sendonly: To set up a video call, the SDP package in the invite package is sendonly. Sendrecv: Set up a call. The SDP package in the invite package is sendrecv
RTP Control Protocol(RTCP) Settings	
CNAME user	Set CNAME user
CNAME host	Set CNAME host
RTP Settings	
RTP keep alive	Hold the call and send the packet after 30s
Alert Info Ring Settings	
Value	Set the value to specify the ring type.
Line	Select the line to use for incoming calls
Ring Type	1.wav-7.wav, Default, None

11.22 Settings >> MCAST

This feature allows user to make some kind of broadcast call to people who are in multicast group. User can configure a multicast DSS Key on the phone, which allows user to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address without involving SIP signaling. You can also configure the phone to receive an RTP stream from pre-configured multicast listening address without involving SIP signaling. You can specify up to 10 multicast listening addresses.

Table 29 - Multicast parameters

Parameters	Description
Enable Prio Chan	Define the priority of the active call, 1 is the highest priority, 10 is the lowest.
Enable Emer Chan	When enabled, channel 11 has the highest priority
Multicast Tone	Set the tone that plays when multicast is received

11.23 Settings >> Action

Action URL

Note! Action urls are used for IPPBX systems to submit phone events.

Action URL setting: Configure the URL to report the action to the server, for example, fill in the URL: http://InternalServer/FileName.xml? (Internal Server is the IP address of the server, File Name is the xml file name of the action reported on the storage device)

Picture 95 - Action Url web settings

11.24 Settings >> Time/Date

The user can configure the time Settings of the phone on this page.

o

Table 30 – Time & Date settings

Parameters	Description
Network Time Server Settings	
Time Synchronized via SNTP	Enable time-sync through SNTP protocol
Time Synchronized via DHCP	Enable time-sync through DHCP protocol
Primary Time Server	Set primary time server address
Secondary Time Server	Set secondary time server address, when primary server is not reachable, the device will try to connect to secondary time server to get time synchronization.
Time Zone	Select the time zone
Resync Period	Time of re-synchronization with time server

12-Hour Clock	Set the time display in 12-hour mode
Date Format	Select the time/date display format
Daylight Saving Time Settings	
Location	Choose your location, phone will set daylight saving time automatically based on the location
DST Set Type	Choose DST Set Type, if Manual, you need to set the start time and end time.
Fixed Type	Daylight saving time rules are based on specific dates or relative rule dates for conversion. Display in read-only mode in automatic mode.
Offset	The offset minutes when DST started
Month Start	The DST start month
Week Start	The DST start week
Weekday Start	The DST start weekday
Hour Start	The DST start hour
Minute Start	The DST start minute
Month End	The DST end month
Week End	The DST end week
Weekday End	The DST end weekday
Hour End	The DST end hour
Minute End	The DST end minute
Manual Time Settings	You can set your time manually

11.25 Setting >> Time plan

Users can configure the time plan to restart and upgrade phone

Table 31 - time plan

parameter	description
Type	Timed restart, timed upgrade, timed forward
Repetition period	Do not repeat: execute once within the set time range Daily: Perform this operation in the same time every day Weekly: Perform this operation in the same time of the week Monthly: Perform this operation in the same time of the Month
Effective time	Set the operation time
Forward Number	Set the SIP number for forwarding in the time range
Line	Set the line for forwarding in the time range

Time Plan List: [?](#)

<input type="checkbox"/> Index	Name	Type	Special configure	Repetition period	Effective time
<input type="checkbox"/> 1	Test	Timed upgrade		Weekly(SUN;)	20:00-23:00

Picture 96 - time plan

By setting a time pause list, users can set a date when time plan is temporarily unavailable.

Time Plan Pause:

Name:

Start time:

Stop time:

Time Plan Pause List:

<input type="checkbox"/> Index	Name	Start time	Stop time
<input type="checkbox"/> 1	Pause	2023/08/01	2023/08/15

Picture 97 - Time plan pause list

11.26 Settings >> Tone

This page allows users to configure a phone prompt.

You can either select the country area or customize the area. If the area is selected, it will bring out the following information directly. If you choose to customize the area, you can modify the button tone, call back tone and other information.

Tone Settings

Select Your Tone: [?](#)

Dial Tone: [?](#)

Ring Back Tone: [?](#)

Busy Tone: [?](#)

Congestion Tone: [?](#)

Call waiting Tone: [?](#)

Holding Tone: [?](#)

Error Tone: [?](#)

Stutter Tone: [?](#)

Information Tone: [?](#)

Dial Recall Tone: [?](#)

Message Tone: [?](#)

Howler Tone: [?](#)

Number Unobtainable Tone: [?](#)

Warning Tone: [?](#)

Record Tone: [?](#)

Auto Answer Tone: [?](#)

Picture 98 - Webpage Tone

11.27 Settings >> Advanced

User can configure the advanced configuration settings in this page.

- Screen Configuration.
 - Enable Energy Saving
 - Backlight Time
 - Screen Saver
- LCD Menu Password Settings.
- Configure Greeting Words

The greeting message will display on the top left corner of the LCD when the device is idle, which is limited to 16 characters. The default chars are 'Indoor Station'.

11.28 Phonebook >> Contact

User can add, delete, or edit contacts in the phonebook in this page. User can browse the phonebook and sorting it by name, phones, or filter them out by group.

To add a new contact, user should enter contact's information and press "Add" button to add it.

To edit a contact, click on the checkbox in front of the contact, the contact information will be copied to the contact edit boxes, press "Modify" button after finished editing.

To delete one or multiple contacts, check on the checkbox in front of the contacts wished to be deleted and click the "Delete" button, or click the "Clear" button with selecting any contacts to clear the phonebook.

User can also add multiple contacts into a group by selecting the group in the dropdown options in front of "Add to Group" button at the bottom of the contact list, selecting contacts with checkbox and click "Add to Group" to add selected contacts into the group. Similarly, user can select multiple users and add them into blacklist by click "Add to Blacklist" button.

11.29 Phonebook >> Cloud phonebook

Cloud Phonebook

User can configure up to 8 cloud phonebooks. Each cloud phonebook must be configured with an URL where an XML phonebook is stored. The URL may be based on HTTP/HTTPs or FTP protocol with or without authentication. If authentication is required,

user must configure the username and password.

To configure a cloud phonebook, the following information should be entered,

- Phonebook name (must)
- Phonebook URL (must)
- Access username (optional)
- Access password (optional)

LDAP Settings

The cloud phonebook allows user to retrieve contact list from a LDAP Server through LDAP protocols.

User must configure the LDAP Server information and Search Base to be able to use it on the device. If the LDAP server requests an authentication, user should also provide username and password.

To configure a LDAP phonebook, the following information should be entered,

- Display Title (must)
- LDAP Server Address (must)
- LDAP Server Port (must)
- Search Base (must)
- Access username (optional)
- Access password (optional)

Web page preview

Phone page supports preview of Internet phone directory and contacts

- After setting up the XML Voip directory or LDAP,
- Select **[Phone book]** >> **[Cloud phone book]** >> **[Cloud phone book]** to select the type.
- Click the set XML/LDAP to download the contact for browsing.

Cloud phonebook

XML ▾ XML1 XML2 XML3 XML4 BACK

Add to phonebook Add to Blacklist Add to Whitelist Previous Page: ▾ Next

<input type="checkbox"/>	Index	Name	Phone	Phone1	Phone2
					10 ▾ Entries per page

Manage Cloud Phonebooks ⓘ

Index	Cloud phonebook name	Cloud phonebook URL	Calling Line	Search Line	Authentication Name	Authentication Password
1	<input type="text"/>	<input type="text"/>	AUTO ▾	AUTO ▾	<input type="text"/>	<input type="text"/>
2	<input type="text"/>	<input type="text"/>	AUTO ▾	AUTO ▾	<input type="text"/>	<input type="text"/>
3	<input type="text"/>	<input type="text"/>	AUTO ▾	AUTO ▾	<input type="text"/>	<input type="text"/>
4	<input type="text"/>	<input type="text"/>	AUTO ▾	AUTO ▾	<input type="text"/>	<input type="text"/>

Apply

Picture 99 - Web cloud phone book Settings

11.30 Phonebook >> Call List

- **Restricted Incoming Calls:**

It is similar like a blacklist. Add the number to the blacklist, and the user will no longer receive calls from the stored number until the user removes it from the list.

Users can add specific Numbers to the blacklist or add specific prefixes to the blacklist to block calls with all Numbers with this prefix.

- **Allowed Incoming Calls:**

When DND is enabled, the incoming call number can still be called.

- **Restricted Outgoing Calls:**

Adds a number that restricts outgoing calls and cannot be called until the number is removed from the table.

11.31 Phonebook >> Web Dial

Use web pages for call, reply, and hang up operations.

11.32 Phonebook >> Advanced

Users can export the local phone book in XML, CSV, and VCF format and save it on the local computer.

Users can also import contacts into the phone book in XML, CSV, and VCF formats.

Attention! If the user imports the same phone book repeatedly, the same contact will be ignored. If the name is the same but the number is different, the contact is created again.

Users can delete groups or add new groups on this page. Deleting a contact group will not delete contacts in that group.

11.33 Call Logs

The user can browse the complete call record in this page. The call record can be sorted by time, call number, contact name or line, and the call record can be screened by call record type (incoming call, outgoing call, missed call, forward call).

The user can also save the number in the call record to his/her phone book or add it to the blacklist/whitelist.

Users can also dial the web page by clicking on the number in the call log.

Users can also download call records conditionally and save them locally.

11.34 Function Key >> Side Key

Function Key Settings

Dsskey Font Size: (0-5)

Dsskey

Key	Type	Name	Value			Subtype	Line	Media	PickUp Number
F 1	URL	open door	http://admin:028Fa	+	-	Open Door	AUTO	DEFAULT	
F 2	Memory Key		132	+	-	Speed Dial	7188@SIP1	DEFAULT	
F 3	URL		rtsp://admin:028Fa	+	-	IP Camera	AUTO	DEFAULT	
F 4	None			+	-	None	AUTO	DEFAULT	
F 5	None			+	-	None	AUTO	DEFAULT	
F 6	None			+	-	None	AUTO	DEFAULT	
F 7	None			+	-	None	AUTO	DEFAULT	
F 8	None			+	-	None	AUTO	DEFAULT	

Picture 100 - Function key settings

The function key font size can be adjusted, and the side keys' font size displayed on the screen will take effect immediately after submission.

The device has 8 side keys, and the user can configure each side key on the web page.

Table 32 - Side key settings

Parameters	Description
Function Key Settings	
Dsskey Font Size	0-5, the default is 1
Dsskey	
Memory Key	Speed Dial: You can call the number directly which you set. This feature is convenient for you to dial the number which you frequently dialed.

	Intercom: This feature allows the operator or the secretary to connect the phone quickly; it is widely used in office environments.
Line	It can be configured as a Line Key. User is able to make a call by pressing Line Key.
Key Event	User can select a key event as a shortcut to trigger. For example: MWI / DND / Release / Headset / Hold / etc.
DTMF	It allows user to dial or edit dial number easily.
URL	Open the specific URL directly.
BLF List	Displays the BLF list number for the subscription
MCAST Paging	Configure the multicast address and voice encoding that the user can press to initiate multicast
Action URL	The user can use a specific URL to make basic calls to the phone.
Mcast Listening	Configure the multicast address, when there is RTP, press the button to listen to the multicast

11.35 Function Key >> Advanced

■ IP Camera List

Support to discover the IP Camera in local area network. After scanning, you can bind the camera to the function key and press it to view video

The screenshot shows the 'IP Camera List' configuration page. It features a table with columns: Index, IP Camera, Username, Password, Preview, and Dsskey. Two camera entries are listed, each with a 'Main' and 'Sub' preview button and a 'Select Dsskey' button. 'Refresh' and 'Apply' buttons are located at the bottom of the table.

Picture 101- IP Camera List

■ Advanced Settings

The screenshot shows the 'Advanced Settings >>' configuration page. It includes the following settings: 'Call Switch Mode' set to 'Main-Secondary', 'Call Switched Time' set to '16' (5~50)second(s), 'First Number Start Time' set to '06:00' (00:00~23:59), and 'First Number End Time' set to '18:00' (00:00~23:59). An 'Apply' button is at the bottom.

Picture 102 - Advanced Settings Parameters

Table 33 - Advanced Settings Parameters

Parameters	Description
------------	-------------

Advanced Settings	
Call Switch Mode	Number 1 to call number 2 mode selection. <Main/Secondary >: If the first number is not answered within the set time, it will automatically switch to call the second number <Time Period>: The system time is automatically detected during the call, and the first number is called if it is within the time period of number 1, otherwise the second number is called
Call Switched Time	Set the time for number 1 to call number 2, which is 16 seconds by default
First Number Start Time	The start time of number 1 when defining the time period pattern. Default "06:00"
First Number End Time	The end time of number 1 when defining the time period pattern. The default is "18:00"

11.36 Function Key >> Wireless Key

Delete
Delete All

<input type="checkbox"/>	Index	Name	Addr ID	Type	Subtype	Value	Pairing Status	Operation
<input type="checkbox"/>	1		0000512e	None	AUTO		Paired	Disconnect
<input type="checkbox"/>	2			None	AUTO			Binding
<input type="checkbox"/>	3			None	AUTO			Binding
<input type="checkbox"/>	4			None	AUTO			Binding
<input type="checkbox"/>	5			None	AUTO			Binding
<input type="checkbox"/>	6			None	AUTO			Binding
<input type="checkbox"/>	7			None	AUTO			Binding
<input type="checkbox"/>	8			None	AUTO			Binding
<input type="checkbox"/>	9			None	AUTO			Binding
<input type="checkbox"/>	10			None	AUTO			Binding

Picture 103 - Web Wireless Key

Table 34 - Wireless Key Settings

Parameter	Description
Name	Set the wireless key name
Addr id	The unique identification ID of the wireless button, the addrids of each wireless button are unique (ID is displayed in hexadecimal, only numbers and letters are supported, special characters are not supported)
Type	Select the function type of wireless button, including: Ring, Dial number
Subtype	When Type is Ring, the subtype displays the ringtone selection.

	When Type is Dial number, the subtype displays Line selection.
Value	When Type is Dial number, the value can be edited to speed dial number;
Pairing Status	Displays pairing status, including: pairing, paired, disconnected
Operation	Bind or disconnect the button

Pairing methods:

- Enter the addr ID manually

Log in to the IP address of the device, enter the [Function Key] >> [Wireless Key] to add a key information.

When adding a key, the user needs to fill in the name, addr id (unique identification of different keys), type, subtype, and value (optional) of the new key. After filling in, click Bind or Submit, and the device will be paired with the Addr ID device. If the status shows Paired, the new key is successfully added.

- Automatically scan addr IDs

Log in to the IP address of the device and go to [Function Key] >> [Wireless Key].

Add a new button: Click Binding in the list, the device will enter the pairing state. Open the wireless key and press it shortly, the pairing status of the device web page changes to Paired and displays the addr ID of the key, indicating that the pairing was successful.

If the pairing is not successful after pressing the key once, you can try to press the wireless key several times to avoid pairing failure due to information loss.

After successful pairing, users can fill in the name, type, subtype, and value (optional) of the new button, and click Apply to save them.

11.37 Application >> Doorphone Settings

Log in to the device webpage, enter [Application] >> [Doorphone Settings], and add, delete, or modify the password of the doorphone .

Picture 104 - Doorphone Settings

11.38 Security >> Web Filter

The user can set up a configuration management phone that allows only machines with a certain network segment IP access.

Picture 105- Web Filter settings

Start IP Address	End IP Address	Option
172.16.12.14	172.16.12.24	Modify Delete

Picture 106- Web Filter Table

Add and remove IP segments that are accessible; Configure the starting IP address within the start IP, end the IP address within the end IP, and click **[Add]** to submit to take effect. A large network segment can be set, or it can be divided into several network segments to add. When deleting, select the initial IP of the network segment to be deleted from the drop-down menu, and then click **[Delete]** to take effect.

Enable web page filtering: configure enable/disable web page access filtering; Click the "apply" button to take effect.


Note: if the device you are accessing is in the same network segment as the phone, please do not configure the filter segment of the web page to be outside your own network segment, otherwise you will not be able to log in the web page.

11.39 Security >> Trust Certificates

Set whether to open license certificate and general name validation, select certificate

module.

You can upload and delete uploaded certificates.

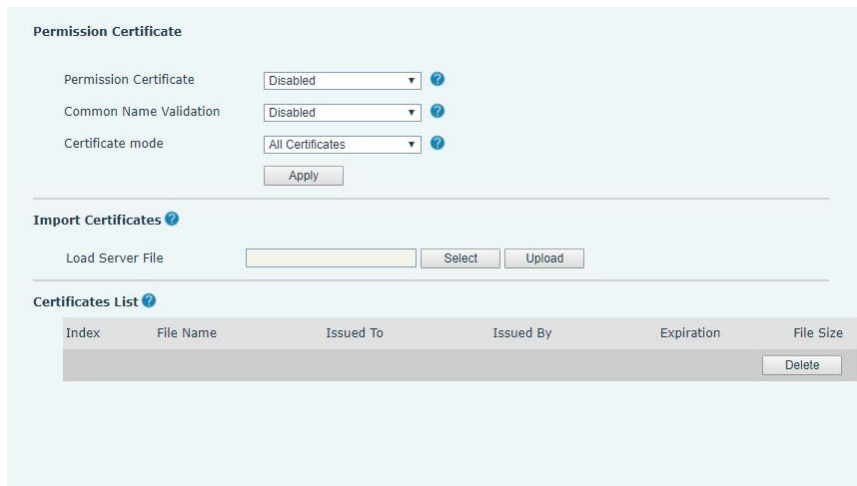


Picture 107 - Certificate of settings

11.40 Security >> Device Certificates

Select the device certificate as the default and custom certificate.

You can upload and delete uploaded certificates.

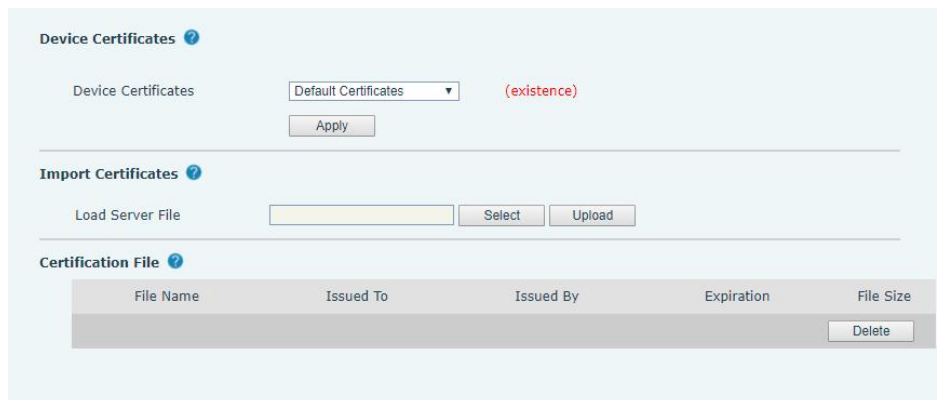

Picture 108 - Device certificate setting

11.41 Device Log >> Device Log

You can grab the device log, and when you encounter an abnormal problem, you can send the log to the technician to locate the problem. See [12.6 Get log information](#).

11.42 Security Settings

Basic Settings

Ringtone Duration: (1~600)s

Input & Tamper Server Address: ?

Message:

Input Settings >>

Input Alarm Settings >>

Input1:

Input Name: Input Reset Code:

Triggered By: Input Duration: (0.00~3600)s

Triggered Action: Send SMS Dss Key: Triggered Ringtone:

Input2:

Input Name: Input Reset Code:

Triggered By: Input Duration: (0.00~3600)s

Triggered Action: Send SMS Dss Key: Triggered Ringtone:

Input3:

Input Name: Input Reset Code:

Triggered By: Input Duration: (0.00~3600)s

Triggered Action: Send SMS Dss Key: Triggered Ringtone:

Input4:

Picture 109 - Input and output settings

Table 35 - Input/Output parameters

Parameter	Description
Basic Settings	
Ringtone Duration	The duration of the alarm bell
Input & Tamper Server Address	Configure the remote response server address (including the remote response server address and the alarm trigger server address). When the input port is triggered, a short message will be sent to the server, the message format is as follows: Alarm_Info:Description=i51;SIP User=;Mac=0c:38:3e:39:6a:b6;IP=172.16.7.189;port=Input
Input Settings	
Input	Enable or disable the input port
Triggered By	When low level trigger (closed trigger) is selected, the detection input port (low level) closed trigger.
	When the high level trigger (disconnect trigger) is selected, the detection input port (high level) disconnect trigger.
Input Name	Set the name and type of the sensor connected to the input port
Input Reset Code	After the alarm is triggered, enter the reset code to stop the alarm
Input Duration	If it is triggered for a specified period of time, perform actions

	such as sending short messages
Send SMS	Enable or disable the input port to send messages to the server
Dss Key	When set to dsskey1 or dsskey2, trigger dsskey to make a call, the default is none
Triggered Ringtone	Support ringtone selection
Output Settings	
Triggered by DTMF Ring tone	Select the DTMF trigger ring tone.
Triggered by URI Ringtone	Select the URI trigger ring tone.
Triggered By SMS Ringtone	Select the SMS trigger ring tone.
Triggered By Dsskey Ringtone	Select the Dsskey trigger ring tone.
Output	Enable or disable Output
Standard Status	When choosing the low level trigger (NO: normally open), when meet the trigger condition, trigger the NO port disconnected.
	When choosing the high level trigger (NC: normally close), when meet the trigger condition, trigger the NC port close.
Output Duration	Set the output change duration time, the default is 5 seconds.
Trigger by input	When the input port meets the trigger condition, the output port will trigger (the port level time changes, controlled by <output duration>).
Trigger by DTMF	Enable or disable trigger by DTMF. The device will check the received DTMF sent by remote device, if it matches the DTMF trigger code, the device will trigger corresponding output port.
DTMF Trigger Code	Input the DTMF trigger code, default value is 1234.
DTMF Reset Code	Input the DTMF reset code, default value is 4321.
Reset By	Reset the output port mode by duration or state. By duration: Reset the output port status when output duration occurs. By state: Reset the output port status when device's call state changes.
Trigger by URI	Enable or disable trigger by URI. User can send commands from remote device or server to i16SV series device, if the command is correct, then device will trigger corresponding output port.
Trigger Message	Input trigger message for trigger by URI mode.

Rest Message	Input reset message for trigger by URI mode.
Trigger by SMS	<p>Enable or disable trigger by SMS.</p> <p>User can send ALERT command to i16SV series device, if the command is correct, then device will trigger corresponding output port.</p>
Trigger SMS	Input trigger message for trigger by SMS mode.
Reset SMS	Input reset message for trigger by SMS mode.
Trigger by Input	Select the input port, when the input port meets the trigger condition, the output port will be triggered (The Port level time change, By < Output Duration > control)
Trigger By Call state	<p>Select call state to trigger the output port, options are:</p> <p>Talking: When the device's talking status changes, trigger the output port.</p> <p>Ringing: When the device's ringing status changes, trigger the output port.</p> <p>Calling: When the device's calling status changes, trigger the output port.</p>
Trigger By DssKey	Enable or disable trigger by dsskey. If any of the dsskey is selected, when the dsskey application performs, the output port will be triggered.
Triggered Hangup	Trigger the output port after hanging up
Hangup Delay	Hang up trigger delay, default 5 seconds

12 Trouble Shooting

When the phone is not in normal use, the user can try the following methods to restore normal operation of the phone or collect relevant information and send a problem report to Fanvil technical support mailbox.

12.1 Get Device System Information

Users can get information by pressing the **[Menu]** >> **[Status]** option in the phone. The following information will be provided:

The network information

Device information (model, software and hardware version), etc.

12.2 Reboot Device

Users can reboot the device from menu, **[Menu]** >> **[Basic]** >> **[Reboot System]**, and press **[Reboot]**, Or, simply remove the power supply and restore it again.


12.3 Reset Device to Factory Default

Reset Device to Factory Default will erase all user's configuration, preference, database and profiles on the device and restore the device back to the state as factory default.

To perform a factory default reset, user should press **[Menu]** >> **[Advanced]**>> **[Maintenance]**. Then choose **[Factory Reset]** and choose the information you want to clear. The device will be rebooted into a clean factory default state.

12.4 Screenshot


If there is a problem with the phone, the screenshot can help the technician locate the function and identify the problem. In order to obtain screen shots, log in the phone webpage **[System]** >> **[Tools]**, and you can capture the pictures of the main screen (you can capture them in the interface with problems).

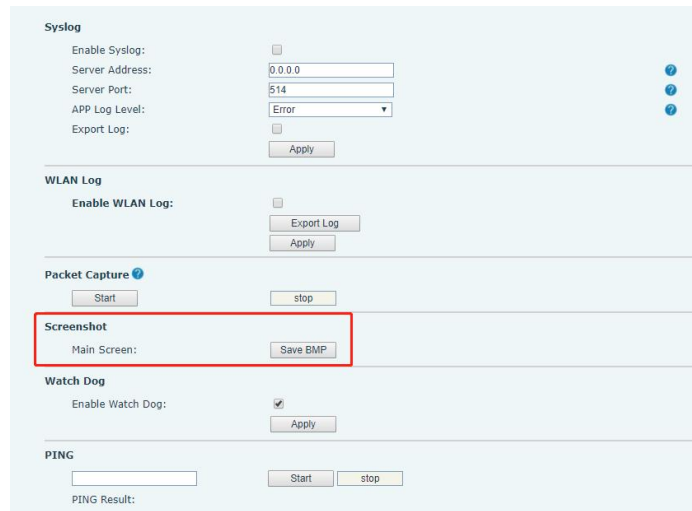

Picture 110- Input and output settings

12.5 Network Packets Capture

Sometimes it is helpful to dump the network packets of the device for issue identification. To get the packets dump of the device, user needs to log in the device web portal, open page [**System**] >> [**Tools**] and click [**Start**] in “LAN Packets Capture” section. A pop-up message will be prompt to ask user to save the capture file. User then should perform relevant operations such as activate/deactivate line or making phone calls and click [**Stop**] button in the web page when operation finished. The network packets of the device during the period have been dumped to the saved file.

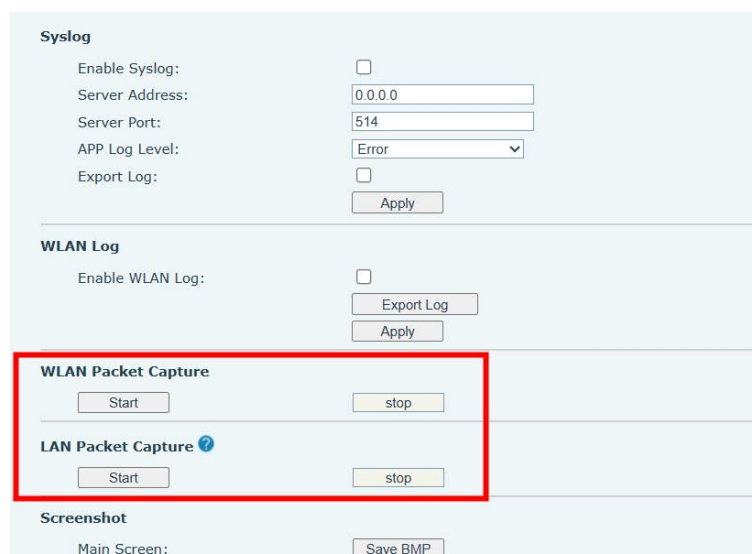

Picture 111- Web capture


User may examine the packets with a packet analyzer or send it to Fanvil support mailbox.

12.6 Get Log Information

Log information is helpful when encountering an exception problem. In order to get the log information of the phone, the user can login the phone web page, open the page [Device log], click the [Start] button, follow the steps of the problem until the problem appears, and then click the [End] button, [Save] to local analysis or send the log to the technician to locate the problem.

12.7 Common Trouble Cases

Table 37 - Trouble Cases

Trouble Case	Solution
Device could not boot up	<ol style="list-style-type: none"> 1. The device is powered by external power supply via power adapter or PoE switch. Please use standard power adapter provided by Fanvil or PoE switch met with the specification requirements and check if device is well connected to power source. 2. If you saw "POST MODE" on the device screen, the device system image has been damaged. Please contact location technical support to help you restore the phone system.
Device could not register to a service provider	<ol style="list-style-type: none"> 1. Please check if device is well connected to the network. The network Ethernet cable should be connected to the  [Network] port. 2. Please check if the device has an IP address. Check the system information, if the IP displays "Negotiating...", the device does not have an IP address. Please check if the network configurations is correct. 3. If network connection is fine, please check again your line configurations. If all configurations are correct, please kindly contact your service provider to get support, or follow the instructions in "12.5 Network Packet Capture" to get the network packet capture of registration process and send it to Fanvil support to analyze the issue.