Instructions

1. Overview

1.1.Purpose

This document provides brief instructions for the company's new smart e-cigarette products for relevant personnel to read.

1.2. Terminology

- [1] E-cigarette device: The electronic device described in this document can be used for smoking, sometimes referred to as "the device" for brief in the context.
- [2] Side Button: There is a round physical button on the side of the device to turn on / off the device.

1.3. Version

Version	Date	Description	Review
V1.0	May 19, 2024	Created	
V1.1	May 24, 2024	Translated into English	
V1.2	June 26, 2024	Modified	

1.4. Function List

The device has many functions as follows.

No.	Name	Introduction
1	Clock face	The homepage of the e-cigarette device, providing data such as time, date and the number of smoking puffs.
2	Smoking	You can smoke via this device, adjust power, view the number of puffs, and clear the number of puffs.
3	Bluetooth	Connect to your mobile phone's Bluetooth to answer calls, make calls and play music.
4	Call	When the device is connected to the mobile phone via Bluetooth, you can answer calls and make calls using the device.
5	Music	When the device is connected to the mobile phone via Bluetooth, on the device you can enjoy the music, switch to another song and adjust the volume.
6	Breath training	The device provide simple breathing exercises.

7	Calculator	The device supports the four daily arithmetic operations of addition, subtraction, multiplication and division.	
8	Calendar	You can view year, month, date and the day of week on the device.	
9	Alarm clock	The device provides several alarm clocks.	
10	Stopwatch	The device provides a stopwatch.	
11	Timer	The device provides a timer to countdown.	
12	Voice assistant	When the device is connected to the mobile phone via Bluetooth, its voice assistant can be used to awaken the built-in voice assistant on the mobile phone, such as Siri on the Apple mobile phone and Xiaoai on the Xiaomi mobile phone.	
13	Night running light	The device provides a weak background light when you walk or run on dark roads at night.	
14	Bedside lamp	When the room lights are turned off at night, the device provides a long-time weak lighting while it is being charged.	
15	Flashlight	The device provides a little bright light source in the dark.	
16	Game	The device provides two casual games, fighter jet war and fighter aircraft obstacle avoidance.	
17	Settings	aircraft obstacle avoidance. The following setting items are provided: 1) Bedside lamp 2) Screen-off time 3) Language 4) Time and date 5) Dimming 6) Sound 7) Do not disturb mode 8) Power saving mode switch 9) Password 10) Shutdown 11) Restart 12) Restore factory 13) APP view 14) Manually turn on/off the screen	

2. Operation Guide

2.1. Turn On / Off The Device

If the device is powered off, you can press and hold the Side Button for more than 4 seconds to turn on the device.

If the device is powered on, you can press and hold the Side Button for more than 2 seconds to enter the Shutdown Page, where you tap the shutdown button to turn off or the cancel button not to. Or, especially when the screen has no response, you can press and hold the Side Button for more than 8 seconds to force the device to shutdown.

2.2. Clock Face Page (The Homepage)

2.2.1. Built-in Clock Faces

After the device is turned on, the page you enter first is the Clock Face Page, also called the Homepage. Currently, the device has 4 built-in clock face pages, as shown below:



The clock face pages show the date, time, the number of puffs and other information. The information displayed on different clock face pages is not exactly the same.

2.2.2. Switch Clock Face Pages

Press any position on the Clock Face Page for 1 second, and the page will shrink and enter the switchable state, as shown in the figure below:



At this time, slide the screen left and right to see other clock face pages, of which you can tap one to select it as the new Clock Face Page.

2.3. Four Function Entrances

As shown above, the device provides many rich functions, which can be accessed from the Clock Face Page. The Clock Face Page provides four main function entrances, namely: the Drop-down Menu, the Left-side Column, frequently used function pages, and the Full Function List Page. Each is described in detail below.

2.3.1. Drop-down Menu

2.3.1.1. Open and Close

On the Clock Face Page, slide down from the upper edge of the screen to pop up the Drop-down Menu, as shown in the figure below.



The Drop-down Menu is relatively long. You can slide up and down on the Drop-down Menu to view other menu items. To close the Drop-down menu, slide up from the bottom edge of the screen, or click one menu item.

2.3.1.2. Menu Iems

The Drop-down menu provides the following menu items:

Menu item	Icon	Explanation
Battery power	□ 20%	Display current remaining power

Bluetooth switch	(\$)	Control Bluetooth connection
About	i	View device information
Power saving switch		Control power saving mode
Alarm clock	Ó	Set alarm clocks
Dimming		Adjust the brightness of the screen
Password protection	9	Set password
Sound		Set sound volume and types
Shutdown		Turn off the device
Bedside lamp		Provides low backlight in the dark when being charged
Flashlight		Provide light in the dark
Settings	(4)	Make various settings for your device

2.3.2. Left-side Column

2.3.2.1. Open And Close

On the Clock Face Page, slide from the left edge of the screen to the right to open the Left-side Column, as shown in the figure below:



To close the Left-side Column, slide from the right edge of the screen to the left, tap a function item on the Left-side Column, or click the Side Button.


2.3.2.2. Function Items

The Left-side Column provides the following function items:

Function item	Icon	Explanation
Current time	23:08	Show the current time
Current date and day of week	. <mark>05-16</mark> тый	Show the current date and day of week
Voice assistant		Tap this item to enter the Voice Assistant Page
Turn off screen	8	Tap this item to turn off the screen immediately
Night running light		Tap this item to enter the Night Running Light Page
Settings		Tap this item to enter the Settings Page
Bedside lamp		Tap this item to enter the Bedside Lamp Page

2.3.3. Frequently Used Function Pages

On the Clock Face Page, slide from right to left on the screen to enter the Smoking Page. Continue to slide from right to left, and you will enter the Music Page, the Breath Training Page, the Calculator Page, and the Calendar Page in sequence, as shown in the figure below. Except for the Clock Face Page, you can slide on the screen from left to right to back to the previous page, or slide from right to left to enter the next page. The next page of the Calendar Page is the Clock Face Page. Note that sliding on the Clock Face Page from left to right will open the Left-side Column.

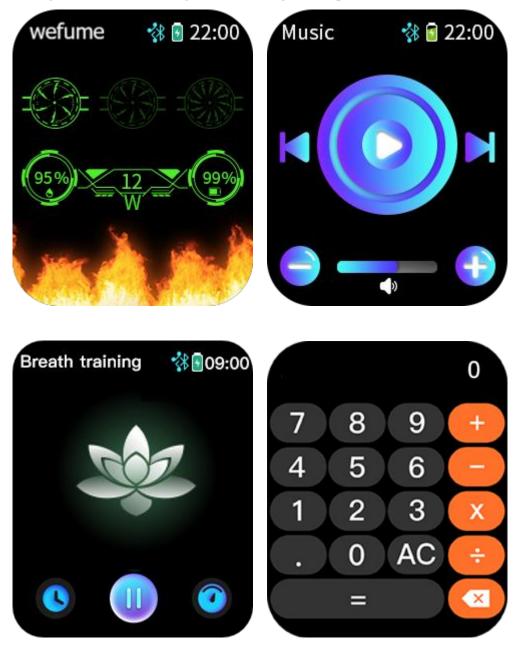



2.3.4. Full Function List Page

On the Clock Face Page, click the Side Button to open the Full Function List Page Page, as shown in the figure below. The list has many buttons and is relatively long, so you can scroll up and down to view other buttons. On this list page, click the Side Button to return to the Clock Face Page.









The Full Function List Page Page has another form -- the grid page. On this Full Function List Page, double-click the Side Button to enter the Full Function Grid Page, as shown in the figure below. The grid page is slightly long and can be swiped up or down to view other buttons. On the grid page, double-clicking the Side Button can switch to the list page, or clicking the Side Button goes to the Clock Face Page.



2.4. Smoking

On the Clock Face Page, slide from right to left on the screen to enter the Smoking Page, as shown in the figure below:



On the Smoking Page, the three gear buttons denote three kinds of power mode for smoking, 12W, 20W and 24W, respectively. The left number 95% shows that there is 95% of e-liquid in the cartridge, while the right number 99% shows 99% of remaining battery capacity and the middle number 12 means the lightest power mode of 12W.

2.5. Bluetooth


Follow the steps below to connect the device to your mobile phone via Bluetooth:

Step 1: On the Clock Face Page, slide down from the upper edge of the screen to open the Dropdown Menu, and tap the "About" item 100 to view device information, as shown in the figure below:



From the red box in the picture above, you see that the name of the device is wefmue_FA67.


Step 2: Open the Bluetooth settings page on your mobile phone, search for nearby devices, and you will see G170A_88F3, as shown in the figure below:

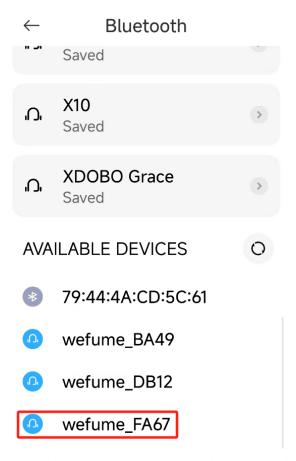

Tap wefmue_FA67 in the picture above, and the mobile phone will pop up a dialog box to determine whether to pair or not, as shown in the picture below:



Tap the "Pair" button in the picture above, and the phone will pop up the authorization dialog box, as shown in the picture below:

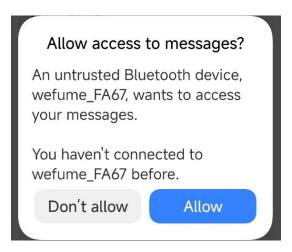

Tap the "Allow" button in the picture above to complete the connection between the mobile phone's Bluetooth and the device's Bluetooth. If the connection fails, please see Step 3.

You can check the Bluetooth connection status on the device like this. On the Clock Face Page, slide down from the upper edge of the screen to open the Drop-down Menu, click the Bluetooth item to enter the Bluetooth Settings Page, as shown below:



As can be seen from the picture above, both the Call audio switch and the Media audio switch are turned on. What's more, on some frequently used function pages, there is an icon on the upper edge of the screen to indicate that the call audio switch has been turned on, as shown in the red box in the figure below.



It can also be seen from the mobile phone that the device has been connected to the mobile phone via Bluetooth.



Step 3: Generally speaking, after the second step above, the Bluetooth connection between the phone and the device has been established, and you can use the device to make calls and play music on the phone. In some cases, for example, if the user has manually turned off the call audio switch or media audio switch, as shown in the figure below, then the device cannot connect to the mobile phone via Bluetooth, let alone use the device to make calls and play music.



To do this, you need to manually turn on the call audio switch in the picture above to allow the device to connect to the mobile phone via Bluetooth. Then refer to Step 2 for help.

Generally speaking, turning off the call audio switch will also cause the media audio switch to be turned off, but turning on the call audio switch will not turn on the media audio switch at the same time, as shown in the figure below.



In this case, although you can use the device to make calls, it cannot play music. When the phone and device are already connected via Bluetooth, you need to manually turn on the media audio switch.

2.6. Call

With the device being connected to your mobile phone via Bluetooth, when there is an incoming call on the mobile phone, you can answer the call or reject the call on the device, as shown in the figure below:



If you want to make a call on the device, tap the button on the Left-side column, or tap the button "Telephone" on the Full Function List Page, and you will be shown the following Telephone Page on which you can slide from left to right to return to the previous page or click the Side Button to return to the Clock Face Page.



Tap the "Recent calls" button in the figure above to enter the recent calls list, find the phone number you want, and tap it to make the call, as shown in the figure below.



Tap the button "Dial Pad" on the Telephone Page to enter the dialing page, as shown in the figure below. After entering the desired phone number, tap the dial button to make a call.



It should be noted that if you cannot make an outgoing call, please check whether the device and mobile phone are connected via Bluetooth and whether the Call Audio Switch is turned on.

2.7. Music

Slide twice from right to left from the Clock Face Page to find the Music Page, as shown in the figure below:



When the phone and device are connected via Bluetooth and the Media Audio Switch is turned on, start the music APP on your mobile phone and play the music, and the sound will be played from the device. On the Music Page, you can tap or to switch the play status, and you can also tap to switch tracks, and adjust the volume by tapping the buttons and contains and contains the switch tracks.

2.8. Breath Training

Slide from right to left on the Music Page to find the Breath Training Page, as shown below:



Start breathing exercises by tapping . Tap to set how long to train, and tap to set the breathing speed.

2.9. Calculator

Slide from right to left on the Breath Training Page to find the Calculator Page, as shown in the figure below. Common calculations can be performed here.



2.10. Calendar

Slide from right to left on the Calculator Page to find the calendar page, as shown in the figure below:



Slide up or down on the page to view the previous or next month.

2.11. Alarm Clock

Tap the item on the Drop-down Menu, or tap the button "Alarm Clock" on the Full Function List Page, and you can will be shown the following Alarm Clock Page on which you can slide from left to right to return to the previous page or click the Side Button to return to the Clock Face Page.



In the picture above, tap the button "Add alarm" at the bottom to add a new alarm clock, or tap one alarm clock (e.g., 08:00 as above) to enter the modification page. You can also tap the switch on the right side of the alarm clock to turn off / on the alarm clock.

2.12. Stopwatch

Tap the button "Stopwatch" on the Full Function List Page, and you will be shown the Stopwatch Page on which you can slide from left to right to return to the previous page or click the Side Button to return to the Clock Face Page.



In the picture above,tap the button to start or to pause the stopwatch, tap the button to temporarily save the current count, and tap the button to stop the stopwatch.

2.13. Timer

Tap the button "Timer" on the Full Function List Page, you will see the following Timer Page on which you can slide from left to right to return to the previous page or click the Side Button to return

to the Clock Face Page.



In the picture above, tap the button of to make the timer make no sound when it expires. Slide the number to select the specific countdown length, and then tap the button to enter the countdown page, as shown in the picture below:



In the picture above, you can start the countdown, pause the countdown, or reset the timer.

2.14. Voice Assistant

Open the Left-side Column on the Clock Face Page and tap the button
"Voice assistant" on the Full Function List Page Page, you will see the following Voice Assistant Page on which you can slide from left to right to return to the previous page or click the Side Button to return to the Clock Face Page.



To go further, ensure that the device is connected to the mobile phone via Bluetooh and the Media Audio Switch on the device is turned on, and then turn on the voice assistant on the mobile phone (such as Xiao Ai on Xiaomi mobile phone, Siri on Apple mobile phone, etc.). Then tap the round button in the middle of the picture above and say what you want to say (such as what the weather is like today), and the device will send the voice signal to the voice assistant of the mobile phone which will respond. Due to some incompatibility issues, voice responses from some types of mobile phones can be played on the device, but others can not.

2.15. Night Running Light

Open the Left-side Column on the Clock Face Page and tap the button "Night running lights" on the Full Function List Page Page, you will see the following Night Running Light Page on which you can slide from left to right to return to the previous page or click the Side Button to return to the Clock Face Page.



The dim light from this page can bring some light when you are walking or running at night. On this page, the screen will not automatically turn off. If you want to turn off the screen in this case, you should exit the this page manually first.

2.16. Bedside Lamp

Open the Left-side Column on the Clock Face Page and tap the button [2], or tap the "Bedside lamp" on the Full Function List Page Page, you will be shown the Bedside Lamp Page, as shown in the figure below. On the bedside lamp page, you can slide from left to right to return to the previous page or click the Side Button to return to the Clock Face Page.



When not being charged, on the Bedside Lamp Page the screen will automatically turn off after the screen-off time to save power. When being charged, on the Bedside Lamp Page the screen will not automatically turn off. If you want to turn off the screen in this case, you should exit the Bedside Lamp Page manually first.

2.17. Flashlight

Open the Drop-down Menu on the Clock Face Page and tap the button 1 to enter the Flashlight Page, as shown in the figure below. On the flashlight page, you can click the Side Button to return to the Clock Face Page.



The Flashlight Page has three subpages, and the picture above is the first subpage, which emits a bright white light to provide some light in the dark. On the first subpage, slide from left to right on the screen to exit the Flashlight Page, or slide from right to left to enter the second subpage which emits flashing white light for signaling and positioning in the dark. Sliding from left to right on the second subpage will return to the first subpage, and sliding from right to left will enter the third subpage which emits red light, as shown in the figure below:



2.18. Game

On the Clock Face Page, click the Side Button to enter the Full Function List Page Page and tap

the button "Game", you will be shown the following Game Page on which you can slide from left to right to return to the previous page or click the Side Button to return to the Clock Face Page.



There are two games here, namely "fighter jet war" and "fighter aircraft obstacle avoidance". Tap the button "fighter jet war" to enter the following page as shown below.



In the picture above, the large aircraft on the lower edge of the screen is our aircraft, and the other small aircraft are enemy's aircraft. As long as you drag the big aircraft left and right and let its fire hit the enemy aircraft, the points on the upper right corner of the screen will increase and the game will continue. Once an enemy aircraft crosses the lower edge of the screen, the game fails, as shown below:




During the game, sliding from left to right on the screen will not return to the previous page, but will move the position of the big aircraft. To leave the current game page, click the Side Button to return to the Clock Face Page. When game is over, sliding from left to right on the screen will return to the previous page, and clicking the Side Button will return to the Clock Face Page.

Tap the button "fighter aircraft obstacle avoidance" on the Game Page to enter the second game as shown in the figure below:



In the picture above, the aircraft can go up and down. When your tap the screen, the aircraft rises up. When you don't tap the screen, the aircraft falls down. Once the aircraft hits the obstacle above, the obstacle in the middle, or falls to the obstacle below, the aircraft will crash and the game will fail, as shown in the figure below:

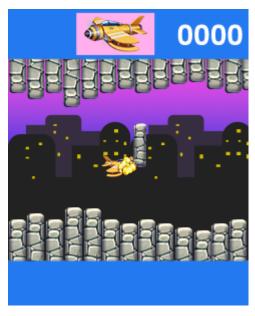




During the game, sliding from left to right on the screen will not return to the previous page, but will rise up the aircraft until it crashes the obstacle above. To leave the current game page, click the Side Button to return to the Clock Face Page. When game is over, sliding from left to right on the screen will return to the previous page, and clicking the Side Button will return to the Clock Face Page.

2.19. Settings

2.19.1. Open Settings

On the Clock Face Page, slide from left to right on the screen to open the Left-side column and tap the button on slide from top to bottom to open the Drop-down Menu and tap the item on click the Side Button to enter the Full Function List Page Page and tap the button on the Settings Page as shown below shown. There are many setting items on the Settings Page where you can slide up and down to view other setting items.

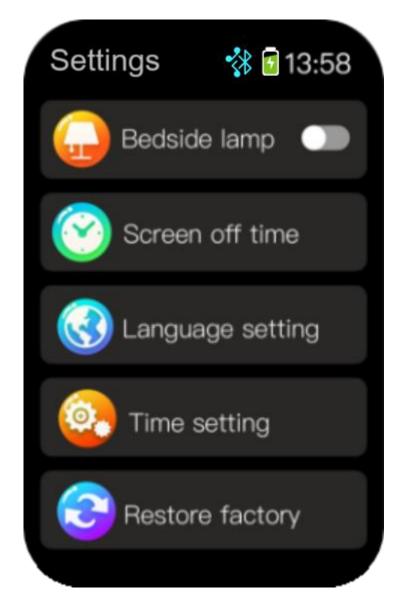


2.19.2. Bedside Lamp

Refer to Section 2.16 above.

2.19.3. Screen-Off Time

Tap "Screen Off Time" on the Settings Page to enter the following page:

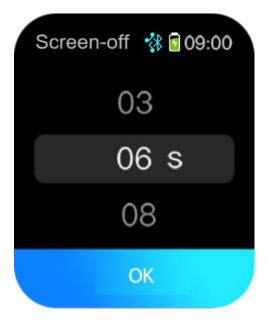

In the picture above, slide the screen up and down to select the appropriate screen-off time, and then tap the blue button "Sure" below to complete the setting. For example, if you select 06s and tap "Sure", then the screen will be turned off without any screen operation for 6 seconds. In the picture above, you can slide the screen from left to right to return to the previous page, or click the side button to return to the Clock Face Page.

For most pages, if there is no operation on the screen within the screen-off time, the screen will automatically turn off to save power. However, on some pages, such as the Night Running Light Page, the Flashlight Page, the Bedside Lamp Page when charged, etc., the screen will stay on and will not turn off automatically. In this case, if you want to turn off the screen, you need to manually exit the current page, and the screen will turn off after a period of screen-off time.


2.19.4. Language

Tap the button "Language settings" on the Settings Page to enter the following page on which you slide up and down to view all supported languages and select a proper one.




2.19.5. Time settings

Tap the button "Time settings" on the Settings Page to enter the following page on which you can slide from left to right to return to the previous page or click the Side Button to return to the Clock Face Page.

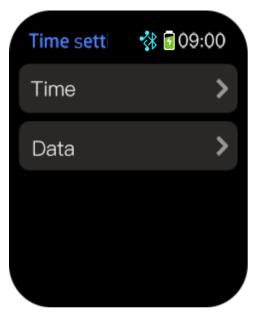

There are two buttons in the picture above, namely "Time Setting" and "Date Setting". After clicking either of them, you will enter either of the following two pages respectively:

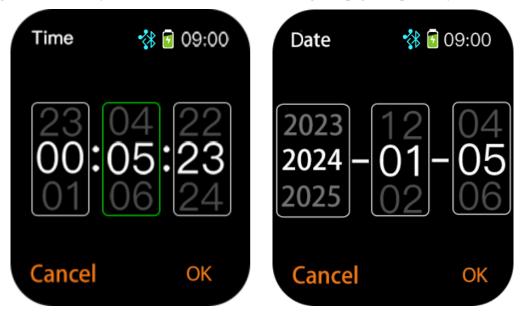

In the two pictures above, slide up or down to select the appropriate time or date, and then tap the Sure button or the confirm button in the lower right corner to complete the settings.

2.19.6. Dimming

Tap the "Dimming" button on the Settings Page, or open the Drop-down Menu on the Clock Face Page and tap the button , you will be led to the following Dimming Page on which you can slide

from left to right to return to the previous page or click the Side Button to return to the Clock Face Page.



In the picture above, tap the buttons on the left and right sides of the dimming bar to adjust the brightness of the screen.

2.19.7. Sound Settings

Tap the "Sound settings" button on the Settings Page, or open the Drop-down Menu on the Clock Face Page and tap the button , you will be shown the following Sound Settings Page on which you can slide from left to right to return to the previous page or click the Side Button to return to the Clock Face Page.

.



In the picture above, you can turn on or mute the sound through the switch on the right side of the "Volume" row, and you can also increase or decrease the volume through the buttons in the "Volume" row. In the picture above, you can turn on or off the incoming call sound

through the switch on the right side of the "Incoming sound" row. You can also tap the button "Incoming sound" to enter the following page and select one voice clip as the incoming call sound. On this page, slide from left to right to return to the previous page, or click the Side Button to return to the Clock Face Page.



On the Sound Settings Page, you can turn on or off the alarm clock sound through the switch on the right side of the "Alarm clock sound" row. You can also tap the button "Alarm clock sound" to enter the following page and select one voice clip as the alarm clock sound. On this page, slide from left to right to return to the previous page, or click the Side Button to return to the Clock Face Page.



Slide to the bottom of the Sound Settings Page, and you can see the "Key tone" row, as shown in the figure below. Tap the switch on the right side of the bar to turn on or off the sound when you click the Side Button.



2.19.8. Do Not Disturb

Open the Drop-down Menu on the Clock Face Page and tap the button **©**, or tap the button "Do Not Disturb" on the Settings Page to enter the Do Not Disturb Page, as shown below. On this page, slide from left to right to return to the previous page, or click the Side Button to return to the Clock Face Page.



In the picture above, if you turn on the switch on the right side of "Do not disturb all day" row, the device will not prompt that there is an incoming call and there will be no sound when the mobile phone is receiving a call, even if the device and the mobile phone are connected via Bluetooth. However, if the Media Audio Switch on the device is turned on at this time, the music on the mobile phone can still be played on the device. In the picture above, if you turn on the switch on the right side of "Time do not disturb", you can set non-disturbance time period through the "Start" and "Stop" buttons below. During this time period, the device will not prompt incoming calls.

2.19.9. Power Saving Mode

Open the Drop-down Menu on the Clock Face Page and tap the button 1 to turn on or off the power saving mode. Tapping the button "Power saving mode" on the Settings Page leads you to the Power Saving Page, as shown below:



In the picture above, if you turn on the switch, the screen will turn off the highlight mode and the screen brightness will become darker to save power.

2.19.10. Password Protection

Open the Drop-down Menu on the Clock Face Page and tap the button "Password" on the Settings Page, you will see the Password Page as shown below:



In the picture above, tap "Password switch" to turn the switch on or off. If the switch is turned on, the password protection mode will be activated and a password will be required to input as shown in the picture below:



After inputing four digits as required and repeating inputing them, you have set your password and the screen will return to the previous page.

Tap the "Change password" button on the Password Page to enter the password modification page. It prompts you to enter the old password first, and then enter the new password twice, then you completes the password modification.

After password protection is set, clicking the Side Button when the screen is off will not enter the Clock Face Page, but will require you to enter the password. Only with the correct password can you enter the Clock Face Page.

After password protection is set, you can still smoke and answer calls on the device even the screen is locked by the password, but you cannot make calls without unlocking it.

Important tip: After setting the password, if you forget the password, there is no way to unlock it.

2.19.11. Shutdown

Open the Drop-down Menu on the Clock Face Page and tap the button , or click the Side Button on the Clock Face Page to open the Full Function List Page Page and tap the button "Shutdown", or tap the button "Shutdown" on the Settings Page, or press and hold the Side Button for more than 2 seconds, you will see the Shutdown Page as shown below:



Tap on the picture above to shutdown, and tap to cancel shutdown.

When the above method fails to shutdown, press and hold the side button for more than 8 seconds to force shutdown.

2.19.12. Reboot

Click the Side Button on the Clock Face Page to open the Full Function List Page and tap the button "Reboot", or tap the button "Reboot" on the Settings Page, you will enter the Reboot Page, as shown in the figure below:



2.19.13. Restore Factory

Click the Side Button on the Clock Face Page to open the Full Function List Page Page and tap the button "Restore Factory", or tap the button "Restore Factory" on the Settings Page, you will enter the Retore Factory Page, as shown in the figure below:



Tap on the picture above to restore to factory settings, or click to cancel restoring to factory settings.

2.19.14. About

Open the Drop-down Menu on the Clock Face Page and tap the button , or click the Side Button on the Clock Face Page to open the Full Function List Page Page and tap the button "About", or tap the button "About" on the Settings Page, you will see the device information page, as shown in the figure below:



In the picture above, you can see that the name of the device is G170A_88F3, the Bluetooth address is 7C:F6:58:5C:88:F3, the firmware version is 0.8.1, and the UI version is 1.0.0.

2.19.15. APP view

Tap "APP view" on the Settings Page to enter the APP View Page, as shown in the figure below:



In the picture above, if "List view" is selected, clicking the Side Button on the Clock Face Page will enter the Full Function List Page, or else "Grid view" selected will enter the Full Function Grid Page, as shown in the following two figures:



On either of the above two pages, double-clicking the Side Button will switch between them.

2.19.16. Manually Turn Off / On the Screen

When the screen is on, open the Left-side Column on the Clock Face Page, tap the button and the screen will be turned off immediately. In addition, you can also attach your palm to the screen

to turn off the screen, but there is a small probability that the screen is still on.

When the screen is off, click the Side Button to turn on the screen.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.