

# ***USER GUIDE***

## **Tablet PC**

Please read the manual before using this product, and save it for future use.

# Contents

FUNCTION OVERVIEW.....	1
SPECIFICATIONS.....	1
START.....	2
HOME SCREEN.....	2
BASIC SETTINGS.....	3
NETWORK CONNECTION.....	6
APP MANAGEMENT.....	7
INTERNET NAVIGATION.....	9
MULTIMEDIA.....	9
TROUBLESHOOTING.....	11

## FUNCTION OVERVIEW



1. Headphone jack
2. Front camera
3. Volume+ / Volume-
4. Power on/off
5. microSD card slot
6. USB-C port
7. Left speaker
8. Right speaker
9. Rear camera
10. Flash

## SPECIFICATIONS

Tablet Specifications			
Tablet Size	10.1"	Connectivity	Wi-fi / Bluetooth
Chipset	A133	CPU	64-bit Quad-Core Cortex A53
GPU	GE8300	RAM	2GB
ROM	32GB	Display	IPS/1280*800 FHD
Front-facing Camera	2MP	Network	802.11b/g/n(Wi-Fi)
Rear-facing Camera	5MP	Power Supply	DC 5V 2A
Battery	6000mAh	Touchscreen	Multi-touch
Operating System	Android <sup>GO</sup> 12	Ports	USB Type-C / microSD Card Slot

## START

### Power On/Off

1. Hold down the power button for 2-3 seconds to turn on the tablet. Select the language and follow the start up guide to set up the tablet.
2. Hold down the power button for 2 seconds to display power off and restart options on the screen. Click power off to turn off the tablet.
3. If the tablet freezes, press and hold the power button for 5 seconds to do a forced shutdown.

### Battery

1. A rechargeable Li-ion battery is installed in the tablet.
2. We suggest you drain the battery completely once a month if you only use your tablet occasionally.
3. DO NOT dispose of tablet in fire.
4. Charge the device fully each time to increase the battery life.
5. You can charge the tablet, even if the tablet has some power left in it, as the lithium battery does not need to be fully drained to charge.
6. A full charge can be used for an average of 3 hours.

### Sleep Mode


Simply press the power button once to switch the tablet into Sleep Mode when the tablet is ON; press again to wake it up.

#### Tip:

Go to Settings > Display > Screen timeout to adjust automatic sleep settings.

## HOME SCREEN

### Icon on the Bottom Menu

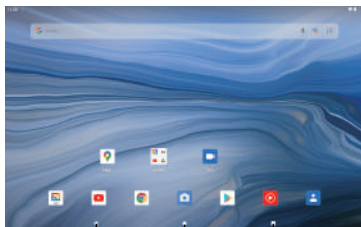


1

2

3

1. Back
2. Home Screen
3. Recent Activities

## Wallpapers, Home Settings and Screenshot

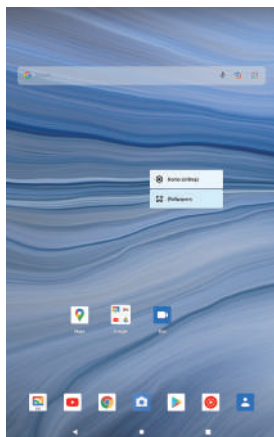

### Wallpaper

Tap and hold your finger in any blank space on the home screen and you will see a pop-up menu. You can choose a wallpaper from the Gallery or your downloaded files. Set the one you like to be the wallpaper.

### Home Settings



Tap and hold your finger in any blank space of the home screen and a pop-up menu will appear. Tap HOME SETTINGS to enable/disable adding icons to Home screen. This is applicable to new Apps installed from Play Store.

### Tips


Tap an icon and move it on top of another icon to create a new folder on the home screen. Open the folder; click 'Unnamed Folder\*' to rename the folder.

## BASIC SETTINGS

### Quick Settings

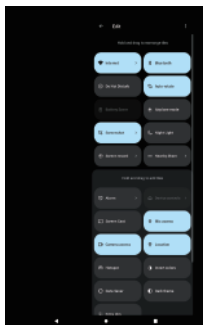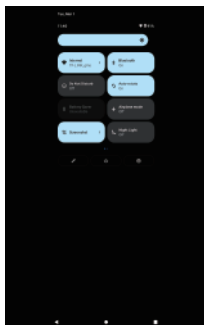

Swipe down from the top of the screen to access Quick Settings.

Tap the  icon to change the options in the Quick Settings.

## More Settings

Swipe down from the top of the screen, then tap the ⚙️ icon to enter the detailed Setting interface. You can also tap the Settings icon on the Home screen to enter the setting menu.



## Network & Internet

- Connect to any working Wi-Fi
- Enable / disable airplane mode
- Hotspot & tethering

## Connected Devices

- Cast a device and check casted devices
- Add and check printers

## Apps & Notifications

- Check recently opened apps
- Check all apps on the tablet
- Set app permissions
- Uninstall third-party apps
- Adjust app notification settings
- Clear the cache for apps

## Battery

- Display the remaining battery power as a percentage
- Enable/disable battery saver mode

## Display

- Adjust the screen brightness
- Adjust the font size and display size
- Set a screensaver
- Change the wallpaper

## Sound

- Set volume levels for media, alarms, and notifications
- Set Do Not Disturb preferences
- Set the sounds for notifications and alarms
- Turn on/off the sound for screen lock, charging and touch

## Storage

- View and manage your storage space

## Privacy, Security & Location

- Set screen lock pattern, e.g. password, PIN, Swipe etc.
- Enable/disable all notifications while the screen is locked
- Turn on/off the location services for specific apps
- Set show/hide password when inputting a password

## Accounts

- Add and manage the user accounts on your tablet

## Accessibility

- For vision and hearing impaired users, manage settings for screen readers, subtitles, and more

## Digital Wellbeing & Parental Controls

- Set timers for your apps
- Set up parental controls with Google's Family link

## Google

- Set the preferences for Google related services

## System

### •Set Language

Tap Languages & input > Languages > + to add a language. After adding, hold and slide the ≡ to the top to change the language.

### •Restore Factory Settings

Tap Reset options > Erase all data (factory reset) to restore to factory settings.

### •Other Settings

Set the date and time

Turn on/off the backup

## About Tablet

• Check detailed information about the tablet.

## NETWORK CONNECTION

Go to Wi-Fi Settings in the Settings interface or directly enter through Quick Settings.

### Wi-Fi Connection

1. Tap Network and Internet, and turn on the Wi-Fi. All available Wi-Fi connections will be listed.
2. Select your Wi-Fi, and input the correct password.





# APP MANAGEMENT

## App Download and Installation

1. Tap and open Play Store on the Home screen;
2. Log into your Google account; search and download the apps you need.

## Move an App

Tap and hold the app, then slide to desired screen

## Remove an App from the Home screen



Tap and hold the App, then slide to the X to remove it from your home screen.



## Uninstall an App

Tap and hold the app. then slide to the trash bin to uninstall the app.

## Clear the App Cache

1. Go to Settings > Apps & notifications;
2. Select an App > Storage & cache > CLEAR CACHE

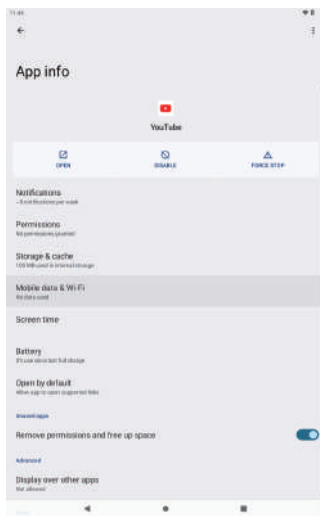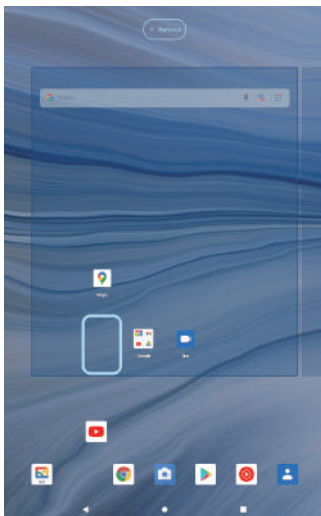

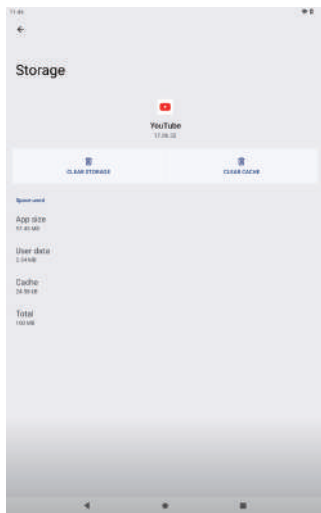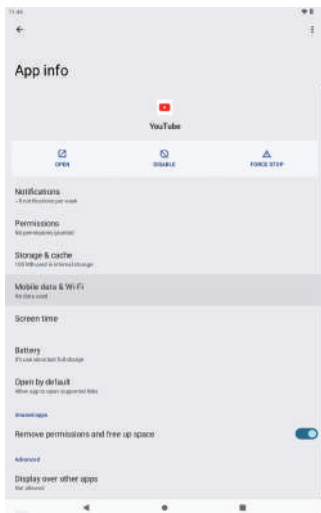

## INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wi-Fi network before trying to browse the Internet.

You can use the Chrome browser that is pre-installed or download another browser from the Play Store.

## MULTIMEDIA


### Connecting to the Computer

1. Connect your tablet to a computer via USB type-C cable and go to Quick Settings;
2. Tap Android Systems > charging this device via USB > Tap for more options > File Transfer;
3. Go to your computer and find tablet MB1001 to transfer files between your tablet and computer.

## Tip



Select Charge this device if you only need to charge the tablet.

Select Transfer photos (PTP) to transfer photos between the devices.

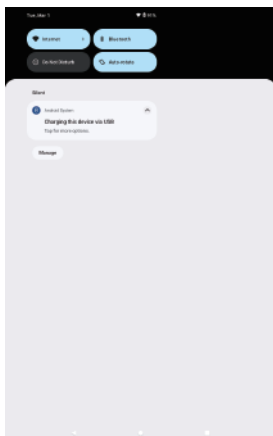

## Connecting to an External Device

1. Insert a microSD card into the microSD card slot and go to Quick Settings;
2. Tap to set up;
3. Set the microSD card as portable storage by selecting use for portable storage. Enter micro SD Card storage to move files between the card and tablet.

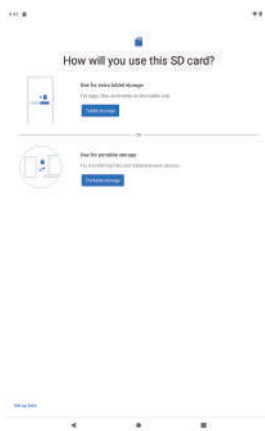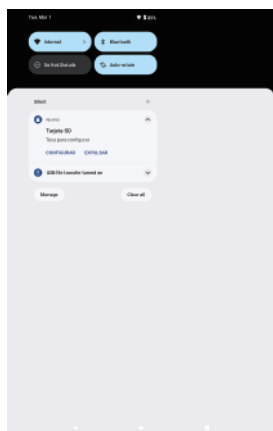

## TROUBLESHOOTING

### Q1. The tablet doesn't power on

- Reboot your tablet after charging for 30 minutes;
- Press the power button to see if the tablet is in Sleep Mode;
- Press and hold the power button for 5 seconds to turn off the tablet, then reboot it;
- Press the reset button with a pin to reset the tablet.

### Q2. The tablet doesn't charge

- Charge the device for at least 30 minutes, in case the battery was completely drained;
- Make sure the USB cable is properly plugged into the charging port;
- Try another compatible USB cable and adapter.

### Q3. Error message occurs during operation

- Uninstall the app displaying the error message, then download and install again;
- Press the reset button with a pin to reset the tablet.

### Q4. The tablet cannot be detected by the computer

- Make sure the tablet is powered on;
- Try another USB cable;
- Try another USB port on the computer;
- Instead of Charge this device, choose Transfer files or Transfer photos (PTP) when connecting the tablet to the computer.

### Q5. The tablet cannot connect to the Wi-Fi

- Make sure the Wi-Fi on your tablet is ON;
- Make sure you input the correct password;
- Reboot the router;
- Make sure there is no filter setting or device connection limitation in the settings of the router;
- Forget the current Wi-Fi, reset the router and connect to the network again.

### Q6. The storage space of the tablet is not enough

- Delete the apps you don't use;
- Clear the app cache regularly;
- Insert a microSD card to expand the storage.

Android is a trademark of Google LLC

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **Specific Absorption Rate (SAR) information:**

This Tablet PC meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet PC has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not