

# **WLAN (11b/g/n 1x1) USB module**

**KYOCERA**

**Model : DHUA-K77-8**

**User Manual**

## **Copyright Statement**

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, whether electronic, mechanical, photocopying, recording or otherwise without the prior writing of the publisher.

Pentium is trademark of Intel.

All copyright reserved.

## **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **IMPORTANT NOTE:**

#### **Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Country Code selection feature to be disabled for products marketed to the US/CANADA

## **Integration instructions for host product manufacturers**

### **Applicable FCC rules to module**

FCC Part 15.247

### **Summarize the specific operational use conditions**

The module is must be installed in mobile device.

This device is intended only for OEM integrators under the following conditions:

- 1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- 2) The transmitter module may not be co-located with any other transmitter or antenna
- 3) For all products market in US, OEM has to limit the operation channels in CH1 to CH11 for 2.4G band

by supplied firmware programming tool. OEM shall not supply any tool or info to the end-user regarding

to Regulatory Domain change.

As long as 3 conditions above are met, further transmitter test will not be required.

However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

**IMPORTANT NOTE:** In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization. The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.

### **Limited module procedures**

Not applicable

### **Trace antenna designs**

Not applicable

### **RF exposure considerations**

20 cm separation distance and co-located issue shall be met as mentioned in

“Summarize the specific operational use conditions”.

Product manufacturer shall provide below text in end-product manual

“This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.”

## Antennas

	Frequency	2400	2450	2500	Avg.
k77	Efficiency	67%	76%	73%	72%
	Average Gain	-1.77	-1.21	-1.34	
	Peak Gain	1.97	2.68	2.69	

### Label and Compliance Information

Product manufacturers need to provide a physical or e-label stating "Contains FCC ID: E52-K778" with finished product

### Information on Test Modes and Additional Testing Requirements

Test tool: QRCT, Version: 3.0.187.0 shall be used to set the module to transmit continuously.

### Additional Testing, Part 15 Subpart B Disclaimer

The module is only FCC authorized for the specific rule parts listed on the grant, and that the host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification. The final host product still requires Part 15 Subpart B compliance testing with the modular transmitter installed

## **Industry Canada statement:**

This device complies with Industry Canada's applicable licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1) l'appareil ne doit pas produire de brouillage;
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### **Radiation Exposure Statement:**

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

### **Déclaration d'exposition aux radiations:**

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Cet équipement doit être installé et utilisé à distance minimum de 20cm entre le radiateur et votre corps.

### **This device is intended only for OEM integrators under the following conditions:**

- 1) The transmitter module may not be co-located with any other transmitter or antenna.

As long as 1 condition above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

### **Cet appareil est conçu uniquement pour les intégrateurs OEM dans les conditions suivantes:**

- 1) Le module émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne.

Tant que les 1 condition ci-dessus sont remplies, des essais supplémentaires sur l'émetteur ne seront pas nécessaires. Toutefois, l'intégrateur OEM est toujours responsable des essais sur son produit final pour toutes exigences de conformité supplémentaires requis pour ce module installé.

**IMPORTANT NOTE:**

In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the Canada authorization is no longer considered valid and the IC number can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate Canada authorization.

**NOTE IMPORTANTE:**

Dans le cas où ces conditions ne peuvent être satisfaites (par exemple pour certaines configurations d'ordinateur portable ou de certaines co-localisation avec un autre émetteur), l'autorisation du Canada n'est plus considéré comme valide et l'ID IC ne peut pas être utilisé sur le produit final. Dans ces circonstances, l'intégrateur OEM sera chargé de réévaluer le produit final (y compris l'émetteur) et l'obtention d'une autorisation distincte au Canada.

**End Product Labeling**

The final end product must be labeled in a visible area with the following: "Contains IC: 1059B-K778.

**Plaque signalétique du produit final**

Le produit final doit être étiqueté dans un endroit visible avec l'inscription suivante: "Contient des IC: 1059B-K778

**Manual Information To the End User**

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.

**Manuel d'information à l'utilisateur final**

L'intégrateur OEM doit être conscient de ne pas fournir des informations à l'utilisateur final quant à la façon d'installer ou de supprimer ce module RF dans le manuel de l'utilisateur du produit final qui intègre ce module.

Le manuel de l'utilisateur final doit inclure toutes les informations réglementaires requises et avertissements comme indiqué dans ce manuel.

Data transmission is always initiated by software, which is then passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be only on while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinues transmission in

La transmission des données est toujours initiée par le logiciel, puis les données sont transmises par l'intermédiaire du MAC, par la bande de base numérique et analogique et, enfin, à la puce RF. Plusieurs paquets spéciaux sont initiés par le MAC. Ce sont les seuls moyens pour qu'une partie de la bande de base numérique active l'émetteur RF, puis désactive celui-ci à la fin du paquet. En conséquence, l'émetteur reste uniquement actif lors de la transmission d'un des paquets susmentionnés. En d'autres termes, ce dispositif interrompt automatiquement toute transmission en cas d'absence d'information à transmettre ou de défaillance.

## Europe – EU Declaration of Conformity

This device complies with the essential requirements of the Radio Equipment directive: 2014 / 53 / EU. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the Radio Equipment directive: **2014 / 53 / EU**:

EN 300 328 V2.2.2

EN 301 489-1 V2.1.1

EN 301 489-17 V3.1.1

EN 62311:2008

EN 50665:2017

EN 50385:2017


IEC 622368-1:2014; and/or

EN 62368-1:2014+A11:2017

19.98dBm, 2400-2483.5MHz

SW version: v1.0

The minimum distance between the user and/or any bystander and the radiating structure of the transmitter is 20cm.

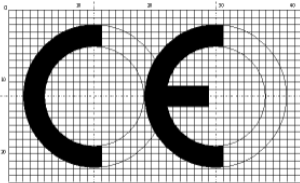

		
BE	BG	CZ
DK	DE	EE
IE	EL	ES
FR	HR	IT
CY	LV	LT
LU	HU	MT
NL	AT	PL
PT	RO	SI
SK	FI	SE
UK	LI	IS
NO	TR	CH



## 端末機器の技術基準設計認証の認定番号

本製品は以下に認証を受けたものです。

認証機器名: DHUA-K77-8


認定番号: R 201-XXXXXX

## Taiwan 警語


第十二條→經型式認證合格之低功率射頻電機，非經許可，公司，商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條→低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Note: 1. 本模組於取得認證後將依規定於模組本體標示審驗合格標籤 2. 系統廠商應於平台上標示「本產品內含射頻模組: 字樣.

### Top view

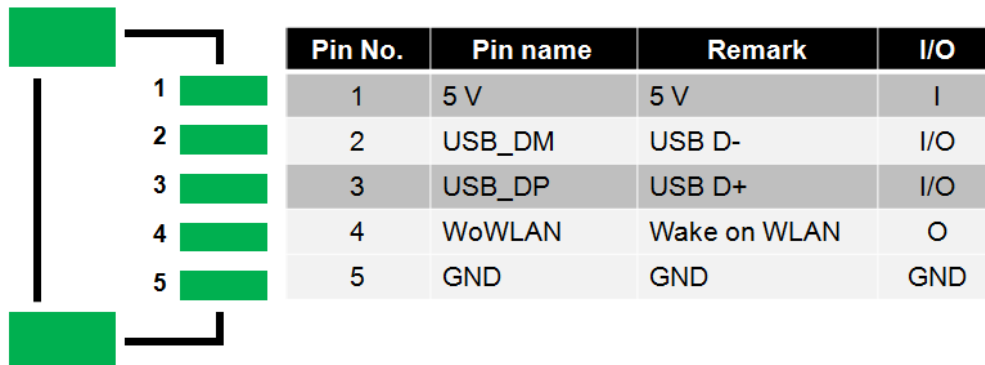

Pin No.	Pin name	Remark	I/O
1	5 V	5 V	I
2	USB_DM	USB D-	I/O
3	USB_DP	USB D+	I/O
4	WoWLAN	Wake on WLAN	O
5	GND	GND	GND

# Table of Contents

## **1. INTRODUCTION**

## **2. DRIVER/UTILITY INSTALLATION / UNINSTALLATION**

## **3. CONNECTING TO AN EXISTING NETWORK**

## **4. MODIFYING A WIRELESS NETWORK**

**4.1 MODIFYING GENERAL SETTINGS .....**

**4.2 MODIFYING SECURITY SETTINGS.....**

## **5. Product Specifications**

## **1. INTRODUCTION**

DHUA-K77-8 is a 802.11 b/g/n Wireless module that provides the easiest way to wireless networking. This User Manual contains detailed instructions in the operation of this product. Please keep this manual for future reference.

### **System Requirements**

- 128 MB of RAM or later (recommended)
- 300 MHz processor or higher

## **2. Driver/Utility Installation**

The driver should have been installed before the Printer is shipped from the manufacturer. You can start using its network function without installing driver or utility.

## **3. Connecting to an Existing Network**

1. Use the remote control that came with your Printer to access the network configuration settings page.
2. Select the scanning wireless network function. The system starts to scan for available network. On this list, click Refresh to refresh the list at any time
3. Select the network you want to connect to.
4. If the chosen network has security enabled, you will have to setup corresponding security parameter. Contact the network manager for the correct settings. Select the security type and fill in required parameters. The options include the following:
  - WPA/WPA2/CCKM
  - WPA/WPA2 Passphrase
  - 802.1x
  - Pre-Shared Key (Static WEP)
  - None

## 4. Modifying a Wireless Network

### 4.1 Modifying General Settings

1. Use the remote control that came with your Printer to access the network configuration settings page.
2. From the profile list, select one profile and choose the modify function.
3. Modify the settings below for your network.

Profile Name	Identifies the configuration wireless network profile. This name must be unique. Profile names are not case sensitive.
Client Name	Identifies the client machine.
Use this profile for Access Point mode	Configures station to operate in Access Point mode.
Network Names (SSIDs)	The IEEE 802.11 wireless network name. This field has a maximum limit of 32 characters. Configure up to three SSIDs (SSID1, SSID2, and SSID3).

## 4.2 Modifying Security Settings

1. Use the remote control that came with your Printer to access the network configuration settings page.
2. Select a security option of this wireless network. This product provides security options below. Contact your wireless network administrator for choosing a correct option.
  - WPA/WPA2/CCKM
  - WPA/WPA2 Passphrase
  - 802.1x
  - Pre-Shared Key (Static WEP)
  - None

<b>WPA/WPA2</b>	Enables the use of Wi-Fi Protected Access (WPA). Choosing WPA/WPA2 opens the WPA/WPA2 EAP drop-down menu. The options include: <ul style="list-style-type: none"> <li>• EAP-FAST</li> <li>• EAP-TLS</li> <li>• EAP-TTLS</li> <li>• EAP-SIM</li> <li>• PEAP (EAP-GTC)</li> <li>• PEAP (EAP-MSCHAP V2)</li> <li>• LEAP</li> </ul>
<b>WPA/WPA2 Passphrase</b>	Enables WPA/WPA2 Passphrase security. Click on the Configure button and fill in the WPA/WPA2 Passphrase.
<b>802.1x</b>	Enables 802.1x security. This option requires IT administration. Choosing 802.1x opens the 802.1x EAP type drop-down menu. The options include: <ul style="list-style-type: none"> <li>• EAP-FAST</li> <li>• EAP-TLS</li> <li>• EAP-TTLS</li> <li>• EAP-SIM</li> <li>• PEAP (EAP-GTC)</li> <li>• PEAP (EAP-MSCHAP V2)</li> <li>• LEAP</li> </ul>
<b>Pre-Shared Key (Static WEP)</b>	Enables the use of pre-shared keys that are defined on both the access point and the station. To define pre-shared encryption keys, choose the Pre-Shared Key radio button and click the Configure button to fill in the <u>Define Pre-Shared Keys window</u> .

<b>None</b>	No security (not recommended).
<b>Allow Association to Mixed Cells</b>	Check this check box if the access point with which the client adapter is to associate has WEP set to Optional and WEP is enabled on the client adapter. Otherwise, the client is unable to establish a connection with the access point.
<b>Limit Time for Finding Domain Controller To</b>	Check this check box and enter the number of seconds (up to 300) after which the authentication process times out when trying to find the domain controller. Entering zero is like unchecking this check box, which means no time limit is imposed for finding the domain controller. Note: The authentication process times out whenever the authentication timer times out or the time for finding the domain controller is reached.
<b>Group Policy Delay</b>	Specify how much time elapses before the Windows logon process starts group policy. Group policy is a Windows feature used by administrators to specify configuration options for groups of users. The objective is to delay the start of Group Policy until wireless network authentication occurs. Valid ranges are from 0 to 65535 seconds. The value that you set goes into effect after you reboot your computer with this profile set as the active profile. This drop-down menu is active only if you chose EAP-based authentication.

## 5. Product Specifications

Product Name : WLAN (11b/g/n 1x1) USB module

Brand Name : KYOCERA

Model Name : DHUA-K77-8

Item	Content																						
Frequency range	2400~2483.5 MHz																						
Channel spacing	5MHz																						
Modulation technology	DSSS : CCK,DQPSK,DBPSK OFDM :BPSK,QPSK,16QAM,64QAM																						
Data Rate	802.11b: 11/5.5/2/1Mbps 802.11g: 54/48/36/24/18/12/9/6Mbps 802.11n: MCS0~MCS7(65Mbps)																						
Host interface	USB 2.0																						
Operation voltage	5V																						
Antenna Type	PCB printed ANT																						
Antenna gain	<table border="1"> <thead> <tr> <th></th> <th>Frequency</th> <th>2400</th> <th>2450</th> <th>2500</th> <th>Avg.</th> </tr> </thead> <tbody> <tr> <td rowspan="3">k77</td> <td>Efficiency</td> <td>67%</td> <td>76%</td> <td>73%</td> <td>72%</td> </tr> <tr> <td>Average Gain</td> <td>-1.77</td> <td>-1.21</td> <td>-1.34</td> <td></td> </tr> <tr> <td>Peak Gain</td> <td>1.97</td> <td>2.68</td> <td>2.69</td> <td></td> </tr> </tbody> </table>		Frequency	2400	2450	2500	Avg.	k77	Efficiency	67%	76%	73%	72%	Average Gain	-1.77	-1.21	-1.34		Peak Gain	1.97	2.68	2.69	
	Frequency	2400	2450	2500	Avg.																		
k77	Efficiency	67%	76%	73%	72%																		
	Average Gain	-1.77	-1.21	-1.34																			
	Peak Gain	1.97	2.68	2.69																			
Antenna peak gain	2.69dBi																						