WHAT'S IN THE BOX?

Wireless Charging Clock Speaker	x 1
Audio Cable 50cm long, 3.5mm to 3.5mm	x 1
Charging Cable 50cm long USB to Micro USB - 5V/2A	x 1
User Manual	x1

Some phones may block the wireless charging.

Your device will have an internal amplifier and if it is playing digital files like MP3s, it will also have an integrated DAC (Digital Audio Converter). If you turn the volume up to 100%, your device will be sending a distorted signal. To avoid this, and to get the best quality from the speaker, we recommend that you do not turn your device any higher than 90% volume. Some devices output higher than others, so you may need to reduce the volume if you experience distortion.

Do not place other materials, like metal objects, magnets, and magnetic strip cards, between the mobile device and the wireless charge pad

When the mobile device is not placed on the charging surface accurately, your mobile device may not charge properly. If you use the wireless charger in areas with weak network coverage, you may lose your network reception

Please do not expose this device to moisture or heat sources. This is not a toy, not suitable for children under the age of 7.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

FCC Statement This device complies with part 15 and part 18 of the FCC Rules. Operation is Subject To the following two conditions: (1) This device may not cause harmful interference, and (2) this devicemust accept any interference received, including interference hart may cause undesired operation. Changes or modifications not explicitly approved by the partyresponsible for compliance could void the user's authority toogenate this equipment. Note: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 and part 18 of the FCC Rules. These limits are designed to providereasonable protection against harmful interference in a residential installation. This equipment generates, uses and carnataler adio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged totry to correct the interference by one or more of the following measures: • Reorient or tolocate the receiving antenna. • Increase the separation between the equipment form fract from that to which the receiver is connected.

connected. Consult the dealer or an experienced radio/TV technician for help. The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected. This device complies with Part 18 of the FCC Rules. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction may cause harmful interference to radio communications. If this equipment dees cause harm interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the


© 2018 Zeikos, Inc. iHip is a trademark of Zeikos, Inc. iPod, iPhone and iPad are trademarks of Apple Inc., The "Android" name, the Android logo, and other trademarks are property of Google LLC. Registered in the U.S. and other countries. The illustrated product and specifications may differ

slightly from that supplied. All other trademarks and trade names are those of their respective owners. United States and international patent pending. All Rights Reserved. For ages 12+up. This is not a toy. Designed by iHip, Manufactured in China.

A WARNING: Under Prop65, this product may expose you to chemical(s) which are known to the State of California, to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov



Limited One Year Warranty. Customer Service: 1-800-500-4434. To activate your product warranty go to our website. www.iHip.com & register this product.






following measures: Increase the separation between the equipment and any other radio device Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

ALARM CLOCK BT SPEAKER & WIRELESS CHARGER



.....

LAYOUT

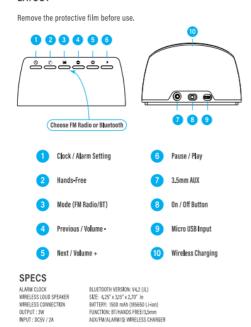

HOW TO USE

Make sure the device is fully charged before using. Please use the included micro USB cable. It will take about 2 hours to fully charge the device. Turn on the device using the **0 0**/**0FF** button.

FM RADIO

- The included Micro USB cable can serve as an antenna to improve the reception. Please insert it into the product before choosing FM mode.
 When choosing FM stations, short press the **S PAUSE/PLAY** button. T
- When choosing FM stations, short press the
 PAUSE/PLAY button. The device will automatically search and store the dedicated radio frequencies.
- Press
 O
 PREVIOUS and
 O
 INEXT to switch radio frequencies.

AUX LINE-IN

- Connect the AUX cable to the alarm clock speaker and your mobile phone.
- Device will switch to AUX function automatically.
- Play your favorite music (up to 4 hours of playtime on a full charge).

BLUETOOTH PAIRING

- Make sure you turn on Bluetooth mode on your phone or device.
- Make sure the wireless charging alarm clock is turned on.
- Press 3 MODE and choose Bluetooth.
- Find the device on your phone, then finish the connection.

PAIRING NAME: CLOCHGR

SETTING THE TIME

- Short press
 O
 CLOCK to set the time
- Set the hour by pressing 🏮 + or 🤞 -
- Press CLOCK again to set the minute
- Press CLOCK again to set the hour
- Press CLOCK again to set the Alarm hour
- Press CLOCK again to set the Alarm minutes
 Press CLOCK again to set ON/OFF of the Alarm

HANDS-FREE FUNCTION

- Make sure the Bluetooth mode is on and that your phone is conntected.
 Press the ² HANDS-FREE button to answer incoming calls and to end calls.
- When the phone rings, press the HANDS-FREE button twice to decline a call.
- When the phone does not ring, press the ${\sf HANDS}{\sf -}{\sf FREE}$ button twice to call back the last number (incoming or outgoing call).

WIRELESS CHARGING

- Make sure the product is connected to a power supply.
- Place the phone in the center on top of the ⁽¹⁾ wireless charging area to ensure that your phone will charge correctly.
- It will take the same time as a regular charger to fully charge your phone.

es arm