

## USER'S MANUAL

BRITEK ELECTRONICS CO., LTD.

FCC ID: 1L152

EUT:VOODOO CARD

FCC ID: 1L152  
DEC 11 1998

## FEDERAL COMMUNICATIONS COMMISSION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## CONTENTS

1.	INTRODUCTION
1.	GENERAL FEATURE DESCRIPTION
1.	FEATURES
2.	SUPPLYING REQUIREMENTS LIST
2.	SOFTWARE REQUIREMENTS
2.	SYSTEM REQUIREMENTS
3.	DISPLAY SUPPORT
3.	DRIVE SUPPORT
3.	WORKSTATION SUPPORT
3.	CONCLUDING THE WORKSTATION
4.	SOFTWARE UTILITIES
5.	DISCLAIMER
5.	SOFTWARE INFORMATION
5.	CONTINUING THE WORKSTATION
6.	WINDOWS 95 INSTALLATION
6.	DIRECTDRAW
6.	DIRECT3D
7.	WINDOWS NT 3.5X40
7.	OTHER API
7.	GUIDE3D DRIVER
8.	WINDOWS 95 NOTES
8.	DOS NOTES
8.	WINDOWS 95 NOTES
8.	WINDOWS NT NOTES
9.	CONTROL PANEL APPLET USAGE

SOFTWARE LICENSE STATEMENT  
Intellectual copyright laws protect the software described in this manual. You must not copy the software for any purpose other than making backup copies for the sole purpose of backing-up our software for protection against loss. The software must not be used on two or more machines at the same time.

LIMITED WARRANTY  
We warrant the physical diskettes and documentation enclosed in this package to be free of any defects in material and workmanship for a period of one year from the date of purchase. We sole and exclusive remedy will be, at our option, to replace or repair such hardware. We warrant to you that the hardware will be free from significant defects in materials and workmanship for a period of one year from the date of purchase. We sole and exclusive remedy will be to defective hardware will be, at our option, to replace or repair such hardware.

**SOFTWARE**  
We warrant the software is limited to defective products only and shall not cover any damages, including but not limited to the loss of profit, special, incidental, consequential and other similar claims. This warranty is limited to the original purchaser of the product and is not transferable. We will replace the defective products only when the original purchaser returns it to us. The remedy for workmanship for a period of 60 days from the date of purchase. This warranty is limited to the original purchaser of the product and is not transferable. We will replace the defective products only when the original purchaser returns it to us. The remedy for workmanship for a period of 60 days from the date of purchase. This warranty is limited to the original purchaser of the product and is not transferable. This warranty is limited to the original purchaser of the product and is not transferable.

**HARDWARE**  
We warrant to you that the hardware will be free from significant defects in materials and workmanship for a period of one year from the date of purchase. We sole and exclusive remedy will be to defective hardware will be, at our option, to replace or repair such hardware.

**DISCLAIMER**  
We do not warrant the performance of results you may obtain by using the software, hardware or documentation. We do not warrant the use of this product, in no event shall we be liable for any loss of profit or any other commercial damage, including but not limited to special, incidental, consequential or other damages.

**TRADEMARKS**  
Other trade names or trademarks belong to their respective owners.

**WARNING**  
Any changes or modifications to the equipment by the user not expressly approved by the guarantee or manufacturer could void the user's authority to operate such equipment.  
Only equipment certified to comply with Class B digital devices should be attached to this equipment, and must have shielded interface cables. Operation with a non-certified computer is likely to result in interference to radio and TV reception.

## 1. INTRODUCTION

The **Vulcan 2** Game Accelerator has been implemented with 3Dfx's Interactive Voodoo 2 game accelerator. That provides the highest performance 3D solution with full PC compatibility for multimedia graphics acceleration.

### 1.1 General Feature Description

Feature	Product Model
	<b>Vulcan 2</b>
2D Graphic Engine	NO
Integrated DAC	135 MHz
3D Setup/Rendering Engine	3Dfx Voodoo 2 chipset
3D Frame Buffer Size	4 MB
3D Texture Buffer Size	8 MB
Total Memory Size	12 MB
PCI v2.1 Bus interface	YES
3D Glasses support	NO

### 1.2 3D Feature Description

- Perspective correct texture mapping
- Bi-linear and tri-linear texture filtering
- Level-of-detail (LOD) MIP mapping
- Sub-pixel and sub-texel correction
- Polygonal-based Gouraud shading and texture modulation
- Full 24-bit rendering, dithered to 16-bit RGB
- Multiple texture formats including 8-bit compressed and 8-bit palettized formats
- Full bi-linear blending of palettized and compressed textures
- Anti-aliasing
- Depth buffering (16-bit linear, 22-bit effective)
- Alpha blending
- Per-pixel special effects: fog, transparency, translucency
- Texture compositing, morphing, animation
- Linear frame buffer access
- Triangle Setup Unit (TSU)
- Strips and Fans

### 1.3 Features

Vulcan 2 3D Game Accelerator

Support for PCI 2.0 and 2.1 spec slots (newer 2.0 slots)

Support for up to 2 Texture mapping units (TMU)

Support for Scan Line Interleave (SLI) Allows for 2 Voodoo 2 boards to be connected and operate as one board, doubling fill rate and increasing supported resolutions.

4 MB of Frame Buffer

PC Intel Pentium Pro

PC Intel Pentium II

Cyrix 6x86

AMD K5

AMD K6

Note: Some files may require sufficient floating pit resources for optimum performance. Running these files on a Cyrix or AMD CPU may yield poor performance.

### 1.5 Software Drivers List

- Windows NT 3.5/4.0
- DOS 6.22 or latest version
- Windows 95 or latest version
- Windows 98
- Windows 2000
- Windows NT and DOS.

### 1.7 Direct3D Support

Display mode	Frame Buffer	Refresh Rates	Color Depth
512X384 16bpp	No-z-buffer	2MB	60(72*),75,85,120
640X400 16bpp	With-z-buffer	2MB	70,75,85,120
640X480 16bpp	No-z-buffer	2MB	60,75,85,120
640X400 16bpp	With-z-buffer	2MB	24
512X384 16bpp	No-z-buffer	2MB	60(72*),75,85,120
640X480 16bpp	No-z-buffer	2MB	70,75,85,120
640X400 16bpp	With-z-buffer	2MB	60,75,85,120
800X600 16bpp	No-z-buffer	2MB	60,75,85,120
800X600 16bpp	With-z-buffer	2MB	24(16 ai 120hz)
1024X768 16bpp	No-z-buffer	4MB+SLI	60,75,85
1024X768 16bpp	With-z-buffer	4MB	16

DirectDraw, however Voodoo2 only supports Direct3D, full DirectDraw support is provided for Windows 95 Direct3D is actually supported via

### 1.8 Glide Support

Glide is 3DFX native API which is supported by 3DFX Interactive, Inc. Voodoo2 supports Glide 2.2 or higher based applications will run, however applications may not function with certain DAC configurations. (These earlier versions of Glide do not support other 3DFX hardware) Please see [www.3dfx.com](http://www.3dfx.com) for more information.

Glide on Voodoo2 supports the following full screen resolutions under Windows 95, Windows NT and DOS:

### 1.6 System Requirements

- Vacant PCI slot
- Minimum 16MB RAM, 32MB Recommended
- For Glide: MS-DOS® revision 6.22 or higher, Windows® 95 or Windows® NT 4.0
- For Direct3D/DirectDraw (Windows® 95 or Windows® 98)

### 1.7 Direct3D Support

Display mode	Frame Buffer	Refresh Rates	Color Depth
512X384 16bpp	No-z-buffer	2MB	60(72*),75,85,120
640X400 16bpp	With-z-buffer	2MB	70,75,85,120
640X480 16bpp	No-z-buffer	2MB	60,75,85,120
640X400 16bpp	With-z-buffer	2MB	24
512X384 16bpp	No-z-buffer	2MB	60(72*),75,85,120
640X480 16bpp	No-z-buffer	2MB	70,75,85,120
640X400 16bpp	With-z-buffer	2MB	60,75,85,120
800X600 16bpp	No-z-buffer	2MB	60,75,85,120
800X600 16bpp	With-z-buffer	2MB	24(16 ai 120hz)
1024X768 16bpp	No-z-buffer	4MB+SLI	60,75,85
1024X768 16bpp	With-z-buffer	4MB	16

**NOTE:**Resolutions used by Glide can only be set by the application.Not all games support all resolutions or allows the use of a resolution other the 640X480.

Other API are supported by using Glide as a layer,these API include;Renderware,Brender and 3DfxGL (3Dfx GLQuake Driver)

### 1.9 Hardware Board Installation

#### Single Board Installation

- 1) Shutdown the system and turn off the PC
- 2) Open the computer and locate a free PCI slot.
- 3) Remove the cover for that slot from the computer chassis
- 4) Place the Vulcan2 board into that slot and screw the board in.
- 5) Replace the computer cover.
- 6) Place the VGA monitor cable into the Vulcan2 Card.
- 7) Plug the pass-thru cable from the Vulcan2 card into the 2D card

**NOTE:**Please see the troubleshooting section to resolve any hardware installation problems.

#### Dual Board Installation for Scan Line Interleave (SLI)


- 1) Shutdown the system and turn off the PC
- 2) Open the computer and locate two free PCI slots next to each other
- 3) Remove the cover for both slots from the computer chassis.
- 4) Connect the SLI connector to both boards.
- 5) Carefully position both boards into the slots then screw the boards in. Ensure the SLI connector is installed correctly.
- 6) Replace the computer cover.
- 7) Place the VGA monitor cable into either of the two Vulcan2 cards.
- 8) Plug the pass-thru cable from the Vulcan2(the card the monitor is plugged into)into the 2D card.

### 1.10 Advanced Information

For more information, please refers to 3Dfx web site at:  
<http://www.3dfx.com/>

## 2 Hardware Information

### 2.1 Configuring the Vulcan 2

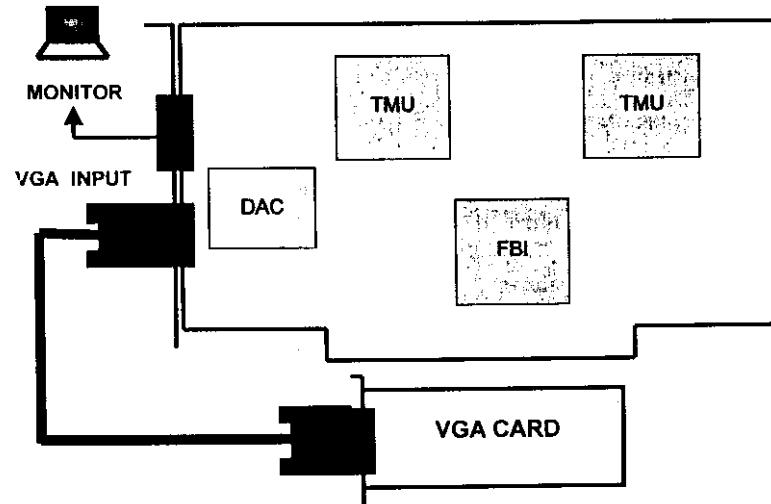

### 2.2 Understand your Vulcan 2

1. **Monitor Connector:** This connector accepts the video cable from the monitor, where the Vulcan 2 accelerator is attached.
2. **VGA input Connector:** This connector accepts the pas-thru cable from the VGA card (The cable is bundled in BOX.).

## Vulcan 2 3D Game Accelerator

The driver is compatible with DirectX. Please obtain a release of this software if you require DirectDraw/Direct3D acceleration.

### 3.1.2 Direct3D

The driver contains a Direct3D HAL driver. This enables hardware acceleration of Direct3D applications. Some features are currently still under development and there are limitations which should be understood before attempting to run Direct3D or Related Mode Direct3D programs.

### 3.1.3 Other API

Other API are supported by using Glide as a layer, these API include:

### 3.2 Windows NT 3.5x/4.0

Windows NT driver diskette into floppy disk A, or put

1. Insert the Windows NT driver diskette into floppy disk A.
2. Select \Voodool\ Vulcan2\ Winnt directory.
3. Run V2nt.exe
4. It will lead you to setup Glide driver in Windows NT.

Before installing the video driver, make sure Windows NT is installed in VGA mode  
drivers from Microsoft web site), or the driver may not work smoothly.  
Please install the Windows NT service pack 3 package first (you can download these

Glide 2.3 or newer version title must be obtained.  
Glide car only be set by the application. Not all games support  
all resolutions or allows the use of a resolution other than 640x480

## VIEWTOP

## 3. SOFTWARE UTILITIES

### Vulcan 2 3D Game Accelerator

To facilitate the smooth installation of the optimized display drivers and utility software provided with your multimedia accelerator, you should read the instructions in this section carefully prior to attempting installation. The optimized display drivers for your multimedia accelerator have been provided on diskette or compact disk (CD). If you received diskettes with your accelerator and have not already done so, first make a backup copy of the driver installation diskette(s) and store the original in a safe place.

Refer to your operating system manual for details on how to duplicate a diskette. You should use the backup copy you have made for all subsequent steps. If you received driver CD with your accelerator, see CONENTS.TXT for more detail.

Windows 95 should be booted on the VGA. During the booting of Windows 95, a message of "New Hardware Found

PCI Multimedia Video Device" must appear on the screen. Insert the Windows 95 driver diskette into floppy disk A, or put VIEWTOP

4. Select the "Driver from Disk Provided by Hardware Manufacturer" and From Disk" will be pop on your screen.  
5. Specify the path A:\ or X:\Voodool\Vulcan2\Win95 and select the "OK" button in the "Install From Disk" window (X:CD Driver).

6. After all new drivers are installed, a sub-window will be displayed asking you to restart Windows 95 now.  
7. Remove the diskette from floppy drive A and then press "Yes" button to restart the Windows 95 now. Otherwise, use the normal procedure to restart Windows 95 now. Click on the "Shut Down" icon and select the "Restart the Computer" option.

The driver contains support for hardware optimized DirectDraw functionality, which is used by DirectDraw games as well as by the DirectDraw

### 3.1.1 DirectDraw

### 3.3 Glide 3D driver

Glide supports Windows 95, Windows NT 3.51, 4.0, MS-DOS, and MAC O/S. There is no native support in the development release for OS/2™ or Linux.

#### 4 CONTROL PANEL APPLET USAGE


Nearly all settings pertaining to Voodoo2 can be adjusted with the Display Properties Control Panel and the Gamma toolbar applets. The Windows 95 Retail Drivers install the Voodoo2 Control Panel and by the Windows NT driver kit. Any options that cannot be adjusted via the control panel or options that can be manually adjusted are listed in the next section entitled, adjusting Settings Manually.

##### **Voodoo2 Control Panel**

To open the Control Panel applet, click Start, Settings, and Control Panel Display.

##### **Voodoo2 Page**

The Voodoo2 page is as follows:

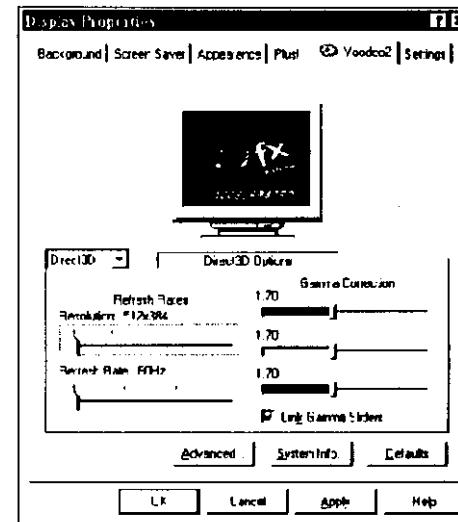


*Options available on this page:*

The drop-down box chooses which API to set Refresh Rate and Gamma settings

**Vulcan 2 3D Game Accelerator**

for. The initial setting is Direct3D. To adjust Glide Refresh Rate and Gamma settings, switch the drop down from Direct3D to Glide? The selected API is displayed to the right of the drop-down.

Description	Default	Advanced Properties
Refresh Rates	Disables Monitor Refresh Rates	Displays which resolution the refresh rate is to be changed for.
Resolution (Value on Slider)	Use selected options and return to the Voodoo2 Page	Displays the refresh rate to use with the Voodoo2 Page
Gamma Correction	Adjusts Red Gamma setting.	Adjusts Blue Gamma setting.
System Info....	Refresh Rate (Value on Slider)	Link Gamma Sliders
Advanced Properties Dialog Box	Default	Opens the Advanced Properties dialog box displaying the Voodoo2 Configuration.
Defaults	Reverts all selections to Default Settings.	Reverts all selections to Default Settings.

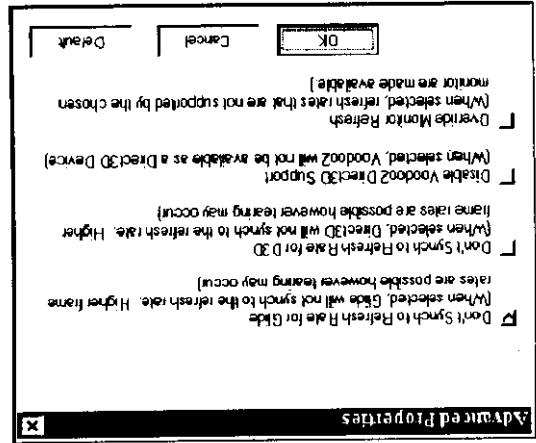

The Advanced Properties dialog box is as follows:

Description	Default	Advanced Properties Dialog Box
Refresh Rate (Value on Slider)	Refresh Rate (Value on Slider)	Refresh Rate (Value on Slider) (Value on Slider)
Resolution (Value on Slider)	Link Gamma Sliders	Link Gamma Sliders
Gamma Correction	Red Slider (Value on Slider)	Red Slider (Value on Slider)
System Info....	Advanced Properties Dialog Box	Advanced Properties Dialog Box
Advanced Properties Dialog Box	Default	Default

**Internet Support**

If you need more information about VIEWTOP series products.

Please check our Internet web site.

<http://viewtop.com/>

You can download the latest version of driver or update the bios from  
our web site.

**Customer Feedback**

If you have any idea or suggestion about our products, please kindly  
tell us. We will appreciate your kindly suggestions and ideas.

You can contact [britek02@ms6.hinet.net](mailto:britek02@ms6.hinet.net) for internet technical support.

Thanks again for buying our product.

We wish you can enjoy it and love it.