

EchoPoint Signpost Installation Guide

Version 1.0



First edition (September 2001)
Part number 805-03634-001 Rev. C

Copyright © 2002 Savi Technology, Inc. All rights reserved. Printed in the United States of America.

Information in this manual is subject to change without notice and does not represent a commitment from the vendor. The software and/or databases described in this document are furnished under a license agreement or nondisclosure agreement. The software and/or databases may be used or copied only in accordance with the terms of the agreement. It is against the law to copy the software on any medium except as specifically allowed in the license or nondisclosure agreement.

Savi, Batch Collection, and TyTag are registered trademarks and Adaptive Routing, EchoPoint, EchoPoint Signpost, Enhanced Batch Collection, Hand Held Interrogator (HHI), Savi Asset Manager, Savi Fixed Interrogator, Savi GateReader, Savi Mobile Manager, Savi MobileReader, Savi Retriever, Savi SDK, Savi SmartChain, Savi System, Savi Tools, SaviReader, SaviTag, and SealTag are trademarks of Savi Technology, Inc.

Other product names mentioned in this guide may be trademarks or registered trademarks of their respective owners and are hereby acknowledged.

This manual was produced by the Savi Technology Publications Group. Please address any comments or requests for updates to:

Savi Technology, Inc.
Publications Manager
615 Tasman Drive
Sunnyvale, CA 94089-1707

Phone: 1-408-743-8000
Facsimile 1-408-543-8650

Web Site: <http://www.savi.com>

Author: Marlowe Conde

Contributors: Joseph Chan, John Gamble, Frank Heigh, Ralph Orton, Gustavo Padilla

Layout Design and Production: Marlowe Conde

U.S. Regulatory Approvals

EchoPoint Signpost

**Models: SP-600-101, SP-600-111,
SP-600-201, and SP-600-211**

Federal Communications Commission (FCC) Notice

The Federal Communications Commission has established technical standards regarding radio frequency energy emitted by computer devices. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference with radio/TV reception. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Changes or modifications to this equipment that are not expressly approved by Savi Technology could void the warranty and the authority to operate this equipment.

Savi Technology is not responsible for radio/TV interference caused by using unauthorized cable or by making unauthorized changes to this equipment.

Product Safety

The EchoPoint Signpost SP-600-101, SP-600-111, SP-600-201, and SP-600-211 are ETL listed (UL 1950).

Network Adapter

Model: SA-600-02

Federal Communications Commission (FCC) Notice

The Federal Communications Commission has established technical standards regarding radio frequency energy emitted by computer devices. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference with radio/TV reception. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Changes or modifications to this equipment that are not expressly approved by Savi Technology could void the warranty and the authority to operate this equipment.

Savi Technology is not responsible for radio/TV interference caused by using unauthorized cable or by making unauthorized changes to this equipment.

International Regulatory Approvals

EchoPoint Signpost

**Models: SP-600-101, SP-600-111,
SP-600-201, and SP-600-211**

Declaration of Conformity

Hereby, Savi Technology, Inc.
615 Tasman Drive

Sunnyvale, California 94089-1707

declares that the EchoPoint Signpost models SP-600-101, SP-600-111, SP-600-201, and SP-600-211 are in compliance with the essential requirements and other relevant provisions as listed in the International Compliance table below.



0889



International Compliance

English	Hereby, <i>Savi Technology, Inc.</i> , declares that this EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Finnish	<i>Savi Technology, Inc.</i> vakuuttaa täten että EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Dutch	Hierbij verklaart <i>Savi Technology, Inc.</i> dat het toestel EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG. Bij deze verklaart <i>Savi Technology, Inc.</i> dat deze EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) voldoet aan de essentiële eisen en aan de overige relevante bepalingen van Richtlijn 1999/5/EC.
French	Par la présente <i>Savi Technology, Inc.</i> déclare que l'appareil EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

French	Par la présente, <i>Savi Technology, Inc.</i> déclare que ce EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) est conforme aux exigences essentielles et aux autres dispositions de la directive 1999/5/CE qui lui sont applicables.
Swedish	Härmed intygar <i>Savi Technology, Inc.</i> att denna EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Danish	Undertegnede <i>Savi Technology, Inc.</i> erklærer herved, at følgende udstyr EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
German	Hiermit erklärt <i>Savi Technology, Inc.</i> , dass sich dieser/diese/dieses EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet". (BMW)
	Hiermit erklärt <i>Savi Technology, Inc.</i> die Übereinstimmung des Gerätes EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) mit den grundlegenden Anforderungen und den anderen relevanten Festlegungen der Richtlinie 1999/5/EG. (Wien)
Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ <i>Savi Technology, Inc.</i> ΔΗΛΩΝΕΙ ΟΤΙ EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Italian	Con la presente <i>Savi Technology, Inc.</i> dichiara che questo EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Spanish	Por medio de la presente <i>Savi Technology, Inc.</i> declara que el EchoPoint Signpost (models SP-600-101, SP-600-111, SP-600-201, and SP-600-211) cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Portuguese	<i>Savi Technology, Inc.</i> declara que este EchoPoint Signpost SP-600-101, SP-600-111, SP-600-201, and SP-600-211 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Product Safety

CB Scheme (IEC 60950).

Conventions in This Guide

The following table explains guide conventions and typography usage.

Guide Conventions




<i>Example</i>	<i>Meaning and Use</i>
Note:	Notes call attention to facts or advice that deserve special attention.
	Caution notices call attention to the possibility of damaging the product, the system, or your work (for example, potential loss of data).
	Warning notices call attention to the possibility of injury to people.
	Examples provide a scenario to further explain the preceding direction or procedure.
Terminal Locked	Bold type is used for prompts, field names, and other text as displayed on the screen.
A:\INSTALL	Bold type is also used for text you enter exactly as shown.
1005 DATA	Monospaced type is used for system messages, examples of data files, program code, and other text where column alignment is important.
<i>name.bmp</i> or <i>tag_id</i>	Italic type is used for emphasis of a word or phrase that is new or especially important.
Ctrl + Z	Used for a keyboard control codes or manual keystrokes. This example tells you to hold the Ctrl key while you press the Z key.

Table of Contents

- U.S. Regulatory Approvals iii
 - EchoPoint Signpost iii
 - Network Adapter iv
- International Regulatory Approvals v
 - EchoPoint Signpost v
- Conventions in This Guidevii
- Chapter 1: Introduction**
 - EchoPoint Signpost Description 1-2
 - Models SP-600-201 and SP-600-211 1-2
 - Model SP-600-101 and SP-600-111. 1-3
 - Specifications 1-4
 - Getting Assistance. 1-5
 - Customer Support. 1-5
- Chapter 2: Hardware Installation**
 - Required Materials and Equipment. 2-2
 - Preparing the Site 2-3
 - Mounting the Signposts 2-5
 - Mounting the Model SP-600-201 or SP-600-211 Signpost 2-5
 - Mounting the Model SP-600-101 or SP-600-111 Signpost 2-8
 - Cabling the Model SP-600-201 or SP-600-211 Signpost 2-10
 - Cabling the Model SP-600-101 or SP-600-111 Signpost 2-14
 - Signpost Synchronization 2-16
- Chapter 3: Signpost Configuration**
 - Connecting Signposts to a Computer 3-2
 - Configuring Signpost Operation Settings 3-3

1

Introduction

This guide describes how to install the EchoPoint Signpost, including hardware installation and using the software to configure the Signpost.

Signposts are short-range transmitters that provide their identity information to the EchoPoint Series 600 tags (Tags) that are within range. A Tag uses this information to relay positional information about itself to an EchoPoint Reader SR-600-101 (Reader). The Reader then provides this information to the Savi SmartChain system software where it is used for asset management.

This chapter introduces the Signpost types, and provides references to other chapters having detailed Signpost setup, installation, and configuration information. EchoPoint Signposts are used in conjunction with other Savi equipment, including the Savi Site Managers and Readers. Installation and use of these components is documented in their respective user guides. For information on setting up the EchoPoint Reader SR-600-101, refer to the *EchoPoint Reader SR-600-101 Installation Guide*. For information on setting up a Savi Site Manager, refer to the *Site Manager Installation Guide*.

EchoPoint Signpost Description

The EchoPoint Signpost is available in four configurations. Models SP-600-201 and SP-600-211 have an external antenna. Models SP-600-101 and SP-600-111 have an internal antenna.

Models SP-600-101 and SP-600-201 operate at a nominal frequency of 132 kHz. Whereas, Models SP-600-111 and SP-600-211 operate at a lower nominal frequency of 123 kHz.

Models SP-600-201 and SP-600-211

The EchoPoint Signpost SP-600-201 and SP-600-211 have a two-part assembly consisting of a controller attached to an antenna. They are powered by AC or DC, with the AC having a range of 85 to 264 Volts at 47 to 440 Hz, while the DC range is 11 to 30 Volts.

Models SP-600-201 and SP-600-211 Signpost Cables and Hardware

Signpost Models SP-600-201 and SP-600-211 installation materials include:

- DC, 115 VAC, 220 VAC power cable (one supplied)
- Signpost configuration software
- Mounting kit
- Sensor cables (optional)
- Synchronization cables (optional)

Models SP-600-101 and SP-600-111

The EchoPoint Signpost SP-600-101 and SP-600-111 have a one-part assembly consisting of a controller with a built-in antenna. Like the Model SP-600-201 or SP-600-211 Signpost, the Model SP-600-101 and SP-600-111 Signposts are powered by AC or DC, with the AC having a range of 85 to 264 Volts at 47 to 440 Hz, while the DC range is 11 to 30 Volts.

Models SP-600-101 Signpost Cables and Hardware

Signpost Models SP-600-101 and SP-600-111 installation materials include:

- DC, 115 VAC, 220 VAC power cable (one supplied)
- Signpost configuration software
- Mounting feet
- Sensor cables (optional)
- Synchronization cables (optional)

Specifications

EchoPoint Signpost specifications are documented in Table 1-1.

Table 1-1 Signpost Specifications

<i>Signpost Type</i>	<i>Specification</i>	
Model SP-600-201 and SP-600-211 Signpost	Power	AC or DC
	AC range	85–264 Volts at 47 to 440 Hz, 800/400 ma
	DC range	11–30 Volts, 800 ma
	Weight	14.7 pounds (with controller mounted) 2 pounds (controller)
	Dimensions	19.5" x 109.25" x 4.8" 19.5" x 109.25" x 2.5" (without controller) 7.5" x 7.5" x 3" (controller)
Model SP-600-101 and SP-600-111 Signpost	Power	AC or DC
	AC range	85–264 Volts at 47 to 440 Hz, 800/400 ma
	DC range	11–30 Volts, 800 ma
	Weight	2.9 pounds
	Dimensions	10.5" x 7" x 3" (includes the protrusion for the connectors without the cables attached)

Getting Assistance

If you have trouble with the product, after you have checked your connections and the EchoPoint Signpost Installation Guide, contact Savi Customer Support.

Customer Support

To contact Savi Customer Support:

- Telephone 1-888-994-SAVI (7284) between 8:00 a.m. and 5:00 p.m., Pacific Time
- Or send e-mail to **help@savi.com** at any time

Whether you contact Savi by telephone or e-mail, please have the exact sequence of operations (if possible) that caused the problem and the following information available:

- Site location
- Incident description
- Estimated severity level of the incident
- Model number and version
- Serial number
- Computer type (Gateway, Dell, etc.) and model
- Operating system and service pack level
- Network protocol

2

Hardware Installation

This chapter covers installing the EchoPoint Signpost Model SP-600-201, SP-600-211, SP-600-101, and SP-600-111 hardware, including the required tools and materials, site preparation, and making the physical installation and power connections.

Required Materials and Equipment

The required materials, equipment, and tools for installing all EchoPoint Signpost models are listed in Table 2-1.

Table 2-1 Material, Equipment, and Tools Required for Installing Signposts

<i>Signpost</i>	<i>Required Material, Equipment, and Tools</i>
SP-600-201 and SP-600-211	Model SP-600-201 or SP-600-211 Signpost Power source: 115 to 220 VAC, or 11 to 30 VDC Mounting hardware RS-232 cable Computer with Signpost configuration software installed Optional equipment, including sensor cable and synchronization cables
SP-600-101 and SP-600-111	Model SP-600-101 or SP-600-111 Signpost Power source: 115 to 220 VAC, or 11 to 30 VDC Mounting feet RS-232 cable Computer with Signpost configuration software installed Optional equipment, including sensor cable and synchronization cables

Preparing the Site

Mounting a Signpost requires no specific site preparation. The criteria for placement and the preparation include the considerations listed in Table 2-2.

Table 2-2 Site Preparation Considerations

<i>Consideration</i>	<i>Addressed by ...</i>
<i>Safety</i>	Avoid selecting a Signpost installation location where harm to the equipment or personnel is possible.
<i>Power</i>	Select an installation location where power is accessible.
<i>Space</i>	Allow sufficient space to install the Signpost.
<i>Coverage</i>	<p>Make sure that the installation location is appropriate for capturing data.</p> <p>Models SP-600-201 and SP-600-211 Signpost coverage is a rectangle with rounded corners that is approximately 12 feet by 10 feet, measured on the floor under the Signpost antenna.</p> <p>Models SP-600-101 and SP-600-111 Signpost coverage is a circle with a radius that is approximately 6 feet.</p> <p>Note: The exact size and shape of these patterns is dependent on several parameters, such as initial power settings during installation, ambient noise levels, and nearby obstructions. When installing, you need to experiment to determine actual performance based on needs.</p>
<i>Placement</i>	Signposts should be placed adjacent to a portal or other choke point, covering an area where the assets must pass or be stored.

Preparing the Site

Table 2-2 Site Preparation Considerations

<i>Consideration</i>	<i>Addressed by ...</i>
<i>Locations not permitted</i>	Signposts must not be used in areas not permitted by government regulation. Savi can help with determining applicable countries and locations.
<i>Overhead support for Model SP-600-201 and SP-600-211 Signposts</i>	Determine the layout and capacity of the overhead structure that will be supporting the Signpost Model SP-600-201 and SP-600-211 assemblies, including the Signpost and antenna (weight 14.7 pounds). Securely attach the mounting hardware to structural members such as joists, girders, purlins, headers, and beams. For more information on mounting the Model SP-600-201 or SP-600-211 Signpost, see “Mounting the Signposts” on page 2-5.

Mounting the Signposts

This section covers the installation procedures for Model SP-600-201, SP-600-211, SP-600-101, and SP-600-111 Signposts.


Mounting the Model SP-600-201 or SP-600-211 Signpost

Model SP-600-201 and SP-600-211 Signposts can be hung adjacent to a portal or other choke point using the supplied installation hanger kit. The actual installation is dependent on the individual circumstances and how power is to be supplied, but a number of tasks need to be performed in all cases.

Mounting the Signposts


- » **To mount a Model SP-600-201 or SP-600-211 Signpost:**
 1. Attach a removable 1/8 inch link to each of the four mounting brackets at the four corners of the unit.

Figure 2-1 Removable Link

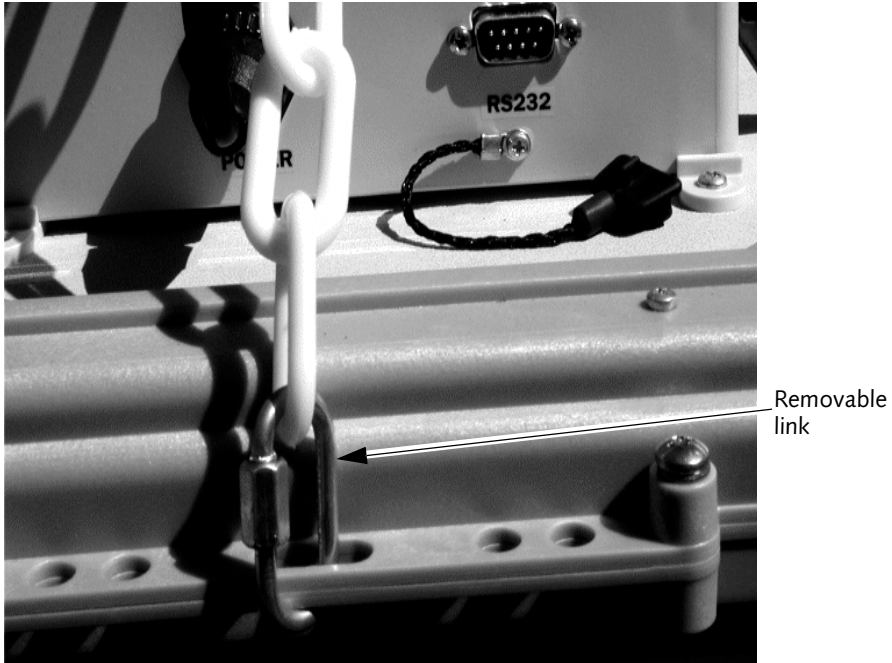

2. Using two lengths of plastic chain, attach each at both ends to the four removable links, as shown in Figure 2-1 and Figure 2-2.

Figure 2-2 Attaching Chain

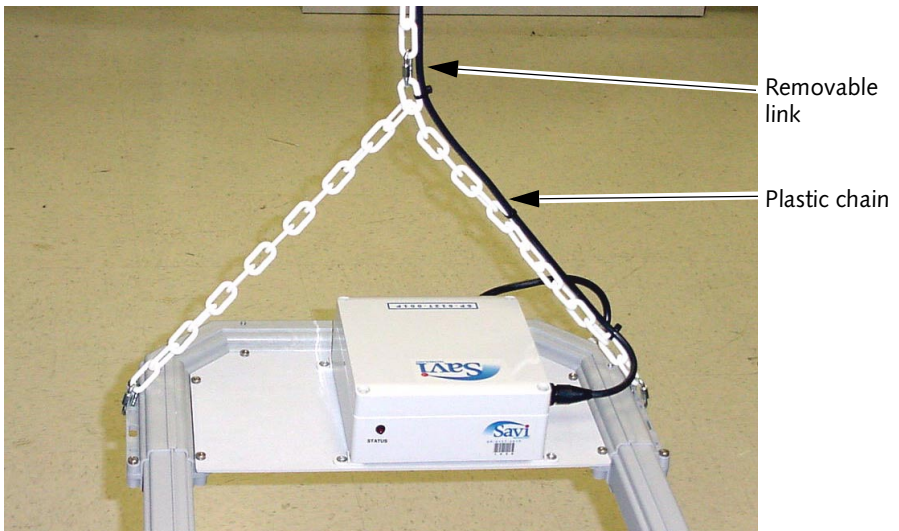

3. Attach another removable link to the center of the chain, as shown in Figure 2-2 above.
4. Attach the top removable link to an appropriate rope, cable, or chain and fasten to a 3/8 inch eye screw or eye bolt (minimum 1-1/2 inch penetration into solid material, or through bolt).
5. Secure the power cord to the chain and route as required.

Mounting the Model SP-600-101 or SP-600-111 Signpost

Model SP-600-101 and SP-600-111 Signposts are supplied with mounting feet. The actual installation is dependent on the individual circumstances and how power is to be supplied, but a number of tasks need to be performed in all cases.

» **To mount a Model SP-600-101 or SP-600-111 Signpost:**

1. Attach the mounting feet.

Figure 2-3 below shows the mounting feet with the self-tapping screws that attach them to the Signpost.

Figure 2-4 on page 2-9 shows a single mounting foot attached to the Signpost. In this case it is mounted at an angle, but the foot can be turned at different angles.

Figure 2-3 Mounting Foot and Attachment Screw


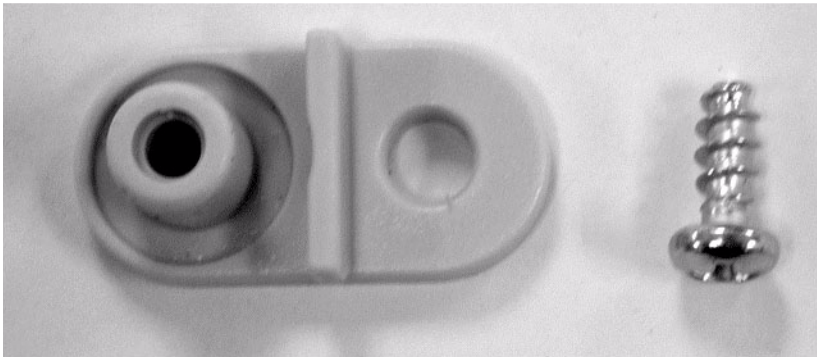


Figure 2-4 Mounting Foot Attached to Model SP-600-101 or SP-600-111 Signpost

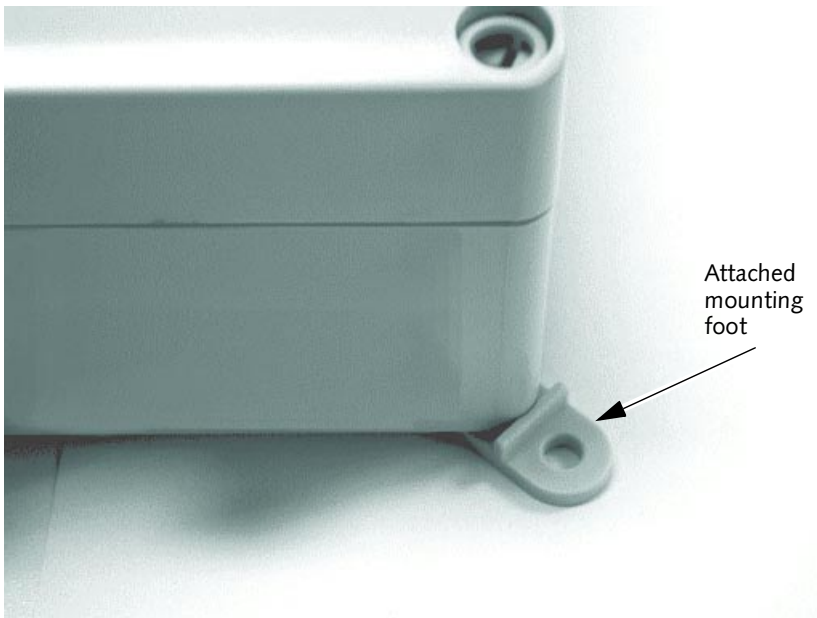

2. Attach the mounting feet to the mounting surface.

DO NOT attach the mounting feet to drywall only, unless the drywall is backed by solid structural material, in which case screws need to penetrate a minimum of 3/4 inch into solid material.

Cabling the Model SP-600-201 or SP-600-211 Signpost

The only cabling required for a basic installation is operating power. This needs to be done in accordance with applicable safety regulations. All cables should be routed and protected in a manner which precludes damage to them or harm to personnel; for example, unsecured extension cords left across access-ways or where assets or asset moving equipment can damage them.

This section does not include connecting the Signpost to a computer with a serial cable for Signpost software configuration. That activity is covered in Chapter 3, “Signpost Configuration.”

The connectors and LED shown in Table 2-3 are available on a Model SP-600-201 or SP-600-211 Signpost.

Table 2-3 Model SP-600-201 and SP-600-211 Signpost Connectors and LEDs

<i>Connectors and LEDs</i>	<i>Description</i>
Power	The input power is connected here.
RS-232	Used to connect to a computer for setup and diagnostics by installers and technicians.
Antenna	The external loop antenna connects here.
Sync In	Used to synchronize 2 to 4 Model SP-600-201 or SP-600-211 Signposts to cover an area larger than is possible with a single Signpost. This connector can also accept DC volts from another Signpost to avoid running separate power lines when two or more Signposts are synchronized.
Sync Out	Used to synchronize 2 to 4 Model SP-600-201 or SP-600-211 Signposts to cover an area larger than is possible with a single Signpost. This connector can also output DC volts to another Signpost to avoid running separate power lines when two or more Signposts are synchronized.
Sensor 1	A closure on these two pins will trigger a predefined Signpost action.
Sensor 2	A closure on these two pins will trigger a predefined Signpost action.
Status	This LED indicates when power is applied and the Signpost mode of operation: On ½ second, off ½ second indicates normal operation On 1 second, off 1 second indicates the Signpost is off but powered On continuously indicates the Signpost is transmitting a CW signal

Mounting the Signposts

» **To cable a Model SP-600-201 or SP-600-211 Signpost:**

No cabling is required for the Model SP-600-201 or SP-600-211 Signpost and its antenna. This connection has already been made, as shown in Figure 2-5.


Figure 2-5 Model SP-600-201 or SP-600-211 Signpost Antenna Connection



1. Run the appropriate power cable to the Signpost.
2. Connect the power cable to the Signpost Power connector, as shown in Figure 2-6.

Note: *The socket-outlet shall be installed near the equipment and shall be easily accessible.*

Figure 2-6 Model SP-600-201 or SP-600-211 Signpost Power Connection

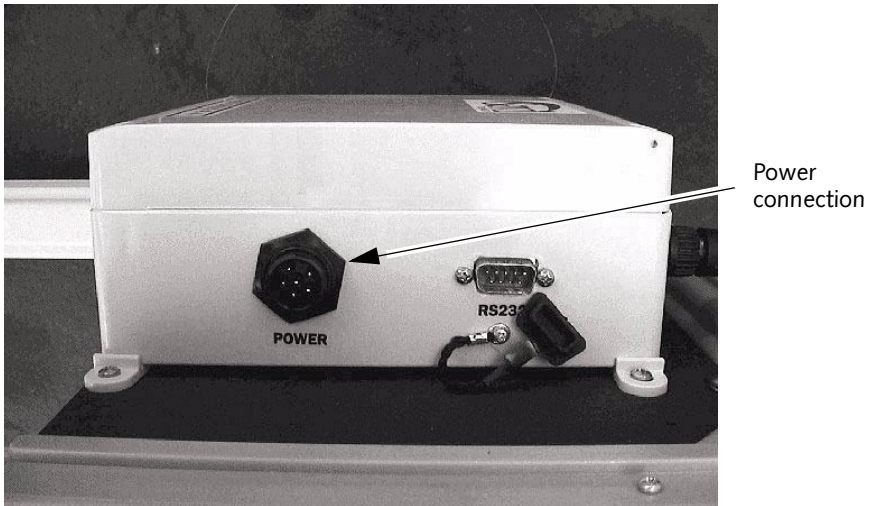

3. Continue with configuration using the Signpost configuration software.

See “Configuring Signpost Operation Settings” on page 3-3.

Cabling the Model SP-600-101 or SP-600-111 Signpost

The connectors and LED shown in Table 2-4 are available on a Model SP-600-101 and SP-600-111 Signpost.

Table 2-4 Model SP-600-101 and SP-600-111 Signpost Connectors and LEDs

<i>Connectors and LEDs</i>	<i>Description</i>
Power	The input power is connected here.
RS-232	Used to connect to a computer for setup and diagnostics by installers and technicians.
Sync In	Used to synchronize 2 to 4 Model SP-600-101 or SP-600-111 Signposts to cover an area larger than is possible with a single Signpost. This connector can also accept DC volts from another Signpost to avoid running separate power lines when two or more Signposts are synchronized.
Sync Out	Used to synchronize 2 to 4 Model SP-600-101 or SP-600-111 Signposts to cover an area larger than is possible with a single Signpost. This connector can also output DC volts to another Signpost to avoid running separate power lines when two or more Signposts are synchronized.
Sensor 1	A closure on these two pins will trigger a predefined Signpost action.
Sensor 2	A closure on these two pins will trigger a predefined Signpost action.
Status	This LED indicates when power is applied and the Signpost mode of operation: On ½ second, off ½ second indicates normal operation On 1 second, off 1 second indicates the Signpost is off but powered On continuously indicates the Signpost is transmitting a CW signal

» **To cable a Model SP-600-101 or SP-600-111 Signpost:**

1. Cable the Model SP-600-101 or SP-600-111 the same as the Model SP-600-201 or SP-600-211.

For cabling, the Model SP-600-101 and SP-600-111 are identical to the cabling for the Model SP-600-201 or SP-600-211 except that the Model SP-600-101 and SP-600-111 have an internal antenna.

See “Cabling the Model SP-600-201 or SP-600-211 Signpost” on page 2-10.

2. Continue with configuration using the Signpost configuration software.

See “Configuring Signpost Operation Settings” on page 3-3.

Signpost Synchronization

For a transmit group to work, the Sync cable must be connected between the Signposts. These optional cables are available from Savi Technology in variable lengths.

» **To cable a Signpost for synchronization:**

1. Connect the female end of the cable to the Sync In connector of the Signpost.
2. Connect the male end of the cable to the Sync Out connector of another Signpost in the synchronized group.
3. Create group number assignments.

See “Configuring Signpost Operation Settings” on page 3-3.

3

Signpost Configuration


Signpost operation requires that you configure some Signpost parameters using the Signpost configuration software application. This chapter provides instructions for connecting Signposts to the computer and configuring Signposts using the software.

Note: It is assumed that the Signpost configuration software application is installed on the computer being used to configure a Signpost.

Connecting Signposts to a Computer

Signposts are connected to a computer with an RS-232 serial connection. All Model SP-600-201, SP-600-211, SP-600-101, and SP-600-111 Signposts have an RS-232 port which is temporarily used for configuration with Signpost configuration software when the Signpost is installed. Figure 3-1 shows the serial ports for the Model SP-600-201 Signpost. The Model SP-600-211, SP-600-101, and SP-600-111 RS-232 port is similar.

Figure 3-1 Model SP-600-201 Signpost RS-232 Port

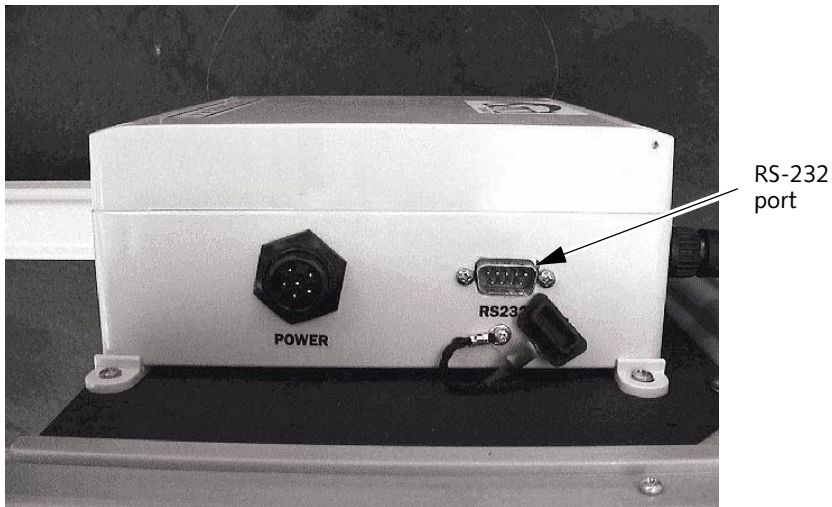

Configuring Signpost Operation Settings

Either before or after the Signpost is installed, the installer should set and verify the following settings for operation. This activity is performed using a computer having the Signpost configuration software application installed.

Before verifying these settings, you need to connect the computer to the Signpost, which is documented in “Connecting Signposts to a Computer” on page 3-2.

» **To verify the operation settings:**

The following Signpost configuration application parameters need to be verified:

1. Configure the Signpost ID (1 to 65535)

The Signpost ID should be a unique number in the facility. The Signpost can be identified in the system by associating this number with a description in the Site Manager configuration.

2. Transmit group number (0 to 10)

The Transmit group number is used when a number of Signposts are transmitting at the same time or a different time. The factory setting is 0. The Signpost will not synchronize when the group number is 0. When you program a number from 1 to 10, Signposts having the same group number will transmit simultaneously. Otherwise, they transmit at a different time.

3. Beacon Control on/off

The Beacon Control on/off option is used to program the tag whenever changing the beacon mode of the tag is required. When this option is disabled, the tag remains in the same mode. When the option is enabled, the tag beacon mode will be changed according to the command.

Configuring Signpost Operation Settings

4. Power level

Generally, the maximum setting of 1023 is used, but this number can be decreased to reduce power; the higher the number, the higher the power. However, range does not increase linearly with an increase in the power level, and may require a number of trial settings to achieve the appropriate power level.

5. Tx mode

The Tx mode should be set to normal mode.

6. Status

The version should be verified so that all Signposts are compatible with the system.