



INSTALLING BATTERIES

IMPORTANT!

- Do not leave batteries in the vehicle or the transmitter when the toy is not in use.
- Do not use old and new batteries together.
- Do not mix different types of batteries. Only batteries of the same or equivalent type as recommended are to be used. (e.g. alkaline and manganese, or other non-alkaline batteries)
- Dispose of old batteries in the proper manner; do not burn or place near fire.
- The supply terminals are not to be short-circuited.
- Do not use for children under three years.

BATTERY REQUIREMENTS

- The Vehicle requires three "AAA" batteries, so the transmitter does.

INSTALLING THE BATTERIES


TRANSMITTER

Removal of the battery cover requires a "Phillips head" screwdriver. See Figure 1. After removing this screw, slide the cover downward to remove. Place the "AAA" battery in position so that the (+) and (-) are in the proper alignment as noted. See Figure 2. Replace screw to battery cover.

Figure 1



Figure 2

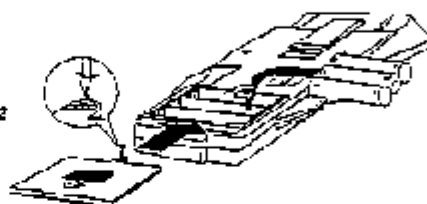

VEHICLE

Removal of the battery cover requires a "Phillips head" screwdriver. After removing this screw, slide the cover downward to remove. See Figure 3. Place three new batteries in position so that the (+) and (-) are in the proper alignment as noted. Replace the screw to the battery cover. See Figure 4.

Figure 3


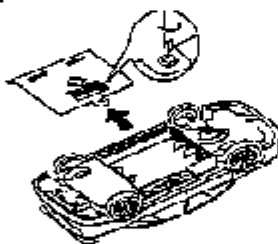


Figure 4

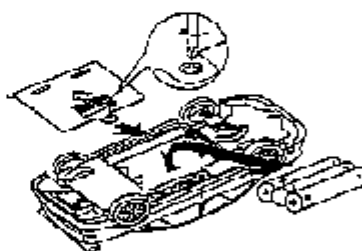

OPERATING R/C CAR

IMPORTANT!

- Do not use vehicle in mud, water, snow, or sand.
- Do not play with vehicle in the street.
- Do not crash vehicle into any object at high speeds.
- When the vehicle slows down install new or freshly charged batteries.
- Clean the vehicle with a damp paper towel after operating. (Do not use any chemicals to wipe off car)
- Do not leave vehicle in direct sunlight for lengthy periods.

OPERATING CAR

1. Turn the car switch to "ON". (Located on bottom of car) See Figure 5.
2. Put antenna into the transmitter, then pull it longer. See Figure 6.

Figure 5


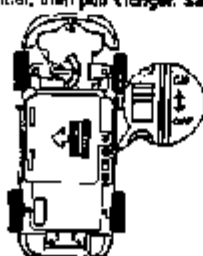



Figure 6

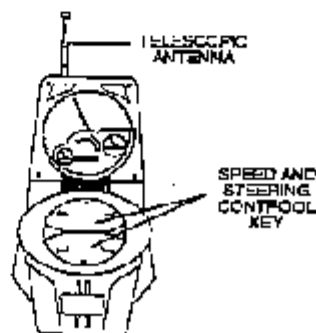

11 JAN 2000

№2.15.73


3. The Vehicle will move forward or reverse when press speed control key. See Figure 7.
4. Release both control key, the vehicle will stop. See Figure 8.
5. Return of the vehicle is controlled by return key. See Figure 9.
6. Do not let vehicle get out of transmitting range or you will have no control.

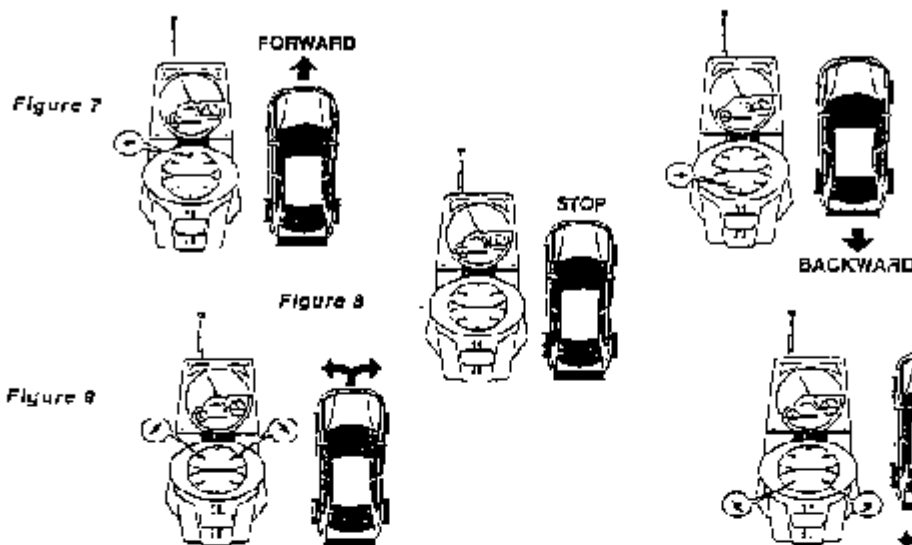

WHEEL ALIGNMENT

Your steering can be adjusted with the trim switch located on the bottom chassis area. Turn either left or right until you have made the adjustment to maintain a straight path of movement. See Figure 10.

Figure 10

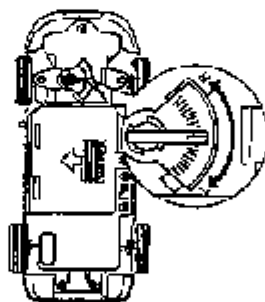

THINGS YOU SHOULD KNOW

- Radio interference can cause your car to react strangely.
- Another vehicle operating on the same frequency can disrupt your controlling the vehicle.
- CB's, cellular telephones, two way radios, and other transmitting devices, and high tension wires may cause interference with operation.
- Your vehicle can sometimes cause interference with televisions or even radio reception. Move to another area if you notice this occurrence.

NATURE POWER OF SUPPLY

Receiver: 4.5V = 1.2A

Transmitter: 4.5V = 0.12A

ITEM NO.
P/N
MCS P/N