

## INSTALLATION INSTRUCTIONS

*Insert image of thermostat*

**Designed in the USA.**

**NOTE:** Read the entire instruction manual before starting the installation.




Mark QR AS FPO with Mobile Onboarding listed under the QR)

## TABLE OF CONTENTS

	PAGE
SAFETY CONSIDERATIONS	
INTRODUCTION	
HOW TO CONNECT IN 3 EASY STEPS	
GET TO KNOW YOUR NEW CARRIER SMART THERMOSTAT	
INSTALLATION CONSIDERATIONS	
INSTALLATION	
SYSTEM START-UP AND CHECKOUT	
ENTRY TIER THERMOSTAT SERVICE TECHNICIAN APP – INSTALLATION GUIDE	
OPERATIONAL INFORMATION	
TROUBLESHOOTING	
LIST OF WIRING DIAGRAMS	
WIRE DIAGRAMS	

### SAFETY CONSIDERATIONS

Read and follow manufacturer instructions carefully. Follow all local electrical codes during installation. All wiring must conform to local and national electrical codes. Improper wiring or installation may damage Thermostat.

Recognize safety information. This is the safety--alert symbol . When you see this symbol on the equipment and in the instruction manual, be alert to the potential for personal injury.

Understand the signal words **DANGER**, **WARNING**, and **CAUTION**. These words are used with the safety--alert symbol. **DANGER** identifies the most serious hazards which will result in severe personal injury or death. **WARNING** signifies a hazard which could result in personal injury or death. **CAUTION** is used to identify unsafe practices which may result in minor personal injury or product and property damage. **NOTE** is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

WARNING – Contains Strong Magnets – Can Be Harmful to Pacemaker Wearers. Magnets Are Permanently Installed – Swallowing Risk If Removed.

## INTRODUCTION

The Carrier 24V Smart Thermostat is a Wi-Fi-enabled programmable wall-mounted, low-voltage control. It includes an LED temperature display and 4 capacitive touch buttons to control temperature setpoints and heating/cooling/fan modes of operation from the thermostat. Homeowners can remotely, via the Carrier Home app, set temperature as well as set daily/weekly programmable schedules with 4 comfort profiles - home/sleep/wake/away. The Smart Thermostat offers a simplistic, smartphone-like feel and easy snap on/snap off removal from the backplate thanks to its patent-pending design.

## HOW TO CONNECT IN 3 EASY STEPS

### CONTRACTORS

1. Download and open the Carrier Service Technician App from the App Store or Google Play.
2. Select Connect to Equipment and then *Smart Thermostat*.
3. Follow the guided thermostat configuration instructions .



### HOMEOWNERS

1. Download the Carrier Home App from the App Store or Google Play and create an account
2. Select *Add New Device* and then *Smart Thermostat*.



Follow the guided setup instructions to connect to your Wi-Fi network.

## GET TO KNOW YOUR NEW CARRIER SMART THERMOSTAT



## INSTALLATION CONSIDERATIONS

### Power

This Thermostat is powered by 24VAC only. It requires 24VAC (Rh and/or Rc and C terminals) of the low-voltage transformer to be connected to it for proper operation. It will not operate without these 2 connections.

Rh and Rc are connected via the shunt jumper (see Fig. 1). For applications using two 24VAC transformers, one in the indoor unit and one in the outdoor unit, **remove the shunt jumper (Fig. 1)**. Connect the common from each to the C terminal. Connect R from the indoor unit to the Rh terminal. Connect R from the outdoor unit to the Rc terminal. The W signals are taken from the Rh power and the Y signal is taken from the Rc power. If Thermostat has been installed in a two—transformer application that is later changed to a single—transformer installation, installer must install a field supplied jumper between Rc and Rh.



**Fig. 1 – Shunt Jumper**

### **Accessory Output and Connections**

This thermostat is equipped with a dry contact output for the management of humidifiers, dehumidifiers and ventilation equipment. The 2 terminals are both labeled as ACC. The dry contact output must be configured for the management of either one of them.

#### Ventilation/ERV/HRV

Function will be activated for the % on time configured, using a cycle rate of 1h. For example, if it is set to 50%, function will be active for the first 30min and inactive for the next 30min. If the difference in temperature is larger than the defined max indoor/outdoor temp delta, the function will never activate. If the outdoor temperature is not available, the thermostat will still follow the percent on time, disregarding the max delta parameter.

#### Humidifier

Control will be based on a setpoint (which will trigger the activation of the function) and **a pre-defined hysteresis of 5%** above the setpoint. If **humidifier** with active heat option is selected, the humidifier will only be activated when the heat is running, regardless of the **humidifier** setpoint.

#### Dehumidifier

Control will be based on a setpoint (which will trigger the activation of the function) and a hardcoded hysteresis of 5% below the setpoint. If dehumidifier with fan option is selected, the dehumidifier will only be activated when the fan is running, regardless of the dehumidifier setpoint.

## INSTALLATION

### ⚠ CAUTION

#### UNIT DAMAGE HAZARD

Failure to follow the recommended wiring practices could result in damage to the wall control and personal property. Improper wiring or installation may damage the thermostat. Check to make sure wiring is correct before proceeding with installation or turning on power.

#### Installation Notes:

- No part of the Thermostat should be installed directly outdoors or in a cabinet outdoors.
- Never remove the thermostat board from the plastic housing. Doing so could warp and damage the components on the board.
- The mounting plate should be mounted to the wall before wires are attached.
- During thermostat installation, provide sufficient excess wiring behind the mounting plate. Coil the wiring, creating a service loop, and place in mounting box or behind the wall to remove strain against the terminal strip.

Giftbox contains the following components:

1. Thermostat
2. Anchors and screws
3. Warranty card
4. Installation instructions
5. Optional wall plate

#### Thermostat Location

Thermostat should be mounted:

- Approximately 5 ft (1.5m) from floor.
- Close to or in a frequently used room, preferably on an inside partitioning wall.
- On a section of wall without pipes or duct work.

Thermostat should NOT be mounted:

- Close to a window, on an outside wall, or next to a door leading to the outside.
- Exposed to direct light or heat from a lamp, sun, fireplace, or other temperature-radiating objects which could cause a false reading.
- Close to or in direct airflow from supply registers and return-air registers.
- In areas with poor air circulation, such as behind a door or in an alcove.

### Install Thermostat

#### **⚠ WARNING**

##### **ELECTRICAL OPERATION HAZARD**

Failure to follow this warning could result in personal injury or death. Before installing thermostat, turn off all power to equipment. There may be more than 1 power disconnect.

#### **⚠ CAUTION**

##### **UNIT DAMAGE HAZARD**

Failure to follow this caution may result in equipment damage or improper operation.

Improper wiring or installation may damage thermostat. Check to make sure wiring is correct before proceeding with installation or turning on power.


1. Turn off all power to equipment.
2. If an existing thermostat is being replaced:
  - a. Remove existing thermostat from wall.
  - b. Disconnect wires from existing thermostat, one at a time.
  - c. As each wire is disconnected, record wire color and terminal marking.
  - d. New or additional wires may be needed to accommodate C wire.
  - e. Discard or recycle old thermostat.

#### **⚠ CAUTION**

##### **ENVIRONMENTAL HAZARD**

Failure to follow this caution may result in environmental damage. Mercury is a hazardous waste. Federal regulations require that Mercury be disposed of properly.

3. Route wires through large hole in the wall mount. Level wall mount against wall (for aesthetic value only—Thermostat need not be leveled for proper operation) and mark wall through the two mounting holes (note: you might be able to reuse existing mounting locations).

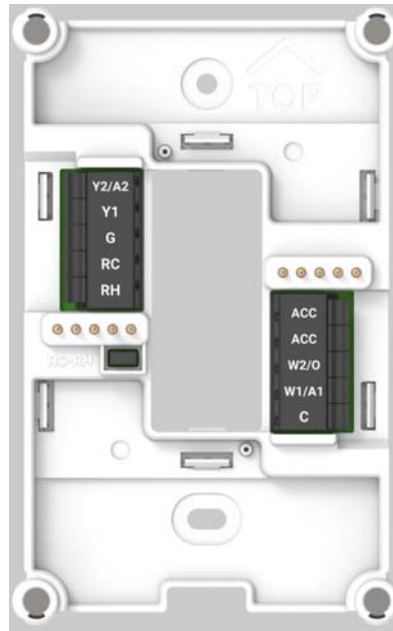


4. Drill two 3/16--in. mounting holes in wall at the screw hole openings in the wall mount. Thermostat may be mounted to a standard junction box, if desired. Screw hole openings on the wall mount matches junction box mounting holes.
5. Secure plastic mounting base to wall with screws and anchors provided. Use 2 screws and 2 anchors provided for a secure attachment. Make sure all wires extend through hole in the wall mount.
6. Adjust length and routing of each wire to reach proper connector block and terminal on wall mount with 1/4--in. (6 mm) extra wire.
7. Match and connect equipment wires to proper terminals of each connector block.
8. Push any excess wire into wall and against mounting base. Seal hole in wall to prevent air leaks. Leaks can affect operation and cause incorrect temperature and/or humidity measurement.
9. Reattach thermostat to the wall mount. ~~Page~~ pins on wall mount will align with hole openings on the back of the thermostat. The thermostat will be held to the wall mount by way of the four magnets on the wall mount, and the four screws on the back of the thermostat.
10. Turn on power to equipment. Please note it will may take up to 7 seconds for the thermostat to light up after being powered on.



For ease of Install, use the Service Technician App for full system setup, including HVAC configuration, advanced settings and thermostat testing

### Establish Bluetooth Connection Thermostat Setup with the Service Technician App

1. To begin setup of your smart thermostat, open the 'Service Technician App' on your phone. If you have an existing HVACPartners account, please login. If you do not have an existing account, you may continue as a guest to set up the smart thermostat.
2. On the landing screen of the Service Technician App, select the 'Connect to Equipment' button. to begin connecting to the smart thermostat via Bluetooth.

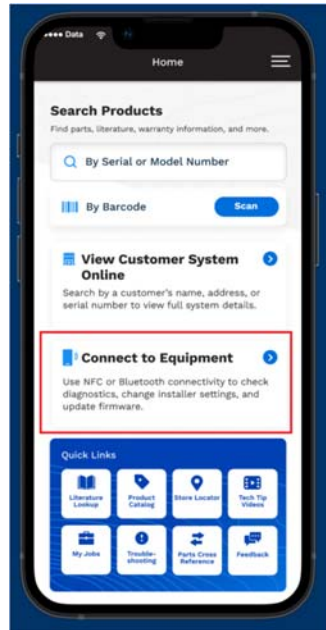

3. Select 'Smart Thermostat' from the list of capable equipment connections to begin the process.
4. Locate the QR code found on the front of your installation guide OR on the hang tag and follow the guided setup instructions to connect to the thermostat and complete the setup process. ~~OR back of thermostat Scan the QR Code that came with your installation guide and then ensure you are within 2 feet from the thermostat to initiate advertising mode.~~



- a.—Please Note: If your thermostat is not blinking blue, press the corresponding button at the bottom of your screen 'My Thermostat Is Not Blinking Blue'. This will begin the alternate connect process where you will press and hold the Fan button on the thermostat to initiate advertising mode on the thermostat.

Now you can begin your advanced configuration setup.

### **HVAC Configuration Setup**

The first step in the setup process is configuring the HVAC system setup.

- 1.—Choose your HVAC system type from the selection of options based on your system configuration.

a. Please Note: AC and Heat Pump are supported outdoor units. Gas Furnace and Fan Coil are supported indoor units.

2. Click 'Next' to continue to identify stage configuration, connect an accessory and verify wiring configuration.

### **Factory & Custom Settings**

Once you confirm your HVAC system configuration, please select whether you would like to enable Factory or Custom settings for the smart thermostat.

- Factory settings will leave all settings at default.
- Custom settings will allow you to modify any of the advanced settings in your thermostat exclusively through the Service Technician App.

Please Note: Advanced Settings include Stage Settings, Cycle Settings, Lockout/Offset Settings, Minimum & Maximum Setpoints, Fan Settings, Accessory Settings (if applicable) and Overcool to Dehumidify preferences.

Click 'Next' to proceed to optional Testing.

### **Test Equipment Functionality**

On the initial testing screen you have the option to perform heat and cool tests. You can also skip testing altogether if weather conditions do not call for proper testing at time of install.

To initiate testing select 'Start Test' and the thermostat will go into 'Cool' mode and begin blinking blue. At this time you will need to locate yourself by a air vent in the home and confirm cold air is blowing out. If so, select 'Everything is working properly' and the test will automatically stop.

Please Note: You will be able to verify you ran the test successfully by the green check mark located next to the corresponding stage test.

Please Note: Follow the same instructions as above for corresponding equipment testing you would like to do on the HVAC system.

~~Once complete, select 'Next' to go to the final installation step.~~

### **Servicing Dealer Declaration**

In the final setup steps, you will have the opportunity to associate the smart thermostat with your dealership.

- Select 'Yes' to declare yourself as the servicing dealer.
- Select 'No' to leave this declaration up to homeowner.

After making your selection, you will be asked if you want to provide contact information (email address) for the homeowner. This will streamline the onboarding process for them through the Homeowner App.

~~Please Note: This is not required to complete install and is completely optional.~~

~~To select yourself as the servicing dealer, you will need to login with your dealership's HVACPartners username and password. You will be prompted to login if you select 'Yes' and proceeded to setup the smart thermostat as a guest within the Service Technician App.~~

~~Select 'Sign In' after entering in your user credentials and the thermostat will be a part of your customer base once the homeowner enters the home and onboards the smart thermostat.~~

~~Congratulations! You have completed the setup and install of your new Smart thermostat. Select 'Done' to disconnect your Bluetooth connection and to return to the Service Technician home screen.~~

~~Please Note: Selecting 'Review my HVAC System' will allow you to go back and make any changes to any of the setup options / steps outlined above before disconnecting from the thermostat.~~

### **Manual Setup of Thermostat HVAC Configuration on the Thermostat**

1. HVAC configuration can be done via thermostat display.
  - a. Use the Mode button to go back.
  - b. Use the Fan button to select.
  - c. Use Up and Down buttons to cycle through options.
2. Upon first power up display will show F for selecting temperature format.
  - a. Use Up and Down buttons to change between F and C.
  - b. Press Fan button to select format.
3. After selecting temperature format display will show L1. At this point you may begin selecting a HVAC system type. Use Up and Down arrows to cycle through different HVAC system and sub-

system types. Use Fan button to select your HVAC type and sub-system type. Use Mode button to go back.

a. Supported HVAC system types are as follows:

**i. Standard (L1). Standard supports the following sub-system types:**

- 0 Heat 1 Cool (01)
  - If selected, you will be presented with additional choices to include Fan. Use Up and Down arrows to cycle through the two choices. No fan is represented by F0. Yes fan is represented by F1. Use Fan button to select.
- 0 Heat 2 Cool (02)
  - If selected, you will be presented with additional choices to include Fan. Use Up and Down arrows to cycle through the two choices. No fan is represented by F0. Yes fan is represented by F1. Use Fan button to select.
- 1 Heat 0 Cool (10)
  - If selected, you will be presented with additional choices to include Fan. Use Up and Down arrows to cycle through the two choices. No fan is represented by F0. Yes fan is represented by F1. Use Fan button to select.
- 2 Heat 0 Cool (20)
  - If selected, you will be presented with additional choices to include Fan. Use Up and Down arrows to cycle through the two choices. No fan is represented by F0. With fan is represented by F1. Use Fan button to select.
- 1 Heat 1 Cool (11)
  - If selected, you will be presented with additional choices to include Fan. Use Up and Down arrows to cycle through the two choices. No fan is represented by F0. Yes fan is represented by F1. Use Fan button to select.
- 2 Heat 1 Cool (21)
  - If selected, you will be presented with additional choices to include Fan. Use Up and Down arrows to cycle through the two choices. No fan is represented by F0. Yes fan is represented by F1. Use Fan button to select.
- 1 Heat 2 Cool (12)
  - If selected, you will be presented with additional choices to include Fan. Use Up and Down arrows to cycle through the two choices. No fan is represented by F0. Yes fan is represented by F1. Use Fan button to select.
- 2 Heat 2 Cool (22)
  - If selected, you will be presented with additional choices to include Fan. Use Up and Down arrows to cycle through the two choices. No

fan is represented by F0. Yes fan is represented by F1. Use Fan button to select.

**ii. Heat Pump (L2). Heat Pump supports the following sub-system types:**

- 1 Stage (10)
  - If selected, you will be presented with additional choices for changeover. Use Up and Down arrows to cycle through the two choices. With cool is represented by 01. With heat is represented by 02. This selects the reversing value energized. Use Fan button to select.
- 1 Stage with Aux (11)
  - If selected, you will be presented with additional choices for changeover. Use Up and Down arrows to cycle through the two choices. With cool is represented by 01. With heat is represented by 02. This selects the reversing value energized. Use Fan button to select.
  -
- 1 Stage with 2 Stage Aux (12)
  - If selected, you will be presented with additional choices for changeover. Use Up and Down arrows to cycle through the two choices. With cool is represented by 01. With heat is represented by 02. This selects the reversing value energized. Use Fan button to select.
  -
- 2 Stage (20)
  - If selected, you will be presented with additional choices for changeover. Use Up and Down arrows to cycle through the two choices. With cool is represented by 01. With heat is represented by 02. This selects the reversing value energized. Use Fan button to select.
  -
- 2 Stage with Aux (21)
  - If selected, you will be presented with additional choices for changeover. Use Up and Down arrows to cycle through the two choices. With cool is represented by 01. With heat is represented by 02. This selects the reversing value energized. Use Fan button to select.
  -

**iii. Dual Fuel (L3). Dual Fuel supports the following sub-system types:**

- 1 Stage HP, 1 Heat (11)
  - If selected, you will be presented with additional choices for changeover. Use Up and Down arrows to cycle through the two choices. With cool is represented by 01. With heat is represented by 02. This selects the reversing value energized. Use Fan button to select.

- 
- 2 Stage HP, 1 Heat (21)
  - If selected, you will be presented with additional choices for changeover. Use Up and Down arrows to cycle through the two choices. With cool is represented by 01. With heat is represented by 02. This selects the reversing value energized. Use Fan button to select.
  -
- 1 Stage HP, 2 Heat (12)
  - If selected, you will be presented with additional choices for changeover. Use Up and Down arrows to cycle through the two choices. With cool is represented by 01. With heat is represented by 02. This selects the reversing value energized. Use Fan button to select.
  -
- 
- 4. After the last parameter is selected, manual configuration will be done, and current temperature will be shown on the display. The thermostat will default to off, fan auto, and will be ready to use.

### **SYSTEM START-UP AND CHECKOUT**

The Thermostat is designed with a built-in installer test capability, Output Test Mode. This allows for easy operation of equipment without delays or setpoint adjustments to force heating or cooling. To use this feature you must first configure the thermostats HVAC type via Manual Setup of Thermostat HVAC Configuration on the Thermostat or via the installer mobile app.

To enable and use installer Output Test Mode take the following steps:

1. Hold the Mode key for 10 seconds (only works if system is configured).
2. Once Output Test Mode is entered the Thermostat will display S0.
3. When in the Output Test Mode:
  - a. Use the Mode button to go back.
  - b. Use the Fan button to select.
  - c. Use Up and Down buttons to cycle through options.
4. Stages or Modes available for test are dependent on the HVAC configuration which has been setup. Only those applicable to the selected HVAC type will be shown. The supported test types are as follows:
  - a. Test Heat Stage 1 (H1)
  - b. Test Heat Stage 2 (H2)
  - c. Test Auxiliary Heat Stage 1 (A1)
  - d. Test Auxiliary Heat Stage 2 (A2)
  - e. Test Cool Stage 1 (C1)
  - f. Test Cool Stage 2 (C2)

- g. Stop Testing (S0)
5. Use the Up and Down arrows to cycle through the available types and press Fan to select the type you want to test.
  6. After selection the test function will override temperature setpoint for 20min to test heat, cool or auxiliary heat. Test will end by selecting a new test (will start the new selected test), selecting stop testing, or 20min timeout. While testing the appropriate mode icon and perimeter lighting will blink until test has finished or is stopped.

## **OPERATIONAL INFORMATION**

### **User Interface**

The display is a dead front display. All digits, icons, and perimeter lighting will be off unless the proximity sensor is activated, a key is pressed by the user, or unless a heating or cooling call occurs. The first key touch will be ignored if the display was off unless the thermostat had already been woken up by the proximity sensor. Once the display has been woken up the ambient temperature will be shown on the segmented display. The up and down temperature arrows, the applicable mode and fan icons, the Wi-Fi on or off icon and OpenADR (if active) will light up.

\*

—

### **Timers**

#### **Five--Minute Compressor Timeguard**

This timer prevents compressor from starting unless it has been off for at least 5 minutes.

#### **Cycle Timer**

To prevent short cycling of the HVAC system, especially in the case where compressors are involved, the number of cycles per hour will be limited. This will be a settable parameter through the HVAC configuration in the App. Heating and cooling cycles will be set independently.

For heating the following minimum run time (MRT) and minimum off time (MOT) defaults will be applied based on the number of cycles per hour:

- Standard Gas – MRT = 7, MOT = 5 (5 Cycles per hour)
- Standard Elec – MRT = 5, MOT = 3 (7.5 Cycles per hour)
- Heat pump – MRT = 15, MOT = 5 (3 Cycles per hour)

For cooling, the following MRT and MOT defaults will be applied based on the number of cycles:

- AC/HP - MRT = 15, MOT = 5 (3 Cycles per hour)



Cycle rates can be increased or decreased in increments of 0.5 and will be inversely proportional to the MRT and MOT of reference of that system. For example, for a Standard Gas system if cycle rates is increased to 6, MRT = 5.83, MOT = 4.17.

If the user adjusts the setpoint to trigger a heating or cooling call the MOT cycle would be canceled and the call would start immediately unless the system is an AC/HP in which case a minimum 5min MOT will be enforced. This 5min MOT for AC/HP will also be applied upon power up.

### **Heat/Cool Setpoints (Desired Temperature)**

A minimum difference of 3° and maximum of 15° is enforced between heating and cooling desired temperatures.

### **Equipment On Indicators**

When cooling equipment is on the Cooling icon will illuminate when the display is active. The perimeter lighting will glow blue if cooling is active. This could occur in cooling or auto mode depending on setpoint.

When heating equipment is on the Heating icon will illuminate when the display is active. The perimeter lighting will glow orange if heating is active. This could occur in the heating or auto mode depending on the setpoint.

When emergency heating equipment is on the Emergency Heating icon will illuminate when the display is active. The perimeter lighting will glow orange if heating is active. This could occur in the heating or auto mode depending on the setpoint.

When fan recirculation is active the fan recirculation icon will illuminate when the display is active. The perimeter lighting will glow green if fan recirculation mode is active, with operation mode is inactive.

When OpenADR is active the OpenADR icon will illuminate when the display is active. The perimeter lighting will glow yellow is OpenADR is active.

Please Note: If a call is pending but the system is not ready to run due to minimum off time, the corresponding mode icon will blink at a rate of 0.5s until it is ready to run at which point it will stay solid on.

### **Programmable Fan**

The fan output can be programmed based on period of the day. When programming for each day and period the fan can be set to On, AUTO, or Circulation. If the fan button is pressed to change from On to Auto, Circulation, or vice versa when programmable fan has been enabled the manual change will only remain in effect until the next program period when the programmable fan setting will be changed per

the scheduled setting. Fan circulation mode will turn on the fan for 33% of the time using 1h cycles, which includes the time that the fan is on due to an active heating or cooling call.

### **Schedule and Overrides**

The schedule can be set up for each day of the week independently, with up to 5 different transitions per day using the mobile app. There is no backup schedule within the physical thermostat. Internet connection/service is required to establish back the schedule. Local time is not stored in thermostat and therefore the schedule will not be followed upon a POR and will require reconnection to the internet for proper timing. If internet connection is lost but there is no loss of power, thermostat will continue following the schedules even if there could be some drift in the time.

You can override schedule from the thermostat or mobile app. Schedule will resume after 4hrs if done through the thermostat unless a different time is set from the App. Overrides can be initiated both through the thermostat and App but duration can only be configured through the App with durations of 1-23 hours, or the option of the override duration to be until the next schedule transition, or a permanent override.

## **TROUBLESHOOTING**

If the display doesn't power up after power is applied, check the Rc/Rh and C terminals for 24VAC. The display will not power up if polarity is reversed.

### **Reset**

There are 2 different resets available for the thermostat:

- Factory reset will restore all settings and operation to original out of the box settings. This includes Wi-Fi, BLE, MATTER, and HVAC System type setup.
- Network reset will restore default Wi-Fi, BLE, and MATTER only. HVAC settings, including HVAC System type are not changed.

To perform a reset of the thermostat perform the following steps:

1. Press Fan + mode keys simultaneously for 10s. This will access the reset menu.
2. Use Arrow Up/Down to select the reset type
  - a. nr - Network reset
  - b. Fr - Factory reset.
3. If performing a Network Reset (nr) confirm the selection of network reset option with single press of fan button.

4. If performing a Factory Reset (Fr) confirm the selection of factory reset with two presses of fan button.

Please note performing a Network Reset or a Factory Reset will result in power on reset of the device.

#### EQUIPMENT CONFIGURATION OUTPUTS

HVAC System \ Label Names	Rc	Rh	C	W1/A1	W2/O	G	Y1	Y2/A2
Standard 1C	x	x	x			*	x	
Standard 2C	x	x	x			*	x	Y2
Standard 1H	x	x	x	W1		*		
Standard 2H	x	x	x	W1	W2	*		
Standard 1H 1C	x	x	x	W1		*	x	
Standard 2H 1C	x	x	x	W1	W2	*	x	
Standard 1H 2C	x	x	x	W1		*	x	Y2
Standard 2H 2C	x	x	x	W1	W2	*	x	Y2
Heat Pump 1 stage	x	x	x		O	x	x	
Heat Pump 1 stage w/Aux	x	x	x	A1	O	x	x	
Heat Pump 2 stage	x	x	x		O	x	x	Y2
Heat Pump 2 stage w/Aux	x	x	x	A1	O	x	x	Y2
Heat Pump 1 Stage w/2 Stage Aux	x	x	x	A1	O	x	x	A2
DF 1 stage HP, 1H	x	x	x	A1	O	x	x	
DF 2 stage HP, 1H	x	x	x	A1	O	x	x	Y2


DF 1 Stage HP, 2H	x	x	x	A1	O	x	x	A2
HVAC System \ Label Names	Rc	Rh	C	W1/A1	W2/O	G	Y1	Y2/A2
Standard 1C	x	x	x			x	x	
Standard 2C	x	x	x			x	x	Y2
Standard 1H	x	x	x	W1				
Standard 2H	x	x	x	W1	W2			
Standard 1H w/fan	x	x	x	W1		x		
Standard 2H w/fan	x	x	x	W1	W2	x		
Standard 1H 1C	x	x	x	W1		x	x	
Standard 2H 1C	x	x	x	W1	W2	x	x	
Standard 1H 2C	x	x	x	W1		x	x	Y2
Standard 2H 2C	x	x	x	W1	W2	x	x	Y2
Heat Pump 1 stage	x	x	x		O	x	x	
Heat Pump 1 stage w/Aux	x	x	x	A1	O	x	x	
Heat Pump 2 stage	x	x	x		O	x	x	Y2
Heat Pump 2 stage w/Aux	x	x	x	A1	O	x	x	Y2
Heat Pump 1 Stage w/2 Stage Aux	x	x	x	A1	O	x	x	A2
DF 1 stage HP, 1H	x	x	x	A1	O	x	x	
DF 2 stage HP, 1H	x	x	x	A1	O	x	x	Y2
DF 1 Stage HP, 2H	x	x	x	A1	O	x	x	A2

## **HVAC Terminals (10)**


- a. Rc – 24VAC Power (Cooling for split)
- b. Rh – 24VAC Power (Heating for split)
- c. C – 24VAC Common
- d. W1/A1 – Heat Stage 1/Auxiliary Heat Stage 1
- e. W2/O – Heat Stage 2/HP Reverse valve
- f. G – Fan
- g. Y1 – Cooling Stage 1/HP Stage 1
- h. Y2/A2 – Coolin Stage 2/HP Stage 2/Auxiliary Heat Stage 2
- i. ACC – Accessory Multi-Purpose
  - a. Dehumidifier
  - b. Humidifier
  - c. Ventilation
  - d. ERV
  - e. HRV

\*


### Standard 1C

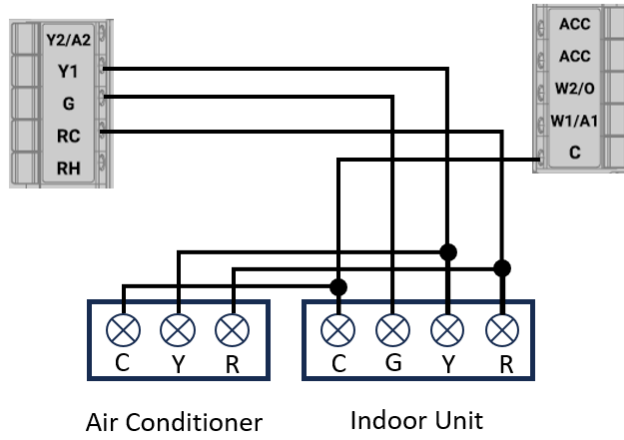

### Standard 2C

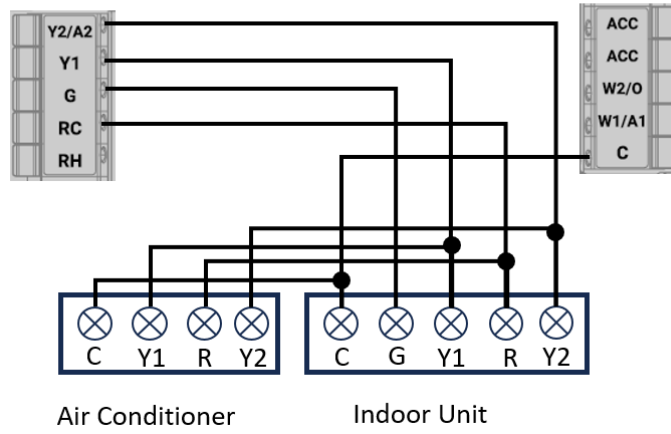


### Standard 1H

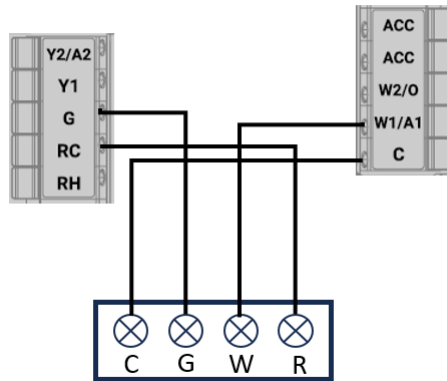


Furnace / Fan Coil

### Standard 2H

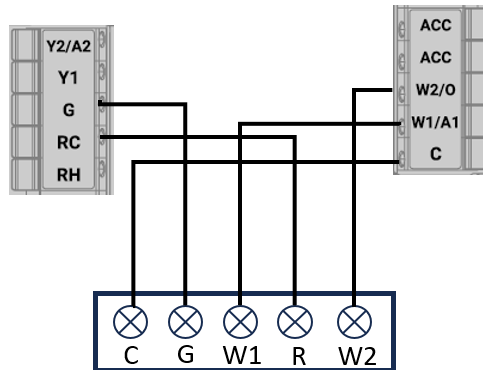


Furnace / Fan Coil

Standard 1H/1C

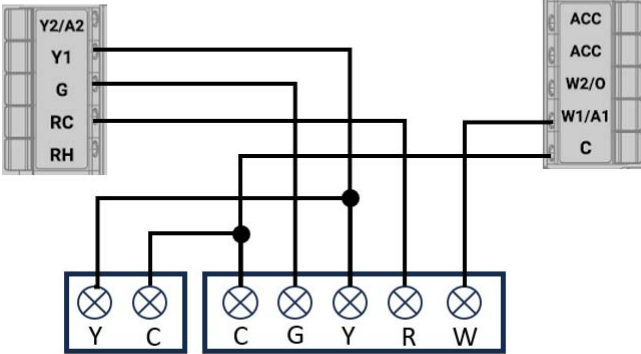

Air Conditioner    Furnace / Fan Coil


Standard 2H/1C

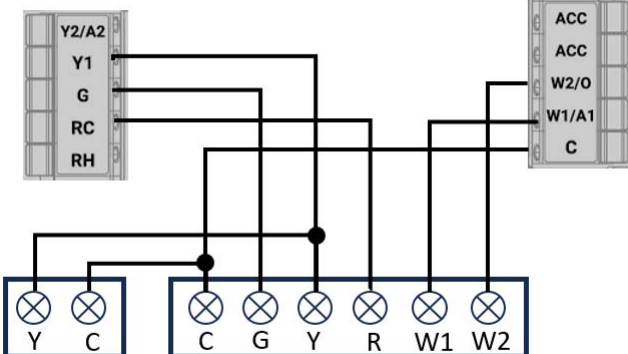


Air Conditioner    Furnace / Fan Coil




Standard 1H/2C

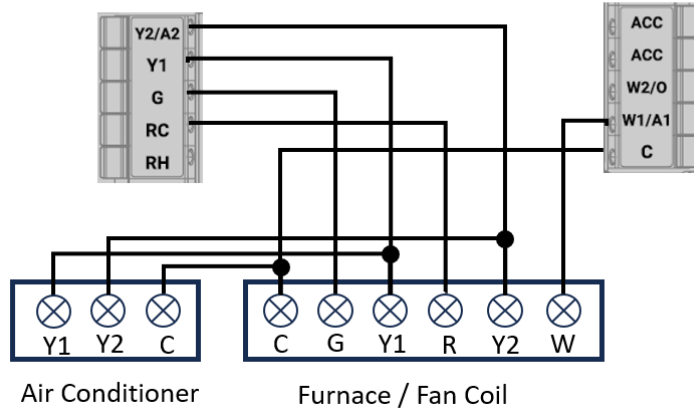


Standard 2H/2C

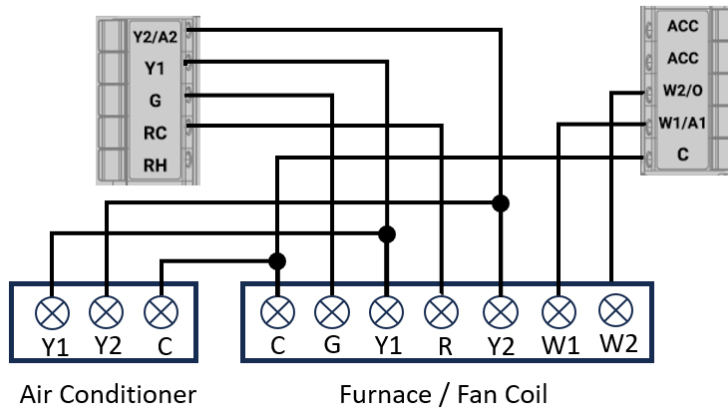


### Heat Pump 1 Stage

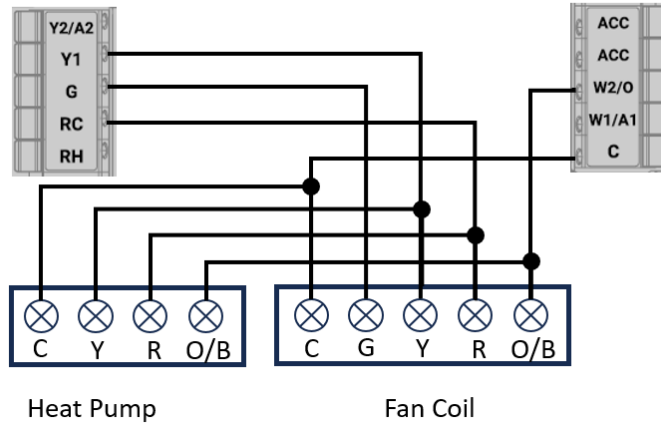


### Heat Pump 1 Stage with Aux

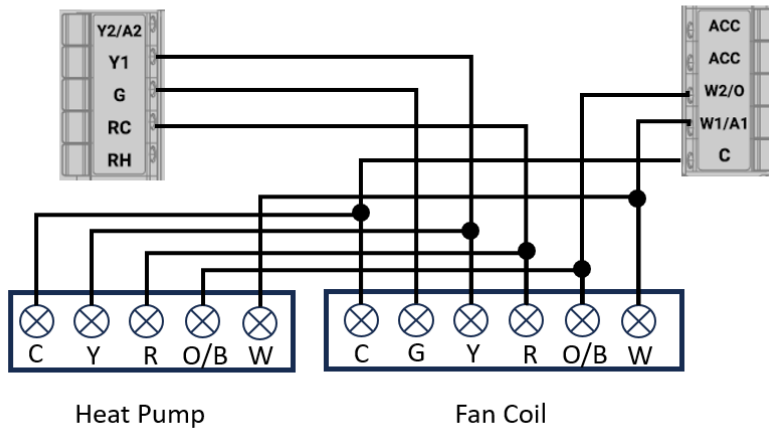


### Heat Pump 2 Stage

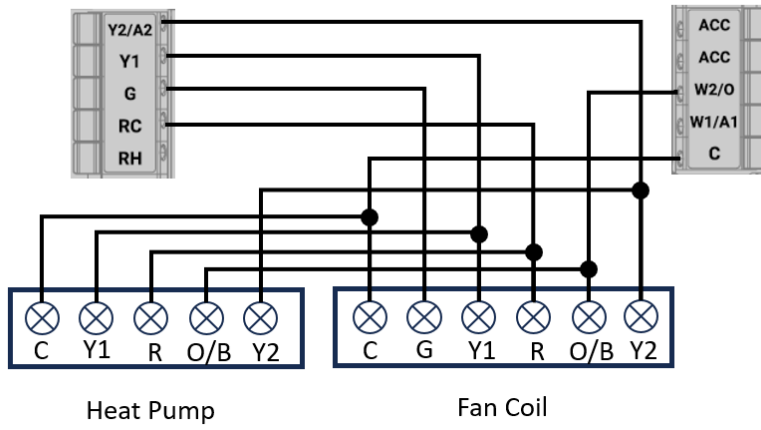


### Heat Pump 2 Stage with Aux

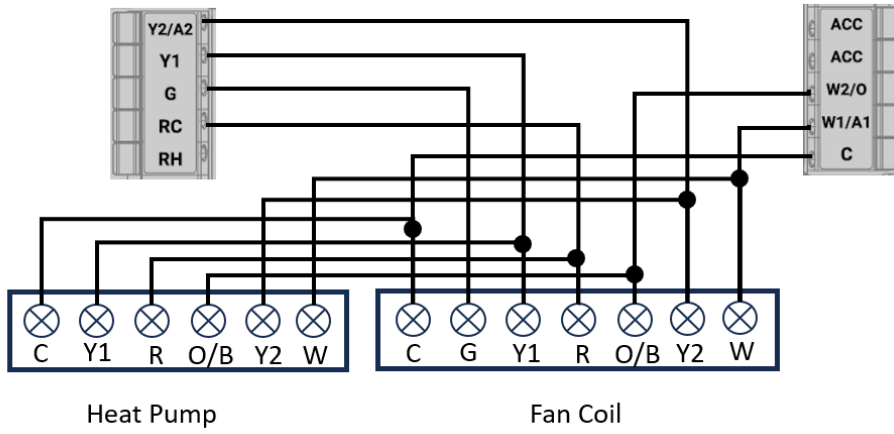


### Heat Pump 1 Stage with 2 Stage Aux

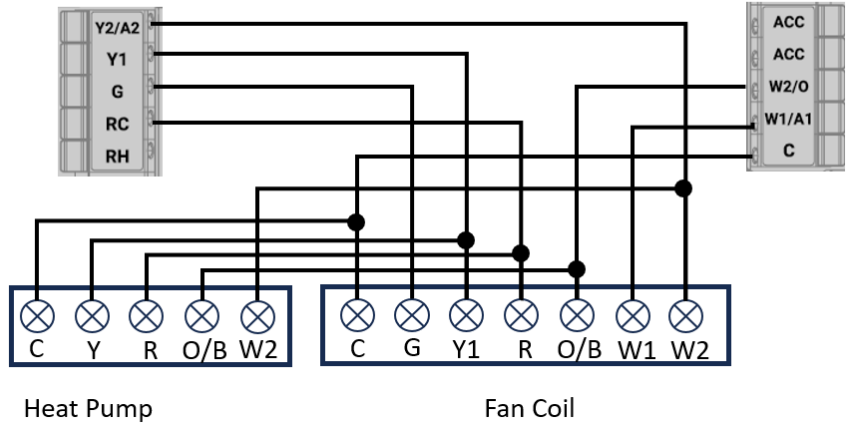


### Dual Fuel 1 Stage Heat Pump 1H

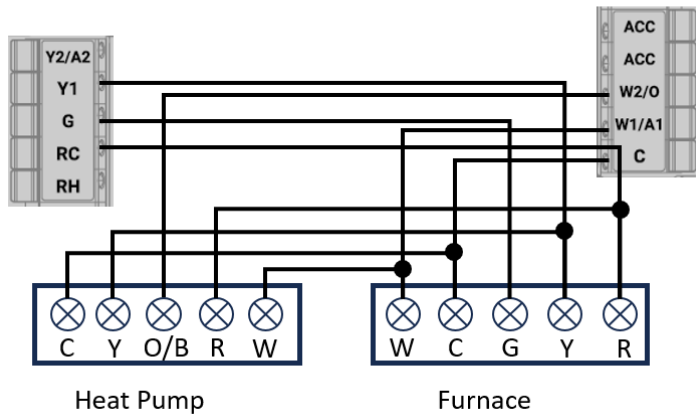

### Dual Fuel 2 Stage Heat Pump 1H

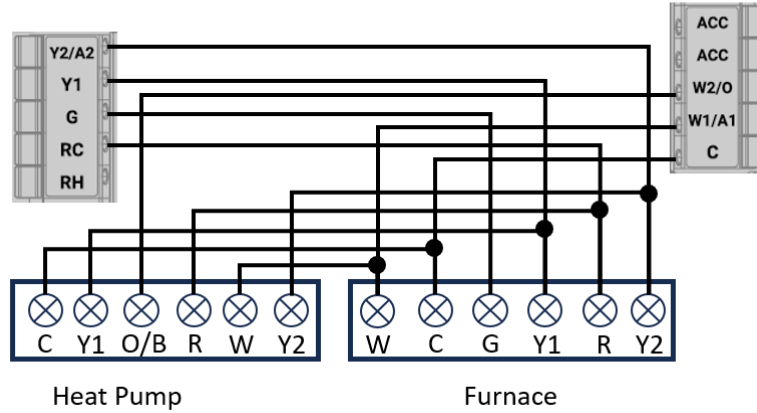

### Dual Fuel 1 Stage Heat Pump 2H

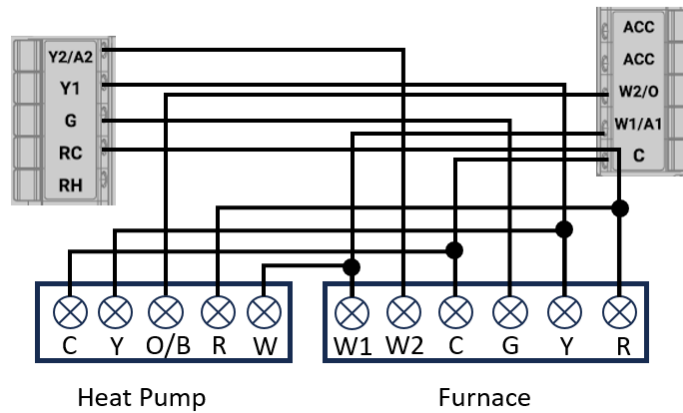

### Compliance and Certification

FCC:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the place of purchase or an experienced remote control/TV technician for help.
- It is strongly recommended that the TV be plugged into a separate wall outlet.

The user is cautioned that changes and modifications made to this equipment without the approval of the manufacturer could void the user's authority to operate this equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Industry Canada:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

"RF Exposure Statement - In order to comply with FCC and ISED RF Exposure requirements, a minimum separation distance of 20 cm must be maintained between the device and all persons during normal operation."

"Déclaration d'exposition aux RF - Afin de se conformer aux exigences de la FCC et de l'ISED en matière d'exposition aux RF, une distance de séparation minimale de 20 cm doit être maintenue entre l'appareil et toutes les personnes pendant le fonctionnement normal."