



BSF3604-450-470-DP-AC  
UHF Fiber Optic Repeater  
Part Number: 61-101001  
Product Description and User's Manual  
Document No. 61-101001HBK

This document is valid for the  
BSF3604-450-470-DP-AC (450/470MHz) Repeaters for the US Market



# Table of Contents

<b>1</b>	<b>Notices</b>	<b>4</b>
1.1	Copyright © 2015 Axell Wireless Ltd	4
1.2	Contact Information	4
1.3	About This Manual	5
1.4	Compliance with FCC	6
1.4.1	FCC Part 15	6
1.4.2	Unauthorized Changes to Equipment	6
1.4.3	FCC RF Exposure Limits	6
1.4.4	Antenna Installation	7
1.4.5	Compliance with FCC deployment rule regarding the radiation of noise	7
1.4.6	General Safety Warnings Concerning Use of This System	9
<b>2</b>	<b>Introduction</b>	<b>11</b>
2.1	Features and Capabilities	12
2.2	Automatic Level Control	13
2.3	Operating Temperature	13
2.4	Management WEB GUI	14
2.5	Interfaces	14
2.5.1	Securing the Unit	14
2.5.2	External Interfaces	15
2.5.3	Internal Interfaces	16
<b>3</b>	<b>Antenna and Repeater Installation Requirements</b>	<b>17</b>
3.1	BSF-3604 Installation Requirements	17
3.1.1	Safety Guidelines	17
3.1.2	Criteria for Repeater Installation Location	17
3.1.3	RF Cable Installation Guidelines	18
3.1.4	F/O Cable Installation Guidelines	18
3.2	Service Antenna Requirements	18
3.2.1	Required Antenna Information	18
3.2.2	Indoor Installations	19
3.2.2.1	Recommended Antennas	19
3.2.2.2	Recommended Splitters and Couplers	19
3.2.2.3	Installation Criteria	20
3.2.3	Service (Mobile) Antenna Installation Criteria	20
3.3	RF Cabling Requirements	20
<b>4</b>	<b>Installation</b>	<b>21</b>
4.1	Unpacking	21
4.2	Mount the Repeater	21
4.2.1	Selecting a Location to Ensure Proper Cooling	22
4.2.2	Wall-Mounting Preparation	22
4.2.3	Mount the Repeater on the Wall	24
4.3	Grounding	26
4.4	Ensure Good Electromagnetic Vulnerability (EMV) Protection	27
4.5	Fiber Optic Connection	29
4.6	External Alarm and Relay Connections	31
4.6.1	External Alarm	31
4.6.2	Relay	31
4.7	Power and Backup Battery	32
4.7.1	Circuit Breaker	32
4.7.2	Power Connections	32
4.7.2.1	Backup Battery	33
4.7.2.2	Connecting the Power Source	33
4.7.3	Power ON	34
4.7.3.1	Switching Power ON	34

4.7.3.2	Verifying LEDs .....	34
4.8	Closing and Securing the Repeater .....	34
<b>5</b>	<b>BSF-3604 Commissioning .....</b>	<b>35</b>
5.1	Open a Session to the BSF-3604 via the OMU II .....	35
5.2	BSF-3604 Optical Loss Adjustment (OLA) .....	36
5.3	RF Balancing .....	38
5.3.1	Manual RF Balancing .....	38
5.3.2	Automatic BSF-3604 RF Balancing .....	40
5.4	Integration into the Axell Element Manager (AEM) .....	41
5.5	What Next? .....	41
<b>6</b>	<b>BSF-3604 Full GUI Description .....</b>	<b>42</b>
6.1	Opening a Direct Web Session .....	42
6.1.1	Connecting Locally .....	42
6.1.2	Remote Connection and Login .....	43
6.2	Navigating the Web Interface .....	44
6.2.1	Management Options Buttons .....	45
6.2.2	Home Screen Overview .....	46
6.2.3	Configuration Screen Overview .....	47
6.3	Configuring General Parameters .....	48
6.3.1	Site Information – BSF-3604 Identification .....	48
6.3.2	Date & Time .....	49
6.3.3	Configure External Alarms .....	49
6.3.4	IP Address .....	50
6.4	Remote Communication Setup .....	51
6.4.1	TCP/IP and Ethernet .....	51
6.4.2	Modem Setup .....	52
6.4.2.1	Packet Switched Modem Configuration (GSM/GPRS) .....	52
6.4.2.2	Circuit Switched Modem (PSTN/GSM) .....	53
6.4.2.3	SIM-card Using Single Numbering Scheme .....	53
6.5	SNMP Support .....	54
6.5.1	SNMP Traps Parameters .....	54
6.5.2	Activating and Configuring the SNMP Agent .....	54
6.6	User Accounts .....	55
6.6.1	Default User Accounts .....	55
6.6.2	User Access Levels .....	56
6.6.3	Change Password .....	56
6.7	Reboot .....	57
6.8	Axell Shell (Command Line Interface) .....	57
6.9	Attribute Reference .....	58
<b>7</b>	<b>Monitoring, Fault Sourcing and Maintenance .....</b>	<b>59</b>
7.1	Cautions and General Statements .....	59
7.2	Monitoring Via the BSF-3604 Home Screen .....	60
7.2.1	General Page Area .....	61
7.2.2	Detailed view of the BSF-3604 RF Status .....	61
7.2.3	Detailed view of Fiber Optic Unit .....	62
7.2.4	Subsystems .....	62
7.3	Logs Screen .....	63
7.4	Module LEDs .....	64
7.4.1	Control Module LEDs .....	65
7.4.2	F/O Converter LEDs .....	66
7.4.3	Power Supply LEDs .....	67
	<b>Appendix A - Specification .....</b>	<b>68</b>
	<b>Appendix B - F/O Cleaning Procedure .....</b>	<b>69</b>

# 1 Notices

## 1.1 Copyright © 2015 Axell Wireless Ltd

All rights reserved.

No part of this document may be copied, distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language without the prior written permission of Axell Wireless Ltd.

The manufacturer has made every effort to ensure that the instructions contained in this document are adequate and free of errors and omissions. The manufacturer will, if necessary, explain issues which may not be covered by this document. The manufacturer's liability for any errors in the document is limited to the correction of errors and the aforementioned advisory services.

This document has been prepared to be used by professional and properly trained personnel, and the customer assumes full responsibility when using them. The manufacturer welcomes customer comments as part of the process of continual development and improvement of the documentation in the best way possible from the user's viewpoint. Please submit your comments to the nearest Axell Wireless sales representative.

## 1.2 Contact Information

Headquarters	Axell Wireless Aerial House Asheridge Road Chesham Buckinghamshire HP5 2QD United Kingdom  Tel: +44 1494 777000 Fax: +44 1494 777002
Commercial inquiries	<a href="mailto:info@axellwireless.com">info@axellwireless.com</a>
Web site	<a href="http://www.axellwireless.com">www.axellwireless.com</a>
Support issues	<a href="mailto:support@axellwireless.com">support@axellwireless.com</a>
Technical Support Line, English speaking	+44 1494 777 747

Contact information for Axell Wireless offices in other countries can be found on our web site, [www.axellwireless.com](http://www.axellwireless.com)

## 1.3 About This Manual

This Product Manual provides the following information:

- Description of the BSF3604-450-470-DP-AC repeater (hereinafter referred to as BSF-3604)
- Procedures for installation, setup, configuration and checking the proper operation of the unit
- Maintenance and troubleshooting procedures

## Intended Audience

This Product Manual is intended for experienced technicians and engineers. It is assumed that the customers installing, operating, and maintaining Axell Wireless Repeaters are familiar with the basic functionality of Repeaters.

## Notice

Confidential - Authorized Customer Use

This document may be used in its complete form only and is solely for the use of Axell Wireless employees and authorized Axell Wireless channels or customers. The material herein is proprietary to Axell Wireless. Any unauthorized reproduction, use or disclosure of any part thereof is strictly prohibited.

All trademarks and registered trademarks are the property of their respective owners.

## Disclaimer of Liability

Contents herein are current as of the date of publication. Axell Wireless reserves the right to change the contents without prior notice. The information furnished by Axell Wireless in this document is believed to be accurate and reliable. However, Axell Wireless assumes no responsibility for its use. In no event shall Axell Wireless be liable for any damage resulting from loss of data, loss of use, or loss of profits and Axell Wireless further disclaims any and all liability for indirect, incidental, special, consequential or other similar damages. This disclaimer of liability applies to all products, publications and services during and after the warranty period.

## Safety to Personnel

- Before installing or replacing any of the equipment, the entire manual should be read and understood.
- This equipment is to be installed only in a restricted access location where access is restricted to is restricted to SERVICE PERSONNEL and to USERS who have been instructed on the restrictions and the required precautions to be taken.
- Throughout this manual, there are "Caution" warnings. "Caution" calls attention to a procedure or practice, which, if ignored, may result in injury or damage to the system, system component or even the user. Do not perform any procedure preceded by a "Caution" until the described conditions are fully understood and met.

**CAUTION!** This notice calls attention to a procedure or practice that, if ignored, may result in personal injury or in damage to the system or system component. Do not perform any procedure preceded by a "CAUTION!" until described conditions are fully understood and met.

## 1.4 Compliance with FCC

### Part 90 Signal Boosters

### THIS IS A 90.219 CLASS B DEVICE



**WARNING:** This is **NOT** a **CONSUMER** device. This device is designed for installation by **FCC LICENCEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENCE** or express consent of an FCC Licensee to operate this device.

You **MUST** register Class B signal boosters (as defined in 47 CFR 90.219) online at **[www.fcc.gov/signal-boosters/registration](http://www.fcc.gov/signal-boosters/registration)**.

Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.



The installation procedure must result in the signal booster complying with FCC requirements 90.219(d). In order to meet FCC requirements **90.219 (d)**, it may be necessary for the installer to reduce the UL and/or DL output power for certain installations.

### 1.4.1 FCC Part 15

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

If not installed and used in accordance with the instructions, this equipment generates, uses and can radiate radio frequency energy. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to RF reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the Donor antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a power outlet on a circuit different from that to which the receiver is connected.

### 1.4.2 Unauthorized Changes to Equipment

Changes or Modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment

### 1.4.3 FCC RF Exposure Limits

This unit complies with FCC RF exposure limits for an uncontrolled environment. This equipment can only be installed for applications, driving passive or active DAS systems. All antennas must be operated at a minimum distance of 47 cm between the radiator and any person's body.

### 1.4.4 Antenna Installation

Installation of an antenna must comply with the FCC RF exposure requirements. The antenna used for this transmitter must be mounted on permanent structures.

The FCC regulations mandate that the ERP of type B signal boosters should not exceed 5W, this is equivalent to 8.2W EIRP.

Therefore the max antenna gain allowed for this type of signal booster should be limited to the values given by equation 1 (below) for the service antenna.

**Equation (1) - Max SERVICE antenna gain**

$$\text{Max SERVICE antenna gain (dBi)} = 39.1 - (37\text{dBm} - \# \text{ of antennas in dB} - \text{cable losses in dB}).$$

**For example:**

No. of Antennas	Cable Losses	Max Allowed Antenna Gain
4	3	$39.1 - (37-6-3) = 11.1\text{dBi}$
1	3	$39.1 - (37-0-3) = 5.1\text{dbi}$
10	3	$39.1 - (37-10-3) = 15.1\text{dbi}$

### 1.4.5 Compliance with FCC deployment rule regarding the radiation of noise

Good engineering practice must be used in regard to the signal booster's noise radiation. Thus, the gain of the signal booster should be set so that the ERP of the output noise from the signal booster should not exceed the level of -43 dBm in 10 kHz measurement bandwidth.

In the event that the noise level measured exceeds the aforementioned value, the signal booster gain should be decreased accordingly.

In general, the ERP of noise on a spectrum more than 1 MHz outside of the pass band should not exceed -70 dBm in a 10 kHz measurement bandwidth.

The BSF-3604 61-101001 Repeater has a noise level of -59 dBm in 10 kHz measurement at 1 MHz spectrum outside the passband of the signal booster and an in-band noise level at around -40 dBm in a 10 kHz bandwidth. Therefore, the noise at the antenna input port should be calculated based on equation (3).

**Equation (2) - Input Noise to service antenna**

Input Noise to service antenna:

$$-59\text{ dBm} - \text{Antenna splitter losses in dB} - \text{cable loss in dB}$$

**Example: In band Noise**

Signal booster connected to 10 service antennas with a 100m long ½ inch cable.  
Losses of such a cable with the connectors = ~ 12dB

Assuming 10 service antennas: antenna splitter losses = 11 dB  
Based on equation (3) Input antenna noise (to the antenna) =  $-40 - 12 - 11 = -63$  dBm ERP  
The in-band input noise to the antenna should be  $-40 - 12 - 11 = -63$  dBm ERP

**Example: Out of band noise**

Signal booster connected to 10 service antennas with a 100m long ½ inch cable.  
Losses of such a cable with the connectors = ~ 12dB

Assuming 10 service antennas: antenna splitter losses = 11 dB  
Based on equation (3) Input antenna noise (to the antenna) =  $-59 - 12 - 11 = -82$  dBm ERP  
The Out of-band input noise to the antenna should be  $-59 - 12 - 11 = -82$  dBm ERP

*NOTE: In this example there is no need to add an external band pass filter to attenuate the out of band noise. If fewer antennas are deployed then additional filtering may be required*

**Conclusion:**





Good engineering practice requires that in general when the out of band noise measured at the service antenna input is more than -70 dBm per 10 kHz measurement bandwidth, an external band pass filter should be added to attenuate the out of band noise level.





All Axell Wireless repeaters include high selectivity duplexers and filters to attenuate the out of band noise. Should additional filtering be required, we have a comprehensive range of interference filters which can be supplied upon request.



## 1.4.6 General Safety Warnings Concerning Use of This System

Always observe standard safety precautions during installation, operation and maintenance of this product.

 <b>Caution labels!</b>	<p>Throughout this manual, there are "Caution" warnings. "Caution" calls attention to a procedure or practice, which, if ignored, may result in injury or damage to the system, system component or even the user. Do not perform any procedure preceded by a "Caution" until the described conditions are fully understood and met.</p>
 <b>Danger: Electrical Shock</b>	<p>To prevent electrical shock when installing or modifying the system power wiring, disconnect the wiring at the power source before working with un insulated wires or terminals.</p>
 <b>Caution: Safety to personnel</b>	<p>Before installing or replacing any of the equipment, the entire manual should be read and understood.</p> <p>The user needs to supply the appropriate AC power to the repeater. Incorrect power settings can damage the repeater and may cause injury to the user.</p> <p>Please be aware that the equipment may, during certain conditions become very warm and can cause minor injuries if handled without any protection, such as gloves.</p>
 <b>Caution: RF Exposure</b>	<p>RF radiation, arising from transmitter outputs connected to AWL's equipment, must be considered a safety hazard.</p> <p>This condition might only occur in the event of cable disconnection, or because a 'spare' output has been left un-terminated. Either of these conditions would impair the system's efficiency. No investigation should be carried out until all RF power sources have been removed. This would always be a wise precaution, despite the severe mismatch between the impedance of an N type connector at 50Ω, and that of free space at 377Ω, which would severely compromise the efficient radiation of RF power. Radio frequency burns could also be a hazard, if any RF power carrying components were to be carelessly touched!</p> <p>Antenna positions should be chosen to comply with requirements (both local &amp; statutory) regarding exposure of personnel to RF radiation. When connected to an antenna, the unit is capable of producing RF field strengths, which may exceed guideline safe values especially if used with antennas having appreciable gain. In this regard the use of directional antennas with backscreens and a strict site rule that personnel must remain behind the screen while the RF power is on, is strongly recommended.</p> <p>Where the equipment is used near power lines or in association with temporary masts not having lightning protection, the use of a safety earth connected to the case-earthing bolt is strongly advised.</p>

 <p><b>Caution:                  Safety to equipment</b></p>	<p>When installing, replacing or using this product, observe all safety precautions during handling and operation. Failure to comply with the following general safety precautions and with specific precautions described elsewhere in this manual violates the safety standards of the design, manufacture, and intended use of this product.</p> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Axell Wireless assumes no liability for the customer's failure to comply with these precautions. This entire manual should be read and understood before operating or maintaining the repeater.</p>
 <p><b>Warning:                  Restricted Access Location</b></p>	<p>This Axell Wireless equipment is to be installed only in a restricted access location where access is restricted to SERVICE PERSONNEL and to USERS who have been instructed on the restrictions and the required precautions to be taken.</p>
 <p><b>Attention:                  Electrostatic Sensitivity</b></p>	<p>Observe electrostatic precautionary procedures.                  ESD = Electrostatic Discharge Sensitive Device.                  Static electricity can be conducted to the semiconductor chip from the center pin of the RF input connector, and through the AC connector pins. When unpacking and otherwise handling the repeater, follow ESD precautionary procedures including use of grounded wrist straps, grounded workbench surfaces, and grounded floor mats.</p>
 <p><b>Caution:                  Class 1 Laser</b></p>	<p>The repeaters described in this manual are equipped with class 1 lasers, as per definition in EN 60825-1</p> <p><b>Caution!</b> - Un-terminated optical receptacles may emit laser radiation. Exercise caution as follows:</p> <ul style="list-style-type: none"> <li>• Do not stare into the beam or view with optical instruments. Optical transmitters in the fiber optic converter can send out high energy invisible laser radiation. There is a risk for permanent damage to the eye.</li> <li>• Always use protective cover on all cables and connectors which are not connected.</li> <li>• Never look directly into a fiber cable or a connector.</li> <li>• Consider that a fiber can carry transmission in both directions.</li> <li>• During handling of laser cables or connections, ensure that the source is switched off.</li> <li>• Regard all open connectors with respect and direct them in a safe direction and never towards a reflecting surface. Reflected laser radiation should be regarded as equally hazardous as direct radiation.</li> </ul>

## 2 Introduction

The BSF-3604 is a fiber optic fed UHF repeater. It is part of a system that is fed from an Axell Wireless Optical Master Unit Mk. 2 (OMU II), supporting WDM technology, lowering the number of fibers needed per system. The maximum optical loss of up to 10dB is allowed over the fiber interconnecting the OMU II and the most distant last remote unit that the OMU supports. This offers great flexibility when providing RF coverage in areas where it is not possible to rely on off-air transmission.

The fiber optic system is easily remotely monitored and controlled by Axell Wireless' effective supervision tool, The Axell Wireless Element Manager (AEM).

The BSF-3604 includes automatic optical gain settings, where the gain is adjusted in the downlink chain by measuring the level of the pilot carrier sent from the OMU II. The level of the received pilot carrier is continuously monitored.

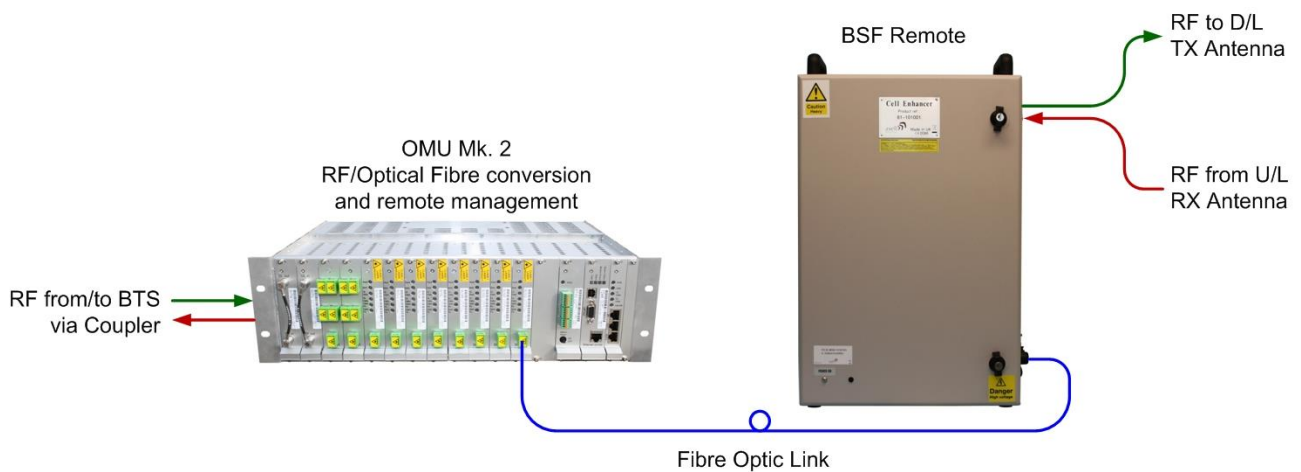



Figure 2-1 Illustration of OMU II Connection to BSF Remote

## 2.1 Features and Capabilities

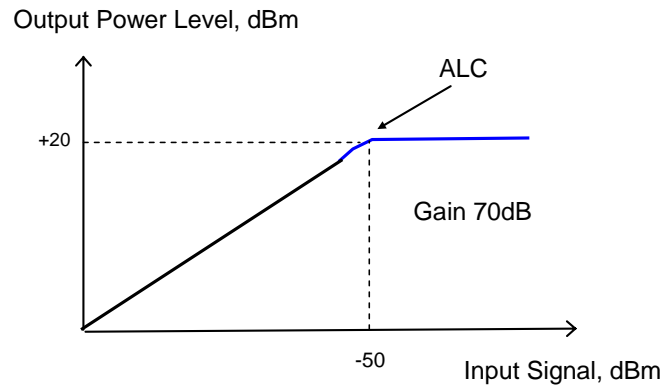
- Supports frequency bands 450-470MHz
- Operational bandwidth: 0-5 MHz
- Duplex Distance: 0-5 MHz
- Output Power per carrier UL/DL:
  - 1 carrier: + 36dBm
  - 2 carriers: + 33dBm
  - 3-4 carriers: +30dBm
  - 8 carriers: +27dBm
- Supports WDM technology
- Automatic Optical Gain Setting via OMU II
- Remote configuration and management:
  - Via OMU II intuitive Web GUI
  - Via AEM – automatically detected via AEM no local setup required
  - Optionally via Ethernet or GSM, GSM-R PSTN modem
  - SNMP v1/v2c support
- Automatic Level Control (ALC) - provides constant gain in both uplink and downlink paths according to the defined maximum output level
- Very low noise factor - minimizes interference to BTS and increases high speed data throughput
- Backup battery for 'last gasp', sending fault error before power failure
- Wall or pole mount conforming to IP65 and NEMA 4 standard
- Power source: 115VAC, 230 VAC or -48V power (depending on your order)

## 2.2 Automatic Level Control

The repeater is equipped with Automatic Level Control (ALC). The ALC feature enables maintaining the maximum defined output level.



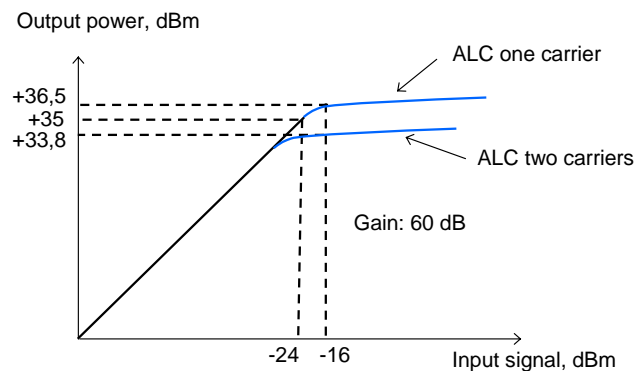The repeater has a defined maximum output level. If the input signal amplified by the gain set exceeds the set output limit, an ALC loop is activated. This ALC ensures that the amplifier does not add distortion to the radio signal. Below are examples of the ALC function for one and two carriers.



## 2.3 Operating Temperature

The BSF-3604 is designed primarily for multi carrier purposes. If the repeater is run at full output power over a long period of time, the convection cooling may not be enough. The repeater is equipped with a power management function that steps down the power and, if needed, fully shuts down the amplifier chains until temperature reaches normal values. In situations where a repeater will be run in such a manner extra cooling can be provided by putting the repeater in a temperature controlled environment or via external fans.

## 2.4 Management WEB GUI

BSF-3604 is remotely commissioned and monitored via an OMU II session. Local access to the unit is not required for commissioning.

Additional configuration and troubleshooting options are available via a direct connection to the BSF-3604 IP address. A direct session can be opened locally or remotely.

*NOTE: Direct remote communication requires connecting the BSF-3604 to an Ethernet network and configuration of an IP address, or via GSM/GSM-R PSTN modem.*

## 2.5 Interfaces

The BSF-3604 unit provides the following interfaces:

- Lockable door catches for protection and security
- External TX and RX antenna and GND connections
- External connection for power
- Internal connection for fiber optics and alarm cables routed via cable gland on the side of the unit
- Internal USB/Ethernet connection for (optional) management and analysis via Web GUI routed via cable gland on the side of the unit

### 2.5.1 Securing the Unit

The repeaters are secured with two, quarter-turn door catches which can be locked with a key.

*NOTE: The two door catches must be fully closed and locked. Failure to do so will affect the IP65 compliancy and therefore any warranty.*

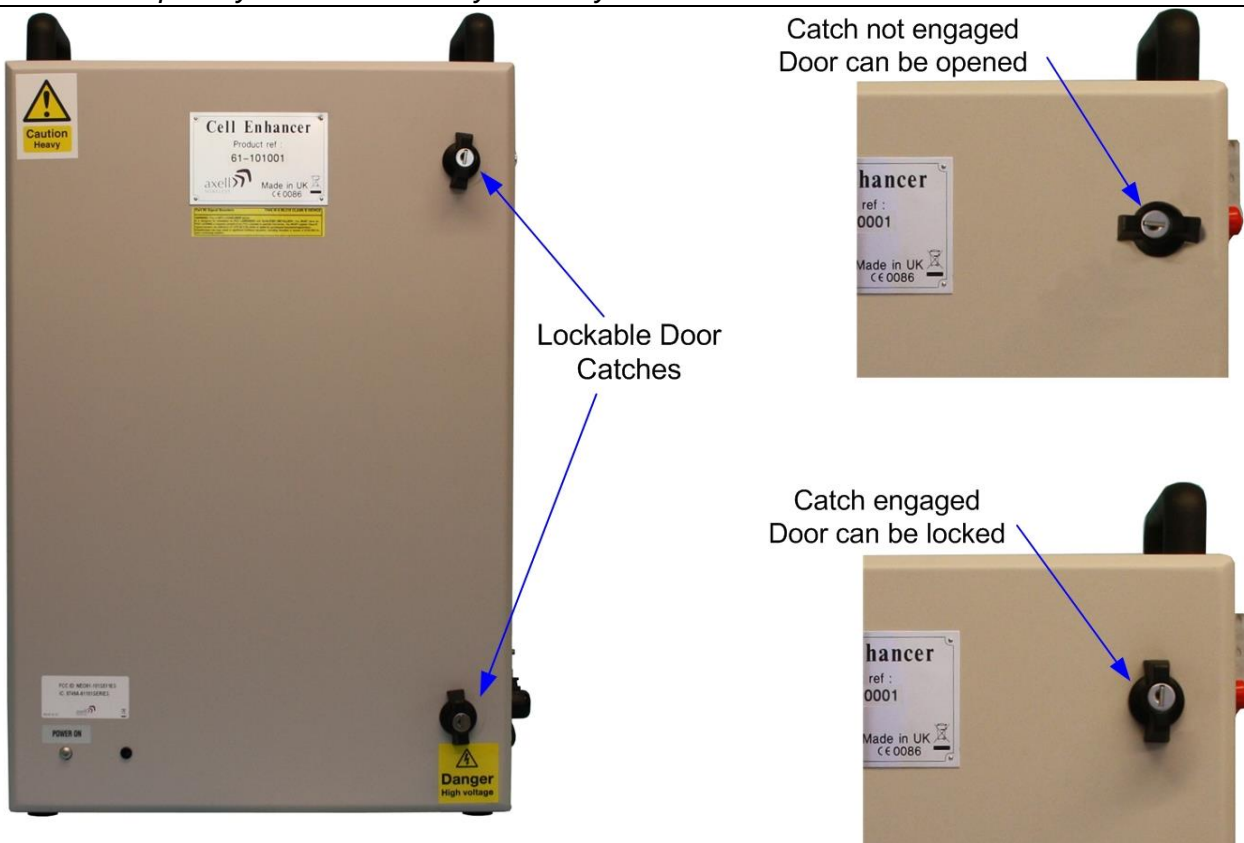


Figure 2-2: Securing the Unit

## 2.5.2 External Interfaces

The repeater's external interfaces are located on the right-hand side of the unit

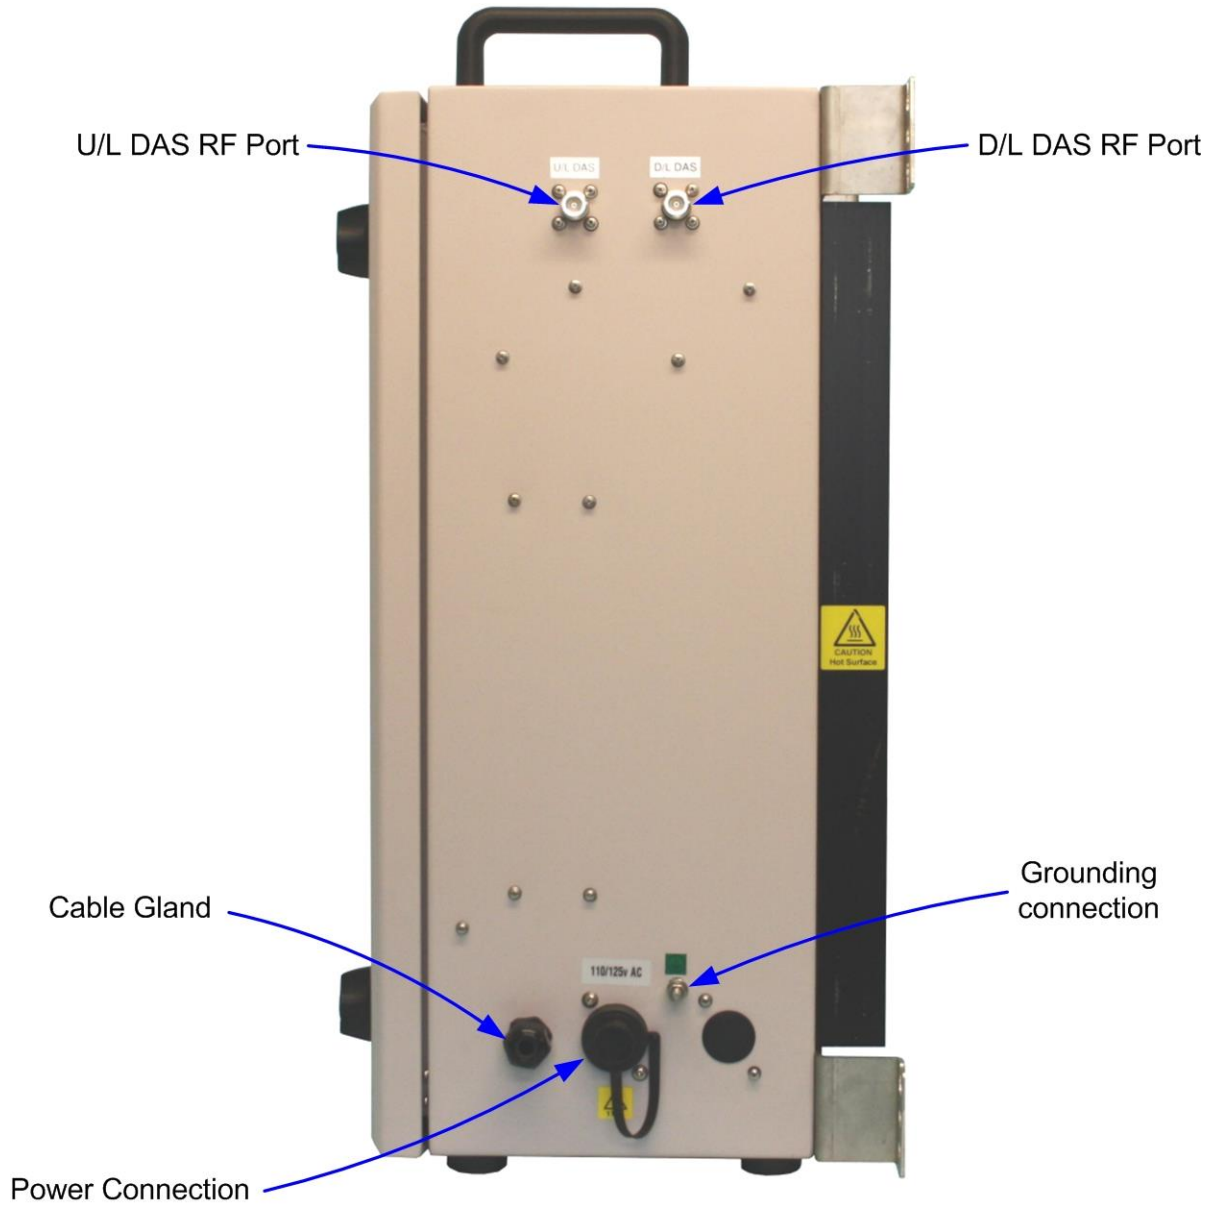


Figure 2-3: ports and connections

The following table provides a description of the ports and connections.

Port	Description
D/L DAS RF Port	Downlink output connection to TX Antenna – N type connector, female
U/L DAS RF Port	Uplink input connection from RX Antenna – N type connector, female
Cable Gland	The fiber optic cable link from the master site is routed through this gland. The optional Ethernet connection for management and analysis via Web GUI may also be routed through this gland. Connections for routing external alarms and relay wiring cable for internal connections (section 4.6.) are also routed through this cable gland
Power Connection	AC inlet, 3 pole panel plug (section 4.7.)
Grounding Connection	Grounding bolt (section 4.3.)

### 2.5.3 Internal Interfaces

This section shows the internal interfaces for the repeater. You will need to open the Repeater in order to do the following:

- Connect optic fibers
- Connect alarms (if relevant)
- Power-on (Power-ON and Battery ON switches)
- USB/Ethernet port for local setup

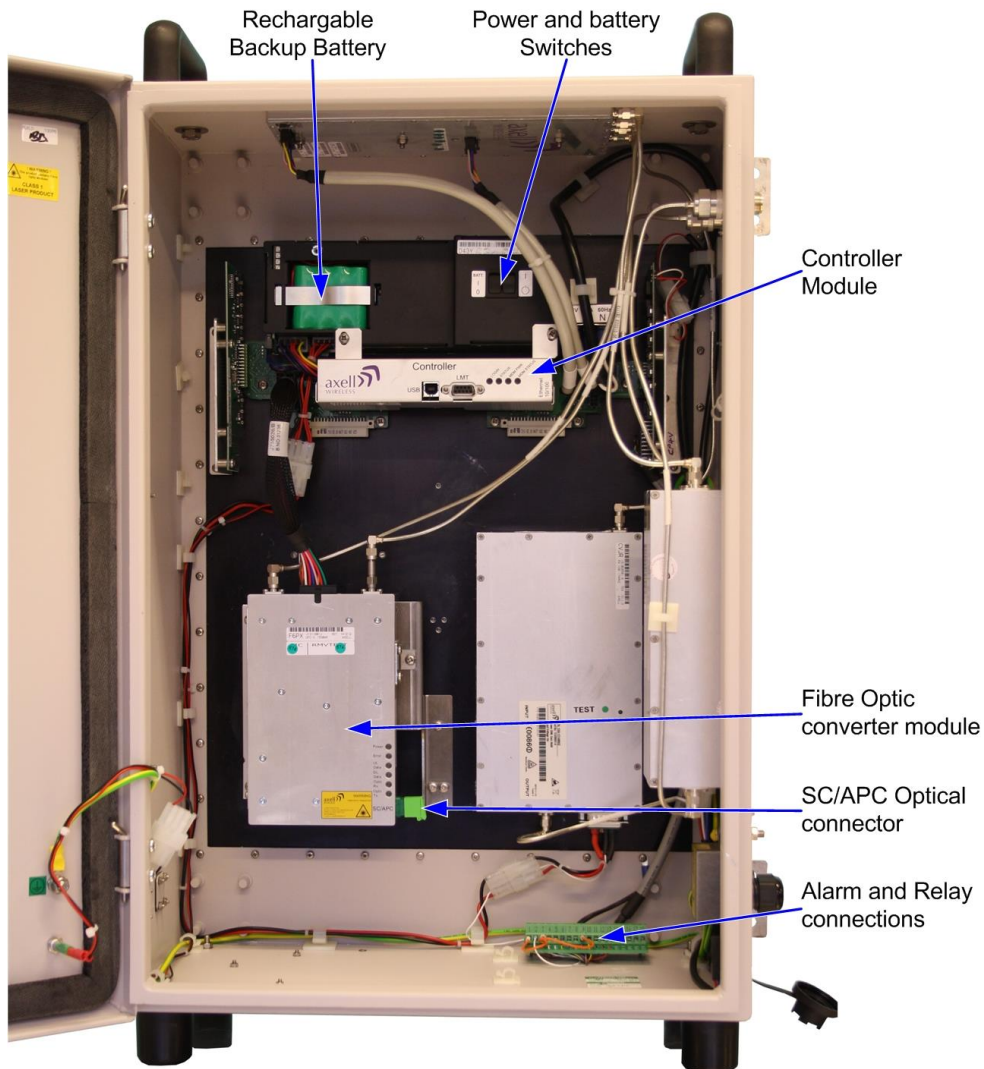


Figure 2-4: Repeater with Door Open

Feature	Description
Rechargeable Backup Battery	provides the Control Module and modem with enough capacity to send an alarm in case of input power failure. See section 4.2.7.1.
Power and battery Switches	Separate switches for PSU module and Backup Battery. See section 4.7.3.
Controller Module	Provides RS232 ,USB and Ethernet ports for local and remote control and reporting/interrogation of alarm data. See section 7.4.1.
Fiber Optic Converter module	The fiber optic transceiver module. See section 7.4.2.
Alarm and Relay Connections	The external alarm interface card. See Section 4.6.



## 3 Antenna and Repeater Installation Requirements

This chapter provides information on the Remote installation site requirements, on the installation requirements of the antennas, the specifications of the service antennas suitable for operation with this remote and RF and F/O cable requirements.

### 3.1 BSF-3604 Installation Requirements

#### 3.1.1 Safety Guidelines

Before installing the Repeater, review the following safety information:

- Follow all local safety regulations when installing the Repeater.
- Only qualified personnel are authorized to install and maintain the Repeater.
- Ground the Repeater with the grounding bolt located on the external lower side of the Repeater.
- Do not use the grounding bolt to connect external devices.
- Follow Electro-Static Discharge (ESD) precautions.
- Use low loss cables to connect the antennas to the Repeater.

#### Class 1 Laser

This product is equipped with class 1 lasers, as per definition in EN 60825-1.



**CAUTION!** Un-terminated optical receptacles may emit laser radiation. Do not stare into the beam or view with optical instruments

#### 3.1.2 Criteria for Repeater Installation Location

The following criteria should be considered when selecting the Repeater installation site location:

- Application type
- General surroundings
- Available installation
- Install the Repeater in a shielded, ventilated, and easy-to-reach area.
- Verify that there is a minimum of a 50 cm (20") radius of space around the Repeater, enabling easy access to the repeater for maintenance and on-site inspection.
- Distance from antenna site - It is recommended that the installation location be as close as possible to the antenna site in order to maintain the cable loss to a minimum.
- The Repeater is convection cooled so airflow and alternation should be possible.
- Follow Electro-Static Discharge (ESD) precautions.
- Install the Repeater close to the service area to monitor the output power.
- Use low loss cables to connect the antennas to the Repeater.

### 3.1.3 RF Cable Installation Guidelines

**Required:**

- For all coaxial connections to/from the Repeater - high performance, flexible, low loss 50Ω coaxial communications cable.
- All cables shall be weather-resistant type.
- Cable length - determined by the Repeater installation plan. When calculating the cable length, take into account excess cable slack so as not to limit the insertion paths.

### 3.1.4 F/O Cable Installation Guidelines


**Use the following over the complete link between the Remote and OMU:**

- Use SC/APC connectors (8 degree angle) for all connections
- Cable length - determined by the Remote installation plan. When calculating the cable length, take into account excess cable slack so as not to limit the insertion paths.

**Recommended fiber-optic cable:**

- Single-mode type fiber 9/125

## 3.2 Service Antenna Requirements

	<p><b>WARNING!</b> a. The installer is held accountable for implementing the rules required for deployment. b. Good engineering practice must be used to avoid interference. c. Output power should be reduced to solve any IMD interference issues.</p>
---	--

The Service antenna type (i.e. the antenna feeding the mobile/remote units) depends on the design of the DAS.

### 3.2.1 Required Antenna Information

The following antenna requirements, specifications and site considerations should be met:

- Type of installation – DAS/Radiating Cable
- Service area type and size
- Antenna type and characteristics
- Height
- Length and type of coaxial cable required for connecting the antenna to the Repeater and the attenuation.

### 3.2.2 Indoor Installations

#### 3.2.2.1 Recommended Antennas

The following describes the requirements for an omnidirectional mobile used for indoor applications.

**Specifications:**

- One or a combination of the following antennas can be used: Ceiling Mount Patch antenna, Wall Mount Patch antenna, Corner Reflector.
- Choose an antenna with high side lobe attenuation which enables maximum isolation from other co-located antennas.
- 

**Equation (1) - Max SERVICE antenna gain**

$$\text{Max SERVICE antenna gain (dBi)} = 39.1 - (37\text{dBm} - \# \text{ of antennas in dB} - \text{cable losses in dB}).$$

**For example:**

No. of Antennas	Cable Losses	Max Allowed Antenna Gain
4	3	$39.1 - (37-6-3) = 11.1\text{dBi}$
1	3	$39.1 - (37-0-3) = 5.1\text{dBi}$
10	3	$39.1 - (37-10-3) = 15.1\text{dBi}$

**Typical Antenna Types:**

- Indoor Dome 2.1dBi beam width 360°
- Indoor Panel 4.2dBi beam width 106°
- Radiating Cable Typically < -50dBi

#### 3.2.2.2 Recommended Splitters and Couplers

Axell Wireless can supply a comprehensive range of splitters and Couplers to aid the installation of the DAS system. Typical specifications as below:

Splitter Part Numbers	90-851202	90-851203	90-851204
Frequency Band	300 - 500MHz		
Split	2 way	3 way	4 way
Max Insertion Loss	0.3dB	0.5dB	0.4dB
Split Loss	3dB	4.8dB	6dB

Coupler Part Number	90-852306	90-852310	90-852315	90-852320
Frequency Band	300 - 500MHz			
Coupling	-6dB ±1.0dB	-10dB ±1.0dB	-15dB ±1.0dB	-20dB ±1.0dB
Max Mainline Loss	1.7dB	0.8dB	0.4dB	0.22dB

### 3.2.2.3 Installation Criteria

Determine the antenna installation configuration, according to the transmission requirements and the installation site conditions.

#### Installation requirements:

- An indoor antenna should be installed at a convenient location. It should be free of metallic obstruction.

Install the Service Antenna at the designated height and tune it roughly toward the Service coverage area.

### 3.2.3 Service (Mobile) Antenna Installation Criteria

Determine the antenna installation configuration, according to the transmission requirements and the installation site conditions.

#### Installation requirements:

- An indoor antenna should be installed at a convenient location. It should be free of metallic obstruction.
- Install the Service Antenna at the designated height and tune it roughly toward the Service coverage area.
- Installation of this antenna must provide a minimum separation distance of 47 cm from any personnel within the area.

## 3.3 RF Cabling Requirements

- For all coaxial connections to/from the Repeater - high performance, flexible, low loss 50Ω coaxial communications cable.
- All cables shall be weather-resistant type.
- Cable length - determined by the Repeater installation plan. When calculating the cable length, take into account excess cable slack so as not to limit the insertion paths.
- Make sure that cable and connector are compatible. Using cables and connectors from the same manufacturer is helpful.
- All connectors must be clean and dry
- Waterproof all outdoor connections using silicone, vulcanizable tape or other suitable substance as moisture and dust can impair RF characteristics.
- Make sure enough room has been allocated for the bending radius of the cable. RF cables must not be kinked, cut or damaged in any way
- Connect the RF cable to the antenna tightly but without damaging threads
- Fasten cables tight to cable ladder or aluminum sheet
- For short length of feeder cables use 1/2", for longer feeder cables use 7/8". Chose thicker coax cables for lower attenuation. Minimize the length of the coax cables to reduce the attenuation
- Use jumper cable for easy installation. The RF Coaxial cable can be substituted at each end with a jumper cable.

## 4 Installation

### 4.1 Unpacking

Inspect the shipped material before unpacking the equipment, document any visual damage and report according to routines.

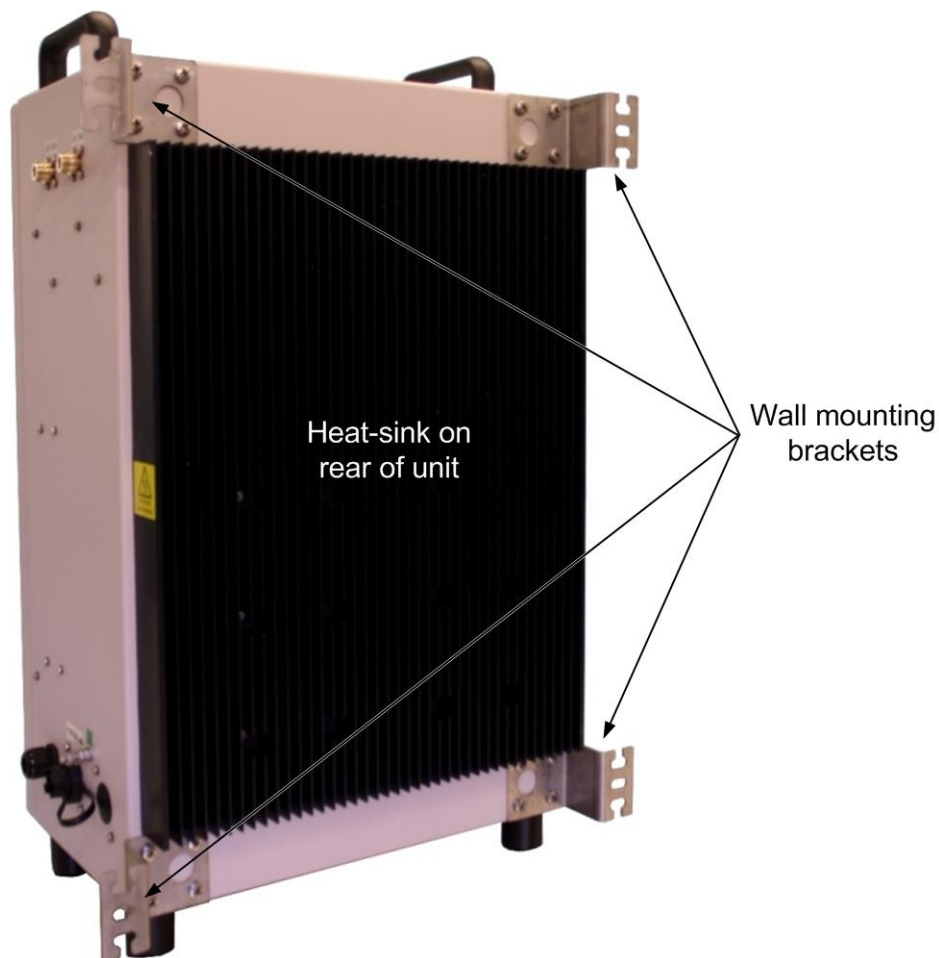
A delivery of a repeater from Axell Wireless contains:

- Checklist with delivered items
- Repeater with attached wall mounting brackets
- Mains lead
- Keys to repeater
- Rubber inset for fiber inlet cable gland
- CD containing User's Manual and RMC
- Any other specifically ordered item

### 4.2 Mount the Repeater

The BSF-3604 Remote is designed to be mounted on a wall. The Repeater is delivered with wall mounting brackets attached.

Mount the repeater in an accessible location and in a location that fulfils the environmental requirements. Mounting must be tight to eliminate vibration.



#### 4.2.1 Selecting a Location to Ensure Proper Cooling

- Mount the repeater so that heat can be dispersed from it.
- The repeater wall mounting brackets ensure an optimum airflow between the wall and the heat-sink on the rear of the repeater.
- Do not block this air channel as it will cause the MTBF of the repeater to drop dramatically, or even in the worst case cause the repeater to fail completely.
- If possible, use a wall in the shade to minimize the overall sun loading. If sufficient shielding cannot be obtained, an additional sun shield should be mounted.



Figure 4-1: Example of a sun shield

#### 4.2.2 Wall-Mounting Preparation

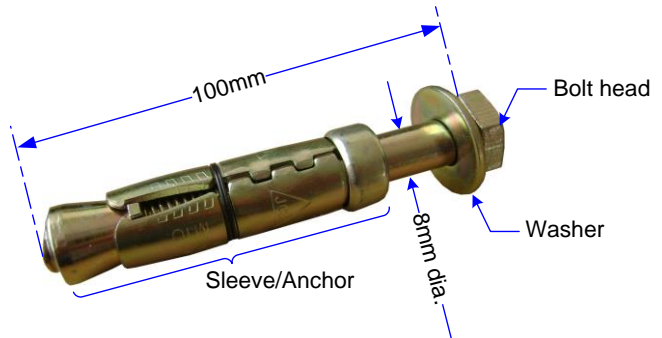
**CAUTION!** It is recommended that two people lift the repeater since (depending upon the configuration) the BSF-3604 weighs approximately 30 kg.

- **Wall compatibility** - check the suitability of the wall on which the BSF-3604 is to be fitted.
- **Plan mount** - check the actual fixing centers (see below) and overall dimensions of the BSF-3604 enclosure. The BSF-3604 is fitted with wall mounting brackets which provide adequate ventilation between the BSF-3604 and the wall to which it is fixed.
- **Plan connection cable clearances** - the Optical, RF and power connections located on the side of the BSF-3604 will need at least 300mm clearance to enable the connections to be made. The minimum bend radius for Optical and RF cables must not be less than the recommendations made by the cable manufacturer. Plan the cable runs and ensure adequate space is available.
- **Allow for door opening** - ensure that there is sufficient space at the front of the BSF-3604 to allow the door to be fully opened and for maintenance engineers to get access to the unit with test equipment such as a spectrum analyzer. Allow an additional 500mm of space in front of the BSF-3604 when the door is fully open.
- **Fix bolts** –fix M8 Rawbolts or similar (100mm in length) into the wall at the dimensions as illustrated in figure 1 below using equipment as specified by the fixing manufacturer. A recommended method is set out below. Care must be taken to ensure the alignment of the four fixings. A spirit level or plumb line should be used to ensure horizontal/vertical alignment.

BSF-3604 should be fixed to a solid wall (these include brickwork, blockwork, and concrete.), due to the weight of the cell enhancer, fixing to a hollow wall is not recommended. Always check that there are no pipes or cables hidden in the wall beneath the area to be drilled. Various pipe and cable detectors are available to check this.

To provide secure fixing to a solid wall, the most common method is drilling and plugging. The size of fixing is dependent on the item to be fixed and the nature of the wall, Repeater 50-122503 should be fixed with mild steel, M8 x 100mm rawl bolts or similar.

Right: M8 rawl bolt of the type recommended to fix BSF-3604 to a wall.



First mark out on the chosen wall the fixing centers of the BSF

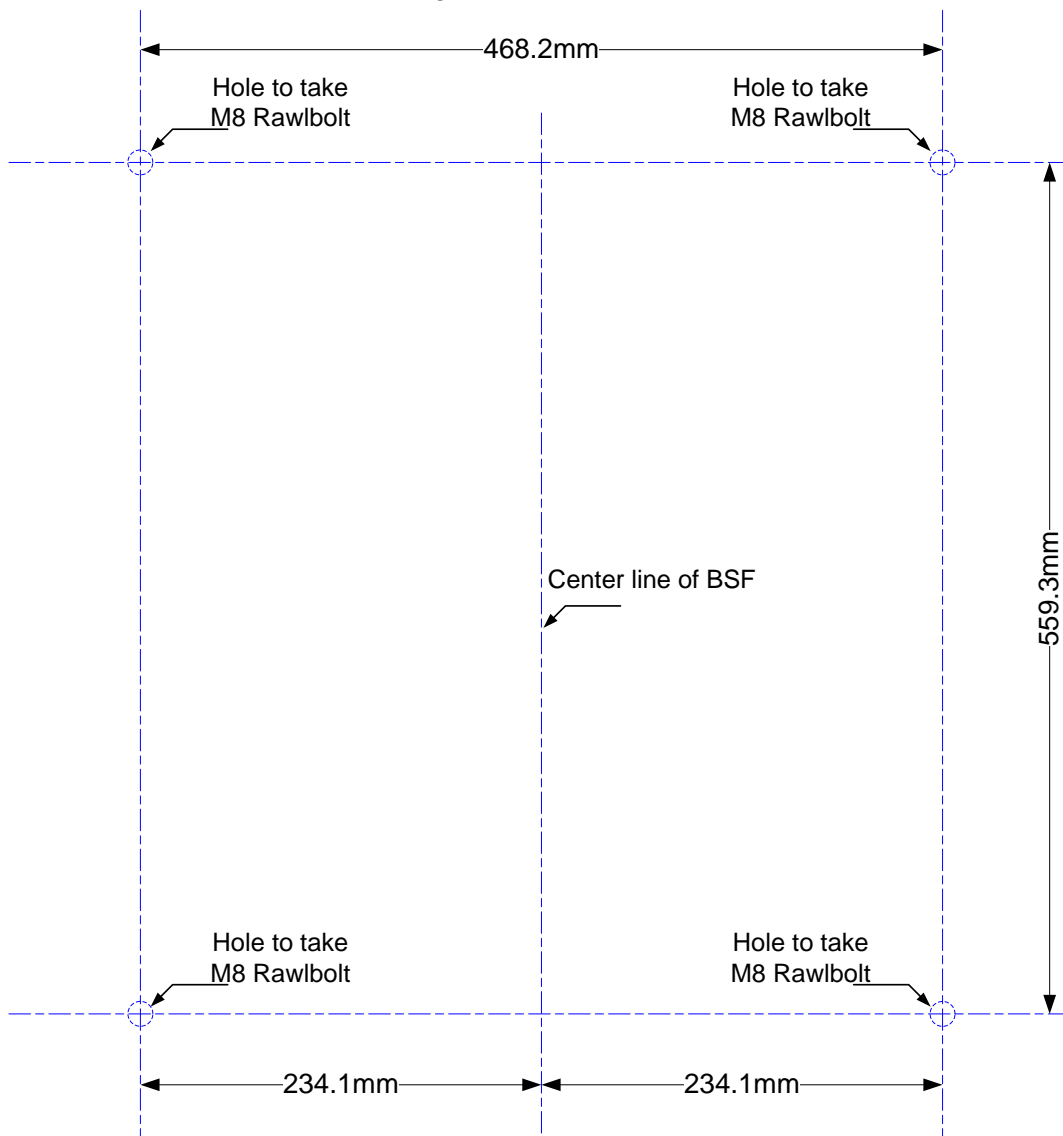


Figure 4-2: Fixing Centers

### 4.2.3 Mount the Repeater on the Wall

The Repeater wall mount brackets assembly should be fixed to a solid wall (these include brickwork, blockwork, and concrete.);  
(Due to the weight of the Repeater, it is NOT recommended to fix to a hollow wall).

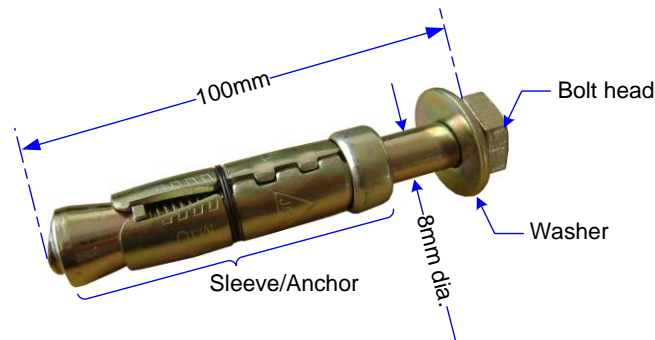


Figure 4-3: M8 Rawlbolt – recommended for wallmount.

**CAUTION!** Always check that there are no pipes or cables hidden in the wall beneath the area to be drilled. Various pipe and cable detectors are available for this type of inspection.

To provide secure fixing to a solid wall, the most common method is drilling and plugging. The size of fixing is dependent on the item to be fixed and the nature of the wall, The Repeater should be fixed with mild steel, M8 (100mm) rawlbolts or similar.

1. Mark out the fixing centers of the repeater on the chosen wall (see 4.2.2).
2. Mark and drill the wall with the correct size masonry bit as specified by the fixing manufacturer.

**NOTE:** It is good practice to wear goggles to protect your eyes from flying debris when using power tools.

3. Hold the drill bit against the mark and begin drilling slowly so that the bit does not wander from the position. The wall should be drilled to a depth which is sufficient to accommodate the full length of the fixing.
4. Insert the fixings so that the top of the sleeve/anchor section is level with the wall surface. Gently tighten the bolt by hand so that the anchor section of the fixing expands and grips the inside of the hole.

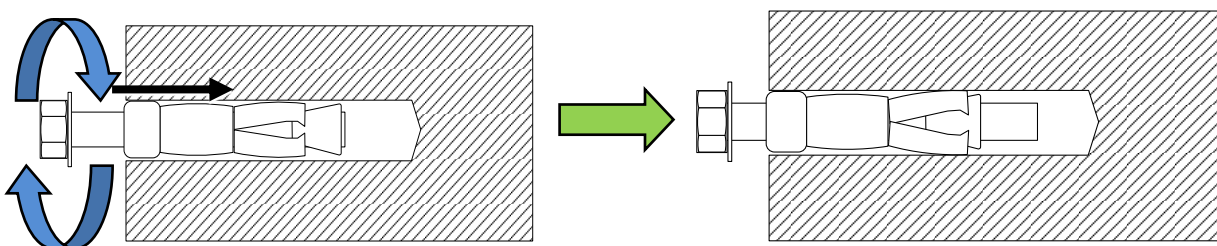


Figure 4-4: Inserting Fixing and Tightening.



- As the bolt pulls its way in, the sides of the anchor section are forced outwards, gripping the surrounding surface.

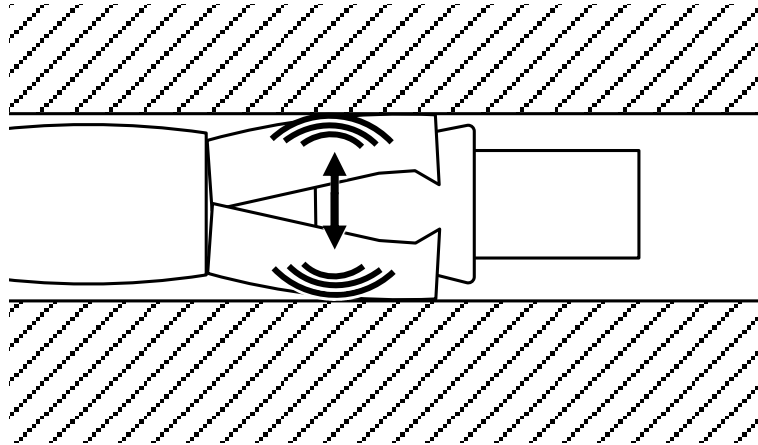


Figure 4-5: Anchor Sides Pushed Outwards.

- Once all four fixings are in place, carefully withdraw the four bolts.

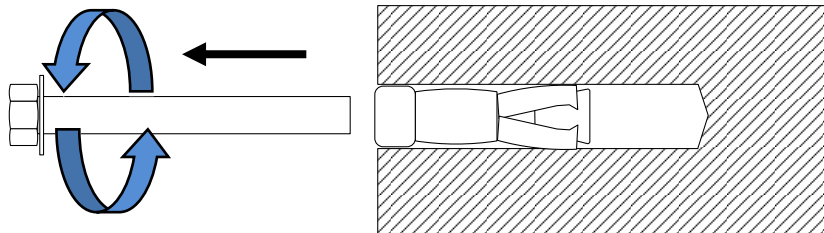


Figure 4-6: Withdraw Bolts.

- Align repeater with the four fixings. Great care should be exercised here as the repeater is very heavy. Once repeater is held in the chosen position (a suitably rated heavy duty scissor lift table/trolley may be suitable for this operation). Carefully insert the fixing bolts through the mounting lugs of the Repeater and into the sleeve/anchor sections of the fixing in the wall and tighten the bolts.

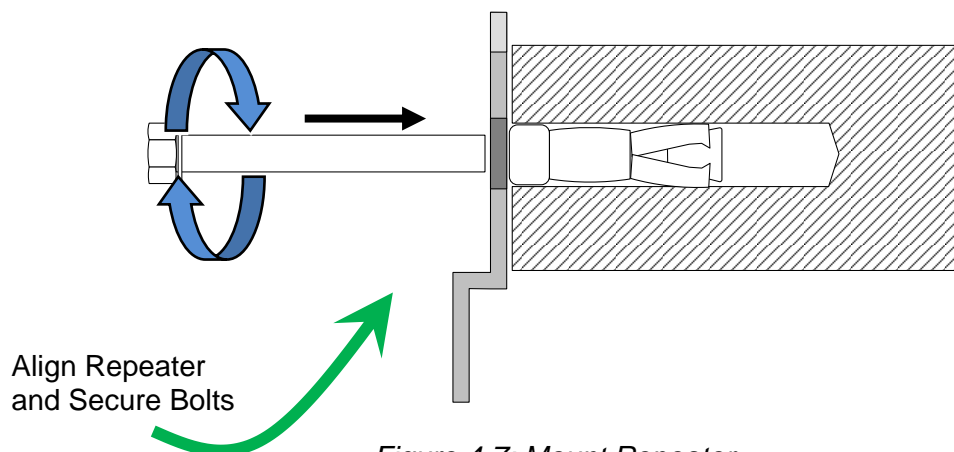


Figure 4-7: Mount Repeater

### 4.3 Grounding

**CAUTION!** This equipment must be grounded.

Connect the grounding protection as follows:

- Ensure that good grounding protection measures are taken to create a reliable repeater site.
- Make sure to use adequately dimensioned grounding cables. The minimum recommended conductive area for a grounding cable is 16mm<sup>2</sup>
- Make sure the grounding product used is suitable for the kind and size of cable being used.
- Connect the repeater grounding bolt to the same ground.

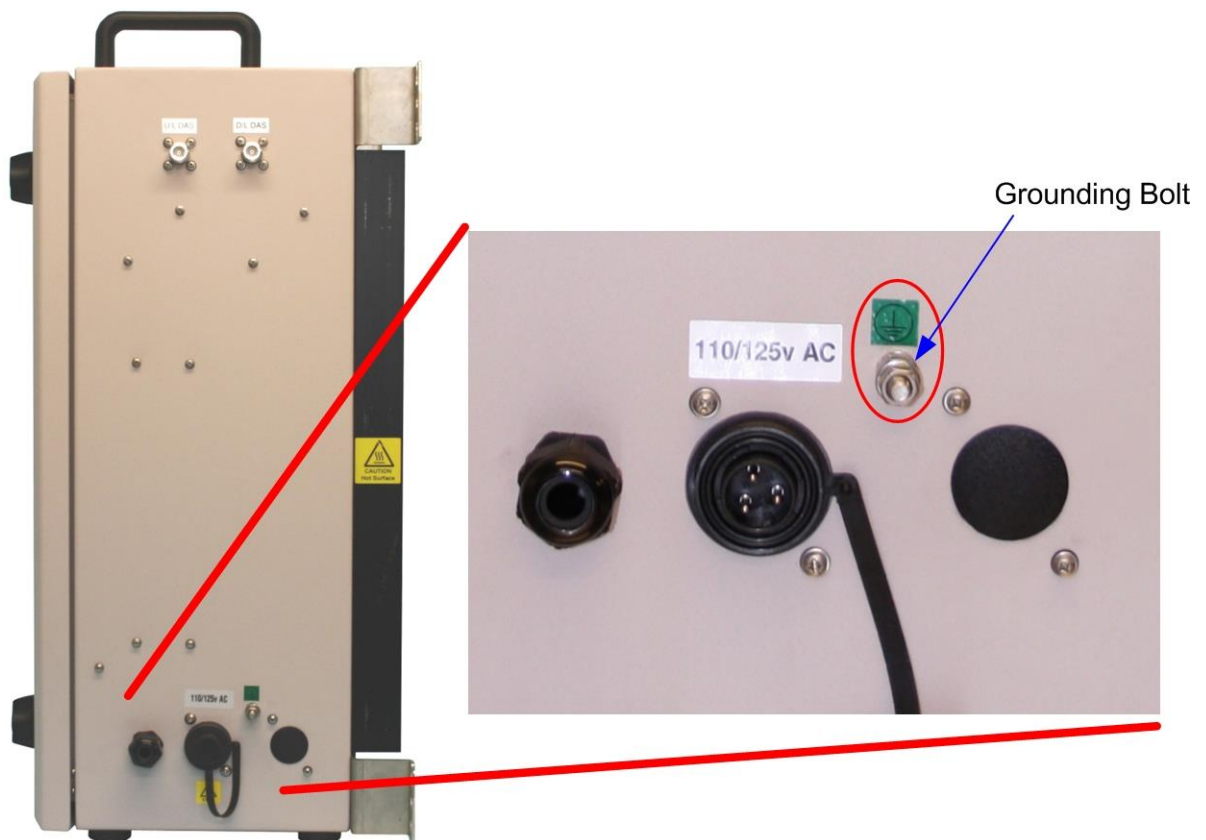


Figure 4-8: Grounding the BSF-3604

## 4.4 Ensure Good Electromagnetic Vulnerability (EMV) Protection

**CAUTION!** If insufficient Electromagnetic Protection is provided, or if EMV measures are not taken, warranties issued by Axell Wireless are not valid.

### Connect the lightning protection

The lightning hazard to electric and electronic equipment consists in the interferences of direct lightning current infections and high surge voltages induced by the electromagnetic field of nearby lightning channels or down conductors. Amplitudes from cloud-to-earth lightning amounts to several 10kA and may last longer than 2ms. The damage caused depends on the energy involved and on the sensitivity of the electronics systems.

Ensure that lightning protection measures are taken to create a reliable repeater site. Protect all coaxial cables and power cables from the transients caused by lightning. Fit all cables with suitable lightning protection devices.

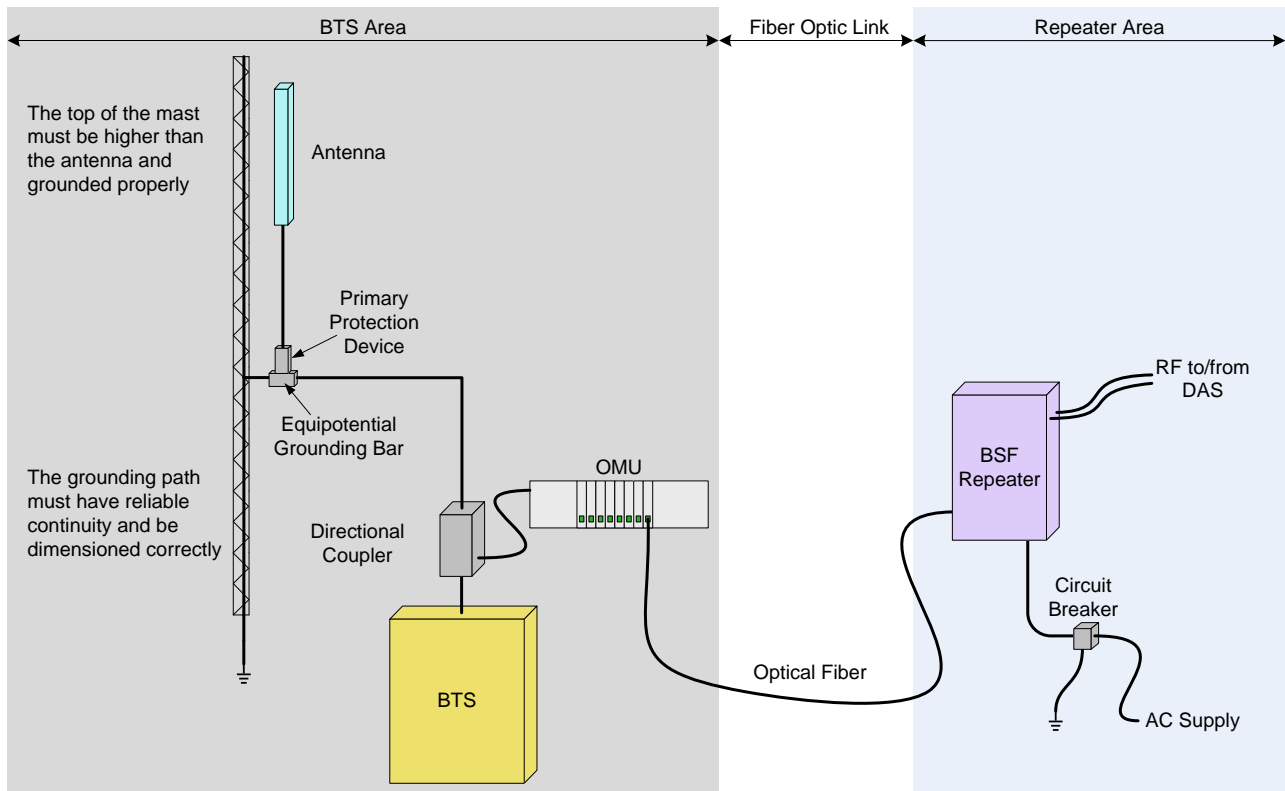


Figure 4-9: Example of EMV protection for a repeater system

For detailed information please refer to IEC 61024-1 and 61312-1 for international standards for protection of information systems against LEMP (Lightning Electromagnetic Pulse), including radio transmitters. They define proper planning, installation and inspection of effective lightning protection systems.

The Axell Wireless repeaters comply with the EN standard ETS 301 498-8 which stipulates demands on lightning/surge protection for typical infrastructure telecom equipment installations. Several lightning protection devices should be used in series with declining threshold voltages to help attenuate the pulse component which makes it through the first layer of protection.

The primary protective device is part of the site installation and is not supplied by Axell Wireless. Coaxial lightning protection is normally one of these three types: Gas capsule, High-pass and Bandpass.

There also needs to be a protective device (circuit breaker) installed on the power supply cord (see section 4.7).

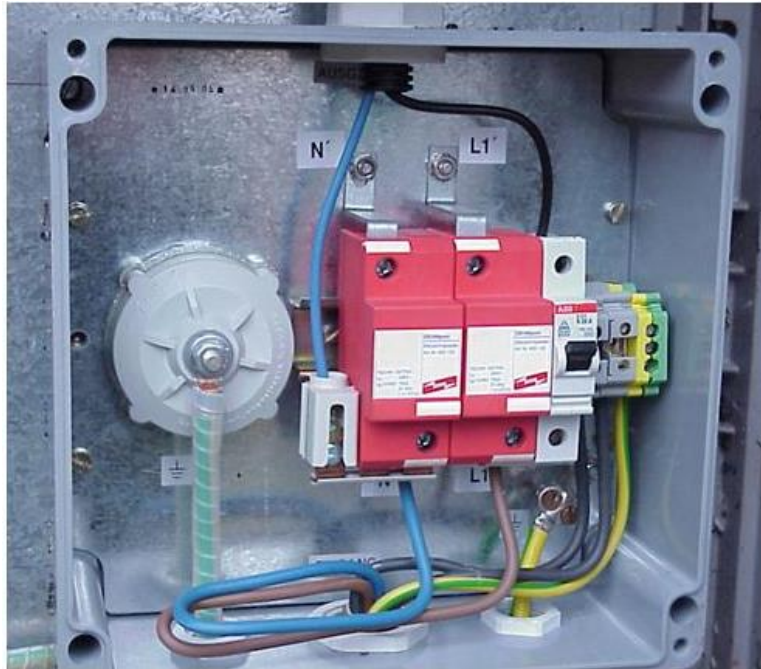


Figure 4-10: Example of protective device installed in connection with the power supply

## 4.5 Fiber Optic Connection

### Class 1 Laser

This product is equipped with class 1 lasers, as per definition in EN 60825-1.



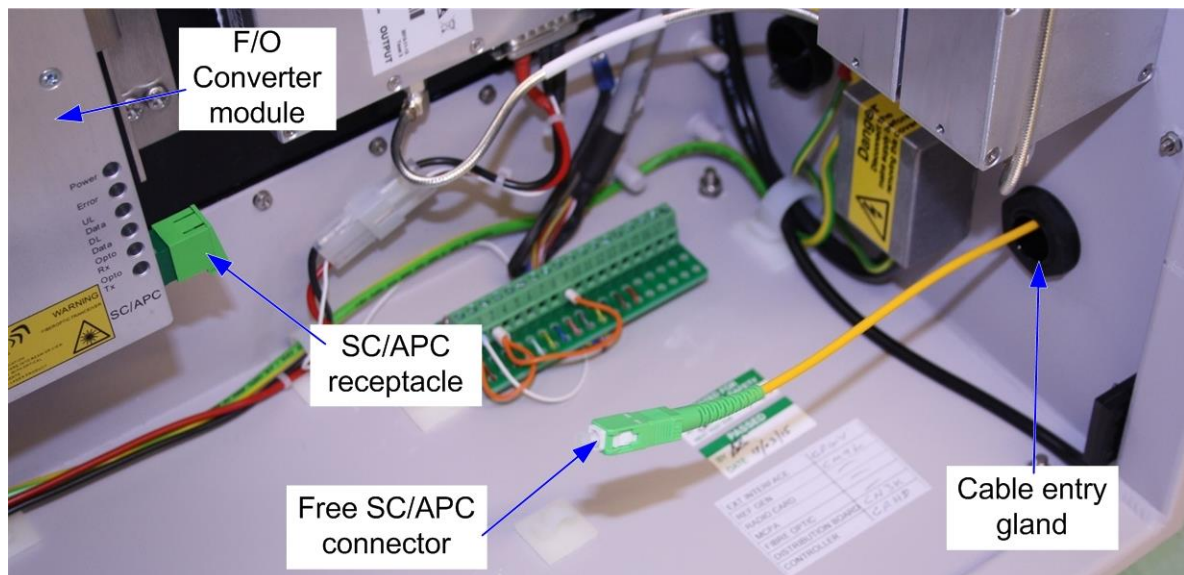
**CAUTION!** Un-terminated optical receptacles may emit laser radiation. Do not stare into the beam or view with optical instruments

Use the following over the complete fiber link between the OMU and the Repeater:

- Single-mode type fiber 9/125
- Use SC/APC connectors (8 degree angle) for all connections

### Connecting the Fiber Optic Cable


1. The fiber optic cable with its SC/APC connector must be passed through the cable gland on the side of the repeater. If the rubber sealing insert is already inside the gland it must first be removed.




2. Ensure that there is enough cable slack between the cable gland and the fiber optic converter module to connect the free SC/APC connector to the SC/APC receptacle on the F/O converter module.

**CAUTION!** Make sure the fiber optical cable is not bent too sharply inside the repeater as this can damage the cable and lead to communication disruptions.

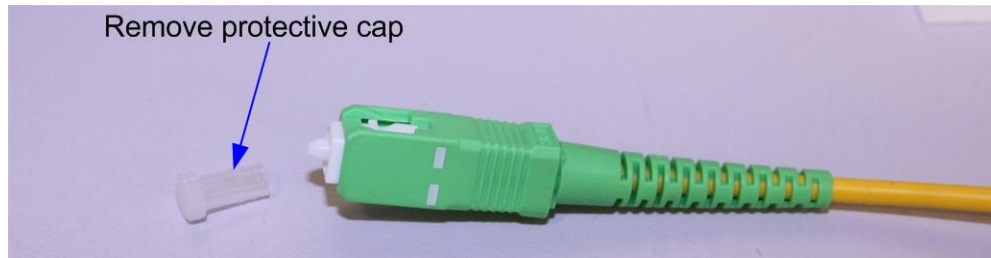3. Remove any protective caps from the SC/APC connector and SC/APC receptacle and mate the free connector to the receptacle.



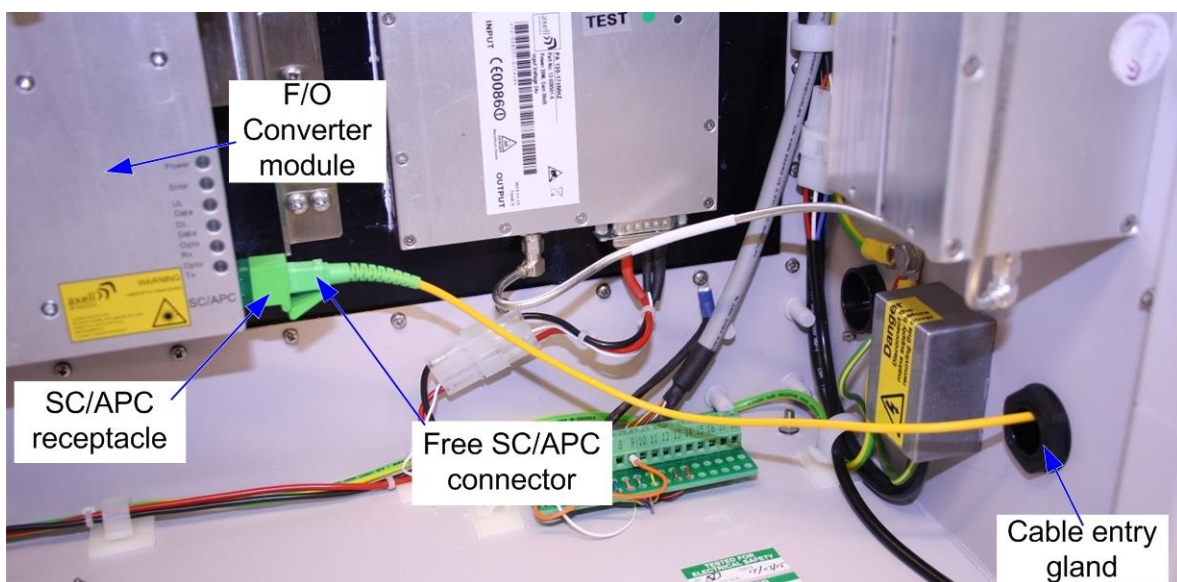
**NOTE:** Clean the fiber connector before connecting it to the system. See instruction in Appendix B - F/O Cleaning Procedure.



4. To ensure IP65 compliancy and provide a degree of strain relief rubber sealing insert should be employed. The insert has a slit along one side; on the outside of the repeater, pass the fiber optic cable through the slit in the insert and then slide the insert along the cable and into the cable entry gland.

5. With the rubber sealing insert sitting inside the cable entry gland, tighten the exterior nut until it grips the rubber sealing insert - the exterior nut acts as a collet gripping the rubber sealing insert.

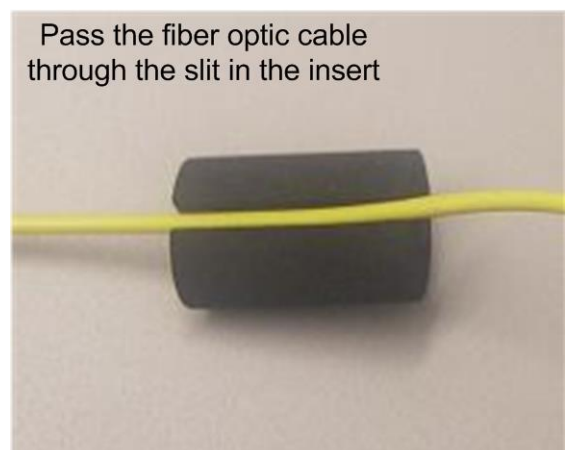Check again that there is enough cable slack between the cable gland and the fiber optic converter module, the cable should not be too tight.



## 4.6 External Alarm and Relay Connections

The repeater is equipped with an external alarm interface card. The connector terminal block for the external alarms is located at the base of the repeater.

Connect the alarm cords to the plinth according to the pin layout below (pins 14 – 18 are not used).

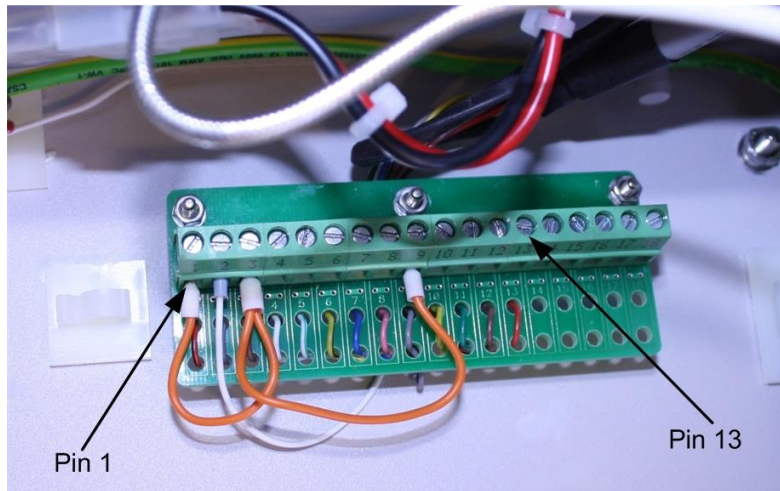


Figure 4-11: External alarm interface card located inside Repeater

Pin 1	External alarm 1A
Pin 2	External alarm 1B
Pin 3	External alarm 2A
Pin 4	External alarm 2B
Pin 5	External alarm 3A
Pin 6	External alarm 3B
Pin 7	External alarm 4A
Pin 8	External alarm 4B
Pin 9	Alarm +15V
Pin 10	Alarm 0V
Pin 11	Relay Output 1A
Pin 12	Relay Output 1B
Pin 13	GND
Pin 14	Not used
Pin 15	Not used
Pin 16	Not used
Pin 17	Not used
Pin 18	Not used

### 4.6.1 External Alarm

- Four external alarm sources can be connected to the repeater.
- Alarm operating voltage: between 12 and 24VDC.
- Alarm polarity can be configured:
  - Active-low - when there is no voltage the alarm indicator will turn red
  - Active-high - an applied voltage of between 12 and 24 V will cause the external alarm indicator to turn red.
- The repeater can supply +15 VDC to an external alarm source through pin 9 and 10. The maximum allowed load is 100mA.

### 4.6.2 Relay

- Relay (pins 11 and 12) can be connected to an external device to indicate an alarm.
- Can be configured to trigger on any number of internal and external alarms. The maximum current that can be supplied is 100mA.

## 4.7 Power and Backup Battery

**CAUTION!** Make sure the antenna cables or 50 ohm terminations are connected to the repeater's antenna connectors before the repeater is turned on.

**CAUTION!** Be sure a CIRCUIT BREAKER meeting the instructions given in this section is connected near the unit at an easily reachable and accessible location from the unit.

### 4.7.1 Circuit Breaker

The internal power connections for the unit are hard-wired. The Repeater's internal PSU Module has a switch which allows it to be set in the "on" or "standby" position. Setting the switch to standby will disable the repeater. In the standby position the PSU module and repeater are still connected to the AC power supply but the PSU module is not operational,

As an additional safety feature to disconnect the unit (either manually or automatically in case of overcurrent), it is good practice to install a circuit breaker *on the wall near the unit*, at an easily accessible distance and location from the unit.

#### Circuit-breaker minimum requirements

- 10AT, 250VAC
- Needs to be SAFETY approved
- Requires minimum contact separation of 3mm
- Install on the wall near the unit

### 4.7.2 Power Connections

The image below shows the location of the various power elements. These are described in detail in the following sections.

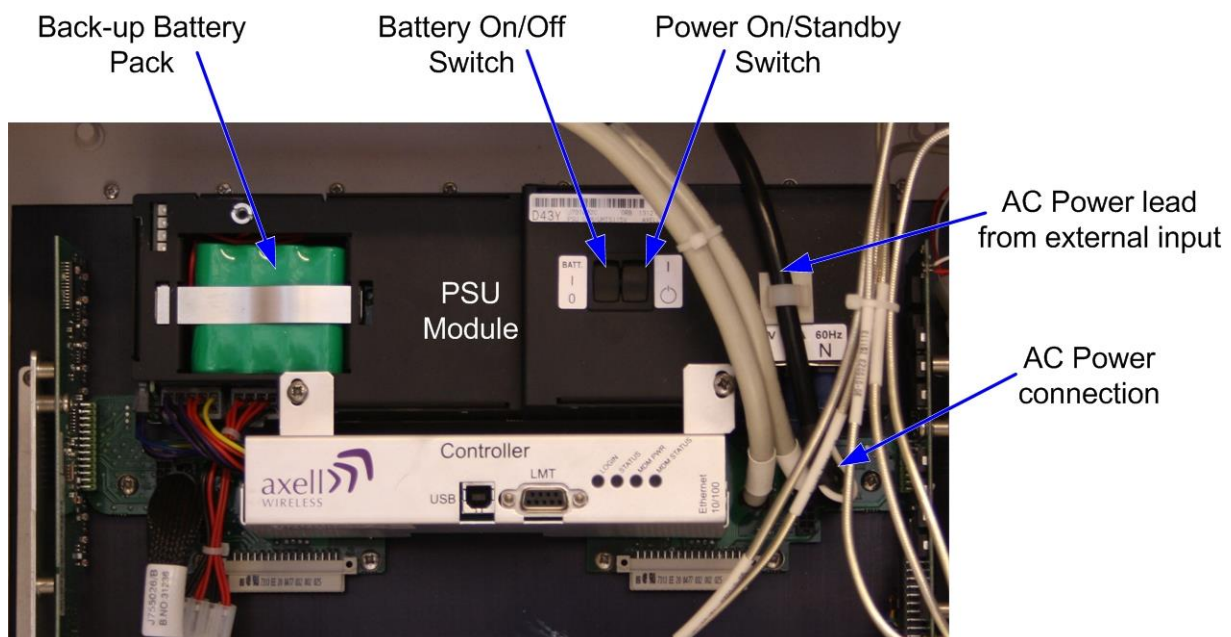


Figure 4-12: Power Elements – Located Inside Repeater



#### 4.7.2.1 Backup Battery

- A rechargeable battery pack is mounted in a small recess on the PSU module. The PSU module also includes charging and supervision electronics.
- The backup battery will provide the Control Module and modem with enough capacity to send an alarm in case of input power failure.
- The battery can be switched on and off. The switch is placed adjacent to the main power on/standby switch on the PSU module.
- At delivery the back-up battery is connected.
- The battery is replaced by removing the restraining clip and lifting the battery pack out of the recess and disconnecting the cable.

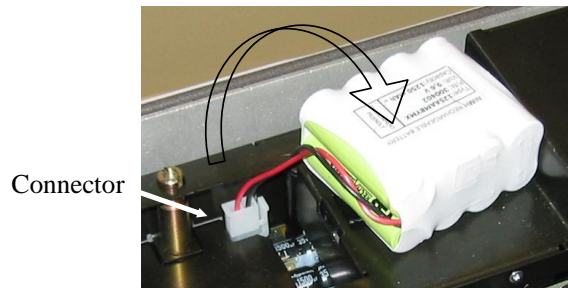


Figure 4-13: Backup Battery

#### 4.7.2.2 Connecting the Power Source

- The BSF unit is supplied with an AC Mains cable with a free socket which mates with the panel plug on the side of the unit.
- Power Source: 115 VAC 60 Hz
- The power supply module has a switch which allows it to be set in “on” position or in “stand by”.

*NOTE: With the PSU module on/standby switch in the standby position the repeater is still connected to the AC power supply but is not operational.*

- To disconnect the repeater completely from the AC supply the PSU on/standby switch should be set in the standby position and the mains flying socket removed from the panel plug on the side of the repeater.

## 4.7.3 Power ON

### 4.7.3.1 Switching Power ON

**CAUTION!** Make sure the antenna cables or 50Ω terminations are connected to the repeater's antenna connectors before the repeater is turned on.

1. Set the **PSU On/Standby Switch** to On
2. Set the **Battery On/Off switch** to On.

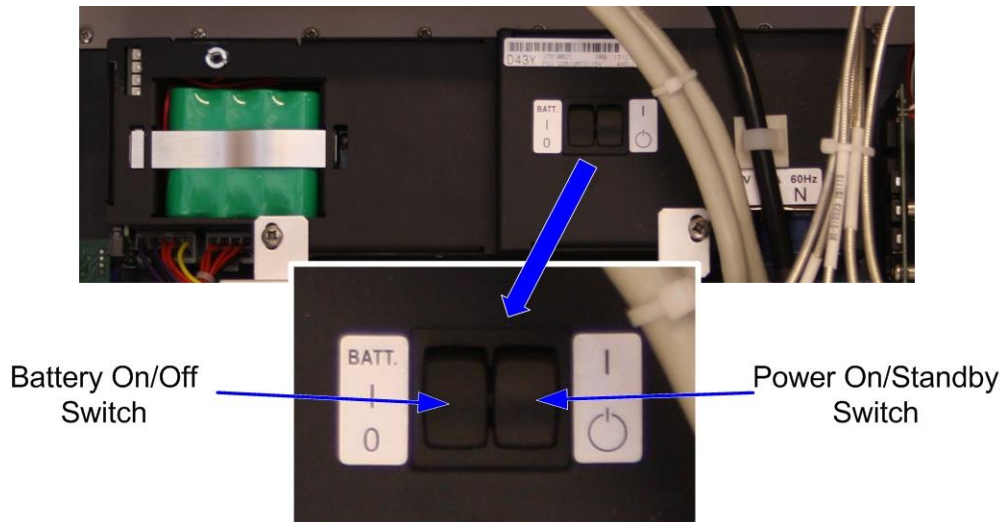


Figure 4-14: BSF-3604 Power Module

**NOTE:** With the PSU module on/standby switch in the standby position the repeater is still connected to the AC power supply but is not operational.

### 4.7.3.2 Verifying LEDs

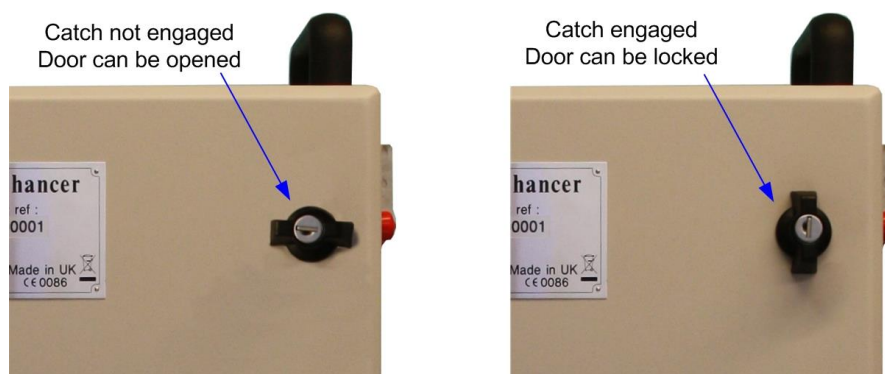
Verify the LEDs from the following modules are indicating correct operation (see section 0):

- Control module
- F/O converter
- Power supply modules

## 4.8 Closing and Securing the Repeater

Close the door, **tighten the quarter-turn door catches** and lock repeater with the keys provided. Continue with the following section "Commissioning" to setup the repeater.

**NOTE:** The two door catches must be fully closed and locked. Failure to do so will affect the IP65 compliancy and therefore any warranty.



## 5 BSF-3604 Commissioning

After the repeater is connected, it is identified by the OMU II via the fiber connection and the unit is commissioned from the OMU II. The commissioning process consists of a few simple steps.

### To commission the BSF-3604 - overview:

1. Open an **OMU II session**. This is used to access the BSF-3604 configuration window (via OMU II).
2. Perform **Optical Loss Adjustment**.
3. Set the required **RF attenuation and gain levels**
4. Assign the unit a **recognizable name** (according to its location).

### 5.1 Open a Session to the BSF-3604 via the OMU II

1. Open a local or remote session to the host OMU II:
  - Remote session – open a Browser session in the same subnet as the host OMU II and enter the IP of the host OMU II (see OMU user manual for detailed procedure). Enter the OMU II User Name (e.g. **axell**) and Password (provided by your system administrator).
  - Local session – connect to the OMU II Control Module's USB or Ethernet ports. Enter the OMU II User Name (e.g. **axell**) and Password (provided by your system administrator).
  - After accessing an OMU II session, commission the BSF-3604 according to the following section.

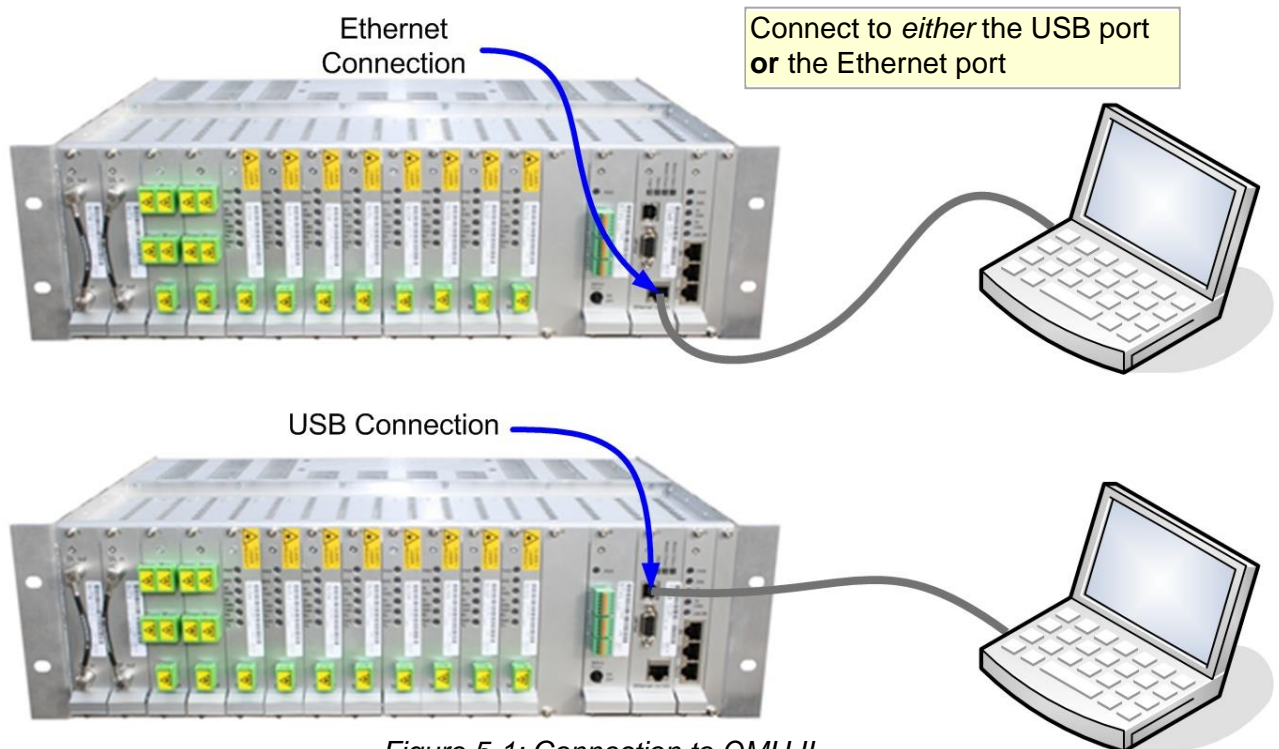


Figure 5-1: Connection to OMU II

## 5.2 BSF-3604 Optical Loss Adjustment (OLA)

BSF-3604 OLA is performed from the OMU II.

To perform BSF-3604 OLA (via OMU II)

1. From the OMU II main window, click the **Opto Adjust** button.

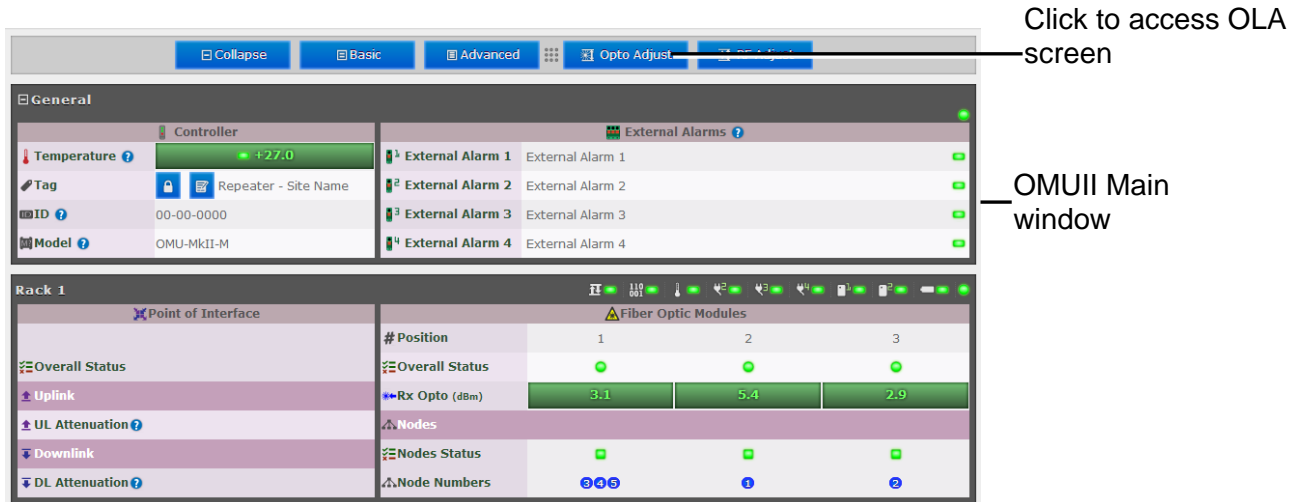


Figure 5-2: OMU II Main window

The OLA screen appears. The screen lists the OLA options (and status) for each link. (The links are listed according to the OMU II slot to which the remote is connected.)

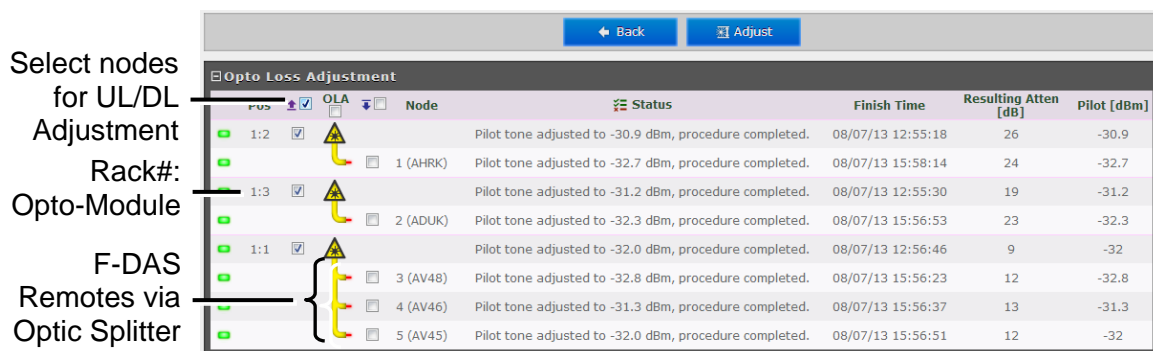




Figure 5-3. Configure and Initiate Optical Loss Adjustment

Column	Description
Pos	Each Rack corresponds to an OMU unit whereas each Slot corresponds to an Opto-Module. Slots are numbered according to their position in the OMU Chassis (numbered <b>left to right</b> ).
Select All	Batch selection options:  - mark all remotes for UL opto-adjustment.  - mark all remotes for DL opto-adjustment. <b>OLA</b> - mark all remotes for DL <b>and</b> UL adjustment.
Node	Node list number and identification (e.g. AHFK)
Status	Displays an Error if process failed. If successful the pilot tone used and the adjustment level will be displayed.
Resulting Attenuation	Compensation level used for the opto-module (in dB).

2. Mark the check-boxes corresponding to the remotes (each connected to the designated Opto-module/Opto-Splitter) to which to perform the adjustment.
3. OLA (DL/UL) may be performed on each node individually (or a batch) or on **all** nodes at once by marking the checkbox next to the desired corresponding Opto-module and clicking **Adjust**. To easily mark all checkboxes mark the checkbox named **OLA**.

*NOTE: The process may take several minutes depending on the size of the system and remote distance.*

## 5.3 RF Balancing

The BSF-3604 RF Balancing procedure can be performed manually (the automatic option specified in section 5.3.2 will be available in the future) via the OMU II web interface.

### 5.3.1 Manual RF Balancing

**NOTE:** If connected locally, enter the BSF-3604 Home screen and skip to step 2.

The manual balancing procedure consists of the following steps:

- Verifying the DL RF output level is maximized by setting the required DL attenuation of the signal.
- Setting the UL attenuation according to the DL.
- In case of noise, adjusting the UL attenuation to reduce noise

#### To balance the BSF-3604 UL and DL outputs

1. Access the BSF-3604 Configuration window:
  - Click on the **Nodes** button. The below pane appears
  - Click **Control** next to the node to be balanced.

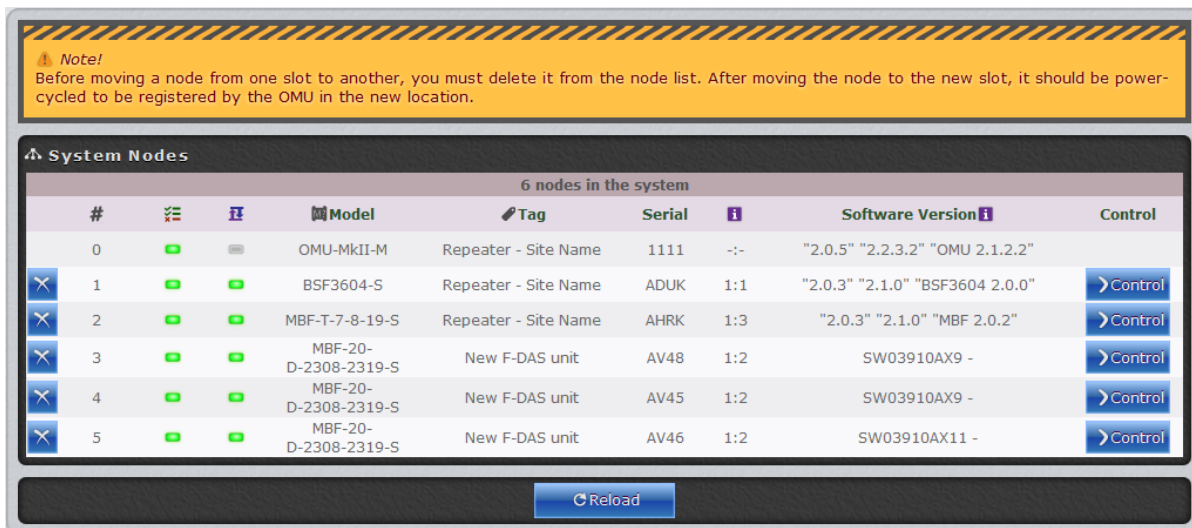


Figure 5-4: OMU II System Nodes window

2. The resulting pane can be displayed in two views:
  - Basic – default view (**Basic** button)
  - Advanced – provides more information (**Advanced** button)

The dialog below shows an example of the Basic (default) view.

**NOTE:** The various elements monitoring options are described in detail in section 7.

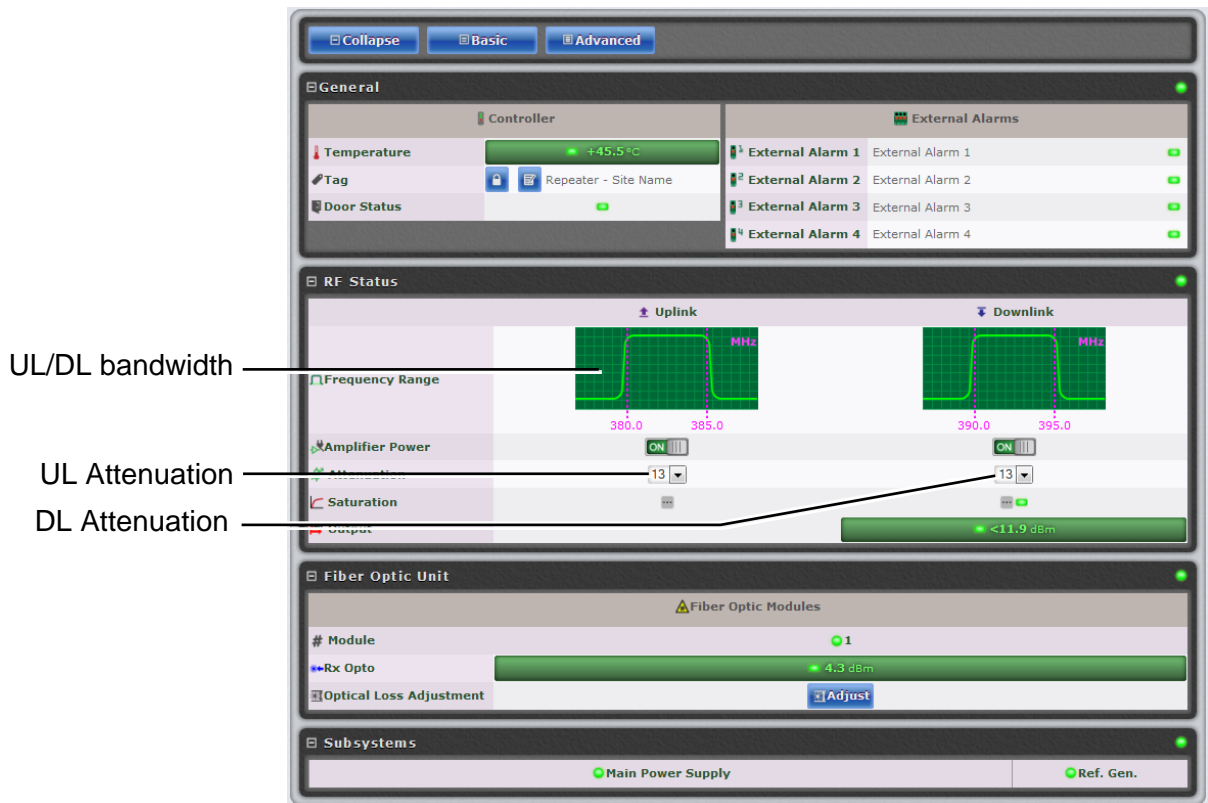


Figure 5-5: Example of Partial view of BSF-3604 Configuration window

3. In the Downlink section:

- Verify the **Amplifier** is set to ON.
- Set **Attenuation** to maximum value (15dB).
- Lower the **Attenuation** level step by step until the desired Output power level is reached (Zero attenuation = maximum gain).
- Verify the Amplifier Saturation is GREEN.

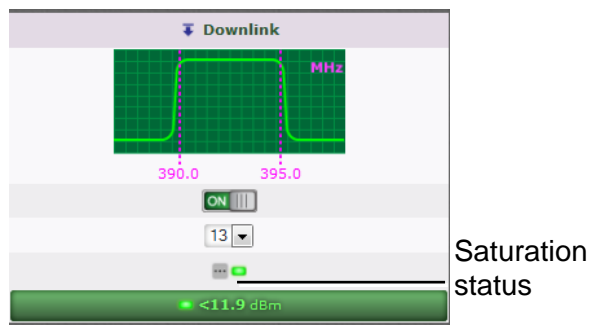


Figure 5-6: BSF-3604 Downlink Configuration Section

4. In the Uplink:
  - Verify the **Amplifier** is set to ON.
  - Set UL Attenuation == DL Attenuation value.

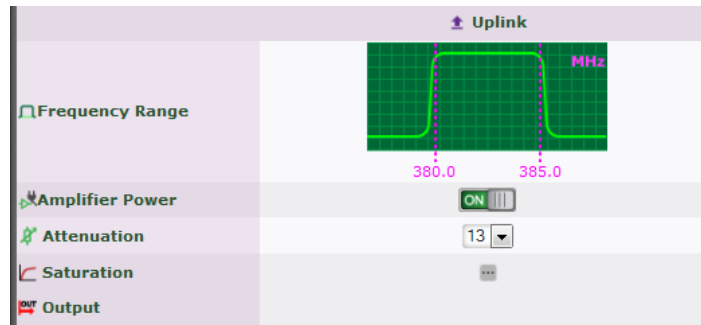


Figure 5-7: BSF-3604 Uplink Configuration Section

5. If noise is detected, adjust only the uplink value.

### 5.3.2 Automatic BSF-3604 RF Balancing

*NOTE: This feature will be available in future release.*

To access the Automatic RF Adjustment pane

1. Access the OMU II **Home** window and click on **RF Adjustment**.

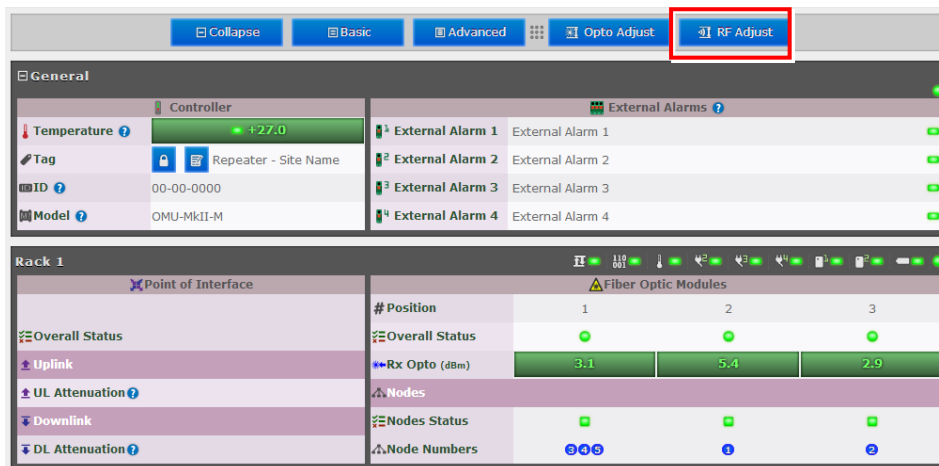


Figure 5-8: OMU II Main window

2. The following pane appears.

Select All Select None Adjust

*Note:*  
The automatic RF Adjustment procedure will adjust the output in the downlink path for each chain to the nominal level and then set uplink gain according to the Delta configuration. For this to work, there must be a downlink signal enabled in the downlink from the base station allowing to reach the desired output power level. Before performing RF Adjustments it is strongly recommended to adjust corresponding opto links in the opto adjustment page.

Node #3, AV48, MBF-20-D-2308-2319-S, New F-DAS unit, 1:1 ?						
Freq [MHz]	Nominal Level [dBm]	Uplink Delta [dB]	Status	Finish Time	Resulting Atten [dB]	Output Level [dBm]
<input type="checkbox"/> 850	0	5	MBF-20 RF Adjustments failed. Cannot read OPL, Verify you have input power.	08/07/13 14:43:40	3	-
<input checked="" type="checkbox"/> 1900	0	5	MBF-20 RF Adjustments failed. Cannot read OPL, Verify you have input power.	08/07/13 14:43:29	3	-

Node #4, AV46, MBF-20-D-2308-2319-S, New F-DAS unit, 1:1 ?						
Freq [MHz]	Nominal Level [dBm]	Uplink Delta [dB]	Status	Finish Time	Resulting Atten [dB]	Output Level [dBm]
<input checked="" type="checkbox"/> 850	0	5	MBF-20 RF Adjustments failed. Cannot read OPL, Verify you have input power.	08/07/13 14:43:23	3	-
<input type="checkbox"/> 1900	0	5	MBF-20 RF Adjustments failed. Cannot read OPL, Verify you have input power.	08/07/13 14:43:17	3	-

Remote with selected bands to adjust



3. Select the bands of each remote to be adjusted (e.g. 450MHz band on Node #3)
4. Adjust the following for each band:
  - Nominal Level (dBm)
  - Uplink Delta (dB)
5. Click **Adjust**. The procedure may take several minutes depending on the number of units selected.

## 5.4 Integration into the Axell Element Manager (AEM)

*NOTE: All integration into the AEM is performed from the AEM side – no action is required from the BSF-3604 side.*

The AEM automatically connects to the repeater, downloads all the repeater parameters and statuses into a database. When all parameters have been downloaded, the AEM configures the repeater with the IP address where alarms and reports should be sent to, and optionally with a secondary IP address where the repeater can connect to in case connection to primary IP fails.

When heartbeat reports and alarms are sent from the repeater to the AEM also the latest information about the status and RF-configuration is included. This means that the AEM operator always has information about the current status in the AEM database (and do not need to call the repeater to find this out).

*NOTE: Once the repeater is integrated to the AEM, all changes to the repeater should preferably be done from the Axell Element Manager in order to ensure that the database always contains correct information.*

## 5.5 What Next?

The BSF-3604 unit is now ready for operation. You may monitor the unit's general status via the OMU II Home screen and if the node is faulty (red LED), access the Home screen in Advanced mode for more detailed information.

*NOTE: Consult the OMU II User Manual for additional information on RF and Optical adjustments.*

## 6 BSF-3604 Full GUI Description

This chapter provides a detailed description of the complete BSF-3604 Web GUI that is accessed when a direct session is opened to the BSF-3604.

When an indirect session (via OMU II) is opened to the BSF-3604, only the BSF-3604 Main window is available. The additional options are available when a direct session is opened to the BSF-3604 (not via OMU II).

This chapter describes how to open local and remote direct sessions to the Remote and the available options when such a session is opened.

### 6.1 Opening a Direct Web Session

You may open a direct Web session to the BSF-3604 by connecting to the unit either:

- A. Locally
- B. Remotely via an Ethernet/modem connection – requires to unit to be connected to the network.

#### 6.1.1 Connecting Locally

*NOTE: This connection requires downloading the USB driver from the provided setup disk (or connection to the internet, where the driver is automatically loaded).*

**To open a local session:**

1. Open the BSF-3604 door
  - Connect to the USB port or the Ethernet port on the Controller module. If the USB driver is not already installed on your laptop, the system will search for the driver on the provided setup disk or on the internet (if a network connection is available).
  - Run a browser and login according to the following section.


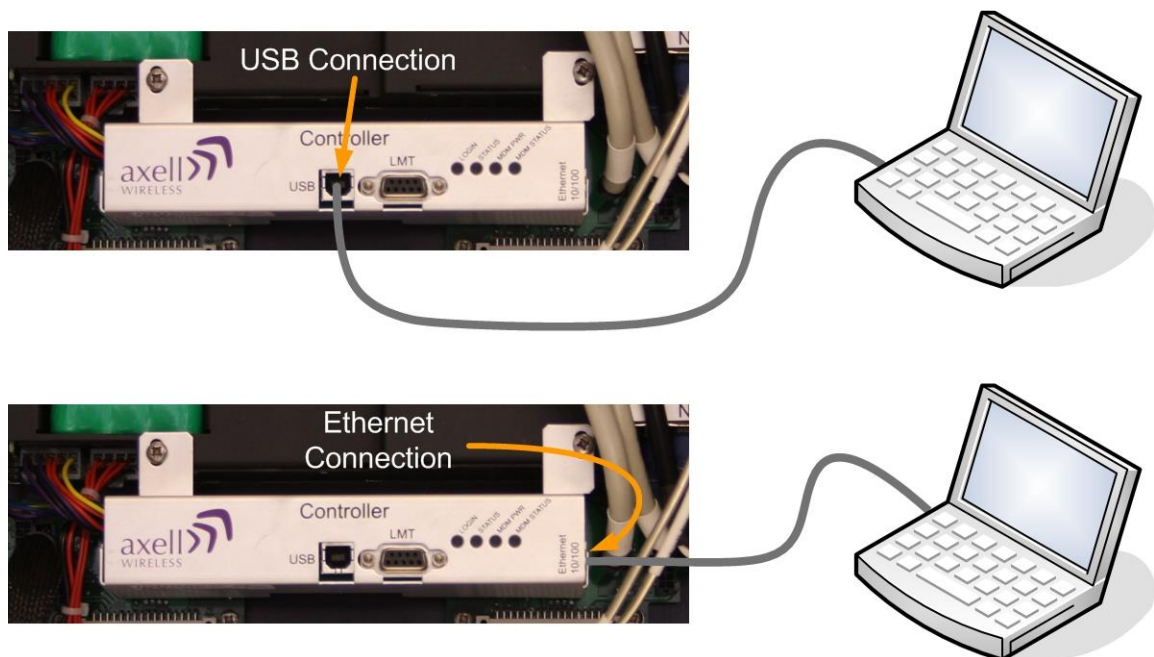


Figure 6-1: BSF-3604 Controller Module Connections

1. Open the web browser and type "axell-ne" in the address bar.



The Axell login dialog appears.



Figure 6-2: Login Screen

2. Use the following username and password to login:

- Username: **axell**
- Password: **AxellPasswd**

For backwards compatibility, you may also use:

- User Name: **Avitec**
- Password: **AvitecPasswd**

*NOTE: It is highly recommended to change the default password according to section 0.*

The Web GUI Main Window appears. This is the same window is also viewed via the OMU II.

### 6.1.2 Remote Connection and Login

This type of Web session requires connecting the Repeater to the network and defining an IP address. See section 6.3.4.

#### To login:

- Open a standard Browser.
- Enter the IP address of the Repeater in the address bar.
- Enter the User Name and Password as described in the following section.

## 6.2 Navigating the Web Interface

The Web GUI window provides access to the management options of the BSF-3604. Several tabs (and sub-tabs) are available: Home, Nodes, Logs, etc., while the Home tab (illustrated below), is displayed on login.

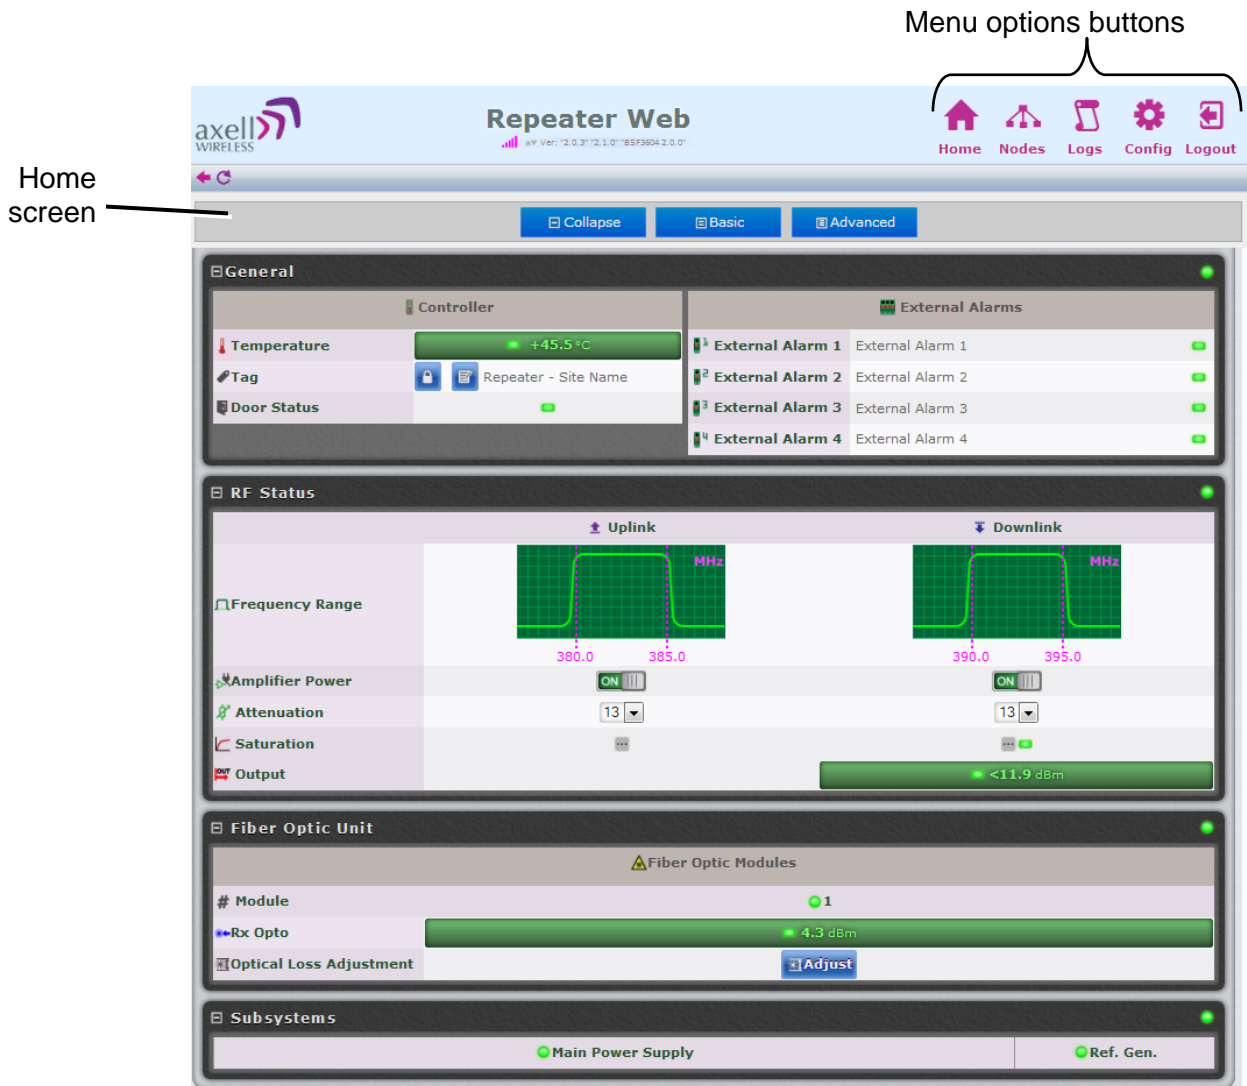
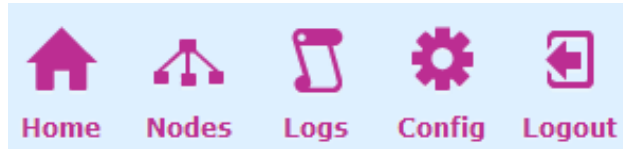







Figure 6-3: BSF-3604 Home Screen

## 6.2.1 Management Options Buttons

The following table briefly describes the main functions of each tab:

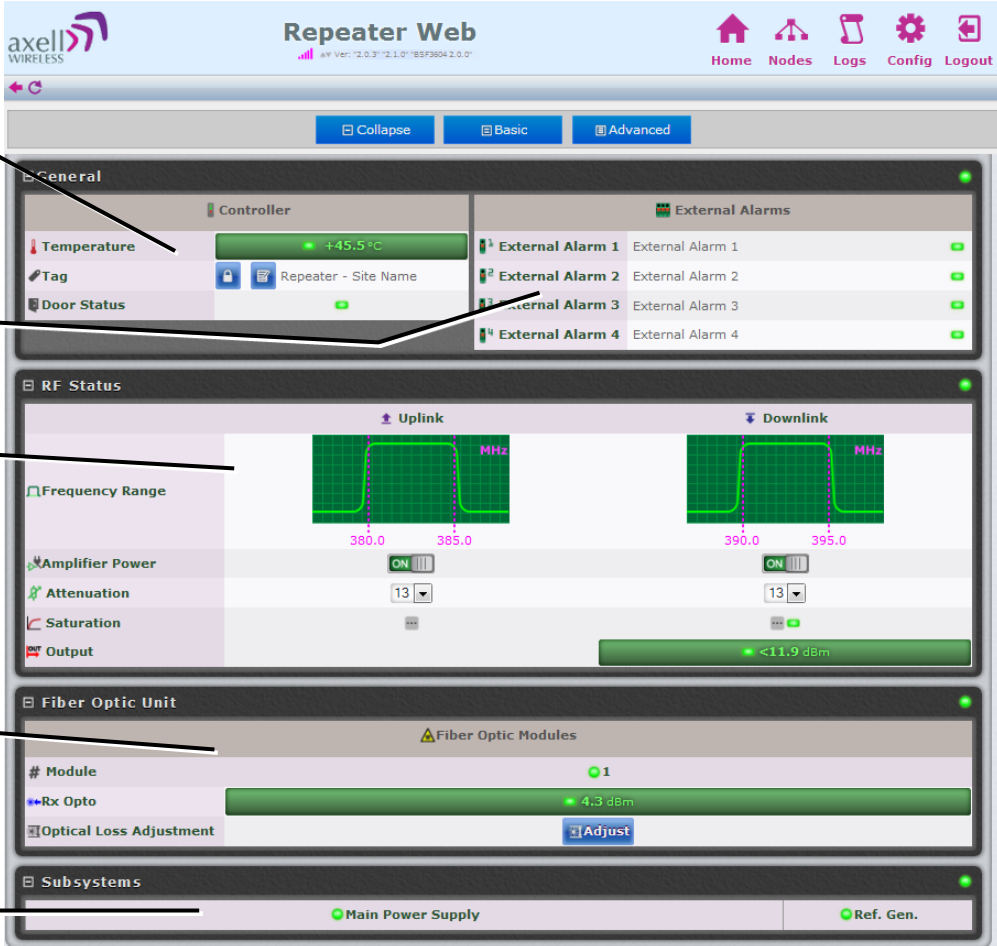


Tab	Description
 Home	Provides a general status and alarm information. Switching to <i>Advanced View</i> will toggle a more detailed view of each band and module. Section 0.
 Nodes	Lists the remote nodes – corresponding OMU and units connected the specific OMU.
 Logs	List of recent operations. Section 0.
 Config	Provides a range of BSF-3604 configuration procedures such as communication, RF, Date and Time, Password, etc. Section 0.
 Logout	Logout of the system.

## 6.2.2 Home Screen Overview

The screen is divided into four basic areas:

1. General
  - Controller – shows general information on the BSF-3604 such as identification and temperature level.
  - External Alarms – shows status of external alarms and the defined names.
2. RF Status
  - Frequency Range – shows frequency range used per DL/UL.
  - Uplink/Downlink – gain, attenuation and connection status in the specific direction.
3. Fiber Optic Unit
  - Shows status on connection to remote OMU and allows for optical link adjustment.
4. Sub-systems
  - Shows overall status of all sub-systems such as power supplies, battery, communication etc.



The screenshot shows the 'Repeater Web' interface with the following sections and annotations:

- General Information:** Points to the 'General' section, which includes 'Controller' (Temperature: +45.5°C, Tag: Repeater - Site Name, Door Status: ON) and 'External Alarms' (External Alarm 1-4, all ON).
- External Alarms:** Points to the 'External Alarms' table in the General section.
- UL and DL output control options:** Points to the 'RF Status' section, which includes 'Frequency Range' (Uplink: 380.0-385.0 MHz, Downlink: 390.0-395.0 MHz), 'Amplifier Power' (ON), 'Attenuation' (13), 'Saturation' (ON), and 'Output' (<11.9 dBm).
- Fiber Optic options:** Points to the 'Fiber Optic Unit' section, which includes 'Fiber Optic Modules' (Module 1), 'Rx Opto' (4.3 dBm), and 'Optical Loss Adjustment' (Adjust).
- Power monitoring options:** Points to the 'Subsystems' section, which includes 'Main Power Supply' and 'Ref. Gen.' (both ON).

### 6.2.3 Configuration Screen Overview

The configuration screen provides access to the BSF-3604 configuration options.

#### To access the configuration screen


Click on the **Config** menu option in the Main window. The following screen appears.



Option	Description
Site Information	Display BSF-3604 identification information. See section 6.3.1
External Alarms	Used to activate and assign names to external alarms. See section 6.3.3
Change password	Used to update system login password for the logged-in user. See section 0
Date and Time	Used to configure the time stamp for dating BSF-3604 events. See section 0.
Ethernet	Used to define the IP Address for remote access via Ethernet. See section 6.3.4
Remote Communication	Used to configure remote communication parameters and AEM integration. See section 0
Axell Shell	Command line used to communicate with the remote units. List of commands is found under Help. See section 0
Attribute Reference	Lists all possible Axell Shell commands, detailed and explained. You may also refer to the <i>Common Commands and Attributes</i> document. See section 0
Reboot controller	Soft restarts the BSF-3604 device. See section 6.7.

## 6.3 Configuring General Parameters

### 6.3.1 Site Information – BSF-3604 Identification



It is recommended to assign each BSF-3604 a recognizable name that will identify the location, site name, etc. The Site Information button provides access to BSF-3604 hardware and software version information.

#### To set BSF-3604 TAG

1. In the **Home** window, click the edit button next to Tag.

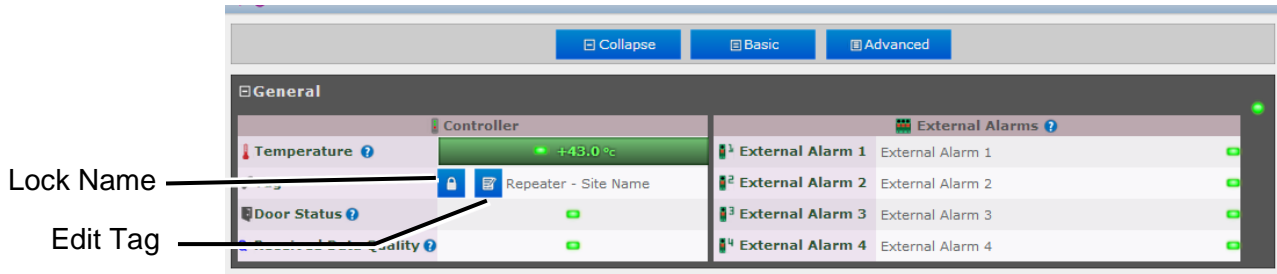


Figure 6-4. Set BSF-3604 TAG Name

2. Enter the Name (up to 30 characters), click OK and click **Apply**.

#### To view BSF-3604 Site Information

Click the **Config** button and click on the **Site Information** icon. Two areas are displayed:

- Control Module – provides hardware and software version information.
- Site Information – provides BSF-3604 identification information.




Figure 6-5. BSF-3604 Site Information



### 6.3.2 Date & Time

**NOTE:** The date and time are automatically set from the OMU II.



Be sure to set the correct date and time in order to accurately timestamp all events occurring on the BSF-3604.

#### To set the Date & Time:

1. Click the **Config** button.
2. Click on **Date & Time**.
3. Do one of the following:
  - Either, enter the correct date and time according to the displayed formats.
  - Or, click on **Local Time** to set the time according to the PC running the Web-GUI.
4. Click **Apply**.

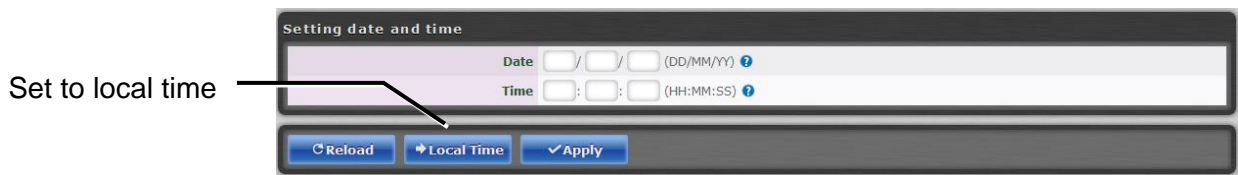


Figure 6-6: Configure Date and Time

### 6.3.3 Configure External Alarms



It is necessary to configure any connected external alarms according to the trigger (high or low) and it is recommended to assign the alarms recognizable names (such as Door Open, High Temperature, etc.)

#### To configure the external alarms

1. In the Main menu, click the **Config** button.
2. Click on the **External Alarms** icon.
3. For each alarm:
  - Set the Trigger as High or Low as required.
  - Assign the alarm a recognizable description
4. Click **Apply**.

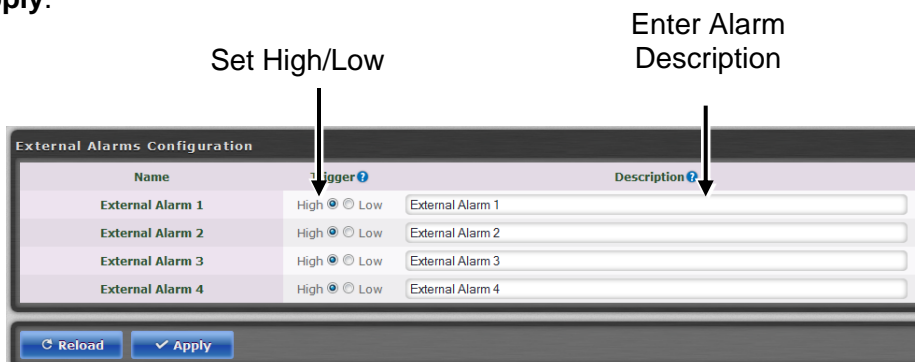


Figure 6-7: Configure External Alarms

### 6.3.4 IP Address

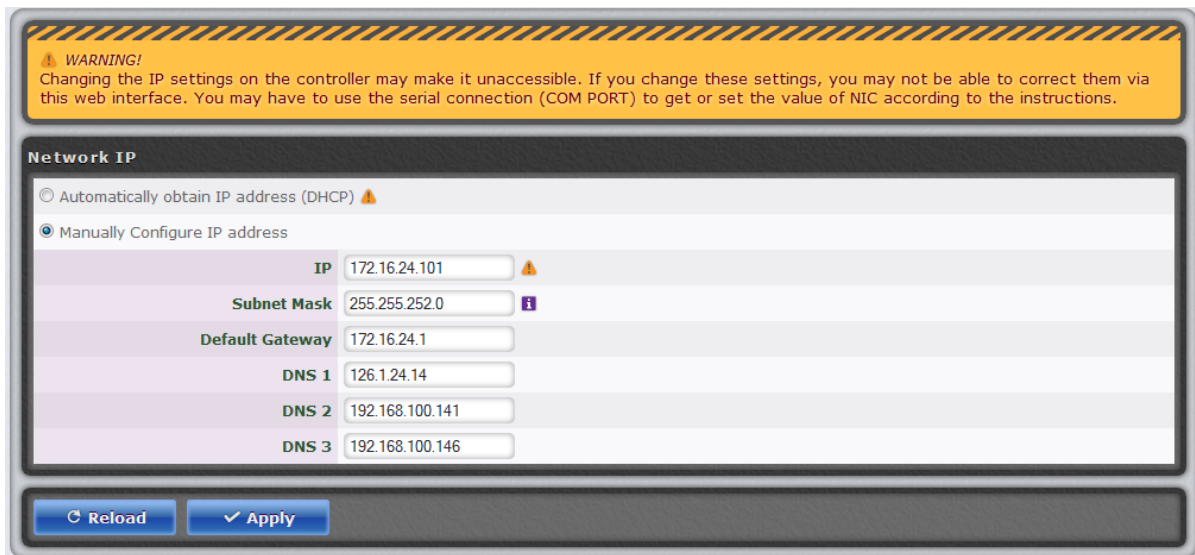


This procedure describes how to set up the IP address either manually or configure for acquisition via DHCP (usually configured for local management options).

#### To configure the IP address

1. In the Main menu, click the **Config** button.
2. Click on **Ethernet**.
3. For manual IP address configuration:
  - Select Manually Configure IP Address.
  - Set the IP, Subnet Mask, Default Gateway and DNS addresses.
  - Click **Apply**.
4. For DHCP IP address configuration:
  - Select Automatically Obtain IP Address (DHCP).
  - No other settings are required.
  - Click **Apply**.


The Manual configuration settings are illustrated below.



The screenshot shows a web interface for configuring network parameters. At the top, there is a yellow warning banner with the text: "WARNING! Changing the IP settings on the controller may make it inaccessible. If you change these settings, you may not be able to correct them via this web interface. You may have to use the serial connection (COM PORT) to get or set the value of NIC according to the instructions." Below the banner, the "Network IP" section has two radio buttons: "Automatically obtain IP address (DHCP)" (unselected) and "Manually Configure IP address" (selected). Under the manual configuration option, there are several input fields: "IP" (172.16.24.101), "Subnet Mask" (255.255.252.0), "Default Gateway" (172.16.24.1), "DNS 1" (126.1.24.14), "DNS 2" (192.168.100.141), and "DNS 3" (192.168.100.146). At the bottom of the form, there are two buttons: "Reload" and "Apply".

Figure 6-8: Configure Local Network Parameters

## 6.4 Remote Communication Setup



This section describes the Ethernet and modem setup. The SNMP setup option also available in this dialog is described in section 6.5. SNMP .

Select an option (ETH TCP, Modem or SNMP) and configure. Then select the next relevant option.

*NOTE: The configuration of each option is saved and active. It is not relevant which option is currently selected (ETH TCP, Modem or SNMP).*

### 6.4.1 TCP/IP and Ethernet

1. Click on the **Config** button.
2. From **Device:Method** select **ETH:TCP** (Ethernet:TCP/IP).
3. Click **Apply**.

The screenshot shows a configuration window titled "Remote Communication". At the top, there is a status bar for "All Remote Communications" which is turned "ON". Below this, a "Device:Method" dropdown menu is set to "ETH:TCP". Underneath, the "Communication Device" is listed as "Ethernet Connection" and the "Communication Method" is "TCP/IP connection".

The "TCP" section contains four input fields:
 

- "AEM Main IP Address" is set to "-".
- "AEM Main Port" is set to "1024".
- "AEM Secondary IP Address" is an empty field.
- "AEM Secondary Port" is set to "1025".

At the bottom of the window, there are two buttons: "Reload" and "Apply".

Figure 6-9: Remote ETH Configuration

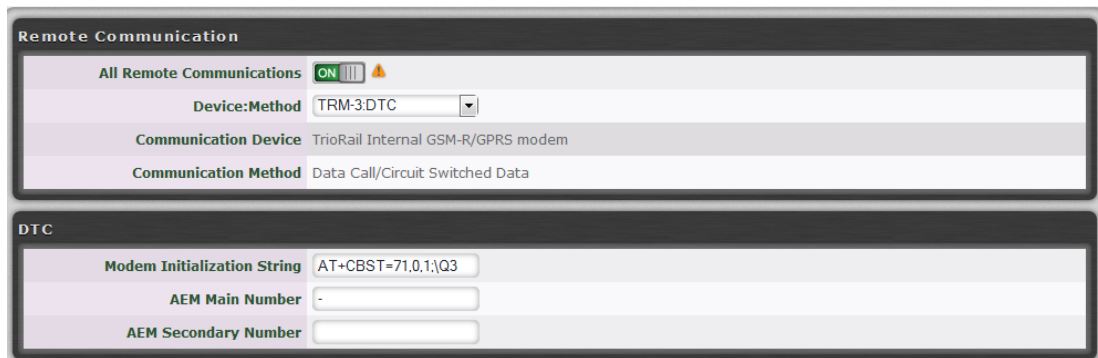
## 6.4.2 Modem Setup

*NOTE: This section is relevant only if a modem is installed in the system. If connecting directly via Ethernet, see section 0.*

The BSF-3604 can operate over two types of modem: Packet Switched (GPRS, GSM etc.) or Circuit Switched (PSTN/GSM). The available options depend on the modem type installed in your system.

### Modem Setup Overview

1. Insert the SIM card in the modem SIM slot (if using a wireless modem).
2. Click the **Config** button and then select **Remote Communication** from the displayed icons. The following dialog appears.




3. Verify that **Remote Communication** is **ON**.
4. Select the **Device:Method** – communication method. Select the option relevant to your installed modem. (STD:DTC = Standard AT:Data Call, ETH:TCP = Ethernet:TCP connection)
5. Configure your communication method according to the relevant following section.

### 6.4.2.1 Packet Switched Modem Configuration (GSM/GPRS)

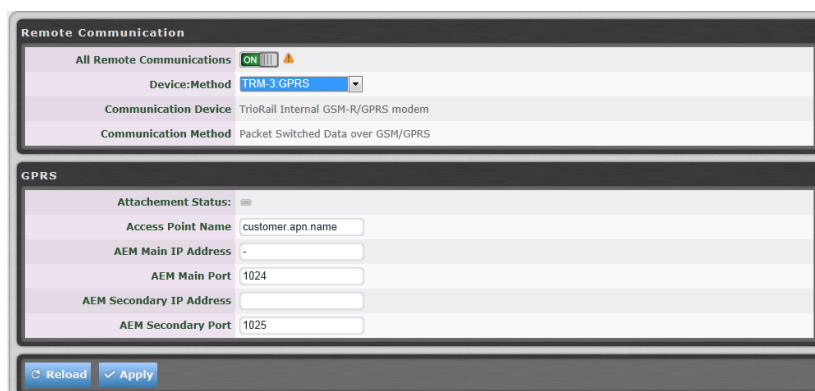*NOTE: In case network attach is not done properly (using GPRS), it is necessary to telnet, SSH or serial into the controller and enter TRACE MODEM to see why modem is not initialized (wrong / missing PIN, wrong APN etc).*

- From the Remote communication menu, select **TRM-3 GPRS**.
- In the GRPS area, enter the following:
- Access Point Name – customer's Access Point name.
- Click **Apply**.



### 6.4.2.2 Circuit Switched Modem (PSTN/GSM)

Using a circuit switched modem requires a landline connection be present at the site (for PSTN) or a SIM card supporting this feature (for wireless).

#### Communication Setup

1. From **Device:Method** select **STD:DTC** (Standard AT:DataCall).
2. In the modem initialization string type: **AT+CBST=7,0,1**.
3. Click **Apply**.

The screenshot shows a configuration window titled "Remote Communication". At the top, "All Remote Communications" is set to "ON". Below this, there are three rows: "Device:Method" is a dropdown menu currently showing "STD:DTC"; "Communication Device" is another dropdown menu showing "STD:DTC" with a note "Compatible modem"; and "Communication Method" is a text field containing "Data Call/Circuit Switched Data". Below this is a section titled "DTC" with three input fields: "Modem Initialization String" containing "AT+CBST=71,0,1;Q3", "AEM Main Number" containing "-", and "AEM Secondary Number" which is empty. At the bottom of the window are two buttons: "Reload" and "Apply".

#### Verify Circuit Switched Modem Functionality

1. Use the ACT RCD command via the Axell Shell or via Terminal to launch a modem restart (if logged in, restart will be performed on the first logout).
2. Dial the modem number (if PSTN) or the data number (if SIM card).
3. Verify modem LEDs are lit correctly (model dependent).
4. Use any ACT command using the RMC or other Terminal to test connectivity and responsiveness.

### 6.4.2.3 SIM-card Using Single Numbering Scheme

If using SNS (Single Numbering Scheme), calls to the modem **within** the network are automatically classified as DATA. However, if calling from **outside** the network, you must first verify how its interfaces handle the VOICE vs. DATA bearing. This cannot be solved at remote level. The external network administrator must provide the above information.

## 6.5 SNMP Support

The BSF-3604 includes SNMP support, including an SNMP Agent and SNMP traps (alarms). All SNMP queries and traps are supported either via the OMU II or a direct connection to the unit.

### 6.5.1 SNMP Traps Parameters

The BSF-3604 sends SNMP traps to user defined destination addresses.

*NOTE: One destination address can currently be defined via the Web. Seven more destination addresses can be defined via the Axell Shell.*

#### To configure the SNMP traps destination address

1. Click on the **Configure** button (top right corner).
2. Select **Remote Communication**.
3. In the **Device:Method** field, select **ETH:SNMP**

The screenshot shows a web configuration page for SNMP traps. It is divided into two main sections: 'Remote Communication' and 'SNMP'.  
In the 'Remote Communication' section, there is a toggle for 'All Remote Communications' which is currently 'ON'. Below this, there are three fields: 'Device:Method' (a dropdown menu showing 'ETH:SNMP'), 'Communication Device' (a text field showing 'Ethernet Connection'), and 'Communication Method' (a text field showing 'Simple Network Management Protocol').  
In the 'SNMP' section, there are three text input fields: 'SNMP Trap Address' (containing '126.1.24.18'), 'SNMP Trap Port' (containing '162'), and 'SNMP Trap Community' (containing 'public'). Each field has a small question mark icon to its right.  
At the bottom of the form, there are two buttons: 'Reload' and 'Apply'.

4. Define the SNMP trap destination IP address (additional addresses can be defined via the Axell Shell.).
5. Enter the (destination address device) Trap Port and its Community parameters.
6. Click **Apply**.

### 6.5.2 Activating and Configuring the SNMP Agent

The SNMP agent provides inventory management for hosted repeaters (on which the SNMP agent is enabled) and a table of active alarms in the controller or fiber system for remote querying. The SNMP Agent is responsible for responding to queries and carries out requests. The SNMP Agent also provides the proprietary Axell MIB (AXELL-AM-MIB), accessible via any SNMP manager (e.g. HP OpenView).

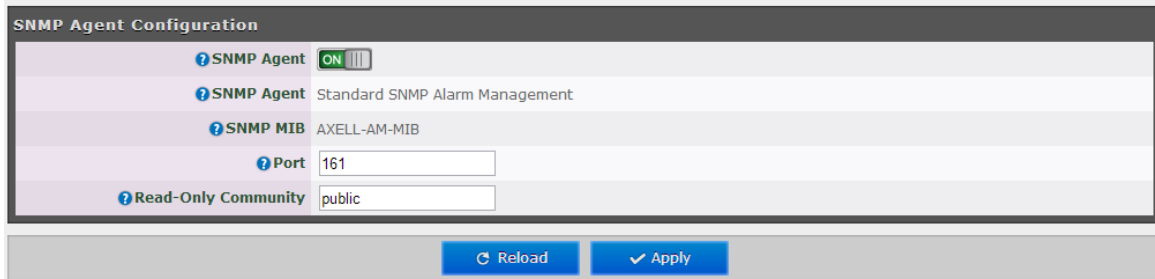
All SNMP queries to the remote are implemented via an OMU session.

#### To allow SNMP agent queries

- To allow SNMP queries of the OMU II – the SNMP agent must be enabled on the OMU II.
- To allow SNMP queries of the remote devices via OMU II – the SNMP agent must be enabled on the OMU II *and* on the remote devices.
- Remote units configured with an IP address and connected to the communication infrastructure, can be queried directly.

### To activate the BSF-3604 SNMP Agent

1. Click on the **Config** button (top right corner) and select **SNMP Agent Config**. The following pane appears:



2. Set the **SNMP Agent** toggle to **ON**.
3. Set the **port** and the **Read-Only community**.
4. Click **Apply**.

## 6.6 User Accounts

The BSF-3604 comes pre-configured with default usernames and passwords in various administration levels.

At the moment, updating user accounts is available only via Command Line Interface (CLI) or Axell Shell. See the Common Commands and Attributes v2.0.0 document for detailed commands and syntax or click on the **Help** button at the top right of the Web-GUI screen.

### 6.6.1 Default User Accounts

User Name	Default Password	Details
axell	AxellPasswd	Default user name.
omcuname	iwnkhoob	Axell Element Manager (AEM) user account. This account will not generate VLI, LGO or CLR alarms.
sysadmin	AxellAdmin4050	This is the system administration password which is used for firmware upgrades and user administration. Escalation to this level is achieved by issuing command SYSADMIN from the user prompt.
useradmin	UseradminPwd23	This account contains user administration privileges. Escalation to this level is achieved by issuing command USERADMIN from the user prompt.
Avitec	AvitecPasswd	Account available for compatibility reasons with older system firmware.

*NOTE: It is strongly recommended to change the default user names and passwords immediately at commissioning. This is done by using the command **ACT PASSWORD**. Please refer to the User Administration section in Common Commands and Attributes document for detailed syntax.*

### 6.6.2 User Access Levels

In this generation of the system, standard users can be promoted to login via the Web Interface, inheriting the Read-Write or Read-Only access to this interface.

There are five different access levels:

Access Level	Default User Levels
Read-Only	axell, avitec, omcuname, useradmin, sysadmin
Read-Write	axell, avitec, omcuname, useradmin, sysadmin
Web	axell, avitec
User Administrator	omcuname, useradmin, sysadmin
System Administrator	omcuname, sysadmin

*NOTE: New users added to the system have read-only access.*


Users may be promoted to read-write and/or web access using the **ACT USERPROMOTE** command. See **Common Commands and Attributes** document for details on promoting users.

*NOTE: Users omcuname, sysadmin and useradmin cannot be promoted to Web Access due to security reasons.*

### 6.6.3 Change Password

To prevent unauthorized access, it is highly recommended to change the default password of the user.

*NOTE: You can only change the password for the User Name with which the session was accessed.*



#### To change the Password


1. In the Main menu, click the **Config** button.
2. Click the **Change Password** button.
3. For the current User Name (e.g. **axell**):
  - Enter the New password.
  - Repeat the entry.
4. Click **Apply**.





## 6.7 Reboot

**CAUTION!** Use this function in Emergency Cases ONLY!



To reboot the Control Module:

1. Click the **Config** tab.
2. Click on the **Reboot** icon.
3. Approve the Reboot sequence.


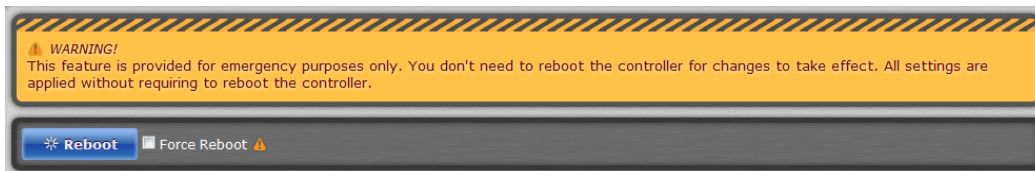



Figure 6-10: Reboot System

## 6.8 Axell Shell (Command Line Interface)



To access the Axell Shell:

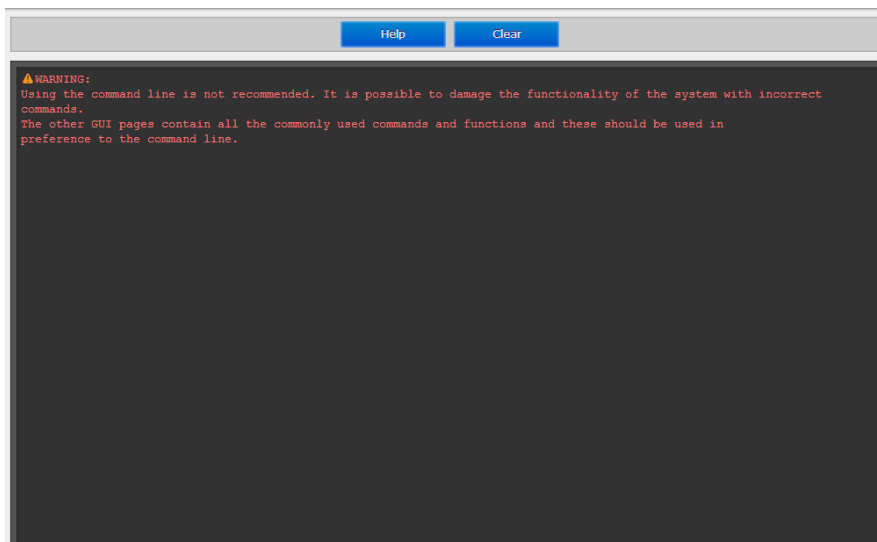1. Click on the **Config** button.
2. Select the **Axell Shell** option.




The **Axell Shell** button invokes the CLI screen. It is used to run some of the commands that are currently not provided by the Web GUI (user privileges and administration) and/or for advanced troubleshooting and configurations procedures.

All configuration and management procedures can be implemented using this interface. Please refer to the Attribute Reference section (by clicking the **Config** button on the top right and selecting **Attribute Reference** – see 0) for detailed syntax and available commands. You may also consider viewing the BSF-3604 Commands and Attributes document.

## 6.9 Attribute Reference
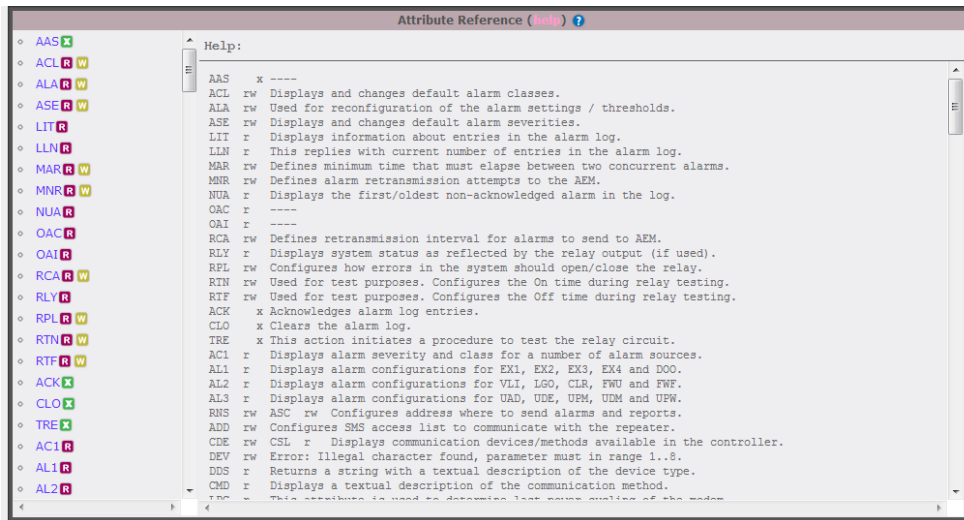
### To access the Attribute Reference

1. Click on the **Config** button.
2. Select the **Attribute Reference** option.



The Attribute Reference lists all available CLI commands and includes details and examples on how to use the commands. Additional information may be found in the BSF-3604 Commands and Attributes document.

## 7 Monitoring, Fault Sourcing and Maintenance

BSF-3604 provides the following monitoring and fault sourcing options:

- Web GUI Home screen Advanced mode – shows general status of system and components
- Web GUI Logs screen – provides logs of faults and operations
- Module LEDs – can be seen locally when opening the Repeater

This chapter describes these fault sourcing tools. *Be sure to review the Cautions and General Statements below.*

### 7.1 Cautions and General Statements

- The system normally operates without any operator intervention or maintenance. If in the unlikely event of any unit failure, the faulty repeater should be replaced. A failed unit can be removed and replaced with a spare while the rest of the system (other repeaters) is still operating. However, the power supply of the failed repeater should be isolated from the power before anything is replaced.
- In the event of a malfunction in the system, the status of the antenna systems as well as the continuity of the cabling should be checked before replacing any modules within the repeater.
- In the event of a failure Axell Wireless' support service should be contacted for advice on a possible module replacement or other action to be taken.
- If a shipment of a repeater back to Axell Wireless is made within the period of guarantee the original packing must be used.
- Component Replacement - None of the modules in the repeater can be replaced without removing the repeater from its mounting and opening the cover of the repeater.
- Product Disposal - Disposal of this product must be handled according to all national laws and regulations. For detailed information regarding materials, please refer to Axell Wireless.

**CAUTION!** Please be aware that the equipment may, during certain conditions become very warm and can cause minor injuries if handled without any protection, such as gloves.

**CAUTION!** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to local laws and instructions.

## 7.2 Monitoring Via the BSF-3604 Home Screen

In addition to RF settings and readings, the BSF-3604 Home screen provides detailed information on the operation status of internal modules. This information can be used to aid in remotely troubleshooting the Remote.

To access the BSF-3604 Main Monitoring and Configuration window

1. Access the OMU II main windows, click the **Nodes** button, choose the remote related node and click the adjacent **Control** button. The BSF-3604 Home window appears in Basic View. To view more details, click **Advanced**.

The screenshot shows the BSF-3604 Main Screen in Advanced view. The interface includes tabs for Collapse, Basic, and Advanced. The main content is organized into four primary sections:

- General:** Displays Controller information (Temperature: +45.5 °C, Tag: Repeater - Site Name, Door Status) and External Alarms (Alarm 1-4).
- RF Status:** Shows Uplink and Downlink frequency range graphs (380.0-385.0 MHz and 390.0-395.0 MHz). It includes controls for Amplifier Power (ON), Attenuation (13), and Amplifier. It also displays Input and Output power levels for both directions.
- Fiber Optic Unit:** Lists Fiber Optic Modules with details for # Module (1), Comm, Firmware, Temperature (+51.1 °C), Tx Opto (4.3 dBm), Rx Opto (-30.7 dBm), and Optical Loss Adjustment (25 dB).
- Subsystems:** Shows Main Power Supply and Ref. Gen. status.

Annotations on the left side of the image identify these sections:

- General (same as Basic view) — points to the General section.
- Detailed RF Status view — points to the RF Status section.
- Detailed fiber optic status — points to the Fiber Optic Unit section.
- Power measurements status — points to the Subsystems section.

Figure 7-1: BSF-3604 Main Screen Advanced

### 7.2.1 General Page Area

This section displays general status parameters such as temperature, alarms and site name.

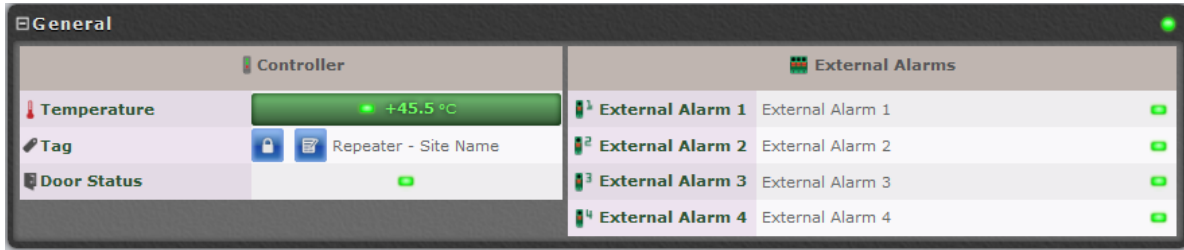


Figure 7-2: BSF-3604 General

Indicator	Description
Temperature	Current ambient temperature
Tag	Name of Repeater, user customizable
Door Status	Green if closed

### 7.2.2 Detailed view of the BSF-3604 RF Status

The BSF-3604 RF Status screen provides the RF balancing options as described in section **Error! Reference source not found.**, as well as various status monitoring options. Below is the **Advanced** view of the RF Status screen.



Comm.      Firmware      Temp      Pwr. modules status

Figure 7-3: BSF-3604 Repeater Status

Indicator	Details
Frequency Range	Visualization of Bandwidth
Amplifier Power	Turn amp. on/off.
Attenuation	Use to define DL/UL attenuation level (in dBm)
Saturation	Saturation status
Output	output power level


### 7.2.3 Detailed view of Fiber Optic Unit



Figure 7-4: BSF-3604 F/O Status

Indicator	Description
#Module	Overall optic module status
Comm	Optic connection status
Temperature	Temperature level and status indicator
Tx Opto	DL optic signal status
Rx Opto	UL optic signal strength and status
Pilot Tone Synth	Pilot tone synthesizer status
Firmware	Firmware related error
Received Pilot Level	Pilot tone level received in optic module
Optical Level Adjustment	Perform UL OLA (on repeater side)
Optical Compensation	Compensation performed on the optic link
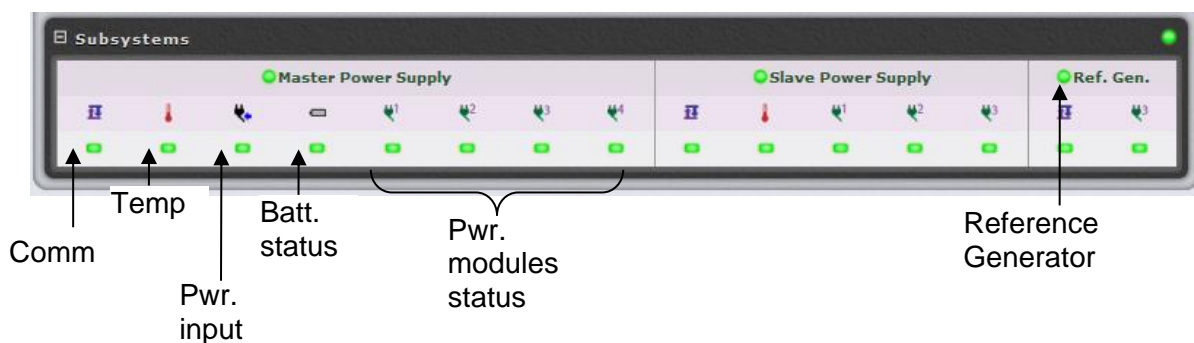
### 7.2.4 Subsystems



### 7.3 Logs Screen

The Alarms Log displays the last 100 alarms and/or user actions on the remote system in a chronological order. By hovering with the mouse over each alarm, full alarm details are available, including alarm descriptions, severities, alarm classes and time of event.



Figure 7-5: Logs

To receive a summary containing all information on a reported incident in the Log list, simply hover with the mouse over the specified Log and view all details contained in the Log (see below).

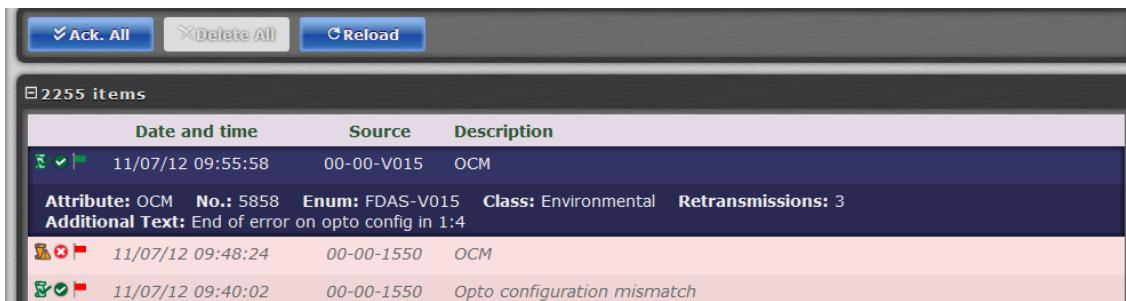









Figure 7-6: Logs – Summary

Column	Description
Date & Time	Time of occurrence
Source	ID of reporting source
Description	Additional alarm information (e.g. Open Door)

Icon	Description
	Alarm attended to and cleared.
	System alarm – displayed when system functionality may be compromised.
	Alarm status: OK
	Alarm status: Error
	Acknowledge alarm – Green = Acknowledged.
	Click to change acknowledgement.
	Use the <b>Ack All</b> button to acknowledge all alarm logs.

## 7.4 Module LEDs

This section describes the LEDs of the internal modules. The modules are accessed if the remote is opened.

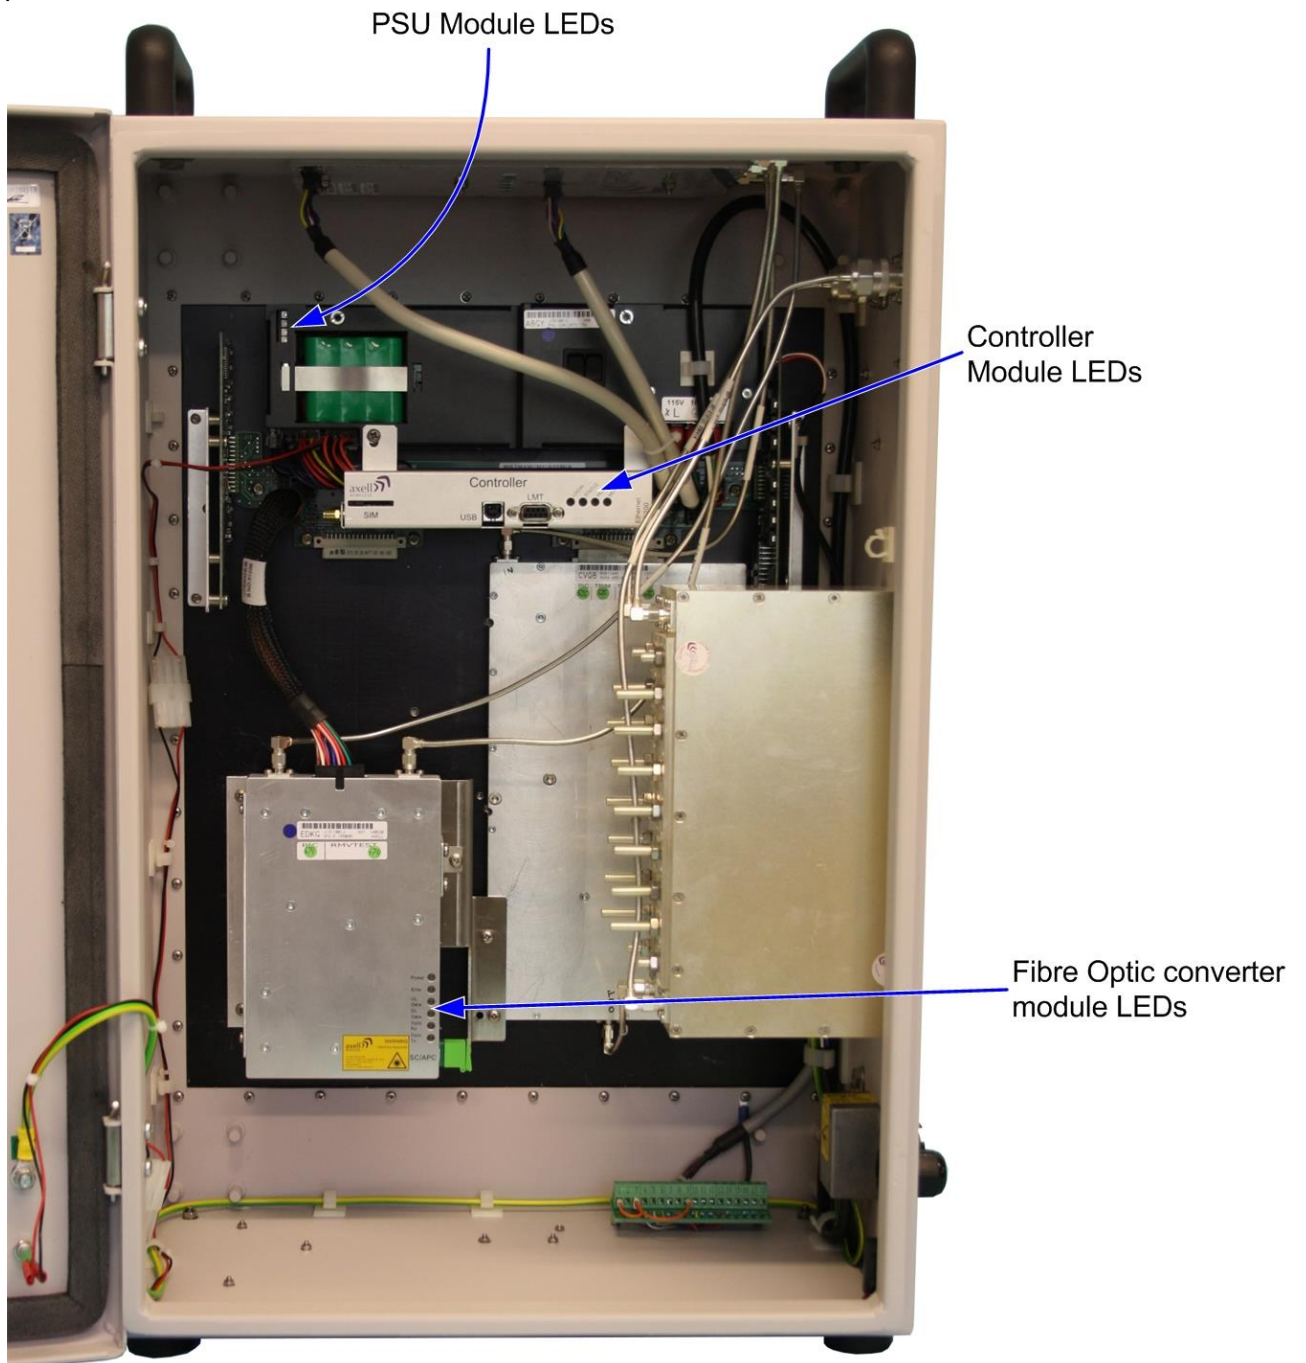


Figure 7-7: Position of Module LEDs


Module	Description
Control Module	See section 7.4.1.
F/O Converter	See section 7.4.2.
PSU Module	See section 7.4.3.





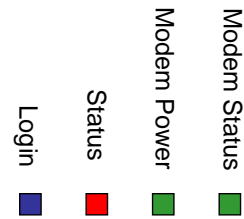















## 7.4.1 Control Module LEDs

The Control Module has four LEDs which give information regarding the status of the BSF-3604.

If the BSF-3604 is configured for Ethernet communication the two LEDs Modem Power and Modem Status do not fill any function and can be disregarded.



Blue LED - Login		
	Quick flash	Control Module switched on, someone logged in locally and/or remotely
	Off (except for a quick flash every 10th second)	Control Module switched on, no one logged in
	Off (permanent)	Control Module switched OFF
Red LED - Status		
	Quick flash	Control Module switched on, one or more errors/alarms detected
	Off (except for a quick flash every 10th second)	Control Module switched on, status OK
	Off (permanent)	Control Module switched off
Green LED – Modem Power		
	On	Modem Power is on
	Off	Modem Power is off
Green LED – Modem Status		
	On	Depending on type of call: Voice call: Connected to remote party Data call: Connected to remote party or exchange of parameters while setting up or disconnecting a call
	Flashing  (irregular)	Indicates GPRS data transfer. When a GPRS transfer is in progress the LED goes on within 1 second after data packets were exchanged. Flash duration in approximately 0.5s.
	75ms on/75ms off/75ms on/3s off 	One or more GPRS contexts activated
	75ms on/3s off 	Logged to network (monitoring control channels and user interactions). No call in progress
	600ms on/600ms off 	No SIM card inserted, or no PIN entered, or network search in progress, or ongoing user authentications, or network login in progress
	Off	Modem is off

## 7.4.2 F/O Converter LEDs


There are 6 LEDs on the module to indicate the status.






<b>LED 1, Power, Green</b>	
On	Unit is powered on
Off	Unit has no power
<b>LED 2, Error, Red</b>	
On	Error detected
Off	No error
<b>LED 3, UL Data, Yellow</b>	
On	Communication is ongoing in the uplink direction
Off	No communication
<b>LED 4, DL Data, Yellow</b>	
On	Communication is ongoing in the downlink direction
Off	No communication
<b>LED 5, Opto Rx, Green</b>	
On	Received RF signal on fiber channel is above threshold
Off	Input level below threshold
<b>LED 6, Opto Tx, Green</b>	
On	Transmitted RF signal on fiber channel is above threshold
Off	Output level below threshold

### 7.4.3 Power Supply LEDs

This section provides a detailed description of the LEDs and fault examples.



<b>LED 1, Input Power, Green</b>	
Slow flash	Power supply unit operating on AC or DC
OFF	Power supply unit not operating
<b>LED 2, +6V, Red</b>	
Slow flash (every 10 seconds)	+6V power supply operating
Quick flash	+6V power supply not operating or operating with malfunction
<b>LED 3, +15V, Red</b>	
Slow flash (every 10 seconds)	+15V power supply operating
Quick flash	+15V power supply not operating or operating with malfunction
<b>LED 4, +28V, Red</b>	
Slow flash (every 10 seconds)	+28V power supply operating
Quick flash	+28V power supply not operating or operating with malfunction
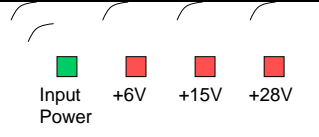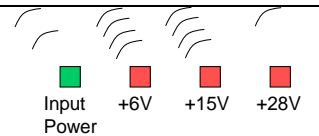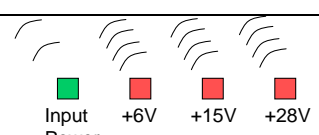
<b>Examples</b>	
 <p>Input Power    +6V    +15V    +28V</p>	<p>LED 1 is flashing slowly, LED 2 – 4 are flashing slowly (once every 10 seconds) =&gt; power supply unit is operating without problem</p>
 <p>Input Power    +6V    +15V    +28V</p>	<p>LED 1 is flashing slowly, one or two of the red LEDs are flashing quickly =&gt; Input power is operating but there is a problem with some of the other voltages</p>
 <p>Input Power    +6V    +15V    +28V</p>	<p>LED 1 is flashing slowly, all of the red LEDs are flashing quickly =&gt; Input power is out and unit is operating on backup battery</p>







## Appendix A - Specification

Electrical Specifications	
Standard Operational Frequency Range	450-470 MHz
Duplexer Frequency Spacings	5 MHz
Filter options (passband/guardband)	0.5 MHz / 4.5 MHz
	2.0 MHz / 3.0 MHz
	2.5 MHz / 2.5 MHz
	3.0 MHz / 2.0 MHz
	3.5 MHz / 1.5 MHz
Impedance	50 $\Omega$
Output power/carrier (DL)	1 carrier: +36 dBm 2 carriers: +33 dBm 3-4 carriers: +30 dBm 8 carriers: +27 dBm
IP3	> +63dBm
Noise figure (UL)	<6dB, 5dB typical at maximum gain
Group delay	2us max
System net gain at 10 dB optical loss	Uplink & Downlink Net Gain = 30dB with OMU
Spurious Emissions from RF port	Complies with FCC
Optical Module Electrical Specification	
DL Optical Wavelength	1310 $\pm$ 10 nm
UL Optical Wavelength	1550 $\pm$ 3 nm
Maximum optical output power	+3 dBm $\pm$ 2 dB
Maximum optical input power	+2 dBm
Power Requirements	115 VAC, 60Hz (options: 230 VAC 50Hz, - 48 VDC)
Power Consumption	<120W, typical
External connection	
Local Maintenance Terminal	RS232
TX Server Port	N female
RX Server Port	N female
Optical Ports	1 x SC/APC female
Remote connection	Via OMU (options GSM, GSM-R PSTN modem or Ethernet)
Modem antenna connector (if fitted)	SMA
Mechanical Specification	
Dimensions	24½" x 16½" x 10¼" (ex handles, feet and heatsinks)
Enclosure	Aluminum (IP65/NEMA4)
Weight	66 lbs. approx.
Cooling	Convection
Environmental Specification	
Operating Temperature	-13 to +131°F (- 25°C to + 55°C)
Storage	-22 +158°F (- 30°C to + 70°C)
Compliance	FCC


## Appendix B - F/O Cleaning Procedure

**NOTE:** The process is demonstrated on an OMU F/O module and is similar to all F/O equipment supplied by Axell.

### Tools:

Tool Description	Illustration
<p>Fiberscope connected to a PC running the appropriate viewing software.</p> <p>It is highly recommended that some form of fiber viewing equipment such as a Fiberscope is used to ensure that all fiber connections are clean before termination; failure to do so could result in poor system performance</p>	
<p>Lint-free swabs (box), Axell P/N 99-000127</p>	
<p>Lint-free wipes (pack) Axell P/N 99-000125</p>	
<p>Fujikura "One Click" cleaner, Axell P/N 98-900004.</p>	 <p>Protective cap      Connector type indicator - in this case, S</p>
<p>99% isopropyl alcohol (can), Axell P/N 99-000126</p>	
<p>Cletopt type S Cassette Cleaner, Axell P/N 98-900001</p>	

The Cleaning Procedure:  
 Dry Cleaning

<b>ATTENTION!</b> 	Invisible laser radiation might be emitted from disconnected fibers or connectors. Do not stare into the beams or view directly with optical instruments.
--	---

1. Before cleaning the optical connectors on the OMU it is advisable to clean the connector of the mating cable being attached to the optical port.  
 An unclean optical connector is often the cause for reduced system performance. A bit of dust or oil from a finger can easily interfere with, or block light. Fortunately, it is very easy to clean the connector. Be sure to use the correct procedure for the given connector. When disconnected, cap the SC/APC connector to keep it clean and prevent scratching the tip of the ferrule.

Use a product specially designed for the purpose, such as the Cletop type S Cassette Cleaner.



2. Begin by dry cleaning the F/O bulkhead connector (shown below is the Fujikura One-Click in use).

<b>IMPORTANT</b>	Always make sure there is a way of inspecting the connector after cleaning. Cleaning can actually leave the end-face in a worse condition, since alcohol residue is one of the most difficult contaminants to remove.
------------------	---

3. Remove the protective cap from the cleaning-head end of the "One Click" cleaner, lift the protective end-cap on the fiber connector and offer-up the end to the fiber connector.



4. With the cleaning-head end fully engaged in the connector, push until an audible "click" is heard

5. Without fully withdrawing the cleaning head end push it in again twice more, each time until an audible "click" is heard.


6. Withdraw the "One Click" cleaner and replace the protective end cap.



7. Inspect the fiber connector using a Fiberscope. On the PC monitor, verify that there is no contamination present on the connector end-face.

8. If the connector is dirty, clean it with a wet cleaning technique followed immediately by dry cleaning. This is to remove any remaining residue from the wet clean (the following steps demonstrate a wet cleaning technique).

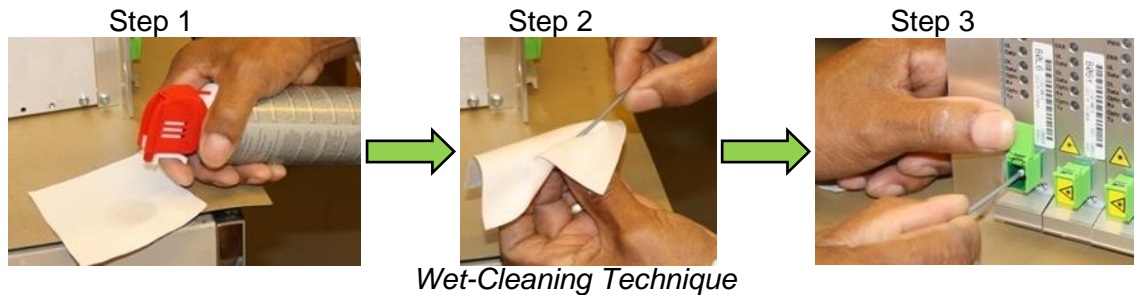
## Wet Cleaning

 <b>ATTENTION!</b>	<p>Invisible laser radiation might be emitted from disconnected fibers or connectors. Do not stare into the beams or view directly with optical instruments.</p>
--	--

1. Lightly moisten a new lint-free wipe with 99% isopropyl alcohol. (Step 1 below).

*Tip: Have a dry lint-free swab available for immediately drying after performing the wet-cleaning.*

2. Lightly press and turn a clean lint-free swab in the moistened area of the wipe to moisten the swab. It is important that the swab is not too wet. (Step 2 below).
3. Insert the moistened lint-free swab into the bulkhead adapter. Lightly press and rotate several times in the same direction. (Step 3 below).



*Wet-Cleaning Technique*

4. Immediately use a dry lint-free swab to clear any remaining alcohol residue.

**NOTE:** Do **not** re-use any of the wipes and/or swabs. Dispose of them properly.

5. Follow steps 3 to 6 of Dry Cleaning above
6. Re-inspect the fiber using the Fiberscope. On the PC monitor, verify that there is no contamination present on the connector end-face.
7. If the fiber is still dirty, go back to step 1 (Wet Cleaning) and repeat the entire process.

**NOTE:** The entire wet/dry cleaning cycle should only be used twice, if the fiber is still dirty after two cycles of wet/dry cleaning seek advice from the Axell Wireless Support Desk.