



Attn to : Gilbert
From : Wow Wee
Chastain

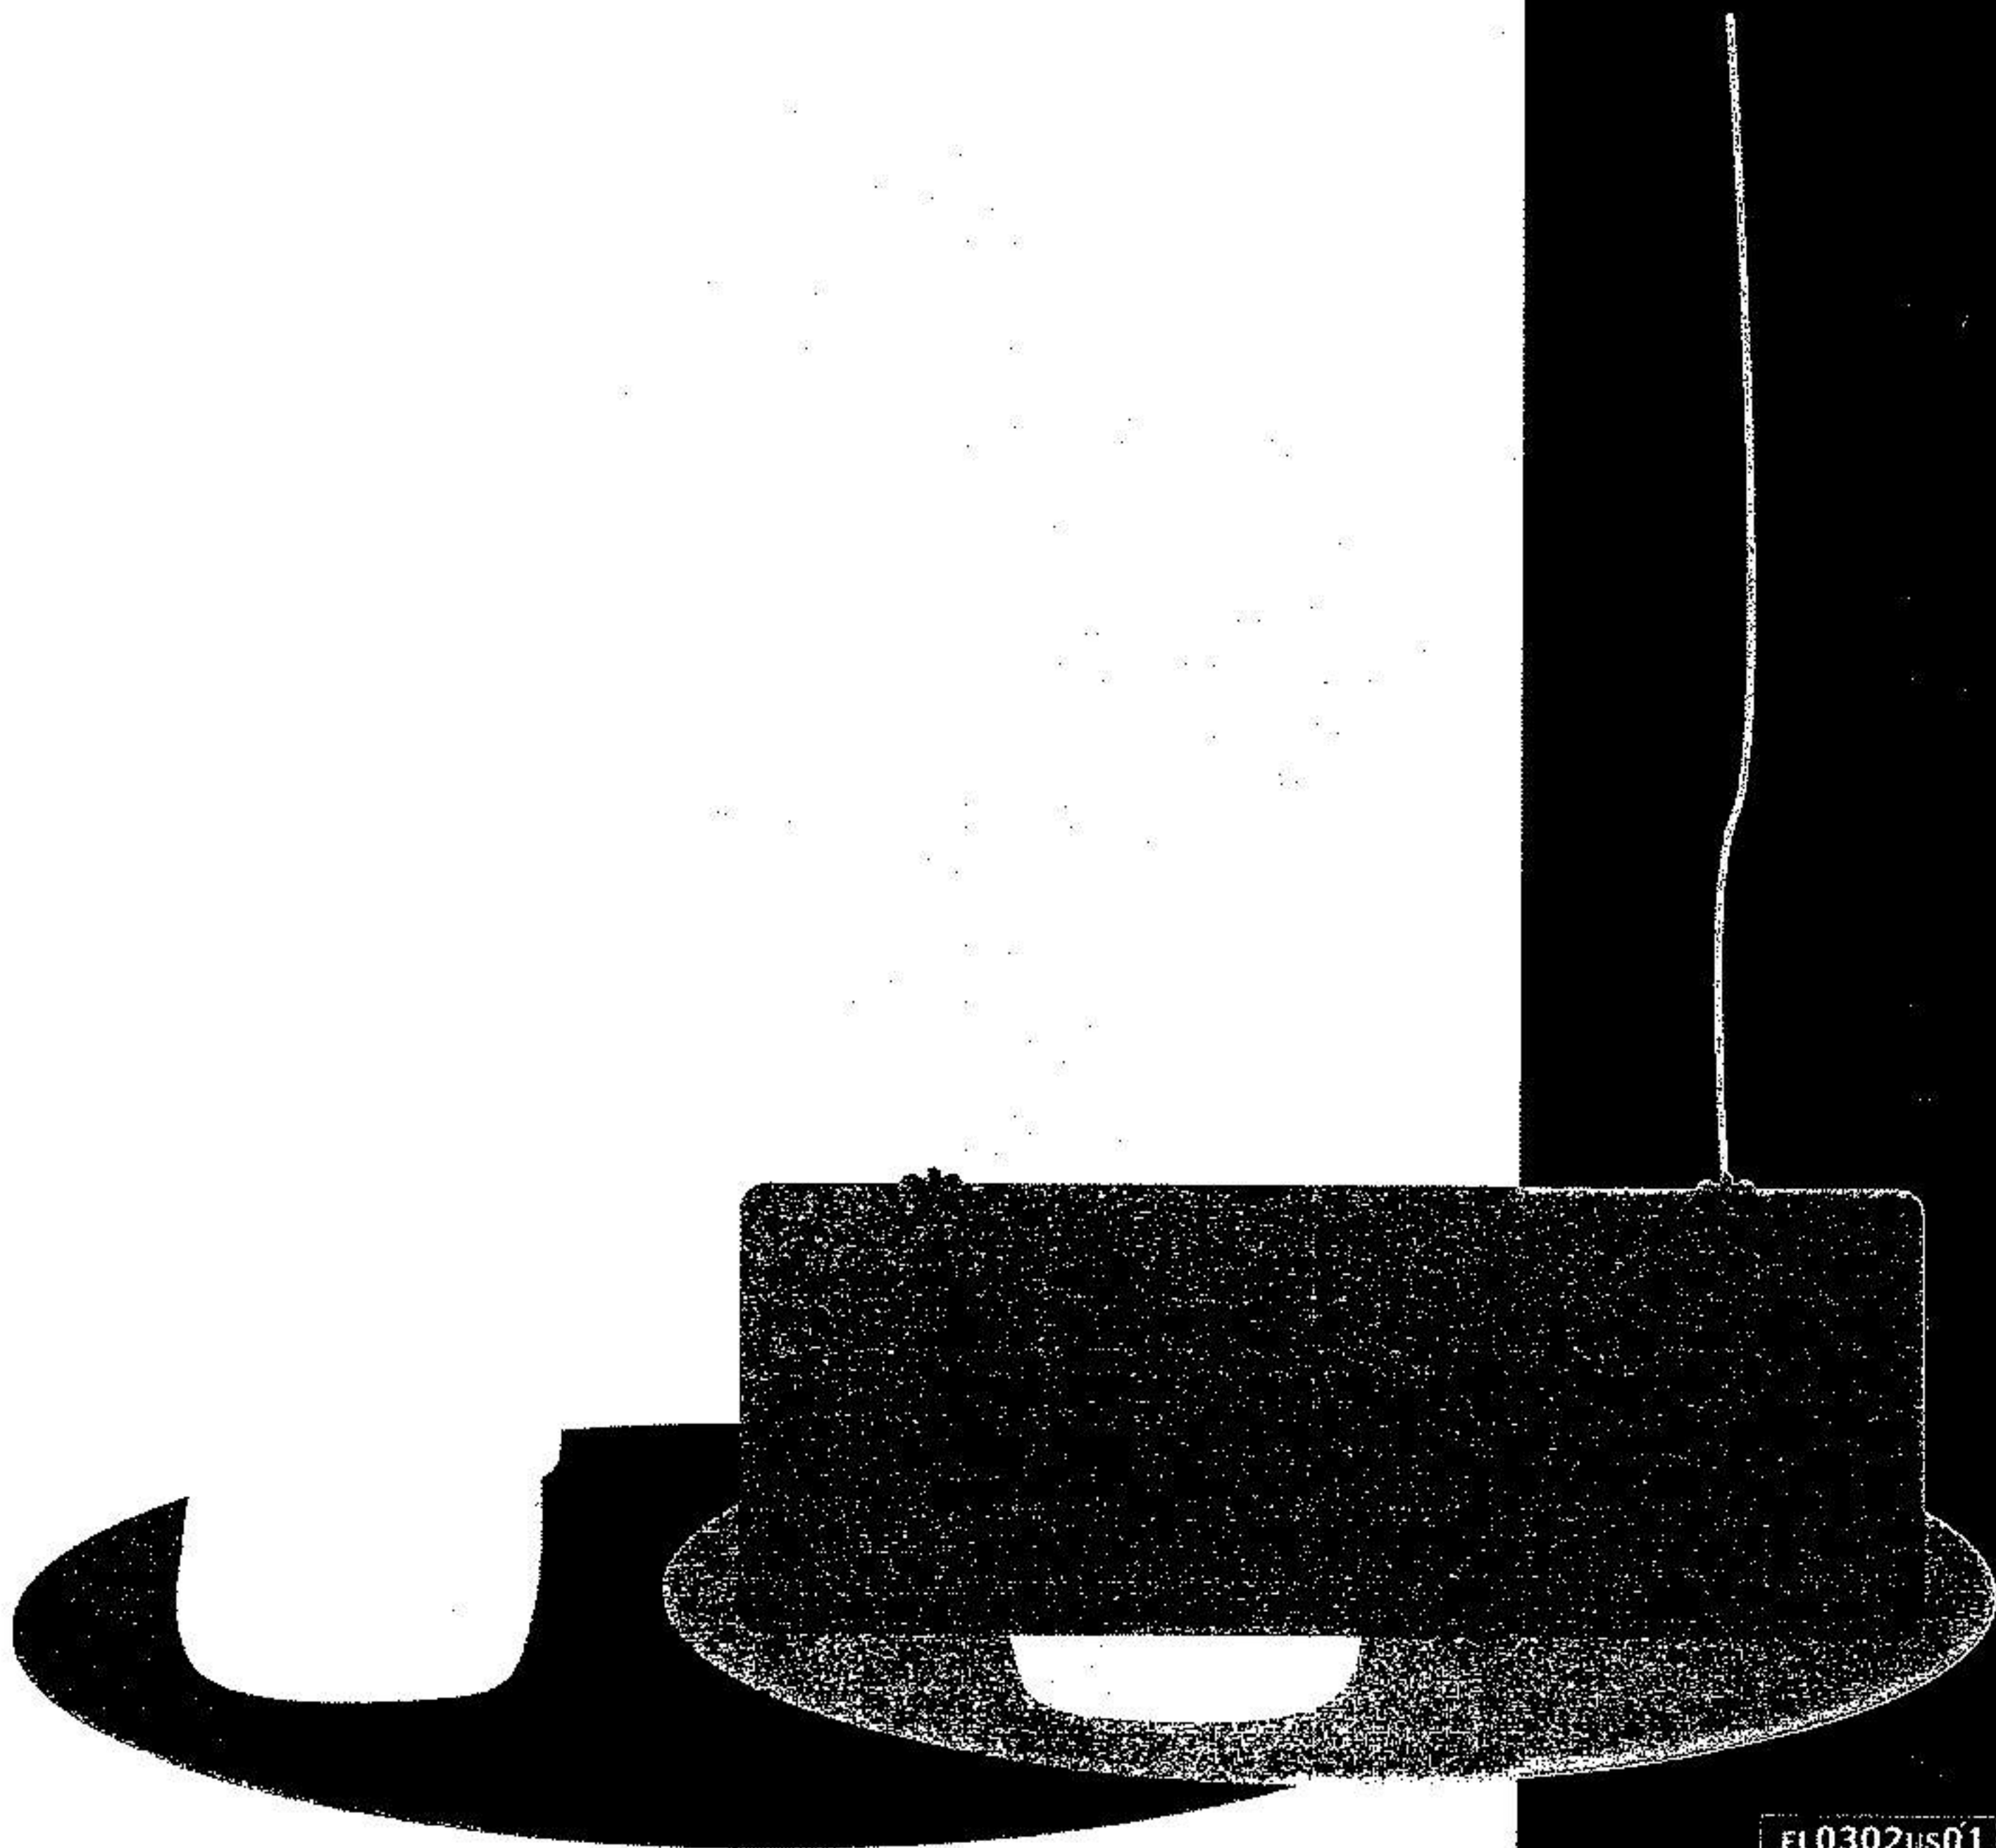

BREAK DANCER™

REMOTE CONTROLLED

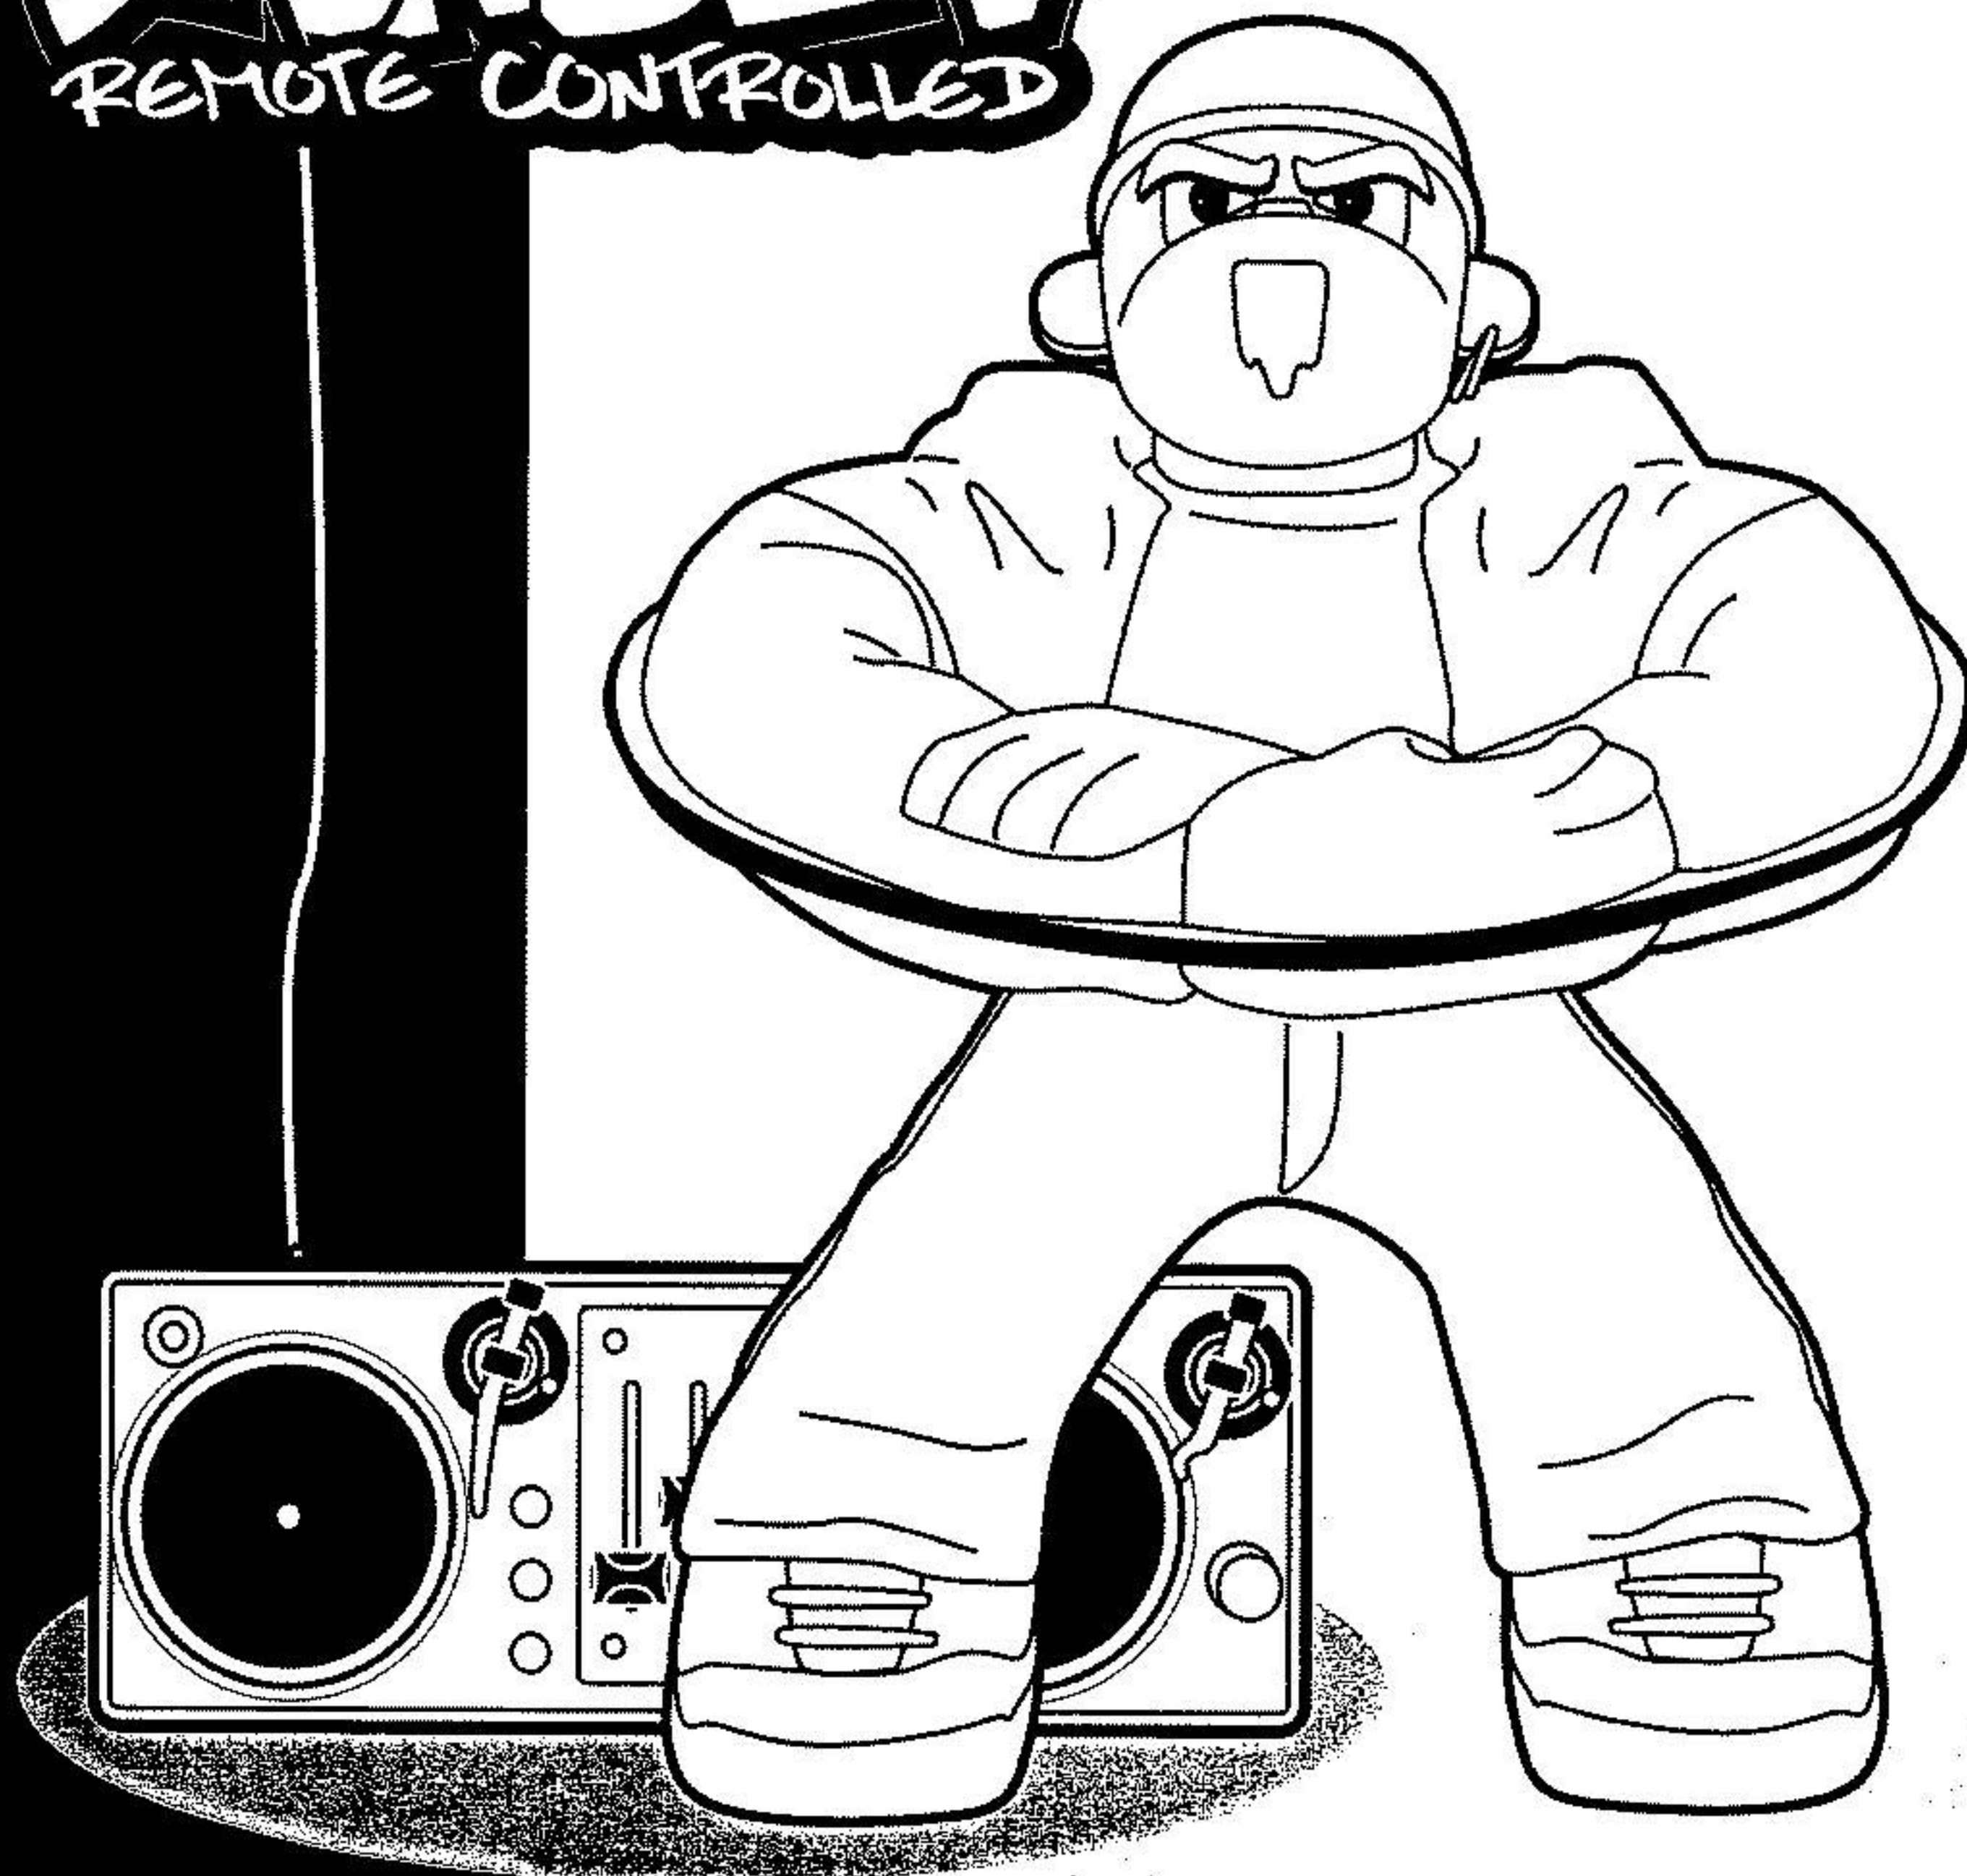

EL0302us01

Manufactured and distributed by
©2003 WowWee Ltd.
All Rights Reserved.

WowWee (Asia Office)
Unit 301A-C, 92 Granville Rd.,
T.S.T. East, Hong Kong
WowWee (North America Office)
4480 Cote de Liesse, Suite 320,
T.M.R. Quebec, H4N 2R1, Canada
Consumer Hotline: (514) 344-1258
www.wowwee.com



We recommend that you retain our
address for future reference.
Product and colors may vary.
PRINTED IN CHINA.

R/C Break Dancer™ Instructions


24-10-03;17:31 ;WOWWEE
+852 2723 3425 # 1 / 2

BATTERY INSTALLATION

- Battery Requirements:**
- R/C Break Dancer™ is powered by 4 x size "AA" LR6 1.5V batteries.
 - Remote controller is powered by 3 x size "AA" LR6 1.5V batteries.

- Battery Installation:**
- Remove the battery cover by using a Phillips / crosshead screwdriver as shown.
 - Install correct battery, as shown in the diagram making sure to match the polarity direction.
 - Replace battery door and tighten screw(s).

- IMPORTANT BATTERY INFORMATION**
- Do not dispose of batteries in fire, batteries may explode or leak.
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (Carbon Zinc) or rechargeable (Nickel-cadmium) batteries.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries should be replaced by adults because of small parts.
 - Batteries are to be inserted with the correct polarity.
 - Exhausted batteries are to be removed from the toy.
 - The supply terminals are not to be short circuited.
 - Non-rechargeable batteries are not to be recharged.

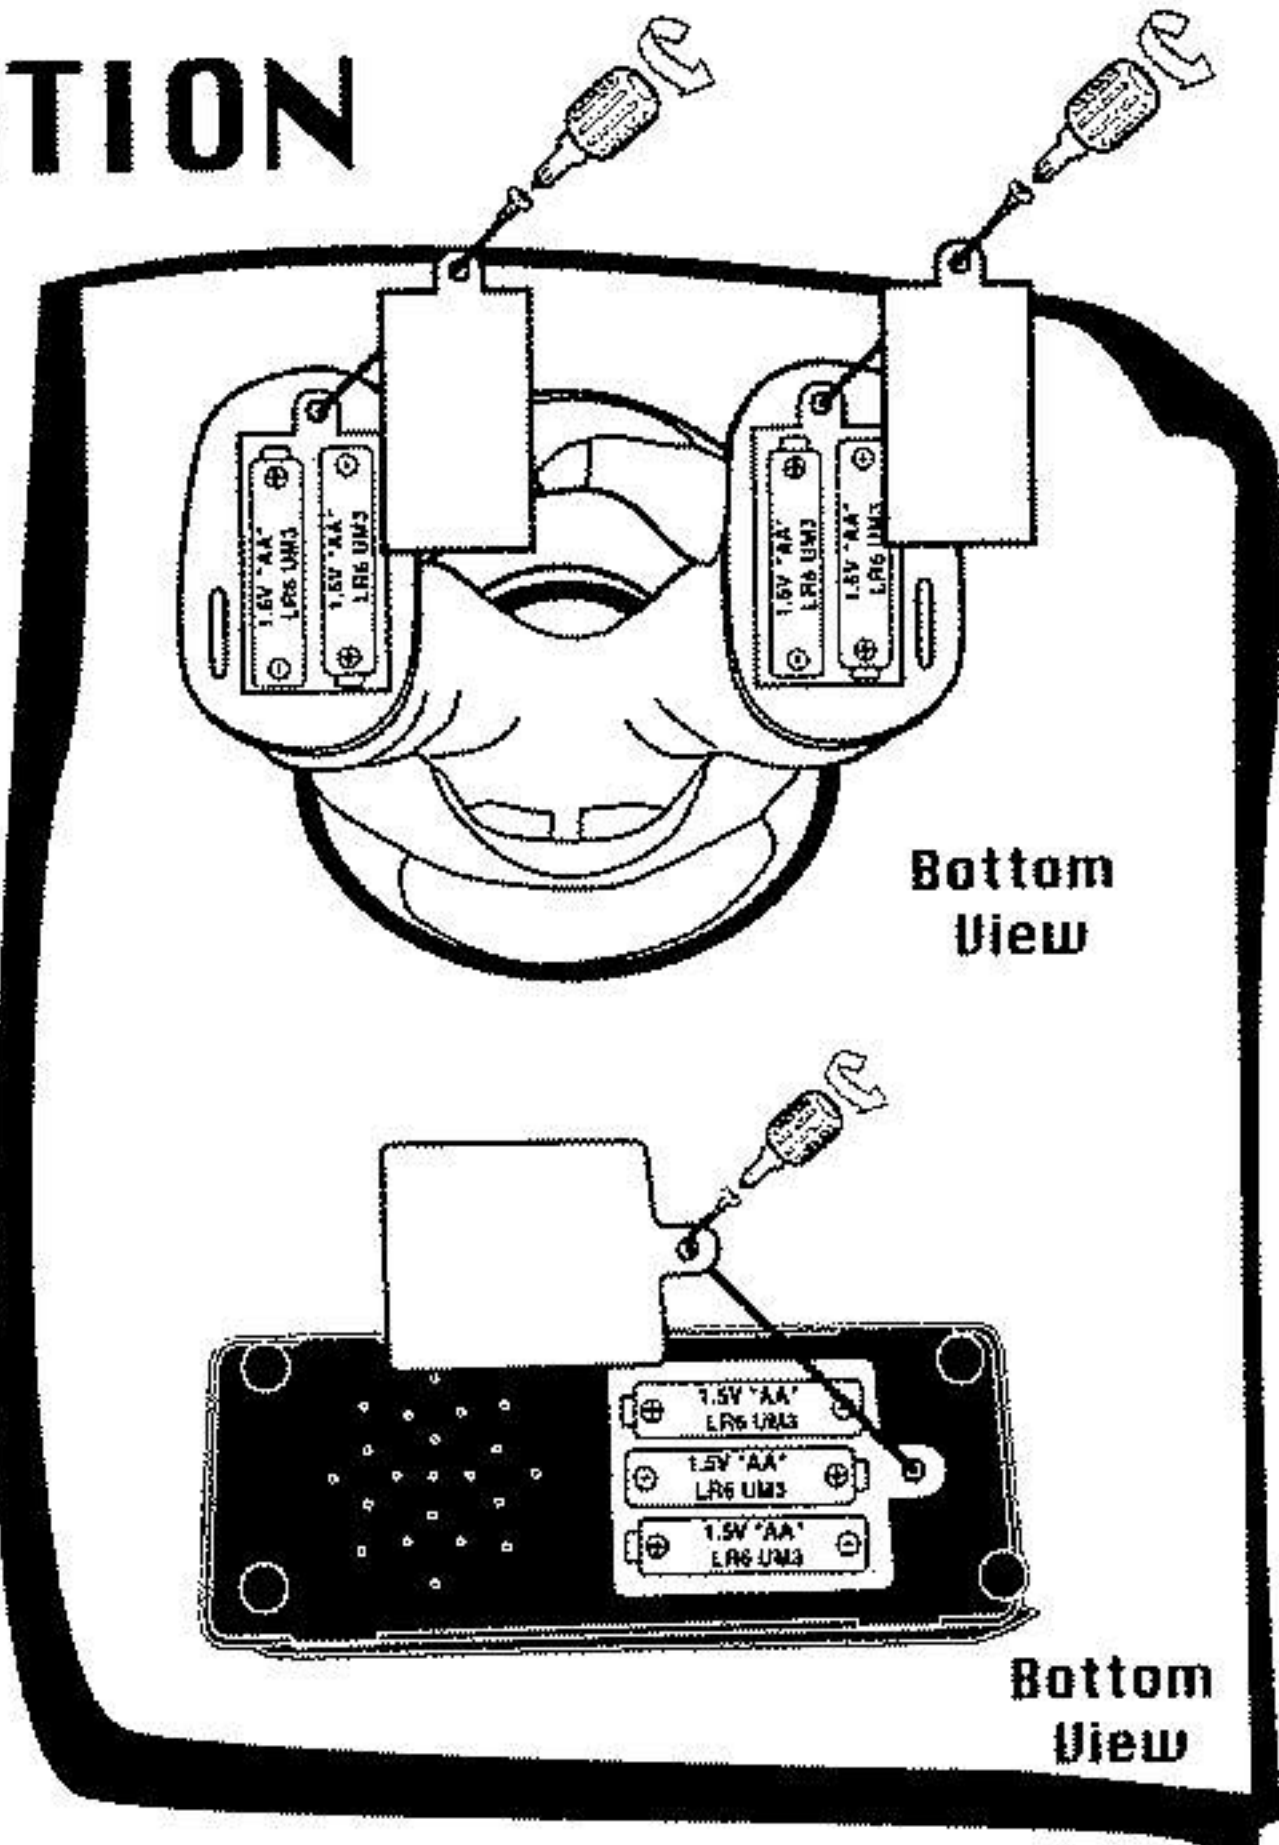

STARTING CONTROL




1. Turn power switch to ON for the R/C BreakDancer™ and the controller.

Bust-a-moves
Push record back 'n forth to start break dancin'!


Vocal Sounds
Press button for "Bad!" and "Yah!"

Scratch Sounds
Scratch the record back 'n forth for seriously cool sounds!

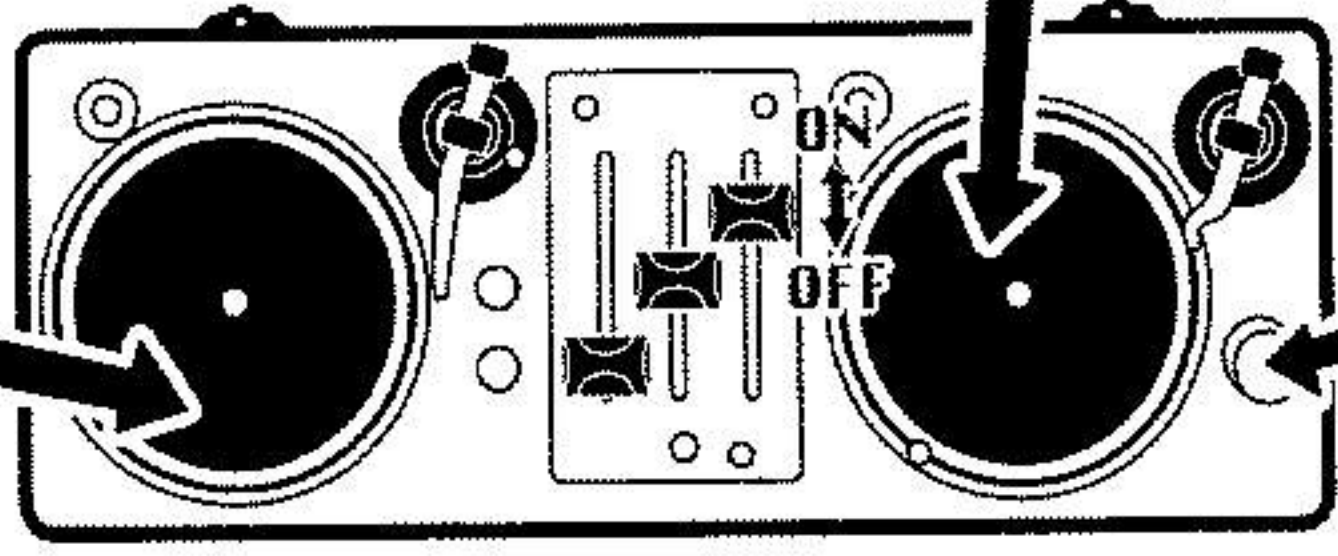


Tempo
Change the tempo of the music! Turn clockwise for a fast tempo and anti-clockwise for a slower tempo.


2. Moon Walk
Quickly push the Bust-a-moves record back 'n forth.

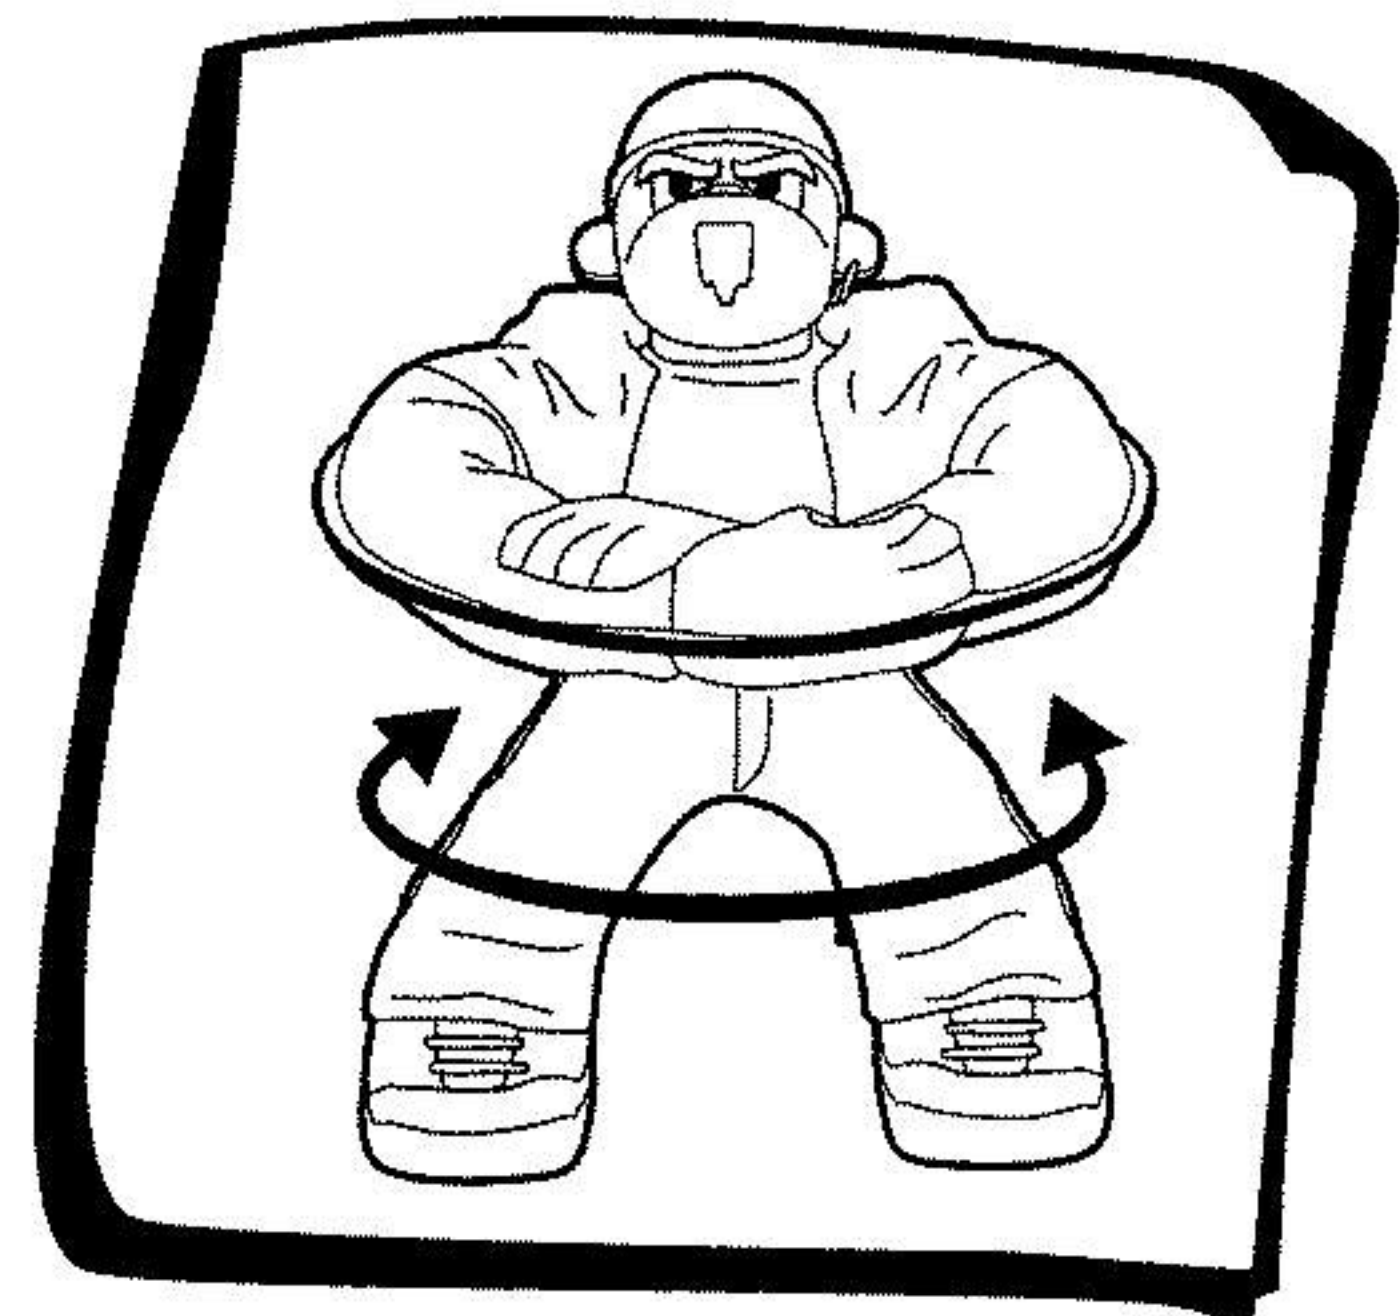

3. XXXXXX
Start in a standing position and push the Bust-a-moves record in one direction. When your dancer is spinning fast, change the direction of the spin by pushing the record in the opposite direction. This should make the dancer get on the floor and start break dancin'!

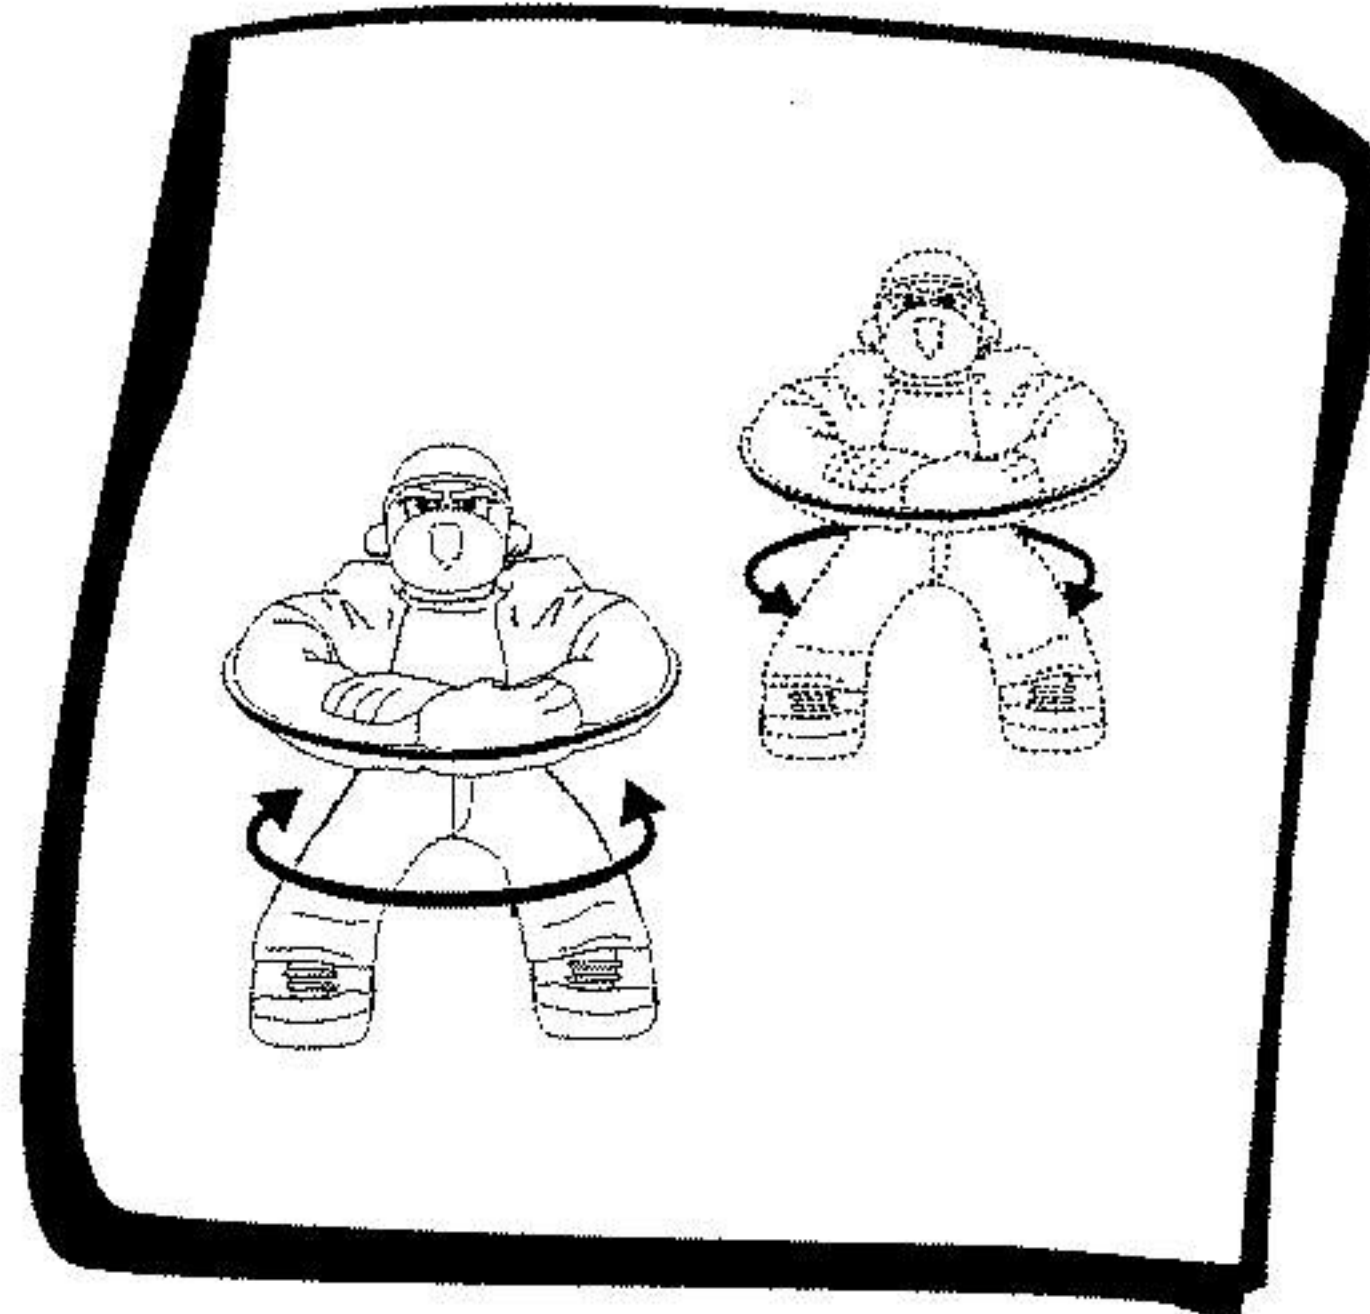

4. XXXXXX
Spin your dancer very fast in one direction on the floor. Then quickly change direction and keep spinning to make his legs twirl in the air.

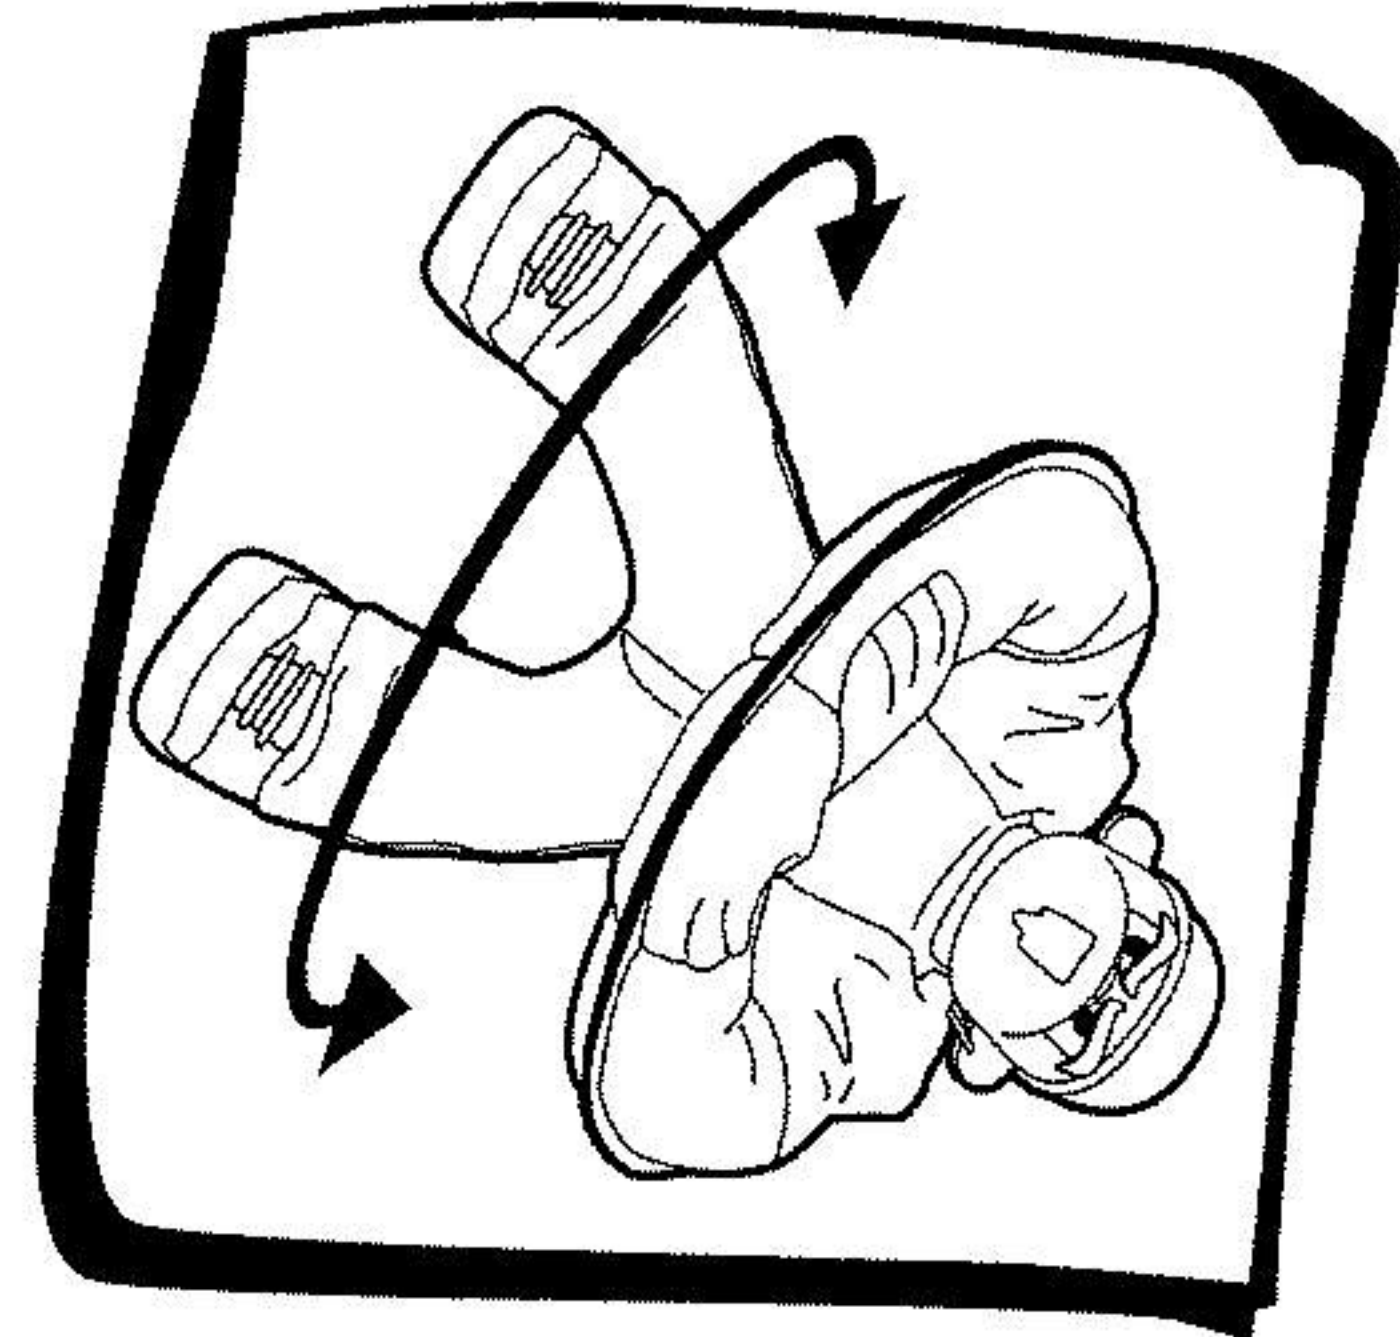

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.