







## Antenna Location

NB Mode

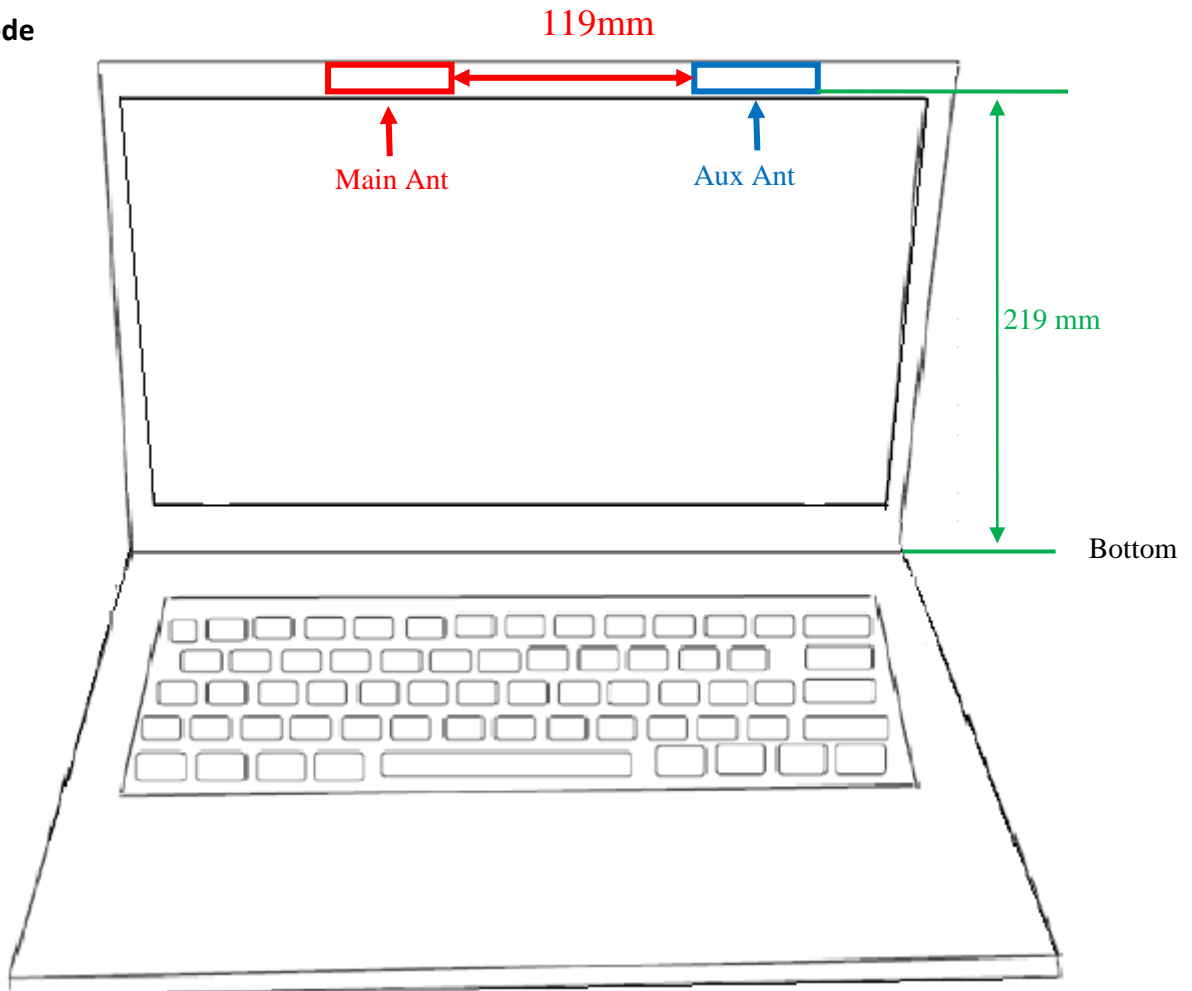



Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)		
Right-Edge (Edge2)		
Bottom-Edge (Edge3)		
Left-Edge (Edge4)		
Bottom	219	219

## Tablet Mode

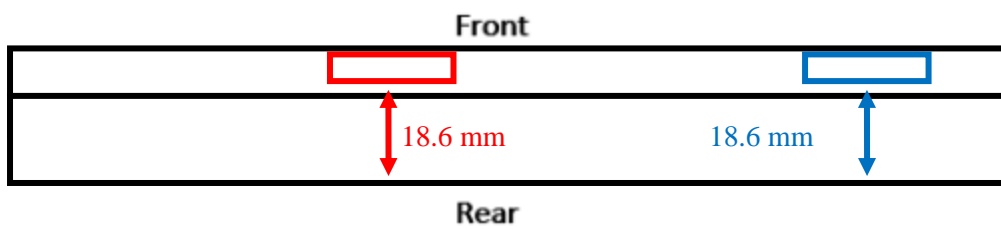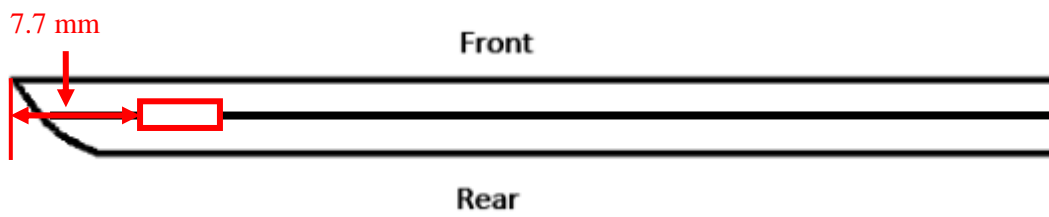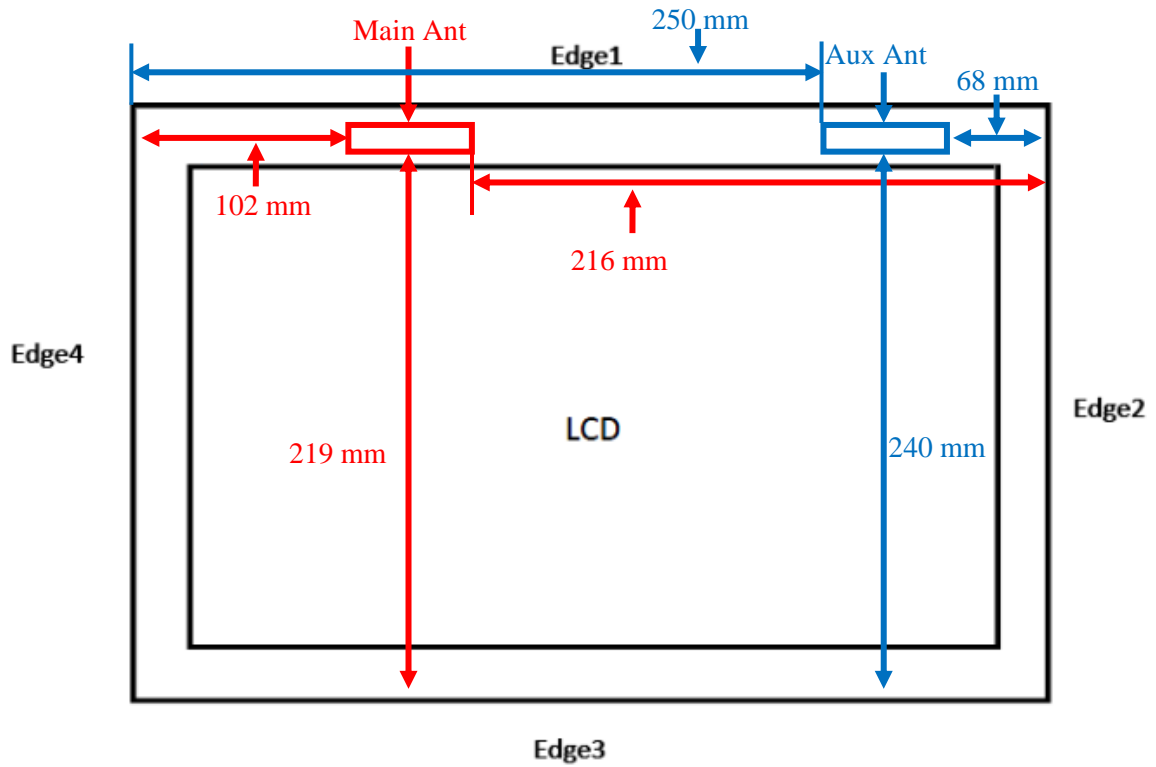



Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	7.7	7.7
Right-Edge (Edge2)	216	68
Bottom-Edge (Edge3)	219	219
Left-Edge (Edge4)	102	250
Rear Surface	18.6	18.6

## Stand Mode

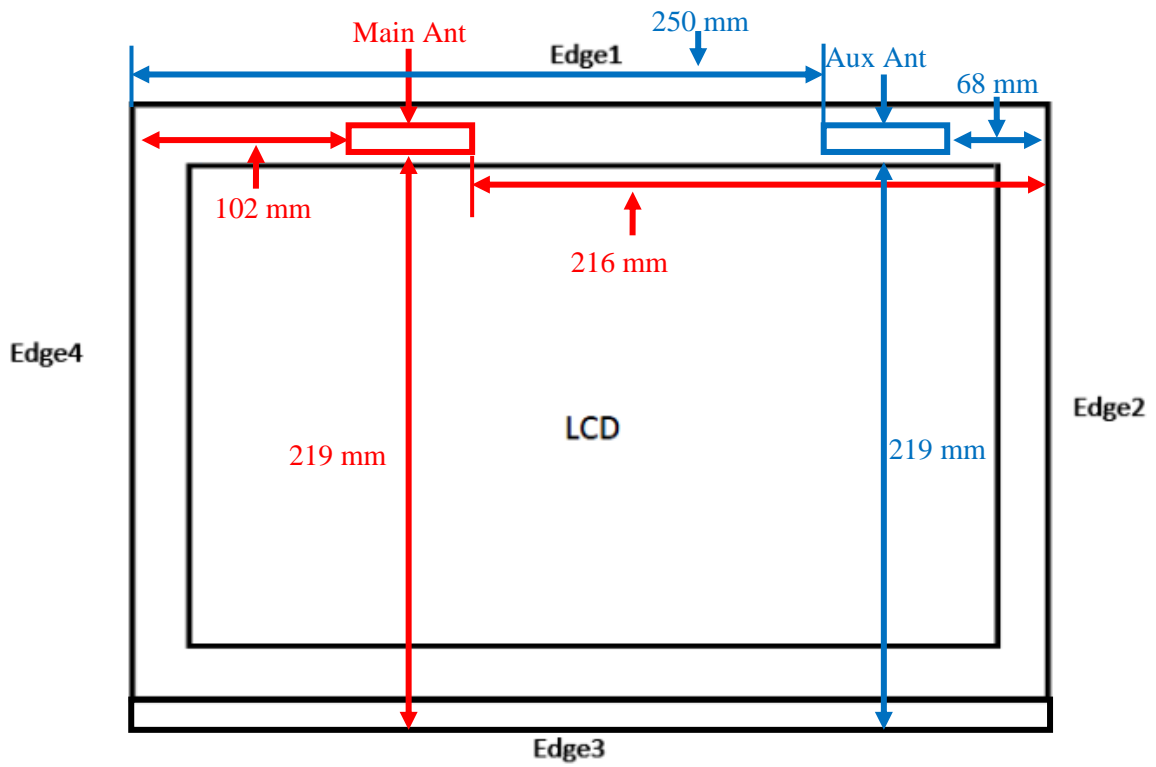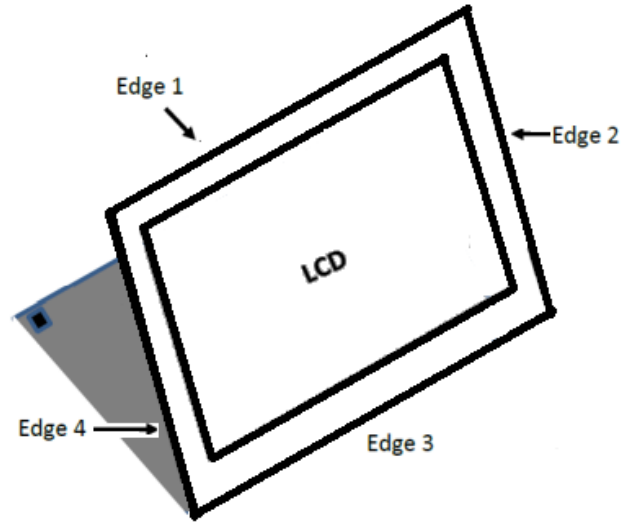


Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	7.7	7.7
Right-Edge (Edge2)	216	68
Bottom-Edge (Edge3)	219	219
Left-Edge (Edge4)	102	250
Rear Surface	18.6	18.6

## Tent Mode

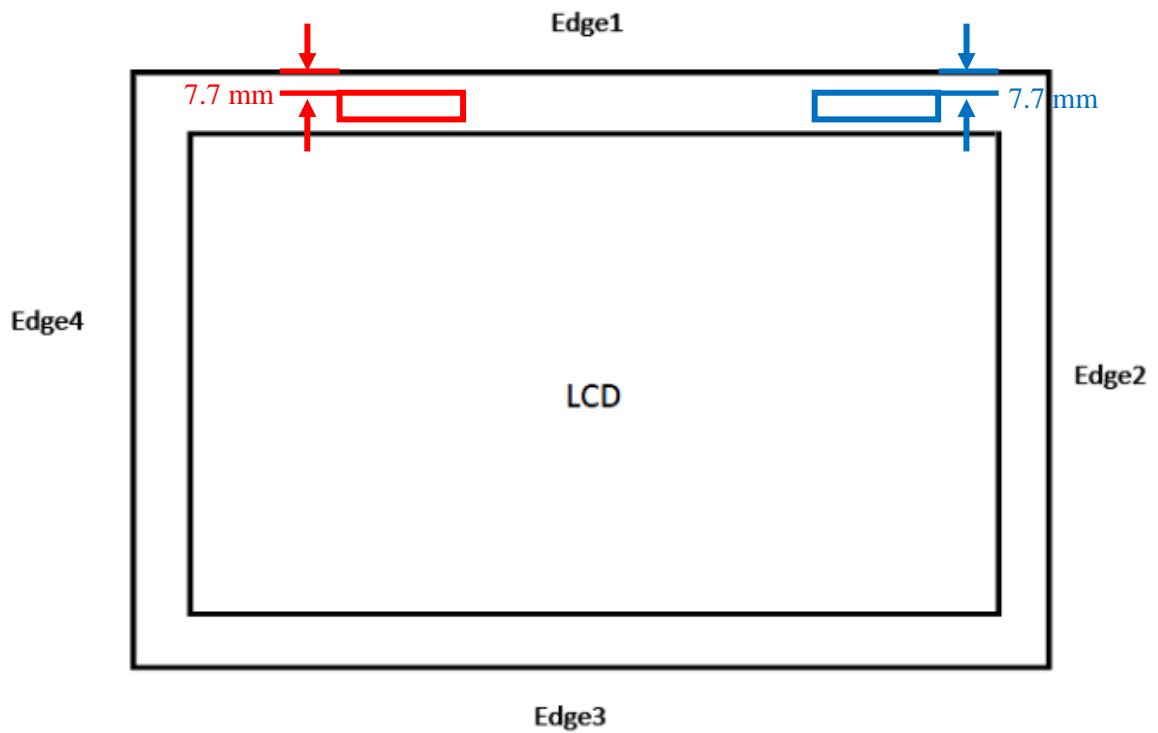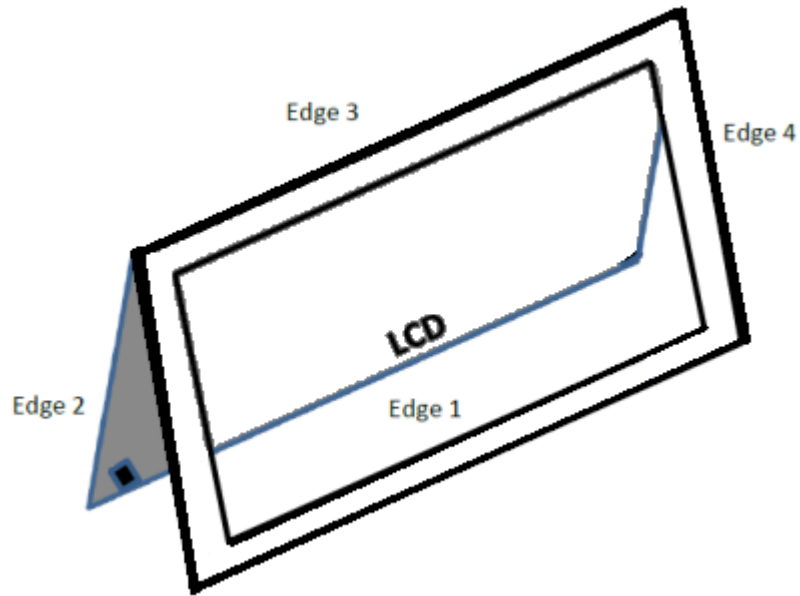


Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	7.7	7.7
Right-Edge (Edge2)		
Bottom-Edge (Edge3)		
Left-Edge (Edge4)		
Rear Surface		

## SETUP PHOTOS

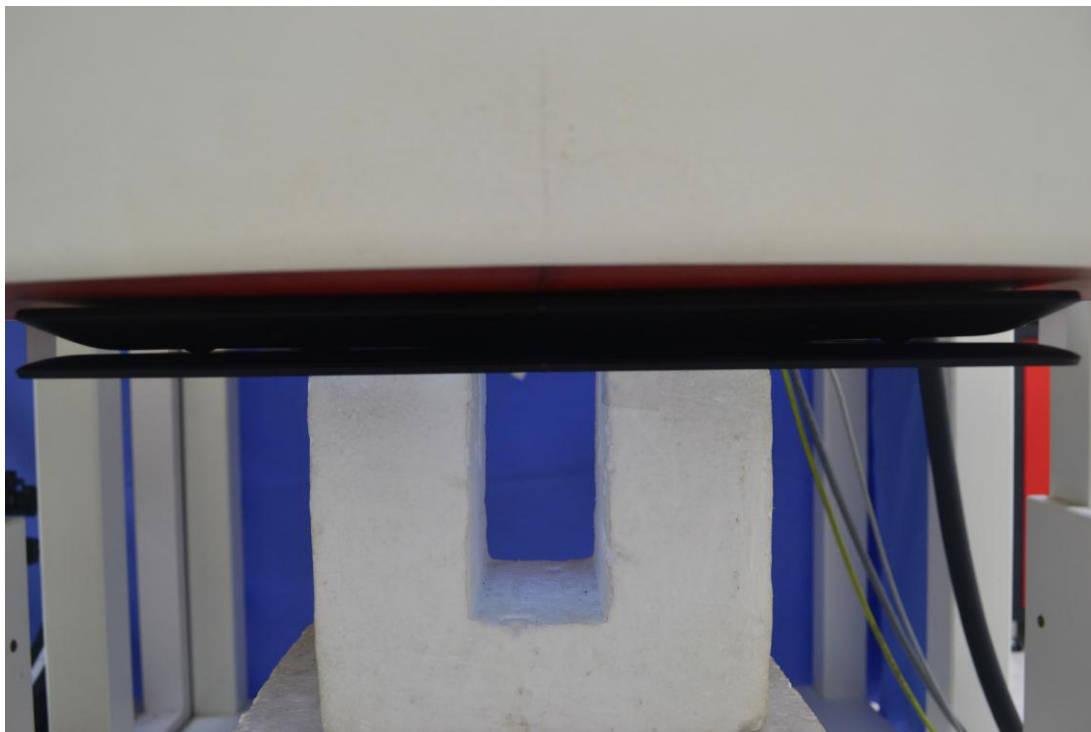

**Tablet Mode Rear**

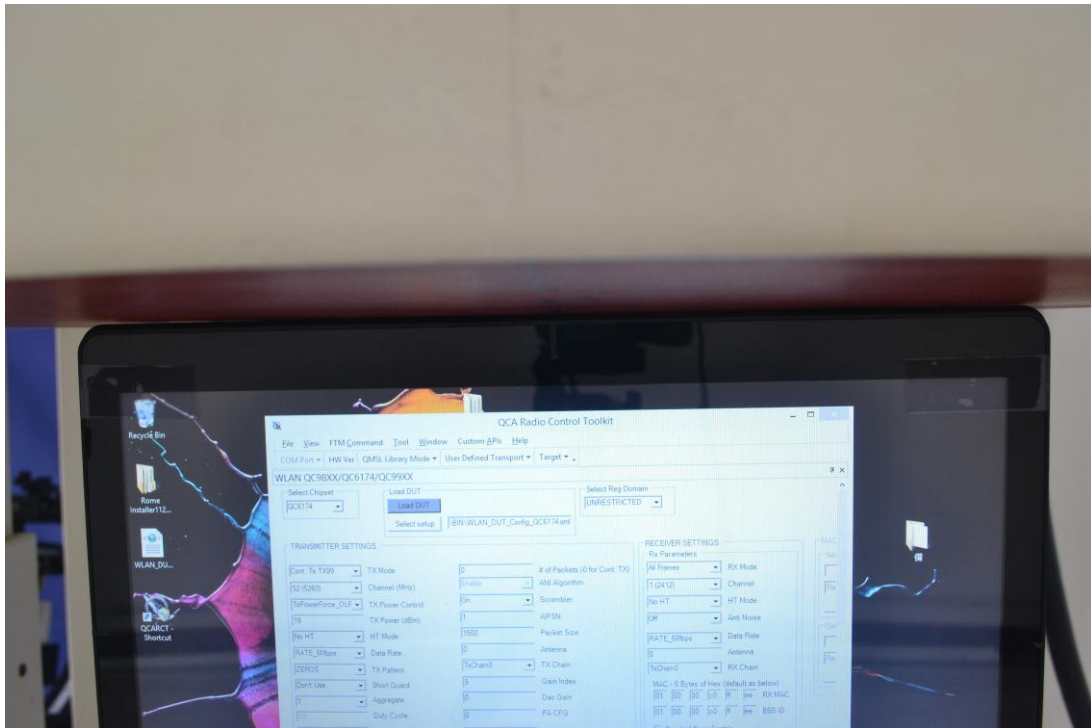

**Tablet Mode Edge1**

# EUT Photos

