

marantz[®]

Model RC9500 User Guide

Touch Screen Remote Control

**Wizz.9**

For US and Canada

FCC Compliancy:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rule. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is not guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different circuit from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

The user changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For Europe


Declaration of Conformity N° V03ECRC9500:

We, Marantz Europe B.V., PO Box 8744, 5605 LS Eindhoven, The Netherlands declare under our responsibility that the Marantz product described in this user guide is in compliance with the corresponding technical standards such as EN301 489-1 of 2002-08, EN301 489-3 of 2002-08, EN300 220-1 of 2002-09 and IEC60950 of Edition 2001.

Eindhoven, The Netherland

Bert Kiggen

Marketing manager of Marantz Europe B.V.



This device is approved according to applicable safety regulations for the following countries:

BE ✓	DK ✓	GR ✓	ES ✓	FR ✓
IRE ✓	IT ✓	LU ✓	NL ✓	AT ✓
PT ✓	FI ✓	SE ✓	UK ✓	DE ✓

CE0197 !

Dear customer,

Please be informed that this carton only contains a copy of the user manual in English. For German, French, Dutch, Spanish and Italian please visit our website www.marantz.com and check the download section (touch screen remotes).

Sehr geehrter Verbraucher,

bitte beachten Sie, dass diese Verpackung lediglich eine englischsprachige Bedienungsanleitung enthält. Eine deutsche Bedienungsanleitung erhalten Sie als Download File (Software - Fernbedienungen) über unsere Internetseite www.marantz.de oder telefonisch unter 0541-4046630.

Cher client,

Vous trouverez dans cette boîte une copie du manuel d'utilisation en anglais. Les versions allemande, française, hollandaise, espagnole ou italienne sont disponibles sur notre site: www.marantz.com (choisir Download et Touch screen remotes).

Geachte klant,

Wij informeren u dat deze doos enkel een engelse gebruiksaanwijzing bevat. Voor gebruik van een duitse, franse, nederlandse, spaanse of italiaanse versie verwijzen we u naar onze website www.marantz.com waar u talenversies kunt downloaden via touch screen remotes.

Estimado consumidor,

Le informamos que este paquete sólo contiene la versión inglesa del manual de usuario. Si desea obtener la versión española, alemana, francesa u holandesa, podrá conseguirla en nuestra página web www.marantz.com, sección "download, touch screen remotes" (mandos con pantalla táctil).

Attenzione: le istruzioni per l'uso a corredo di questo telecomando sono soltanto in lingua inglese. Le istruzioni in tedesco, francese, olandese, spagnolo ed italiano sono scaricabili dal sito www.marantz.com sezione "DOWNLOAD" - Touch Screen Remotes.

Automating Your Home Theater
With The Marantz  **RC9500**

 **RC9500 Remote Control User Guide**

The information in this manual is copyright-protected. No part of this user guide may be copied or reproduced in any form without prior written consent from Marantz.

MARANTZ SHALL NOT BE LIABLE FOR OMISSIONS OR FOR TECHNICAL OR EDITORIAL ERRORS CONTAINED IN THIS USER GUIDE. MARANTZ SHALL NOT BE HELD LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE SUPPLYING OR USE OF THIS INFORMATION. MARANTZ SHALL NOT BE HELD LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE PERFORMANCE OR USE OF THE MATERIALS DESCRIBED IN THIS USER GUIDE.

The information in this user guide may be subject to change without prior notice. All other brand or product names are trademarks or registered trademarks of their respective companies or organizations.


Table of Contents

Introduction	2
1. The Marantz RC9500	2
2. The Battery	3
Getting Started	6
1. Activating the RC9500	6
2. Navigating the RC9500	7
3. Operating a Device	11
4. Check Battery Life - The Information Page	12
5. The Setup Pages	12
6. Setting Time and Date	14
7. The Mode Menus	16
8. Adjusting the Touch Screen Brightness	17
Customizing Your RC9500	18
1. Introduction	18
2. Cloning All Your Existing Remotes	18
3. Complex Operation? Macros or Help...	20
4. Programming Help Lists	22
5. Macro/Page Jump Capabilities	23
6. Programming Macros & page Jumps	25
Reference	28
1. Learning IR Commands	28
2. Labeling Buttons, Pages and Devices	32
3. Adding Devices	35
4. Deleting Buttons and Devices	39
5. Moving Devices	41
6. Programming Macros	42
7. Creating and Editing Timers	46
Using the Remote Control with RF (Radio Frequency)	54
9. Wizz.it 9 Software	46
Maintaining the RC9500	58
Troubleshooting	59
Frequently Asked Questions	62
Overview of Symbols	64
Specifications	66
Index	67
Service and Support	72

Introduction


1. The Marantz *Wizz.9* RC9500

The RC9500 is designed to control most devices that understand infrared (IR) remote control signals. Its easy-to-use Touch Screen and its intuitive interface make it a perfect remote control for every user. The RC9500 is completely customizable and programmable. You can add devices and functions, re-label buttons, record macros and animate your macros. Although the RC9500 is pre-programmed for Marantz components, a vast collection of built-in tab guided panels with pre-arranged button art enables you to easily choose the perfect interface for any non-Marantz component. The RC9500 easily “learns” commands from the vast majority of manufacturers’ remote controls.

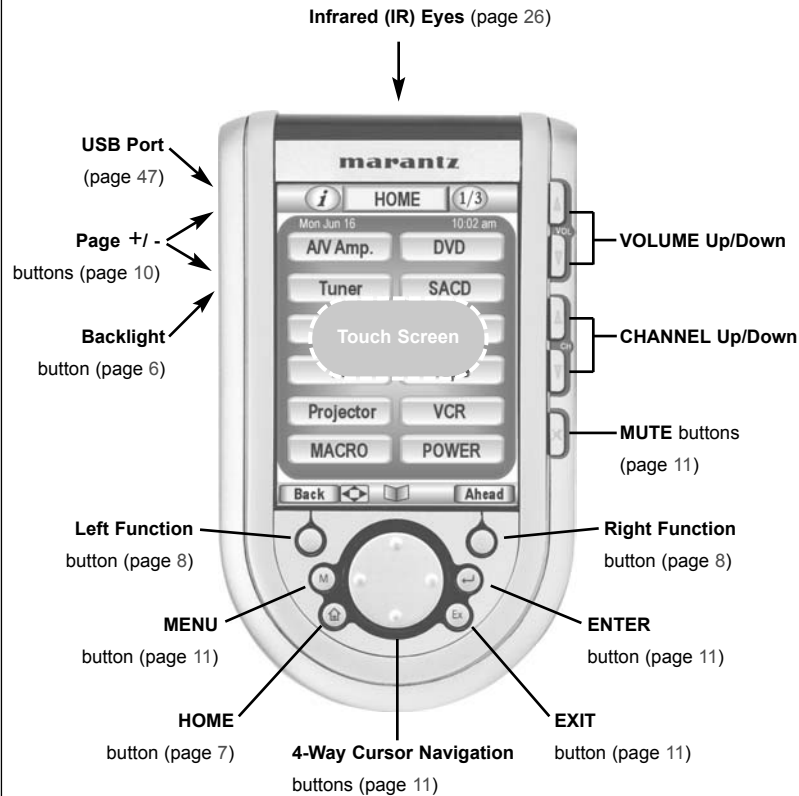

Introduction

The Touch Screen

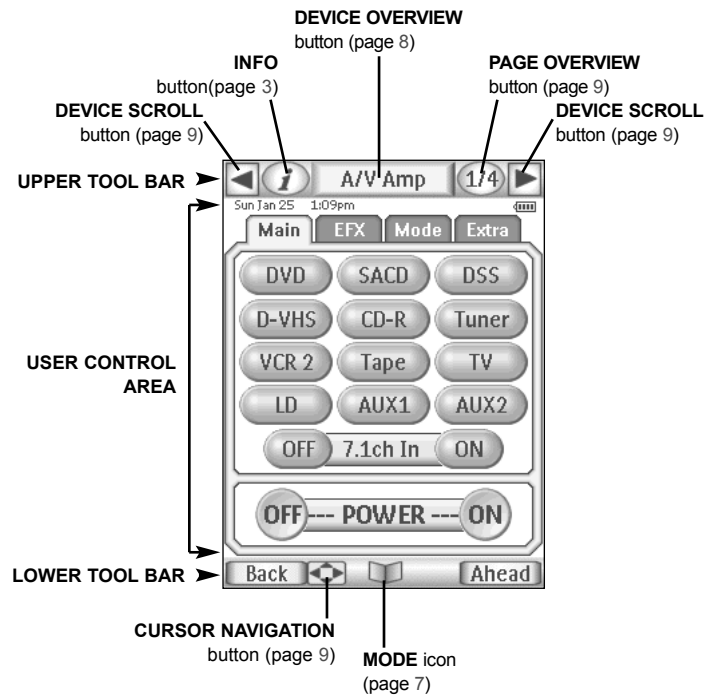

2. The Battery

When you use the RC9500 for the first time, you will have to:

- Install the battery pack.
- Place the RC9500 in the docking station (DS9500) and charge the RC9500.
- Tap the **INFO** button on the UPPER TOOL BAR to check battery life.


Warning: Use the docking station only with supplied NiMH rechargeable battery pack.

We strongly advise you NOT to plug other appliances (like mobile phones, PDA's) into the docking station. This will damage both the docking station and the appliance.

Introduction

■ Installing the Battery Pack

- 1 Press the latch on the battery cover and remove the battery cover from the RC9500.

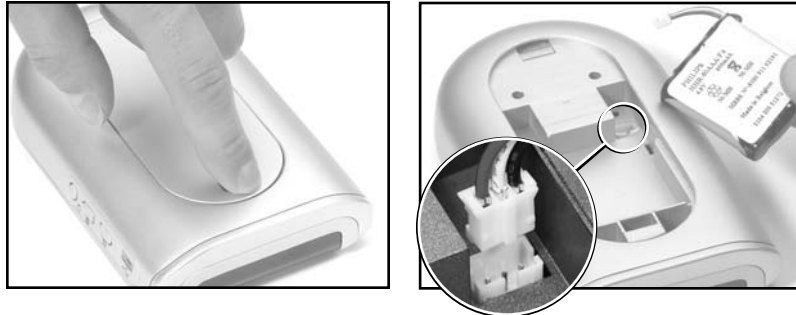

- 2 Plug the cable of the battery pack in the connector as illustrated.
- 3 Place the battery pack in the battery compartment.



- 4 Place the battery cover back on.

Note Make sure the cable of the battery pack does not get stuck between the molded interior and the battery cover.

After a few seconds, the RC9500 starts up automatically and an Introduction screen appears. The RC9500 beeps twice to indicate that it has finished starting up.


Because the battery pack of the RC9500 is not fully pre-charged, you will have to charge it as described in the next page.

Introduction

Charging the RC9500

For charging the RC9500, you use the docking station DS9500.

- 1 Connect the power adapter to the docking station and plug it into a wall outlet.
- 2 Slide the RC9500 into the docking station. Charging starts immediately. The blue charging LED on the front of the docking station indicates charging takes place. When the RC9500 is fully charged, the LED goes off.

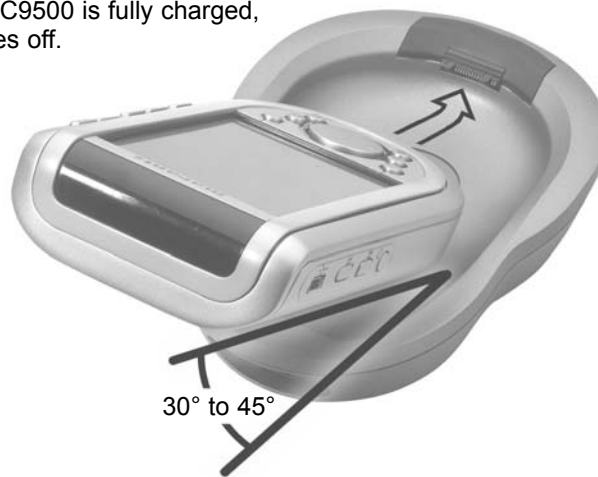

Make sure you lift the RC9500 up at an angle of 30° to 45° when you take the RC9500 out from the docking station.

Note Normal charging time is 2 to 3 hours, depending on the condition of the battery pack.
You can operate the RC9500 while it is being charged.
The battery pack does not have to be entirely empty before recharging.
You can place the RC9500 in the docking station at any time.

When the battery is running low, the Low Battery icon appears in the UPPER TOOL BAR. Recharge the RC9500 as soon as possible to ensure perfect performance.



Low Battery icon

Note The RC9500 retains all settings when the battery is completely dead. You will only have to reset the clock.

Getting Started

1. Activating the RC9500

■ Turning on the Touch Screen

- Tap the Touch Screen gently with your finger or a blunt, soft object like a pencil eraser.
The display is activated and you see the Home page.

Notes

- If the display stays blank or becomes black, adjust the contrast using the buttons on the left side (see page 15).
- If another panel is displayed, press the **HOME** button.
- The RC9500 shuts down automatically after being left alone for a few seconds (you can adjust the time out period in the Setup pages).



HOME button

■ Using the Backlight

RC9500's backlight can be activated in three different ways,

■ Pressing the BACKLIGHT button

By pressing the **BACKLIGHT** button on the left side of the RC9500, the backlight is turned on.

■ Picking up the RC9500

The RC9500 has the Pickup sensor in it. By picking your RC9500 from the docking station and tilting more than 50°, the backlight is turned on.

Note To enable this function, the "Pickup sensor" setting in the Setup has to be set to "Active" (see page 13).

■ Tapping the Touch Screen




By tapping the Touch Screen, the backlight is turned on.

Note To enable this function, the "Auto backlight" setting in the Setup has to be set to "Active" (see page 13).

The backlight shuts off after a few seconds to save power.

Getting Started

Modes

The RC9500 has different “**Modes**”. When you activate the RC9500 for the first time, it starts up in **USE** mode allowing you to immediately operate your devices. In **USE** mode, the center of LOWER TOOL BAR displays the **MODE**  icon. Tap and hold the **MODE**  icon more than 3 seconds. The Mode Menu page will appear. If the center of LOWER TOOL BAR shows another icon, like , tap it to reveal the Mode Menu and press the **Left Function** button labeled “**Exit**” to return to **USE** mode.

Note If you do not see the Mode icon; it has been deactivated via the Setup. To enable this function, the “Mode Menu” setting in the Setup has to be set to “Active” (see page 13).

2. Navigating the RC9500

Your RC9500 is capable of displaying hundreds of different control pages. RC9500 presents you various ways to navigate to the specific device and page easily.

Navigating the Devices

Home — The Home Page displays convenient *instant jump* buttons to the main control page of your system devices (Amp., TV, DVD player etc.). These buttons also select the Input of your Home Theater Receiver or Preamp.

Access Home page by pressing the **HOME** button at the bottom left of the remote.



- Device buttons in the Home page perform two actions when pressed;
 1. Jumps to the main page of the Device.
 2. Changes your home theater receiver/preamp to the appropriate input. To program for a non-Marantz receiver/preamp, see page 28.


Getting Started

The commands assigned to the device button called the **Device Action**.

Device Overview

— The Device Overview page also displays a list of all the devices you can control. You can jump to the main page of your device by tapping the device button in the list.

Access Device Overview page by tapping the **DEVICE OVERVIEW** button at the middle of UPPER TOOL BAR.

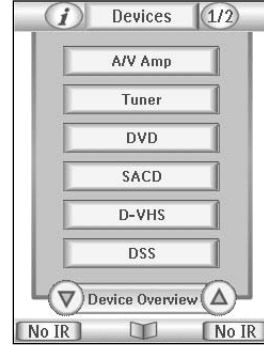


If you have more than seven devices, scroll arrows enable you to navigate to the next Device Overview page.

Note When you jump to a Device by tapping the device button in the Device Overview pages, the RC9500 will change the input of your home theater receiver/preamp. Using the buttons in the Home page is exactly the same thing as pressing a button in the Device Overview page.

● Using Device Overview **without Changing Input (No IR)**

If you don't want to change the input for your receiver/preamp, you can only jump to a Device without changing the input by the following steps;

1. Display the Device Overview page, by tapping the **DEVICE OVERVIEW** button.
2. Look at the label for the **Left and Right Function** buttons. Now, they are labeled "**No IR**".

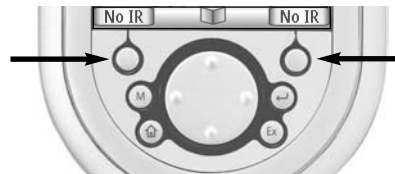

Getting Started







3. Press and hold either of the two **Left and Right Function** buttons, then tap the device you would like to jump to. No "input select" commands will be sent to your receiver/preamp.

Device Scroll — You can also navigate the devices by tapping the **DEVICE SCROLL** buttons on the left and right side of the UPPER TOOL BAR. Tap the Left arrow button to navigate to the previous device. Tap the Right arrow button to navigate to the next device.



Cursor Navigation — This function enables you to navigate to the devices by pressing the **Left and Right** direction of the **4-way Navigation** button.

Note This function is deactivated by the factory setting. You can activate it in the **Setup** pages (see page 13).

To switch this function on, tap the  button in the LOWER TOOL BAR. When this function was activated, the  button is changed to the  button and  icon is displayed in the UPPER TOOL BAR where the left device scroll arrow button  was. To switch this function off, tap the  button in the LOWER TOOL BAR again.




Navigating the Pages

Page Overview

— The Page Overview page displays a list of all the pages for one device. You can jump immediately to another control page in one device by tapping the page buttons in the list.



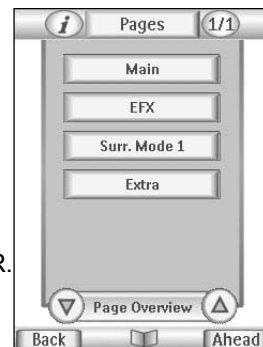



Access Page Overview page by tapping the **PAGE OVERVIEW** button (Page number) in the UPPER TOOL BAR.




Getting Started

- **Page Scroll** — You can navigate the pages by pressing the **Page +** and **Page -** buttons on the left side of RC9500.
- **Cursor Navigation** — This function enables you to navigate to the different pages as well as the device by pressing the **Up** and **Down** direction of the **4-way Navigation button**.

Note This function is deactivated by the factory setting. You can activate it in the **Setup** pages (see page 13).


To switch this function on, tap the  button in the LOWER TOOL BAR. When this function is activated, the  button is changed to the  button and  icon is displayed in the UPPER TOOL BAR where the left arrow button  was. To switch this function off, tap the  button in the LOWER TOOL BAR again.

- **Tab Buttons** — All of your devices have been programmed with “one-touch” jump buttons called **Tab** button. By tapping the **Tab** button, you can jump to the appropriate page in your operation device.

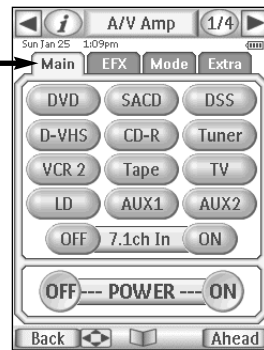

Other Navigation

- **Ahead** and **Back** Function buttons — Press the **Left Function** buttons labeled “**Back**” to navigate to last ten pages you’ve viewed. Use the **Right Function** button labeled “**Ahead**” to navigate in the other direction.

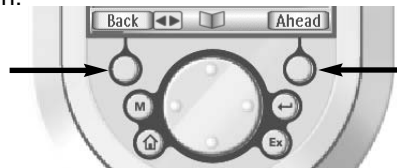

Getting Started

3. Operating a Device

You can operate the devices using two kinds of buttons;

- **Soft buttons** - Virtual buttons on the Touch Screen.
- **Hard buttons** - Seven buttons below the screen (HOME, Left and Right Function buttons are not included) and five to the right of the screen (Vol +/-, Ch Up/Down & Mute)

Using the Soft Buttons

By tapping the **Soft buttons** on the Touch Screen you send **Infrared (IR)** commands to the device you have selected. The name of the device you are controlling is always displayed on the **DEVICE OVERVIEW** button.

Sending commands

IR commands are invisible. However, when you send a command, an animated icon appears in the **INFO** button at the UPPER TOOL BAR to show that a command is being sent.



Using the Hard Buttons

Hard buttons can be operated at any time, even without turning on the Touch Screen. They can change their function depending on which device is active (teach commands to the specific device).


For example:

Since VOLUME Up, VOLUME Down and MUTE are typically receiver/preamp commands in most home theaters, these direct access buttons have been pre-programmed to always operate a Marantz receiver/preamp as the default. Should you own another brand, see the programming instructions on page 28-29.




MENU, ENTER, EXIT, 4-Way Cursor Navigation, CHANNEL Up and CHANNEL Down are typically programmed to change with the device selected. So when you are operating your DVD player, you use them to navigate DVD menus and change chapters. While you are watching TV, the MENU buttons operate the TV menus and the CHANNEL buttons change channels.

Getting Started

4. Check Battery Life- The Information Page

Access the Information page by tapping the **INFO**  button in the UPPER TOOL BAR.

You can check;

-  The percentage of the battery life.
-  The percentage of the free memory available for new programming.
-  Software version information installed on to your RC9500.







To exit the Information page,

Tap the **INFO**  button again or press the **Left Function** button labeled “Exit”.

5. The Setup Pages

Most of the RC9500's features can be set to your own wishes.

- 1 Tap the **INFO**  button in the UPPER TOOL BAR.
The Information page appears.
- 2 Tap the “**SETUP**” button in the Information page. The first Setup page appears. You can display the second and third Setup page by using the **Page +** and **Page -** buttons.
- 3 Tap the button of the setting you want to adjust. The color of the button will be changed.
- 4 Tap the button again or  and  buttons to adjust the setting.

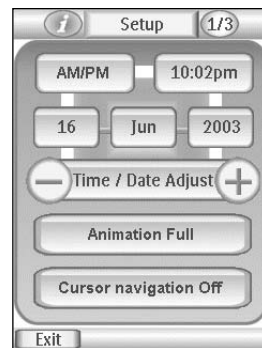

Getting Started

First Setup page

Setting	Function	Adjusting
Time Mode	Sets the time display mode. (AM/PM, 24H, No Time)	Tap the "Time Mode" button Repeatedly.
Time, Day, Month and Year	Sets the time, Day, Month and Year individually	Tap the each label, and then adjust by tapping + and - buttons.
Pickup Sensor	Turn the Pickup Sensor On/Off.	Tap the "Pickup sensor" button
Screen Timeout	Sets the timeout of the TouchScreen.	Tap the + and - buttons both side of the "Screen" label.
Button Timeout	Sets the timeout of the Buttons.	Tap the + and - buttons both side of the "Button" label.

Second Setup page

Setting	Function	Adjusting
Brightness	Sets the Brightness of the TouchScreen.	Tap the + and - buttons both side of the "Brightness" label.
Auto Button Light	Turn the Auto Button Light On/Off.	Tap the "Auto button light" button
Cursor Navigation	Turns the Cursor Navigation mode On/Off.	Tap the "Cursor navigation" button repeatedly.
Animation	Selects the Animation mode (Full, Page, Mode, None).	Tap the "Animation" button. repeatedly.
Screen (beep)	Selects the beep volume (Off, 1,2,3) for Touchscreen	Tap the "Screen" button repeatedly.
Button (beep)	Selects the beep volume (Off, 1,2,3) for Hard buttons.	Tap the "Button" button repeatedly.

Third Setup page

Setting	Function	Adjusting
Mode Menu	Active - Normal. Anyone can access. Deactive - Hide the Mode icon.	Tap the "Mode Menu" button repeatedly
SPECIAL NOTE	Good when children are tech-savvy.	
Device Menu	Active- Turns On the Device Overview. Deactive - Turns Off the Device Overview.	Tap the "Device Menu" repeatedly.
Page Menu	Active- Turns on Page Overview. DeActive - Turns off Page Overview.	Tap the "Page Menu" repeatedly.
Calibration	Calibrates the Touchscreen.	Tap the "Calibration" button See page 53 for more detail.
Revert*	Reverts the RC5400 to the default configuration.	Tap the "Revert" button and follow the on-screen instruction
* When you revert the RC9500, all customization items on the remote (macros, learned IR commands,..) are lost permanently. only the settings are remained.		


Getting started


6. Setting Time and Date

When you have installed the battery pack and turned on RC9500, you have to set the current time.




Note Every time you reset your RC9500 you will have to set the time again.

Changing the Time Format

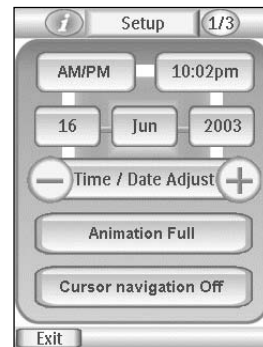- 1 Tap the **INFO**  button in the UPPER TOOL BAR.
The Information page appears.
- 2 Tap the **"SETUP"** button in the Information page. The first Setup page appears.
- 3 Tap the Time Format button toggles between the three time formats:
 - 12 hour (AM/PM): This is the default format
 - 24 hour
 - No time
- 4 Tap Tap the **Left Function**ront button labeled **"Exit"** to exit the Setup page.




Changing the Time

- 1 Tap the **INFO**  button in the UPPER TOOL BAR.
The Information page appears.
- 2 Tap the **"SETUP"** button in the Information page.
The first Setup page appears.
- 3 Tap the Time button in the first Setup page.
The color of the Time button is changed.
- 4 Tap the  and  buttons to adjust the time.
- 5 Tap the Time button again. The new time is set.



Getting Started

- 6 Tap Tap the **Left Function** button labeled "**Exit**" to exit the Setup page.



Changing the Date

- 1 Tap the **INFO**  button in the UPPER TOOL BAR. The Information page appears.
- 2 Tap the "**SETUP**" button in the Information page. The first Setup page appears.



■ To Change the Day

1. Tap the **Day** button in the first Setup page. The color of the Day button is cahnged.
2. Tap the  and  buttons to adjust the day.
3. Tap the **Day** button again. The new day is set.

■ To Change the Month

1. Tap the **Month** button in the first Settings Page. The color of the Month button is changed.
2. Tap the  and  buttons to adjust the month.
3. Tap the **Month** button again. The new month is set.

■ To Change the Year

1. Tap the **Year** button in the first Setup page. The color of the Year button is changed.
2. Tap the  and  buttons to adjust the year.
3. Tap the **Year** button again. The new year is set.


- 3 Tap the **Left Function** button labeled "**Exit**" to exit the Setup page.

Getting Started

7. The Mode Menu

RC9500 provides different modes. For customizing your RC9500 you have to switch to the appropriate mode via the Mode Menu page.









The mode menus are utilized like this:

- 1 Tap and hold the MODE  icon more than 3 seconds in the LOWER TOOL BAR. The Mode Menu page will appear.
- 2 Select the mode you wish to use to customize your RC9500 by tapping the appropriate button on the Mode Menu.




When you operate your devices, RC9500 is in **USE** mode.

For actions other than operating (like learning IR commands, recording macros, adding devices, and so on), you have to switch to the appropriate mode:

	For learning IR commands from other remotes.	(Page 26)
	For labeling buttons, pages and devices.	(Page 30)
	For adding new devices and copying existing devices.	(Page 33)
	For deleting buttons and devices.	(Page 37)
	For changing the order of devices in the device overview.	(Page 39)
	For selecting the commands sending mode IR or RF.	(Page 40)
	For recording and editing macros.	(page 44)
	For Creating and editing timers.	(Page xx)

Getting Started

To switch to another mode

- 1 Tap the label of the mode (i.e. ) you are using in the LOWER TOOL BAR.
The Mode Menu page appears.
- 2 Tap the appropriate mode button you want to use.
The label of the active mode appears in the LOWER TOOL BAR. You can now work in the selected mode.

Note RC9500 will not return automatically to the USE mode. To return to the USE mode, you have to go back to the Mode Menu page and press "Exit" (Left Function button) or press "Cancel" (Right Function button).

8. Adjusting the Touch Screen Brightness

You can adjust the brightness level of the Touch Screen using the buttons on the left side of the RC9500.

The adjust the Touch Screen brightness;

- 1 Press and hold the **BACKLIGHT** button on the left side of the RC9500.
- 2 While still holding the **BACKLIGHT** button, press **Page +** button once to increase the brightness one level up (getting brighter). Or, press **Page -** button once to decrease the brightness one level down (getting darker).
- 3 Release the **BACKLIGHT** button when the brightness is satisfactory. The brightness can be adjusted 4 levels.

Note To adjust the contrast multiple levels, you have to press the Page + or - button multiple times. When you press and hold the Page + or - button, the contrast will only change one level.

Tip In the Setup, you can also adjust the brightness and confirm the brightness level which you selected .

Customizing your RC9500

1. Introduction

It is best to proceed with customizing in several stages. The first stage is to teach all of your existing remote codes to the RC9500. The second stage is to practice using your home theater system with the RC9500. As you gain familiarity with your system, you'll notice that many operations in a home theater require several steps. In the third stage of customization, you will record multiple step operations as either a "Macro" that you can play back with one button push or as a list of numbered steps recorded in a "Help List" device group.

In the next few pages you'll find step by step guidelines on each of the three stages. When a more detailed explanation can be found in the Reference section, we've noted the page.

2. Cloning All Your Existing Remotes

- 1 Gather all of your remote controls in front of you.
- 2 Play with all of the example devices. Compare the devices with your existing remote controls. Can you use any as templates for non-Marantz components?
- 3 Use **DELETE** mode to delete all of the devices that you don't use (see page 37).
- 4 Use **ADD** mode to add the devices for each **Marantz component** (see page 35-36). When you are prompted to add with or without RC codes, choose "**Create with RC codes**".
- 5 Use **ADD** mode to add a devices for each **non-Marantz component** (see page 36). Choose "**Create without RC codes**".
- 6 Switch to **LEARN** Mode to evaluate the page layouts of the new devices.

Customizing your RC9500

- 7 Switch back to **DELETE** mode and delete the device if it is not a good match to your component. Repeat steps 4 through 7 until all of your remote controls have matching devices.
- 8 Switch to **LABEL** mode to relabel each device (see page 30-32).
- 9 Switch to **MOVE** mode to re-order your devices, so that your Device Overview page is arranged the way you want (see page 39).
- 10 Switch to **LABEL** mode to relabel any buttons as needed to match your existing remote controls. Check all of your devices.
- 12 Switch to **LEARN** mode and teach the RC9500 all of your non-Marantz components' RC Codes (see page 26-30).
- 13 Switching back and forth between **USE** and **LEARN** modes, test all codes and reteach as necessary.

Note Be very careful to NEVER delete the jump tabs; they can only be restored with a Editor software using PC. (see page 46-47).

- 14 Switch back to **LEARN** mode. Teach each Device the appropriate Preamp/Receiver Input (source switching) IR command (see page 28) as the Device Action.

Congratulations!

You have completed the first stage of customization. Take a well deserved break.

Customizing Your RC9500

3. Complex Operation? Macro or Help...

If your entire system is new to you, practice using the RC9500 manually for a few days before programming any macros. You'll find that your home theater requires many operations that require multiple steps to do. You have to decide whether to use a:

Macro - The entire operation happens in an automated sequence when you touch one button.

Help List - The operation happens manually but is prompted by large sequentially numbered buttons with friendly labels on one sequence of pages linked together.

Some multiple step operations require you to make decisions before you proceed. An example is turning on a non-Marantz home theater system. Many components turn on and off with a single "Power" button. Before you press a "Power" button, the manufacturer expects you to look at the component to see whether it is on or off. If you want it on and it's off, you press the "Power" button. If you forget to look, and it is already on, you will turn it off when you press the "Power" button. The Remote cannot "look" at your components to see if they are on or off. So, if you recorded a macro intended to power up a non-Marantz home theater, it wouldn't be very reliable.

Here's an example:

Your spouse goes out to the local video store and rents a video tape. When he/she gets home, they pop the tape in the VCR (most VCR's automatically turn on when a tape is inserted). Your spouse touches the macro button you programmed to power up the system. The recorded sequence of "power" buttons is played back. Unfortunately, since the VCR was already on, it is now off and everything else is on. Your spouse sees no picture, assumes the macro didn't work, so he/she touches the button again. This time, the macro turns the VCR on and every thing else off. Frustrating!

Marantz builds components that are "macro-friendly". Instead of a single "power" button, the remote controls have a discrete "On" and a discrete "Off" button. With a Marantz system, you can record a Macro that is very reliable from a series of "On" commands. Take a look at the example ALL ON and ALL OFF macros preprogrammed in the default configuration.

Customizing Your RC9500

The problems don't stop with powering up a system. Often, you will want to construct a macro to watch or listen to a specific source. This may require that both the Television and the Surround Receiver be set to new inputs. Some components have "discrete" commands to select sources (meaning the command will only have one effect on the components, like the CD input on most receivers). Other components have "toggle" commands (these are commands that require you to look at the component, evaluate its state and sometimes issue the command over and over again). An example of a "toggle" command is the Input or TV/VCR button found on many television remote controls. You have to look at the TV, decide that it is on the wrong input, then toggle or scroll through the inputs to select the one you want.

Evaluate each of the multiple step operations you would like to record as macros. If all of the commands in the process are "discrete," the macro will work reliably. If even one command is a "toggle" command, you should program a help list for the operation instead of a macro.

Tip Sometimes there is a reliable way to use toggle type commands in macros. Unfortunately, it will not be written down in your component's instruction manual. You will have to find it through experimentation and imagination. What you are looking for is an "anchor" command that will put your component in a known state. Once it is in a known state, you can use toggle commands in your macro.

An example for Powering Up DVD Players:

Most DVD players will turn on when off when they receive a Play command.

Thus a discrete On command is two steps,

- 1) DVD Play
- 2) DVD Stop

A discrete off command is constructed by:

- 1) DVD Play
- 2) DVD Power

An example for Selecting Source on a TV:

Many televisions will return to a particular input with either a channel up or down command or by selecting a particular channel.

Thus, to construct a macro that selects the EXT1 input:

- 1) Channel Up (selects the Antenna A input)
- 2) Input (toggles to the Antenna B input)
- 3) Input (toggles to the EXT 1 input)

Customizing Your RC9500

4. Programming Help List

- 1 Write a list of all of the actions in the operation you want to record.
- 2 Gather all of the remote controls you will need for the operation.
- 3 Select **ADD** from the Mode menu. Choose "**Copy Existing DEVICE**" when prompted (see page 33-36). In the device list, there is a device labeled "Help". Tap it to add the "Help" device.
- 4 Switch to **LABEL** mode. Relabel the new device currently labeled "Help 1" (for details on relabeling devices, see page 30-32). Try to use a descriptive title like POWER, RECORD, etc.
- 5 Stay in **LABEL** mode. Relabel as many of the buttons on the five pages as you need.

Tip Do not relabel the buttons labeled "Press for More" unless the button is the last step in the operation.

- 6 Switch to **LEARN** mode. Teach each button the appropriate command.
- 7 Switch to **MOVE** mode. Move the new device to the appropriate position in the device list (remember, this determines the button position on Device Overview page).
- 8 Return to **USE** mode and test out your new list.
- 9 You can make as many Help lists as you like. Simply repeat steps 1 through 8 for each operation you would like to program a help list.

Customizing Your RC9500

5. Macro/Page Jump Capability

Macros allow you to send a sequence of commands, jumps, delays and beeps with up to 250 steps using one single touch.

Basically, you can assign any button as a macro button. However, it is recommended that you use the macro buttons in the reserved macro device. However any button can be reprogrammed to be a Macro.

In order to plan your macros, you should understand the capabilities as follows,

Any Button Perform Macros/Jumps

- **You can** program a macro to be played back when a button is selected by pressing a button on a device page or Home page (see page 41).
- **You can** program a macro to be played back when a device is selected by selecting the device via the Device Overview page (see page 42).

Macros Perform Jumps to Any Device

The RC9500 has the unique capability of jumping to any device panel during a macro.

- **You can** make any or all of the 250 steps a jump to any devices. This provides you with the opportunity to give some feedback to the end user while a macro is being played back. *For example: you can reveal the CD device panel to show the user that commands are being sent to the CD player, then jump to an AV Amp panel to show the user that commands are being sent to the amp. (see page 41-42)*
- **You can** Add/Create a Status device (located in new devices in the division named OTHER) and custom label each page to give the end user more specific feedback as to what the macro is doing. You can then program jumps to each Status page to occur during the macro. (see page 33-34)

Customizing Your RC9500

■ **You cannot** jump to any Home page, Device Overview and Page Overview page. You are only allowed to jump to first page of each devices when programming with the RC9500 stand alone.

■ Macros Send Commands To Your System

■ **You can** make any or all of the 250 steps send a remote control command to your system. The step is actually just a recording of the location of any button on any device page. To record an RC command, you simply navigate to the panel and button you want, then touch it. Thus, all RC commands in a Macro must first be taught to a button location first (see page 40-42).

■ **You can** record a "Device Action" which is what the device button on the Device Overview page really does (see page 42).

■ Macros Can Contain Delay and Beep Between Steps

■ **You can** program a Delay/Beep as any or all of the 250 steps of a macro (see page 41).

■ **You can** adjust that delay in 1/10th of a second intervals between 0.1 and 10.0 seconds (see page 41).

Customizing Your RC9500

6. Programming Macros & Page Jumps

You will do all of your Macro/Jump programming within a screen that will appear after you press the **Macro** button on the Mode menu page. Before proceeding with programming, make sure that you understand how to move around in the MACRO mode and how to read the RC9500's shorthand notation for each macro step (see page 40).

- 1 Write a list of all of the actions in the operation you want to record.
- 2 Play with all of the example Macro buttons in MACRO device. Are any of these examples adaptable to your purposes?
- 3 Use **DELETE** mode to delete all of the macro devices that you don't like (see page 38).
- 4 Use **ADD** mode to add a new macro device empty of any programming from the device list (see page 35-36).
- 5 Switch to **LABEL** mode to re-label your macro devices. (see page 32).
- 6 Switch to **MOVE** mode to re-order your macro devices, so that the most commonly used Macro devices are near the top (see page 39).
- 7 Switch to **LABEL** mode and navigate to the your new macro device. Relabel the macro buttons with an appropriate name. The buttons are large so try to imagine a descriptive name even if it requires a few words.
- 8 Switch to **MACRO** mode. Tap the "**Macro to button**" to proceed.

Note If you like to create a macro to the Device button, tap the "**Macro to device**" button instead of the "**Macro to button**" button.

Customizing Your RC9500

- 9 Navigate to your new macro device and press your newly named macro button to enter the MACRO edit page. The MACRO edit page will appear. If you had any previously programmed commands in this button, they will appear for you to edit.
- 10 Working from your written list, navigate to the desired device and page to program all of the steps in the Macro (see page 41).

Commands - When you touch a **button**, you will record an RC command step (see page 41).

Jumps - When you select a device from the Device Overview while holding down the **Left Function** button (now labeled "**Jump**"), you will record a page jump to the first page of that device (see page 42).

Device Action - When you select a device from the Device Overview while holding down the **Right Function** button (now labeled "**Action**"), you will record a Device Action of that device (see page 42).

Delays - When you select a "**Delay**", use the "+" and "-" buttons to set the amount of delay (see page 41).



Beeps - When you select a "**Beep**", you will record a beep (see page 41).

Note Use the **Page + / -** buttons, Device Overview or Page Overview to navigate pages; the Tab buttons will work as a Jump. If you **accidentally** record a Tab button as a macro step, it is better to delete it.

- 11 Once all steps have been programmed, test your macro by tapping the "**Test**" button on the page.

Customizing Your RC9500

- 12 Typically you will need to adjust the timing of the macro. Simply putting in lots of delays will make the macro work, but may make the macro unnecessarily long.

Try moving commands, so that a TV command alternates with another component command before another TV command is issued. To move a command, simply select it and use the  and  buttons to reposition it within the Macro page.

When a delay is added to the macro, the default timing is 0.5 seconds. If the macro works with a 0.5 second delay, try a smaller delay to shorten the macro.

When programming Channel number macros, use 0.1 second delays between different digits and 0.5 second delays between identical digits.

- 13 Once you are happy with the macro, press the **Done** button on the screen to save it.
- 14 Continue to program macros until you have recorded all that you plan.


Congratulations!
You are now a Home Theater Automator!

Reference

1. Learning IR command

You program the RC (Remote Control) commands by transmitting IR (infrared) signals from your existing remote controls to the RC9500's learning eye.

To do this, place the RC9500 and the device's remote control on a flat surface, 1 to 10cm (0.5 to 3.6 inches) apart. With each new remote control, you have to find the correct learning distance.

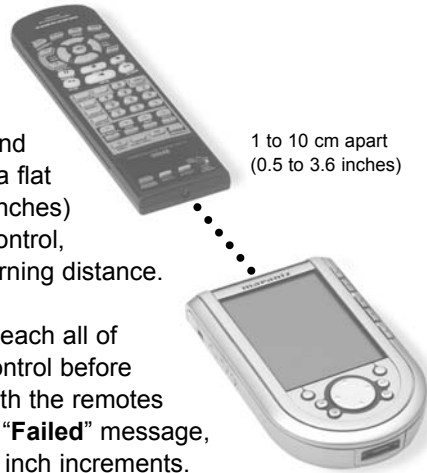



It is best to be systematic and teach all of the buttons from one remote control before proceeding to the next. Start with the remotes close together; if you receive a **"Failed"** message, move them farther apart in one inch increments. Although rare, some component remotes require a very large distance between the sending LED and the RC9500's learning eye.

- Test the first command from any new remote control to find the correct learning distance. Once you have found the correct learning distance, do not change it for any other button on that particular remote control.
- Most commands learn correctly when you press and hold them until the **"OK"** indicator appears. However, sometimes the RC9500 will say **"OK"**, yet the command will not operate the component properly. If this occurs, try re-teaching the command with a brief tap. After a short delay the **"OK"** indicator will appear. Test the code. If this improves operation, continue to use the **"tap"** technique for all other buttons on the remote. The only buttons that you **MUST** use the **press and hold** technique for are buttons that you will press and hold when you are operating the component (i.e. Volume Up/Down, Scan, etc.).
- The following buttons can be programmed: Soft buttons (operation page buttons, device buttons) and Hard buttons.


Reference

- You cannot program the buttons in the Device Overview page directly. You have to program them using “**Learn device action**” function (see page 28).
- The RC9500 also offers empty control panel buttons which you can program and label as existing buttons. They are visible in USE mode as grayed-out.

■ Programming Touch Screen Buttons


- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the “**LEARN**” button to switch to the LEARN mode.
- 3 Select the “**Learn button**” button and then navigate to the device page which contains the button you want to program.
 
- 4 Point the device's original remote control to the RC9500's learning eye as shown on page 26.
- 5 Tap the button you want to program on the RC9500.
“**Learning**” will be displayed on the **DEVICE OVERVIEW** button and the button's color is reversed.
- 6 Press and hold the corresponding button on your device's original remote control.
If the RC9500 has learned the command successfully, “**OK**” appears on the Device Overview button. You can let go of the button you're holding. If the RC9500 has not learned successfully, you hear a short buzz and “**Failed**” appears.
- 7 Program all other buttons you want and relabel them if necessary (see page 30-31).

Reference

- 8 Return to the Mode Menu page by tapping  label in the LOWER TOOL BAR.
- 9 Return to USE mode by pressing the **Left Function** button labeled “Exit” via the Mode Menu page.

Programming The Device Buttons to Switch Sources

Note When you teach a command as a Device Action, this command will be sent when you select the Device from the Device Overview page.
Remember, the only way to NOT issue this command is to reveal the Device Overview page, press and hold the Left or Right Function buttons (now labeled “No IR”) and select the device.

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the “**LEARN**” button to switch to the LEARN mode.
- 3 Select the “**Learn device action**” button.
The Device Overview page appears.
- 4 Complete steps 4 to 9 in “Programming Touch Screen buttons” on page 27. Instead of tapping a button on the Touch Screen, press the Device button you want to program.

Programming Hard Buttons Globally And/Or Locally Per Device

The Hard buttons are defined as the five hard buttons on the right side of the Touch Screen (Channel Up/Down, Volume Up/Down, Mute) and the seven buttons below the Touch Screen (except the **HOME, Left and Right Function** buttons, since you cannot program them).

Note It is *not possible* to teach commands to the HOME, LEFT and RIGHT Function buttons on the remote.
Only via a PC, you can re-program them.

Reference

Hard buttons can be programmed for a device specific command for a particular device on the remote (Programming locally).

Only via PC, hard buttons can be programmed with a global function for all devices (Programming globally).

When a **command is taught** to a hard button **from a device page**, it will only be issued when that device is active, even if a command has been programmed globally. Local learning overrides global programming.

For example: One could program the CH+ & CH- buttons as the Chapter +/- command when the DVD is active. Now, if you program the TV channel +/- globally (and any device other than the DVD is selected) the TV channel +/- commands will be issued.

■ Programming a Hard Button **Locally**


- 1 Switch to the device for which you want to program the button.
- 2 Complete steps 1 to 9 in the programming Touch Screen buttons on page 27 to 28. Instead of tapping a button on the Touch Screen, press the button you want to program.


Reference

2. Labeling Buttons, Pages and Devices

The following elements can be labeled: Buttons on a device page and Home page, Page (the name that appears on the Page Overview page), and Device (the name that appears on the Device Overview button and Device Overview page).

Labeling a Button

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the **"LABEL"** button to switch to the LABEL mode.
- 3 Tap the **"Label button"** button on the page. The last visited page in USE mode appears.
- 4 Navigate to the page contains the button you want to label.
- 5 Tap the button you want to label. The virtual "auto-zooming" mini-keyboard shows up. The button/frame you want to label is displayed above the keyboard.

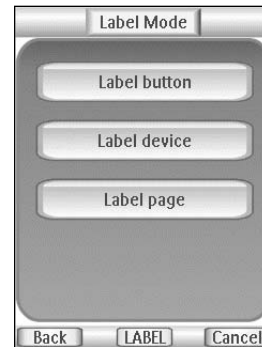

Reference

6 Edit the label.

- To delete a character, press the **Right Function** button labeled **“Delete”**.
- To change the font size, Tap the **“+”** or **“-”** buttons beside the **“Font”** label on the page.
- To enter a character, tap the keyboard near the character you want to use. The keyboard is zoomed in, allowing you to tap exactly the character you need. After you have tapped the character, the keyboard is zoomed out. Repeat this action for every character.



Note You can zoom out again without tapping a character by tapping the **“Unzoom”** button.

- For capital characters and symbols, tap the **“Shift”** button repeatedly to display the keyboard you want.

7 Tap **“Enter”** button to save the changes and return to the page you were at.

-or-

Press the **Left Function** button labeled **“Back”** to return to the page you were at without saving changes.

8 Label all other items you want and return to the Mode Menu page by tapping label in the LOWER TOOL BAR.


9 Return to USE mode by pressing the **Left Function** button labeled **“Exit”**.

Note You cannot label buttons on the Device Overview page directly. You have to label them using **“Label device”** function in the LABEL mode (see page 32).

Reference


Labeling a Device

You can label all devices which are displayed in the Device Overview page.

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the **"LABEL"** button to switch to the LABEL mode.
- 3 Tap the **"Label device"** button on the page.
The Device Overview page appears.
- 4 Tap the device button which you want to label.
- 5 Complete steps 6 to 9 in "Labeling a Button" on page 30-31.

Labeling a Page

You can label all pages which are displayed in the Page Overview page.

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the **"LABEL"** button to switch to the LABEL mode.
- 3 Tap the **"Label page"** button on the page.
The Page Overview page appears.
You can navigate to other device by tapping the **DEVICE SCROLL** buttons .
- 4 Tap the page button which you want to label.
- 5 Complete steps 6 to 9 in "Labeling a Button" on page 30-31.

Reference

3. Adding Devices

If you have a device that is not provided in the Device Overview page, you can add it to the RC9500.

There are two possible ways to add a device:

- **Create New Device**
- **Copy Existing Device**

In the following sections we'll discuss what these options offer you.

■ Description for the Template Device

You will be able to choose from a list of preprogrammed templates "with" or "without" Marantz RC codes.

The Device list box will appear. As you scroll down the list using the Down arrow button, you will notice Device Type Dividers and Devices you can add. Only select the Device to ADD. Although it is possible to ADD the Device Type Divider as a Device, it is not useful. Should you accidentally Add a divider to your device list, delete it.

Device Type Divider
This is not a device template to add; it is simply an indication of the type of device.

Add Mode

Select the Device to Create

- Other ▾ ▲
- Status
- TV Ch.
- Amp ▾
- SR-14/18/20 Amp
- SR9300 Amp
- SR9200 Amp
- SR8300 Amp ▼


Back ADD Cancel

Device Template
When you add this for a Marantz component, you should add "with RC codes". When you plan to teach codes from an existing remote control, add "without RC codes".


With the and arrows, you can scroll through the complete device list.

Reference

Receivers are both A/V Amps and Tuners - Since you typically use the two sections of your Marantz receiver at different times, we have separated them into two devices. You will find the amp section in **Amp** and the Tuner section in **Tuner**.

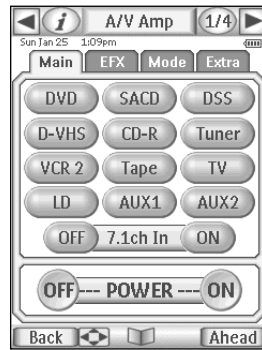

The Marantz SR9300 Receiver is actually two templates: The SR9300 AMP template for all Preamp/Surround functions and the SR9300 Tuner template for all Radio functions.

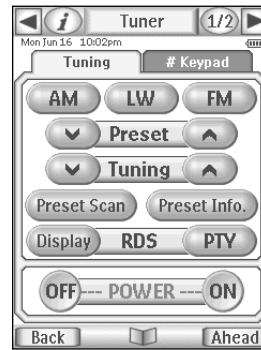


All of the devices are shown Marantz model number with the exception of the first division, called "Other." Below the "Other" division are three device templates that are meant for other purposes.

STATUS - This template is used to provide status screens you can jump to during a macro. Five pages are created with the device name "Status." If you add additional Status devices, they will be named Status2, Status3, Status4 and so on. Each page is named according to its numbered position (1/5, etc.), so that if you are editing a macro, you will know which panel you have jumped to.



Status panels help your family hold the remote steady during long complex macros.

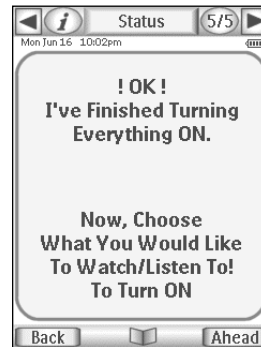

Reference

HELP - This template is used to create a Help List that will help users through a multiple step process that cannot be reliably programmed as a macro. See page 18-20 for more information about help lists.




Help List panels are a good way to help casual users through a long operation with lots of steps.



DSS - Since Marantz does not make a DSS receiver, we included a template. Simply teach the RC9500 from your original remote.

■ Creating a New Device Step by Step

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the **“ADD”** button to switch to ADD mode.
The RC9500 displays the following choices:
 - **Create New DEVICE**
 - **Copy Existing DEVICE**
- 2 Tap the **“Create new device”** button on the screen.
- 3 Tap the device you want to add from the device list box.



Reference


4 You can add the device with or without RC codes.

- **Create with RC codes:** Choose this option if you have the exact Marantz component listed. The new device is added with operational buttons.
- **Create without RC codes:** If you choose this option, the new device is added with greyed-out buttons. Program them using LEARN and LABEL mode.

Note When you add a device without RC codes, all buttons are visible as grayed-out.

By experimentally adding devices and inspecting them in USE mode, you can decide which is the best match to your component and delete the ones not used.

Tap the button of your choice.
The new device will be automatically displayed once you return to USE mode.

5 Add all other devices you want and return to the Mode Menu page by tapping  label in the LOWER TOOL BAR.

6 Return to USE mode by pressing the **Left Function** button labeled **“Exit”**.

■ Copy Existing Device

Tap the **“Copy existing device”** button in the ADD mode page to copy a device that is already active.

TIP It is often useful to have two almost identical devices for your Television. The only difference between the two is one would have the Vol+ and Vol- Direct Access buttons programmed locally with the televisions internal volume + and - commands. Label this device TV Only (for use late at night without Surround Sound). The other TV device has no programming in its Direct Access buttons; as a result, the surround receiver's Vol+ and Vol- (programmed globally on the Home panel) is issued when the TV device is selected.


Reference

4. Deleting Buttons and Devices

You can delete the Buttons in device pages and the Device itself.

Note Left, Right Function, Home buttons, Pages and Frames (texts with non-button function) can not be deleted.


Deleting a Button

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the **"DELETE"** button to switch to the DELETE mode.
- 3 Tap the **"Delete button"** button.
- 4 Navigate to the page that contains the button you want to delete.
- 5 Tap the button you want to delete.
- 6 Tap **"Yes"** to delete or **"No"** to cancel. The label **"Undo"** appears above the **Right Function** button when you have deleted the button.




Note By pressing the "Undo" function button, the button you just deleted is restored.

The result depends on the element you are deleting:


- **Soft buttons (Touch Screen button):** The button disappears from the display.
 - **Hard buttons:** The button becomes inactive.
- 7 Delete all the buttons you want and return to the Mode Menu page by tapping  label in the LOWER TOOL BAR.
 - 8 Return to USE mode by pressing the **Left Function** button labeled **"Exit"**.

Reference

■ Deleting a Device

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the **“DELETE”** button to switch to DELETE mode.
- 3 Tap the **“Delete device”** button.
The Device Overview page appears.
- 4 Tap the device name you want to delete.
- 5 Tap **“Yes”** to delete or **“No”** to cancel.
The label **“Undo”** appears above the **Right Function** button when you have deleted the device.




Note By pressing the “Undo” function button, the device you just deleted is restored.


- 6 Delete all the devices you want and return to the Mode Menu page by tapping  label in the LOWER TOOL BAR.
- 7 Return to USE mode by pressing the **Left Function** button labeled **“Exit”**.

Reference

5. Moving Devices

You can change the order of device buttons in the Device Overview pages.

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the **"MOVE"** button to switch to the MOVE mode.
The RC9500 displays the Device list box.
- 3 Tap the device name of your choice.
The dot next to the selected device name is highlighted.
- 4 Tap the Move  and  buttons below the Device list box to move the device up or down.
- 5 Tap the **"Done"** button to save the changes.
You return to Mode Menu page.

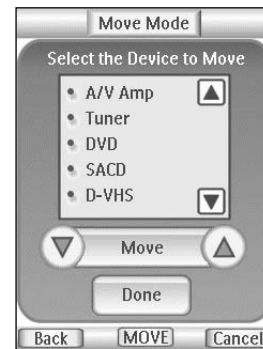

Reference

6. Programming Macros

Macro Page Notation

Before you begin to program a Macro, study the notation used in the MACRO mode. Each type of action has its own notation.

DVD
- When only a device name is listed, the macro step will be a Device Action (the action that occurs when the Device is selected, which is typically the receiver/preamp's source selection or input command).



AMP - ON - When a device name and a button name are listed, that particular button's IR command will be issued.

GO: DVD Main
- A Go command indicates a panel jump. In this case, "TV" means a jump to the TV device and Main is the name for the particular panel (sometimes panels just have numbers, not names).

DVD-■
- A device name and the Stop symbol means that this particular button's IR command will be issued. The symbol list can be found on page 54.




Adjusting Delays
- When a delay is "Selected," you can adjust the delay with the + and - buttons.

Delay
- A delay counts as one of the 250 macro steps. Delays can be adjusted in 0.1 second intervals to be any value between 0.1 second to 10.0 seconds.

Beep - A beep counts as one of the 250 macro steps. Useful to notify when the macro execution is finished

Reference

Recording a Macro to a Operation Button Step By Step

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the **"MACRO"** button to switch to MACRO mode. The RC9500 displays first Macro mode page.

- 3 Tap the **"Macro to BUTTON"** button to proceed to the next step.

- 4 Navigate to the device and the page that contains the button for which you want to create a macro.

- 5 Tap the button you want to create a macro. If the selected button cannot be used for a macro, you hear a beep which signifies a failure.



- 6 Tap the **"Add"** button to enter the sequence of commands in a macro. You can navigate to whatever control page you want, just as you do in USE mode except using Tab buttons. When you have selected the sequence, the RC9500 back to the Macro edit page.
- 7 Tap the **"Delay"** button to enter the delay in a macro. The delay is added in the macro list. You can adjust the delay time by pressing "+" and "-" buttons beside the list box.
- 8 Tap the **"Beep"** to enter the beep in a macro. The Beep is added in the macro list.
- 9 Tap the **"Test"** button to try if the macro performs properly.
- 10 Tap the **"Done"** button to finish the macro if it performed properly. By pressing the **Right Function** button labeled **"Cancel"**, you can cancel creating a macro.

Reference

There are two extra commands you can record as any step in a macro;

Recording a Device Action (Source or Input Switching)


To record a Device Action containing a source switching command, open the Device Overview page, hold down the **Right Function** button (labeled “**Action**”) and tap the device you want to record the device action. This action places the entire Device Action in the Macro.

Note If a macro has been recorded as a Device Action, you can include all of it as a single step in another Macro, effectively nesting one macro inside another.

Recording a Jump to a Device page

To jump to any device, open the Device Overview page, hold down the **Left Function** button (labeled “**Jump**”) and tap the device you want to jump to. This action places the jump to the selected device’s main page in the Macro.






Recording a Macro to a Device Button Step By Step

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the “**MACRO**” button to switch to MACRO mode.
The RC5400 displays first Macro mode page.
- 2 Tap the “**Macro to DEVICE**” button to proceed to the next step.
The Device Overview page appears.
- 3 Tap the device you want to program a macro.
- 4 Complete steps 6 to 10 in “Recording a Macro to an Operation Button” on page 41.

Reference

■ Editing Macros

You can edit any macro you have recorded.

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the **"MACRO"** button to switch to MACRO mode. The RC5400 displays first Macro mode page.
- 3 Tap the **"Macro to button"** button if you want to edit the macro for the operation button, or **"Macro to device"** button for the device to proceed to the next step.
- 4 Navigate to the device and the page that contains the button you want to edit a macro.
- 5 Tap the button which holds the macro you want to edit. The "Macro edit" page appears.
- 6 You can **move** or **delete** the listed commands, or you can **add** new commands.
 - Tap **"Add"**
 - Browse to the page, choose button
 - Use the arrow buttons  and  to move the command to the right place
- 7 You can also add **delays** and **beeps** to the macro (for example, to insert a short pause between turning on a device and sending commands to it, allowing the device to warm up). Delay timing can be adjusted:
 - Tap a delay.
 - Tap  or  buttons beside the list box to decrease or increase the length of the delay.
- 8 Press the **"Test"** button to check if edited macro performs properly.
- 9 Tap **"Done"** to store and finish editing.

Reference


7. Creating and Editing Timers


With the Timer Mode, you can define actions to be carried out at predefined times.

For instance, you can switch on the lights or program your VCR to record your favourite daily TV-show.

Note When a timer is executed, you will hear a double beep and a Timer message appears on screen. If RC9500 is performing another task (sending out IR codes, testing a macro, ...) when a timer is due to be executed, RC9500 first continues performing the current task.

Activating Timers

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the "**TIMER**" button to switch to the TIMER mode.
- 3 Tap "Go" button to proceed to the next step.
The Timer List page appears.
- 4 Tap the check box **XX** in front of the timer that you want to activate.
The color of the check box is changed and the timer is activated.
- 5 Tap "**OK**" button In the Timer list page or "**TIMER**" label in the **LOWER TOOL BAR**.
The Timer List page closes and the Mode menu page appears again. The Timer icon appears next to the time indication.
-or-
Press the Left Function button labeled "Back" to return the Mode Menu page without activating the timer.

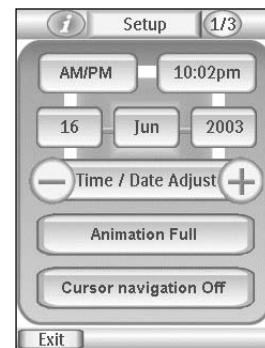


Reference

- 6 Return to USE mode by pressing the **Left Function** button labeled **"Exit"**.

Note In the Timers list, activated timers are displayed first, followed by the notactivated timers. Both activated and not-activated timers are listed chronologically.

Adding a Timer

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.

- 2 Tap the **"TIMER"** button to switch to the TIMER mode.

- 3 Tap "Go" button to proceed to the next step. The Timer List page apperas.

- 4 Tap **"Add"** button to add a new timer to the list.

A new timer is added to the Timers list.

By default, a new timer is labelled Timer and a number. It has no start and stop actions defined.

- 5 To label the timer, tap **"Label"** button, as described in 'Labelling a Timer' on page XX.

- 6 To define the start and stop actions for the timer, tap **"Edit"** button, as described in 'Editing a Timer' on page XX.


- 7 Tap **"OK"** button In the Timer list page or **"TIMER"** label in the **LOWER TOOL BAR**.

The Timer List page closes and the Mode menu page appears again. The new timer is added.

-or-


Press the **Left Function** button labeled **"Back"** to return the Mode Menu page without adding the timer.

- 8 Return to USE mode by pressing the **Left Function** button labeled **"Exit"**.

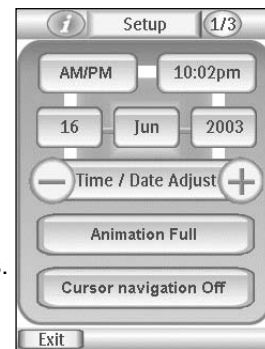


Reference

■ Deleting a Timer

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the "**TIMER**" button to switch to the TIMER mode.
- 3 Tap "**Go**" button to proceed to the next step.
The Timer List page apperas.
- 4 Tap the label of the timer you want to delete.
The color of the selected timer is changed.
- 5 Tap "**Delete**" button in the Timer List page.
The Message page appears.
- 6 If you really want to delete, tap "**Delete**" button in the Message page.
The timer is deleted from the list.
- 7 Tap "**OK**" button In the Timer list page or "**TIMER**" label in the **LOWER TOOL BAR**.
The Timer List page closes and the Mode menu page appears again. The timer is deleted.
-or-
Press the Left Function button labeled "Back" to return the Mode Menu page without deleting the timer.
- 8 Return to USE mode by pressing the **Left Function** button labeled "**Exit**".Deleting a Timer

■ Labeling a Timer


The default name for a timer is 'Timer' followed by a number, for example Timer 5.


- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the "**TIMER**" button to switch to the TIMER mode.

Reference

- 3 Tap **"Go"** button to proceed to the next step.
The Timer List page appears.
- 4 Tap the label of the timer you want to label.
The color of selected timer is changed.
- 5 Tap **"Label"** button in the Timer List page.
The Labelling page appears.
- 6 Label the timer as described in "Labelling buttons, Pages and Devices" on page XX.
- 7 When you finish labeling, tap **"Enter"** button in the Labelling page.
The Timer List page appears again and the timer is relabelled.
- 8 Tap **"OK"** button in the Timer list page or **"Timer"** label in the **LOWER TOOL BAR**.
The Mode Menu page appears again.

Editing a Timer

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the **"TIMER"** button to switch to the TIMER mode.
- 3 Tap **"Go"** button to proceed to the next step.
The Timer List page appears.
- 4 Tap the label of the timer you want to edit.
The color of selected timer is changed.
- 5 Tap **"Edit"** button in the Timer List page.
The Editing Timer page appears.

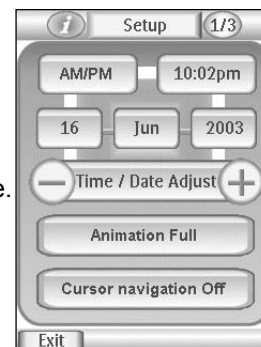

Reference



- 6 To edit the timer, execute the following steps:
 1. Set the **Start Date**.
See 'Setting the Start Date' on page XX for more information.
 2. Set the **Start Time**.
See 'Setting the Start Time or Stop Time' on page XX for more information.
 3. Define the **Start Action**.
See 'Defining the Start Action or Stop Action' on page XX for more details.
 4. Set the **Stop Time**.
See 'Setting the Start Time or Stop Time' on page XX for more information.
 5. Define the **Stop Action**.
See 'Defining the Start Action or Stop Action' on page XX for more details.
 6. Define the **Repeat Settings**.
See 'Defining the Repeat Settings' on page XX for more information.
- 7 Tap "**OK**" button in the Editing Timer page.
The timer settings are defined. The Timer List page appears again.
- 8 Tap "**OK**" button In the Timer list page or "**Timer**" label in the **LOWER TOOL BAR**.
The Mode Menu page appears again.


Reference

Setting the Start Date



When you add a new timer, the Start Date is the current date by default. The Stop Date is calculated automatically based on the Start Date, the Start Time and the Stop Time.

To change the Start Date:

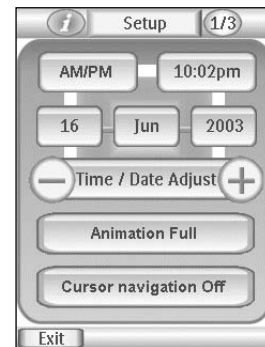- 1 Tap the **Day** button in the Editing Timer page.
The color of Day button is changed.
- 2 Tap the  and  buttons to adjust the day.
- 3 Tap **Day** button again.
The Day is set.
- 4 Repeat step 1 to 3 for **Month** button.
The Start Date is set.



Setting the Start Time or Stop Time

- 1 Tap the "**Start Time**" button or "**Stop Time**" button in the Editing Timer page.
The color of the Start Time button or Stop Time button is changed.
- 2 Tap the  and  buttons to adjust the time.
- 3 Tap the **Time** button again.
The new Start Time or Stop Time is set.

Note If the Stop Time lies before the Start Time, the Stop Date automatically jumps to the next day.


Reference

Defining the Start Action or Stop Action

RC9500 uses a similar procedure to define the Action List for the Start Action or the Stop Action of the selected timer as in the Macro Tool. See 'Creating and Editing Macros' on page XX for more information.

Example Some examples of timer actions are: switching on your lights at a specific time

- 1 Tap the "**Start Action**" button or "**Stop Action**" button in the Editing Timer page.
The Macro edit page appears.
- 2 Tap "**Add**" button in the Macro Edit page.
The last visited page appears again.
- 3 Navigate to the Device and the Page that contains the button you want to add to the macro.
- 4 Tap the button you want to add to the action list of the timer.
The Macro Edit page appears.
The action of the selected button is added at the bottom of the Action List.
- 5 Tap "**OK**" button in the Macro Edit page.
The Start Action or Stop Action is defined.
The Editing Timer page appears again.

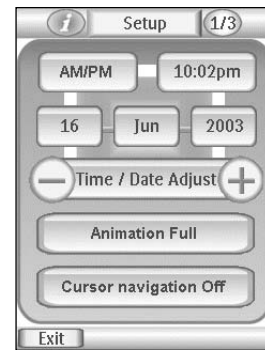

Defining the Repeat Setting

If you want the timer to repeat itself on more than one occasion, you can use the repeat settings.

- 1 Tap "**Repeat Settings**" button in the Editing Timer page.
The Repeat Settings page appears.

Reference


2 Tap the repeat toggle button "**No**".

By default 'No' is selected.

The **Repeat** button toggles between the three settings:

- No: This is the default setting
- Daily
- Weekly

1. To change the setting to "**Daily**", tap the button again.
Every day of the week is automatically selected.
2. If you want to set an end date for the repeating timer, select the End Date check box.
The End Date is enabled.
3. Define the End Date, as described in 'Setting the Start Date' on page XX.
The End Date is defined.

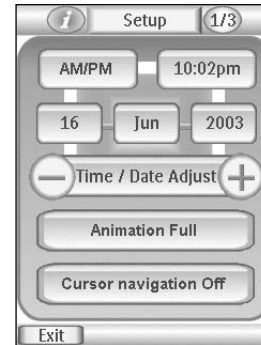

-or-

1. To change the setting to "**Weekly**", tap the button again.
The current day is selected.
2. Select or deselect the different days of the week on which the timer has to be executed.
3. If you want to set an end date for the repeating timer, select the End Date check box.
The End Date is enabled.
4. Define the End Date, as described in 'Setting the Start Date' on page XX.
The End Date is defined.

-or-

1. To change the setting to "**No**", tap the button again.
The timer will not be repeated.

3 Tap "**OK**" button in the Repeat Settings page.


The Editing Timer page appears again. Feedback about the repeat settings is provided below the "**Repeat Settings**" button.

Reference

8. Using the RC9500 with Radio Frequency


Warning To use the Remote Control with Radio Frequency (RF) you need an **Marantz RX-77 RF Extender**. This is an **optional accessory** for the RC9500.

By default, the RC9500 uses infrared (IR) signals to operate devices. This means that you have to point the RC9500's IR sending eye towards the devices you're operating. IR signals have an operating distance of approximately 10 meters (33 feet).

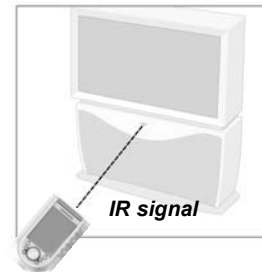

You can choose to operate devices using **Radio Frequency (RF)** signals instead of IR signals. RF signals can, unlike IR signals, go through obstacles like furniture or walls.


The RF signals sent out by the RC9500 are picked up by the **RX-77 RF Extender**. The RX-77 translates the RF signals in IR signals and sends the IR signals to the appropriate devices. Therefore, the RX-77 has to be placed near the devices you're operating with the RX-77's sending eye pointed to the device.

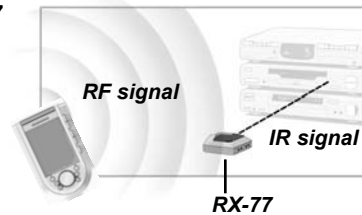

Your devices will always receive IR signals either directly from the RC9500 or from the RX-77.


Changing the IR / RF Settings

All devices are set up by default to work with IR signals. To be able to operate one or more devices with RF signals, you have to change the RC5400's IR/RF settings for those devices.

- 1 Tap and hold the **MODE**  icon in the LOWER TOOL BAR more than 3 seconds. Mode Menu page appears.
- 2 Tap the "IR / RF" button to switch to IR/RF Setting mode. The RC9400 displays the device list box.

Reference

- 3 Select the device for which you want to change the IR / RF settings.
The IR / RF setting page appears.
The reversed color button labeled “**IR**” indicates that the selected device is currently operated with IR signals.
- 4 Tap “**RF**” button. The IR/RF settings for the selected device are changed from IR to RF.

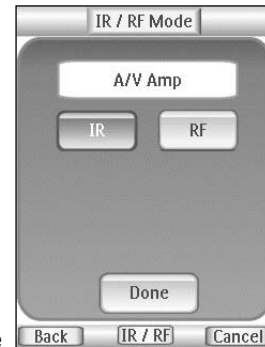




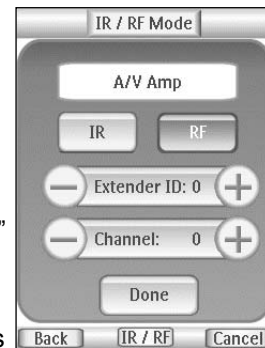
When you have **several RX-77s** to operate devices, you have to assign the correct **Extender ID** to the selected device. Continue with **Step 5**.

-or-

When you have only **one RX-77**, you can accept the default settings for the Extender ID and the Channel. Skip to **step 6**.

Note The ID on the RF Extender has to match the Extender ID on the Remote Control.

- 5 Press  and  buttons beside the **Extender ID** label to change the Extender ID number.
The RC9500 offers 16 Extender IDs.
- 6 Tap “**Done**” to save the IR/RF settings for the selected device or Press the **Right Function** button labeled “**Cancel**” to return without changing the IR/RF settings for the selected device.
- 7 Repeat instructions 1 to 3 for all devices for which you want to change the IR/RF settings.
- 8 Tap  label to return to the Mode Menu page.
The RC9500 is configured to operate the devices you have set with RF signals.
- 9 Return to USE mode by pressing the **Left Function** button labeled “**Exit**” and try out the devices for which you just changed the IR/RF settings.



Note It is possible that a device does not respond properly when operated with RF signals. In that case, you have to reconfigure the Remote Control to operate the device with IR signals again.

Reference

Choosing Another Channel

When you notice RF interference or unreliable operation you should try choosing another channel to operate your devices.

Note All devices you want to operate with RF signals use the same channel. If you choose another channel for one device, the Remote Control will automatically change the channel for all devices that work with RF signals.

- 1 Switch back to IR / RF mode. The Device list box appears.
- 2 Select a device that is set with RF signals.
The IR / RF setting page appears.
- 3 Tap the "+" and "-" buttons beside the **Channel** label to change the Channel number.
The RC9500 offers 4 RF Channels.

Note The Channel (CH) on the RF Extender has to match the Channel on the Remote Control.

- 4 Tap the **"Done"** button to finish.

9. Software

If you want to personalize your RC9500 even more, beyond its standard programming features, **Wizz.it 9** is the tool for you to use. **Wizz.it 9** is the RC9500's companion software that you can download from the following internet address;
<http://www.marantz.com>

With **Wizz.it 9**, you can;

- Add, delete, move and modify control pages, devices and commands anywhere on the touch screen.
- Save, duplicate and share configuration files, codes or devices with other RC9500.
- Preview new configuration files on **Wizz.it 9 Simulator**. In this way you can check how the RC9500's interface will look like.

Reference

- Upload and download new configurations to and from your RC9500. You do this with the USB cable supplied with your RC9500 connected to the USB port on the left side of the remote.

Connect the USB cable to the port above the Page + button



- Convert the RC9200/5200/5000's configuration files (.ccf) for your RC9500.
- Import new graphics to create new buttons and designs.
- Personalize configuration files to optimize the use of your RC9500.
- Programming the macro easily.
- Customize the system area and make the whole Touch Screen to your operation area.
- Share your work with other enthusiasts on the internet.
- Create animated slide shows using your own photos or art.

Internet Fun

A community of enthusiasts helping each other to learn how to use PC's to configure their remote controls exists at;

www.remotecentral.com

PC Requirements

- Windows 98SE/ME/2000/XP
- 64 MB of RAM
- 75 MB of free hard disk space
- Free USB port

Maintaining Your RC9500

■ Important Notice

■ Take care not to scratch the Touch Screen

Use your finger to tap the Touch Screen or use plastic-tipped pens intended for use with other touch screen products. Never use an actual pen, pencil or other sharp object on the Touch Screen.

■ Protect the RC9500 from extreme temperatures

Keep the RC9500 away from heaters and other heat sources.

■ RC9500 is NOT waterproof

RC9500 should not be exposed to rain or moisture. Do not store or use the RC9500 in any location that is extremely damp or wet. When you have spilled water on the RC9500, you have to take out the batteries and let the RC9500 dry for 48 hours before you place the batteries back. When you have spilled other liquids like coffee on the RC9500, you can clean it with distilled water.

IMPORTANT: Make sure no water gets into the housing.

■ The Touch Screen of the RC9500 contains a glass element

Do not drop the RC9500 or subject it to any strong impact.

■ Cleaning the RC9500

Use a clean, soft and damp cloth to clean the RC9500.

If the Touch Screen is soiled, clean it with soft cloth moistened with diluted window-cleaning solution. Do not use a corrosive detergent or an abrasive sponge. Avoid the use of abundant water.

Troubleshooting

General Problems

The display is blank

- Tap the screen to make sure the RC9500 is turned on.
- Adjust the screen contrast using the buttons on the left side (page 15).
- Make sure the batteries are properly installed (page 4).
- Recharge the battery pack using the docking station (page 5).

The display is too light or too dark

- Adjust the screen contrast using the buttons on the left side (page 15).

The RC9500 shuts itself off

- This is a feature of the RC9500 to save power. You can change the length the RC9500 stays on in the Setup (page 13).

Devices do not respond to commands from the RC9500

- Make sure the RC9500 is in USE mode (page 7).
- Make sure the RC9500's IR sending eye is pointed towards the device you're operating.
- Check if the Low Battery icon appears. If so, recharge the battery pack using the docking station.
- Check if the button you are trying to use is programmed properly (page 18).
- Check if your device understands these particular Marantz infrared codes. Re-add the device with the correct model number (page 33).

The RC9500 beeps 4 times after inserting the batteries

- Use the **Firmware Updater** to update the RC9500's software. The Firmware Updater file will be provided from our website.

Troubleshooting

■ Programming Problems

Hard buttons are not sending the correct commands

- Check whether the button is programmed per device or globally (page 28). The MACRO mode is useful to confirm the programmed commands for buttons (page 43).

Macros or Tab Style Jump buttons do not work

- Make sure the RC9500's IR sending eye is pointed towards the device the entire time the macro is being executed.
- Insert delays to allow devices to start up properly (page 41).
- Check that you have included greyed-out buttons in your macro.
- Check that you haven't reprogrammed the buttons. Macros do not store commands, they store button locations. If you relearn a button, the macro will execute the newly learned code, not the code that you taught to the original button.

The RC9500 won't learn, edit, label or delete commands

- Make sure your devices are positioned as shown on page 26. Avoid programming the RC9500 under bright fluorescent light, it might affect the infrared signals.
- If the buttons in the Mode menu page do not respond, the configuration file might be protected to prevent unwanted changes. You cannot modify or delete commands for on the RC9500. the protection for the configuration file has to be released by using **Wizz.it 9**.
- Make sure the button you want to edit has a border. Text frames cannot be programmed with commands.

The RC9500 won't switch the modes

- When the batteries are low, the RC9500 prevents you from switching to customizing modes so that no customization can get lost. Recharge the battery pack (page 5).

The RC9500 is low on memory

- The RC9500 displays a message to clean up the memory. Please delete unnecessary devices, macros and learned commands as many as possible manually.

Warning **DO NOT REVERT** the RC9500. When you revert the RC9500, all customization which you made is lost permanently and the RC9500 goes back to the default configuration.

Troubleshooting

The TV goes blank or the input source changes

- The Device Overview page item might be programmed to switch the input source. Select the device without issuing IR codes (page 8).

The configuration file is corrupted

- When this very unlikely event occurs, you can use **Wizz.it 9** to upload a new configuration file. Taken into account that all your customized commands, devices, and macros will be lost and you will have to reprogram your RC9500. The “**Rivert**” function on the third Setup page is also available to get the smaller size of the default configuration file.

Error messages

- If one of the following error messages occurs, please contact your Marantz authorized dealer or Marantz customer service:
 - Can't open configuration file
 - Configuration file error
 - No configuration file found
 - Invalid configuration file version

Tip The bulletin boards and friendly users at www.remotecentral.com can often give you help with problems on weekends or in evenings when your Marantz authorized dealer or Marantz technical support may not be available.

Recharging Problems

The batteries won't recharge

- Make sure you are using the rechargeable battery pack and the docking station (DS9500) supplied with your RC9500.
- Make sure the battery pack is installed properly in your RC9500 (see page 4).

The indicator light on the docking station flashes

- Check if the contacts on the docking station are clean and free of obstructions.
- Make sure the RC9500 lies properly on the docking station.
- Make sure the battery pack is installed properly (see page 5).

Frequently Asked Questions

Can I program a device button to execute more than one command?

Yes, you can. You can program a macro to the device button in the MACRO mode. (see page 42).

How do I program source switching?

See "Programming The Device Buttons ..." on page 28.

How can I edit buttons which are programmed macro on Device overview pages?

You can do this using "Macro to device" function via the MACRO mode. (page 43).

How can I label buttons on Device overview pages?

You can do this using "Label device" function via the LABEL mode. All changes you make to these items are automatically updated in the Home page (page 32).

How can I delete buttons on Device overview pages?

You can do this using "Delete device" function via the DELETE mode. All changes you make to these items are automatically updated in the Home page (page 38).

How do I reset the RC9500?

Normally, you never have to reset the RC9500. However, if the RC9500's display freezes or if you notice unusual behavior, you might need to reset the RC9500. You will not lose any saved programmed commands or macros.

Carefully press the reset button near the battery connector inside the battery compartment of the RC9500 with a paperclip or sharp pencil. The RC9500 restarts and beeps to indicate it is ready for use.



Can I revert to the original configuration?

Yes, by using the "Revert" function on the third Setup page or **Wizz.it 9** with Windows PC. By using **Wizz.it 9**, once the program is installed, open a configuration file named "**RC9500_default**" in C:/Program Files/Wizzit9/Samples. Downloading this configuration to your RC9500 will restore your RC9500 to its factory state except the setup items.






























Frequently Asked Questions

How do I calibrate the Touch Screen?


























The RC9500 is calibrated when it leaves the factory, so normally you do not have to calibrate it yourself. It is possible that the RC9500 displays a message to calibrate the Touch Screen. If this message appears do the following.

- 1 Tap the **INFO**  button in the Upper Tool Bar.
The information page will appear.
- 2 Tap the "**SETUP**" button in the Information page.
The first Setup page appears.
Navigate to third Setup page by using the **Page +** and **Page -** buttons.
- 3 Tap the "**Calibration**" button.
- 4 Tap as close as possible the marker in the upper left corner using a blunt tip of a pencil.
You will see the instruction "**Touch TOP LEFT corner**".
- 5 Tap as close as possible the marker in the upper right corner using a blunt tip of a pencil.
You will see the instruction "**Touch BOTTOM RIGHT corner**".
- 6 Tap as close as possible the bottom right corner using a blunt tip of a pencil.
You will see the message "**Calibration succeeded**".
- 7 Return to USE mode by tapping the **INFO**  button again or press the **Left Function** button labeled "**Exit**".

Overview of Symbols

	Pause
	Stop
	Play, Normal run, normal speed
	Reverse Play, Normal run, normal speed
	Fast Forward, Scan Forwards, Fast run, fast speed
	Rewind, Scan Backwards, Fast run, fast speed
	Slow Motion Forwards, Slow run, slow speed
	Slow Motion Backwards, Slow run, slow speed
	Eject, Open/Close
	Record, general
	Key, Lock
	Navigate in the direction of the arrow
	Still mode, Freeze Frame
	Autoreverse a tape, Tape running direction
	Next track, Next chapter, Next song
	Previous track, Previous chapter, Previous song
	Fast forward to index
	Rewind to index
	Frame by frame, general
	Frame by frame, general
	Subtitle
	Cancel picture
	Picture-in-picture mode
	Menu
	Picture-in-picture shift
	Picture-in-picture swap
	Multi-picture display
	Picture-in-picture select
	Teletext mode

Overview of Symbols

	Page number up
	Page number down
	Page enlargement
	TV and text mixed
I-II	1st or 2nd language
P4P	Last view, previous program
	Power, Stand-by
	Zone focus: long distance
	Zone focus: very short distance
+/-	Single or multi-digit selection
	Brightness, brilliance
	Contrast
	Brightness/contrast
	Color saturation
	Lamp, lighting, illumination
	Split screen freeze / double screen freeze
	Split screen swap / double screen swap
12	Split screen / double screen
	Movie expand
	Personal preference
	Picture-in-picture freeze
	Main index page
	Picture freeze
	Programmable timer, general
	Tracking
	Application assistance
	Actual time on screen
	EPG / Electronic Program Guide
	Video output

Specifications

Display	64k color 3.8" TFT touch screen LCD 320x240 pixels (QVGA) resolution White LED backlighting for LCD and Blue LED for hard buttons
Interface	USB 1.1-port for PC connection
Infrared (IR)	Sending LED (x4) and learning LED (x1) Operating distance of approximately 10m (33 ft) Learns from the vast majority of remotes with a carrier frequency of up to 78 KHz and 455 KHz (most Bang & Olufsen commands can be learned)
Radio frequency (RF)	Operating distance of approximately 20m (66ft) in open-air condition Carrier frequency: 418 MHz (for US), 434MHz (for Europe) *The distance may vary depending on the surrounding conditions.
Memory	16MB non-volatile flash memory (software upgradeable to 48MB)
Batteries	NiMH rechargeable battery pack
Software	Dynamic, animated interface Editable macros (up to 250 commands per macro) Built-in Marantz components codes Total number of devices and macros limited only by memory
Power management	Power On: By tapping the Touch Screen, by pressing buttons, by picking up the RC5400 Power Off: Auto shut off by adjustable timer
Dimensions	6inch x 3.5inch x 1.2inch (153mm x 90mm x 33.5mm)
Operating temperature	41°F to 113°F (5°C to 45°C)
Accessories	USB cable for PC connection NiMH 4.8V Rechargeable battery pack DS9500 Recharging docking station AC to DC power adapter for docking station
Option	<i>RX-77 RF Extender</i>

Index

A

Activating 6
 Pickup sensor 6, 14
 ADD mode 33
 Switch Modes 15
 AMPS 34
 Copy Existing Device 33
 Create New Device 33
 Device Template 33
 Device Type Divide 33
 DSS 35
 Help 35
 Receivers 34
 Status 34
 TUNERS 34
 With RC Codes 36
 Without RC Codes 36
 Adjusting
 Contrast 15
 Delay 20, 40
 Animation 13
 Auto Backlight 6, 13

B

Backlight Button 2, 3
 Backlight Timeout 13
 Battery 4
 Battery Compartment 5
 Battery Cover 5
 Battery Pack 5
 Charging 5
 Docking Station 4
 Low Battery Icon 5
 Beep
 Button 13
 Macro 22, 40
 Screen 13

Button 2

4-Way Cursor 2, 11
 Backlight 2, 6
 CHANNEL 2, 11
 Cursor Navigation 3
 Device Overview 3
 Device Scroll 3
 ENTER 2, 11
 EXIT 2, 11
 Function 2
 Hard Buttons 11
 HOME 2, 11
 INFO 3
 MENU 2, 7
 Mode icon 3, 7
 MUTE 2, 11
 Page + 2, 10
 Page - 2, 10
 Page Overview 3
 Soft buttons 11
 VOLUME 2, 11

C

Calibrate 53
 Calibration 13
 CHANNEL Buttons 2, 11
 Charging 5
 Choosing Channel 46
 Cleaning 48
 Cloning 16
 Command 24, 41
 Configuration File 46
 Contrast 15
 Copy Existing Device 33
 Create New Device 33
 Cursor Navigation 9, 13
 Cursor Navigation Button 3

Index

D

Day 13
 Delay 22, 40
 DELETE Mode 37
 Button 37
 Device 38
 Undo 37
 Device Action 8, 24, 42
 Device Menu 13
 Device Overview Button 3
 Device Overview Page 8
 Device Scroll Buttons 3
 Device Scroll 9
 Device Template 33
 Device Type Divider 33
 Discrete Command 19
 Docking Station 4
 Download 47
 DSS 35

E

Edit Software 46
 Editing 43
 ENTER Button 2, 11
 Error Message 51
 EXIT Button 2, 11
 Extender ID 45

F

FAQ
 Calibrate 53
 Original Configuration 52
 Reset 52
 Font Size 31
 Free Memory 12
 Function Buttons 2

G

General Problem 49
 Globally 28
 GO 40

H

Hard Button 11
 Help 35
 Help List 18, 20
 HOME Button 2, 11
 Home Page 7

I

Import Graphics 47
 Important Notice 48
 INFO Button 3
 Information 12
 Battery Life 12
 Free Memory 12
 Software Version 12
 Infrared 2
 Infrared Eyes 2
 IR 2
 Internet Address 46
 Internet Fun 47
 IR / RF Mode 44
 Choosing Channel 46
 Extender ID 45
 Optional Accessory 44
 Radio Frequency 44
 RF 44
 RF Extender 44
 RX-77 44
 Setting 44
 IR 2
 IR Command 11, 26

Index

J

Jump 42
 LCD Sleep 13
 Learning 26
 Locally 28
 Low Battery Icon 5
 Lower System Area 3

L

LABEL Mode 30
 Button 30
 Device 32
 Font Size 31
 Page 32
 Symbols 31
 Text Frame 30
 LEARN Mode 27
 Button 27
 Device 28
 Globally 28
 Locally 28
 Learning 26
 Tap Technique 26
 Lower Tool Bar 3

M

Macro-Friendly 18
 MACRO Mode 18
 Add 41
 Adjusting Delay 22, 40
 Anchor Command 19
 Beep 22, 40
 Button 41
 Command 24, 41
 Delay 22, 40
 Delete 43
 Device 42
 Device Action 24, 42
 Discrete Command 19
 Editing 43
 GO 40

Jump 42
 Macro-Friendly 18
 Move 43
 Multiple Step 18
 Page Jump 21
 Page Notation 40
 RC Command 22
 Status Device 21
 Test 24, 41
 Toggle Command 19
 Maintaining 48
 Cleaning 48
 Important Notice 48
 Memory 56
 MENU Button 2, 7
 Mode Icon 3, 7
 Mode Menu 14
 Setup 13
 Modes 7
 ADD 14
 DELETE 14
 IR / RF 14
 LABEL 14
 LEARN 14
 MACRO 14
 MOVE 14
 USE 7
 Month 13
 MOVE Mode 39
 Device 39
 Multiple Step Operation 18
 MUTE Button 2, 11

Index

N

- Navigating 7
 - Cursor Navigation 9
 - Device Action 8
 - Device Overview page 8
 - Device Scroll 9
 - Home Page 7
 - Devices 7
 - Pages 9
 - NO IR 8
 - Page Overview Page 9
 - Tab Button 10

NO IR 8

O

- Operating 11
 - Device 11
 - Hard Button 11
 - IR Command 11
 - Soft Button 11
- Operation Page Button 26
- Optional Accessory 44
- Original Configuration 52

P

- Page +, - Button 2, 10
- Page Jump 21, 24
- Page Menu 13
- Page Notation 40
- Page Overview Button 3
- Page Overview Page 9
- Pickup Sensor 6, 13
- Programming 20
 - Command 24
 - Device Action 24
 - Help List 20
 - Macro 24
 - Page Jump 24
- Programming Problem 50

R

- Radio Frequency 44
- RC Command 22
- Receivers 34
- Recharging Problem 51
- Remote Central 47
- Reset 52
- Revert 13, 51
- RF 44
- RF Extender 44
- RX-77 44

S

- Setting IR / RF 44
- Service & Support 64
 - Updates 64
- Setup Page 12
- Setup 12
 - Animation 13
 - Auto Backlight 6, 13
 - Backlight Timeout 13
 - Button (Beep) 13
 - Calibration 13
 - Cursor Navigation 13
 - Day 13
 - Device Menu 13
 - LCD Sleep 13
 - Mode Menu 13
 - Month 13
 - Page Menu 13
 - Pickup Sensor 13
 - Revert 13
 - Screen (Beep) 13
 - Setup Button 12
 - Setup Page 12
 - Time 13
 - Time Mode 13
 - Year 13
- Simulator 46
- Soft Button 11
- Software 46

Index

Software Version 12
 Specification 56
 Memory 56
 Option 56
 Symbols 31, 54
 System Requirement 47

T

Tab Button 10
 Tap Technique 26
 Teach 17
 Test 24, 41
 Text Frame 30
 Time 13
 Time Mode 13
 Toggle Command 19
 Touch Screen 2, 3
 Contrast 15
 Lower Tool Bar 3
 Upper Tool Bar 3
 User Operation Area 3
 Troubleshooting 49
 Error Message 51
 General Problem 49
 Programming Problem 50
 Recharging Problem 51
 Revert 51
 TUNERS 34
 Turning On 6

U

Undo 37
 Updates 64
 Upload 47
 Upper Tool Bar 3
 USB Cable 47
 USB Port 2, 47
 USE mode 7
 User Operation Area 3

V

VOLUME Buttons 2

W

With RC Codes 16, 36
 Without RC Codes 16, 36
 Wizz.it 9 46
 .ccf 47
 Configuration file 46
 Download 47
 Import Graphics 47
 Internet Address 46
 Internet Fun 47
 Remote Central 47
 Simulator 46
 Software 46
 System Requirement 47
 Upload 47
 USB cable 47

Y

Year 13

Other

.ccf 47
 4-Way Cursor Navigation 2

Service and Support

Service and Support

For service and support, please contact your Marantz authorized dealer or Marantz customer service.

On the Marantz internet site you can find more contact details. When you contact Marantz customer service, you will be asked for the technical information listed on the Information page.

To view this information, follow these steps.

- 1 Tap the **INFO** icon to display the Information page.



- 2 When you wish to return to USE mode, tap the **INFO** icon again or press the **Left function** button labeled "**Exit**".

Updates and New Products

For news about updates and new products, please visit us on the World Wide Web at;

<http://www.marantz.com>

Memo



www.marantz.com

You can find your nearest Marantz authorized dealer or distributor on our website.

JAPAN	Marantz Japan, Inc.	7-35-1 Sagami Ohno, Sagamihara-shi, Kanagawa 228-8505, Japan
U.S.A	Marantz America, Inc.	1100 Maplewood Drive, Itasca, IL 60143, U.S.A
EUROPE	Marantz Europe B.V.	P.O. Box 8744, 5605 LS Eindhoven, The Netherlands

marantz is a registered trademark.



Printed in Belgium

2004/04 MAI RC95851010