

Preface

Thank you for buying "Xperia™ XZ2 Premium" (simply called the "product" from here on). Before using the product, read "Basic Manual" (this manual) and "Setting Guide" for proper handling.

Packaged items

Before your start using the product, make sure that you have all the following packaged with the product.

- Xperia™ XZ2 Premium
- Sony Mobile TV antenna cable 02 (02SOHSA)
- 取扱説明書 (Basic Manual) (Japanese)
- ご利用にあたっての注意事項 (Cautions on using the product) (Japanese)
- 設定ガイド (Setting Guide) (Japanese)

The following items are not included in the package.

- microSD memory card
- AC adapter
- Earphones
- Desktop holder
- USB Type-C™ cable

◆Information

- Purchase a specified charger (sold separately).
- The battery is built into the product.
- Illustrations used in this manual are just images for explanations. They may be different from actual ones.

About Operating Instructions

You can check the instruction manuals of this product on the webpage.

■ "Setting Guide"/"Basic Manual" (this manual)
Handles only basic operations for main features.

■ Online Manual (Japanese)

Check "Online Manual" (Japanese) which describes detail explanations on various functions on the au homepage.

<https://www.au.com/online-manual/sov38>

In the product, operate as follows to check "Online Manual".

From the Home screen, [⋮]▶[お客様サポート (Customer support)]▶[Online Manual] (Japanese)

■ "取扱説明書 (Full Instruction Manual)" (Japanese)

For detailed descriptions on various functions, refer to the "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage.

<https://www.au.com/support/service/mobile/guide/manual/>



①

②

③

④



⑤

⑥

Getting Ready

Names and functions of parts

- microSD memory card/ au IC card slot
- Second microphone¹: Reduces noise so that an opposite party can easily hear your voice.
- Notification LED
- Proximity/Light sensor: Switches touch panel on and off to prevent from erroneous operation during a call/ Auto-control for display brightness.
- Earpiece/Speaker
- Front camera
- Display (Touch panel)
- Speaker
- Microphone
- USB Type-C connection terminal
- Volume key/Zoom key
- Power key/Screen lock key
- Camera key

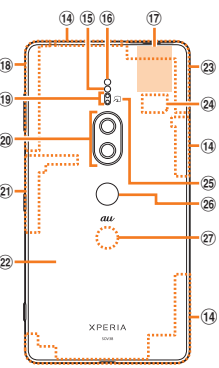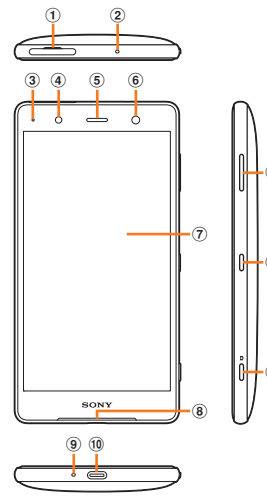


- Built-in antenna²
- Flash/Photo light
- RGB-IR sensor: Detects element of lighting source of shooting environment to adjust white balance automatically when shooting.
- Nameplate³
- GPS/Built-in antenna²
- Laser AF sensor: Detects distance from an object when shooting to focus the camera on automatically.
- Camera lens
- Wi-Fi® antenna²
- Back cover⁴
- Wi-Fi®/Bluetooth® antenna²
- au IC card
- ↵mark
- Fingerprint sensor
- Wireless charging touch point

- ¹ Do not jab with a sharp object such as a needle. Doing so may cause a malfunction.
- ² The antenna is built in. Covering around the antenna by the hand may affect the quality of call/communication.
- ³ A sticker with CE mark, FCC ID, IMEI information, etc. printed is attached. Do not remove the sticker or nameplate.
- ⁴ Back cover is not removable. Removing forcibly might cause damage or a malfunction. Also, battery is built into the main unit and not removable by customers.

CE mark and FCC ID

- Put your fingertip (nail) into the groove of the microSD memory card/au IC card slot and pull out the cover, and insert a fingernail into the hook at the edge of the label tray, then pull it out straight.

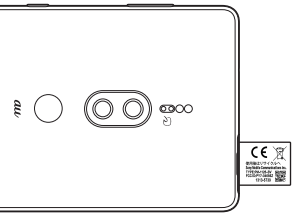

①

②

③


④

⑤

⑥

au IC card

Your phone number etc. is recorded in au IC card. The product is compatible with au Nano IC Card 04.

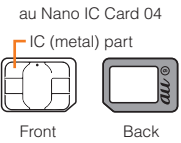

- Put your fingertip (nail) into the groove of the microSD memory card/au IC card slot and pull out the cover
- Pull out the microSD memory card tray straight from the main unit to remove

⑦

⑧

⑨

⑩

⑪

⑫

■ Charging with the AC Adapter

Charging with connecting TypeC Common AC Adapter 02 (sold separately) is explained.

- Insert the power plug of TypeC Common AC Adapter 02 (sold separately) into an outlet
 - Inset the USB Type-C plug of TypeC Common AC Adapter 02 (sold separately) into the USB Type-C connection terminal of the product straight
- When charging is started with the product powered on, the start sound for charging sounds and the Notification LED of the product lights.

- When charging is complete, remove the USB Type-C plug of TypeC Common AC Adapter 02 (sold separately) from the product
- Remove the power plug of TypeC Common AC Adapter 02 (sold separately) from the outlet

⑬

Turning on (Initial settings)

Turning the power on

- [⏻] (over 1 sec.)
The product vibrates and after a while the lock screen appears. When "ようこそ (Welcome)" appears after the product is powered on, follow the onscreen instructions to set the initial settings.
- Swipe (flick) the screen up or left
Alternatively, touch [⏻] to unlock the screen lock.

■ Turning the power off

- [⏻] (over 1 sec.)
 - [Power off]
- ◆Information
- To restart the product in safe mode (start with almost default state), [⏻] (over 1 sec.)▶Long-touch "Power off".

⑭

■ Force-quitting

- Press and hold [⏻] and the upper part of the volume key at the same time for approximately eight seconds, and release your fingers after the product vibrates three times consecutively

⑮

■ Unlocking screen lock

The lock screen appears when turning the power on or the screen backlight on by pressing [⏻].

- On the lock screen, swipe (flick) the screen up or left
Alternatively, while the lock screen is displayed, touch [⏻] to unlock.

- ◆Information
- In the lock screen, swipe (flick) * [🔍] * or * [📷] * to use Google Assistant or Camera.

Basic Operation

Key icons

The operations for [◀], [⏻], [▶] at the bottom of screen are as follows.

Icon	Operation
[◀]	Back
[⏻]	Home
[▶]	Task/History

Initial settings

When "ようこそ (Welcome)" appears after the product is powered on, tap "日本語 (Japanese)" and select "English"▶"United States"▶Follow the onscreen instructions to set functions and services. For details on the initial settings, refer to "Setting Guide".

Setting Screen lock

When the screen lock is set, the backlight turns off to avoid the keys and touch panel from false operations. When the specified time elapses, the product's screen backlight turns off automatically and screen lock is activated.

- While the screen is displayed, [⏻]

⑯

- "The Company" as appears in the manual refers to the following companies:
Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: Sony Mobile Communications Inc.

Regarding notations used in this document

- In this manual, keys (key icons) are represented by simplified illustrations such as [◀], [⏻], [▶], [⏻], [🔍], [📷]. Please be forewarned.
- Operations of tapping menu items/icons/buttons on the screen etc. are indicated as [(name of the item etc.)].
- In this manual, screens and operations for the product with au Nano IC Card 04 attached are described.
- Screen illustrations shown in this manual may look different from the actual screens. In some cases, minor details or a part of screen may be omitted.
- In this manual, screen displays for the product color "Black" are described as examples.
- In this manual, operations in portrait view are described as a standard. In horizontal view, menu items, icons, buttons on the screen, etc. may differ.
- In this manual, "au Nano IC Card 04" is abbreviated as "au IC card".
- In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card".
- All of the indicated amounts exclude tax unless otherwise specified.
- Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM and ® marks may be omitted in this manual.

⑰

⑱

⑲

⑳

- Insert and push the microSD memory card tray straight into the main unit
Pay attention to the orientation of the tray and the main unit.

- Set au IC card into the au IC card tray with IC (metal) part facing up
Pay attention to the orientation of notch. Surely set au IC card into the tray not to come off.

- Firmly press the microSD memory card tray to the end and check that there is no gap between the main unit and the cover

■ Removing au IC card

- Put your fingertip (nail) into the groove of the microSD memory card/au IC card slot and pull out the cover
- Pull out the microSD memory card tray straight from the main unit to remove
- Put your fingertip (nail) on the projection of the au IC card tray and pull it out straight to remove the tray from the main unit
- Remove au IC card from the au IC card tray, insert and push the tray straight into the main unit
Pay attention to the orientation of the tray and the main unit.
- Insert and push the microSD memory card tray straight into the main unit
Pay attention to the orientation of the tray and the main unit.

⑳

Using the touch panel

The display of the product is a touch panel operated by touching it with your finger.

- Tap/Double-tap
Tap: Gently touch the screen and then immediately release your finger. Double-tap: Touch the same position twice.


- Long-touch
Keep touching an item with your finger.

- Slide
While your finger is gently touching the screen, trace it to the desired direction to move over.

- Swipe (flick)
Operate the screen by quickly moving (flicking) your finger up/down/left/right.

- Pinch
Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.

- Drag
Keep touching an item or icon, trace it to the desired direction to move.

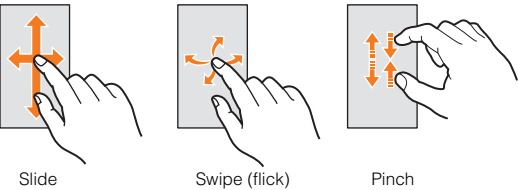

㉑

㉒

㉓

㉔

- Keep the product horizontal, insert the microSD memory card tray with the card into the main unit, and then push it into the end
Pay attention to orientation of the tray and the main unit.

- ◆Information
- Note the following points, otherwise handling au IC card may cause malfunction or damage.
 - Do not touch the IC (metal) part of au IC card.
 - Insert in the correct direction.
 - Do not use force to attach or remove.
- The error message appears when au IC card is not set properly or there is a malfunction in au IC card.
- Do not lose au IC card after removed.
- Do not insert au IC card with conversion adapter attached. Doing so may cause a malfunction.

- Firmly press the microSD memory card tray to the end and check that there is no gap between the main unit and the cover
[] appears in the status bar and writing to microSD memory card is available.

- ◆Information
- Do not touch the terminal of the microSD memory card.
- Insert a microSD memory card in the appropriate direction. Inserting a microSD memory card forcefully into the slot could result in failure to remove the microSD memory card or damage.

- Removing a microSD memory card
- From the Home screen, [⋮]▶[Settings]▶[Storage]▶ [▲] of "SD card"
microSD memory card is unmounted.


㉕

㉖

Home screen

Home screen consists of multiple pages. Tap [⏻] to return to the Home screen anytime.

- Google Search
- Widgets
- Shortcuts (Apps)
Long-touch it to display the shortcut menu. You can perform the specified operation or check the app information. When [👉] is displayed, tap it to add an operation shortcut to the Home screen.
- Current position
Indicates the number of pages of the Home screen and current position. Swipe (flick) the Home screen left or right to switch pages.
- Dock
Shortcuts(apps) or folder can be located. They are always displayed even when the page of the Home screen is switched.
- Wallpapers
- Folders (Google, 基本機能 (Basic functions))
- Apps key
Tap to display the Apps screen.

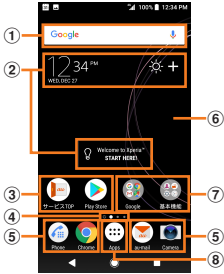

- ◆Information
- When an app has notification, a dot or number may appear on the shortcut (apps) or folder.

Using the Home screen

You can change wallpaper or theme of the Home screen, or add shortcuts of contacts etc., widgets on the Home screen.

Item	Operation
1 Long-touch an area of the Home screen where no icons are displayed	
2 [Widgets]	Add widgets, shortcuts of contacts etc.
Wallpapers	Set the wallpapers for the Home screen or the lock screen.
Themes	Set the wallpapers etc. for the Home screen or the lock screen to an unified image. Or, download themes.
Transitions	Change the method for switching pages when swiping (flicking) the Home screen left or right.
Grid	Change the grid size for the Home screen or the Apps screen.
Settings	Make the Home screen settings such as auto rotation, icon size, icon appearance, etc.

- Adding a folder
- 1 From the Home screen, long-touch an icon
- 2 Drag the icon onto another icon
- Moving shortcuts/widgets/folders
- 1 From the Home screen, long-touch an icon or folder you want to move
- 2 Drag it to a destination to be moved

㉗

