

# User Guide

© Copyright 2013 Hewlett-Packard Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Second Edition: August 2013

First Edition: July 2013

Document Part Number: 726517-002

### **Product notice**

This guide describes features that are common to most models. Some features may not be available on your computer.

### **Software terms**

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a refund subject to the refund policy of your place of purchase.

For any further information or to request a full refund of the computer, please contact your local point of sale (the seller).

## Safety warning notice

---

**⚠ WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

---



---

# Table of contents

<b>1 Starting right</b>	<b>1</b>
HP Quick Start	1
Best practices	1
Fun things to do	1
More HP resources	3
<b>2 Getting to know your computer</b>	<b>5</b>
Finding your hardware and software information	5
Locating hardware	5
Locating software	5
Tablet edge components	5
Display	8
Keyboard dock	10
Top	10
TouchPad	11
Lights	12
Keys	13
Right side	14
Left side	15
Releasing the tablet from the keyboard dock	16
Locating system information	16
Changing your tablet's settings	17
Changing your tablet's view	17
Adjusting your tablet's autorotate lock	17
Adjusting your tablet's screen brightness	17
Using touch screen gestures	18
One-finger slide	18
Tapping	19
Scrolling	20
Pinching/stretching	20
Rotating (select models only)	21
Edge swipes	21
Right-edge swipe	21
Left-edge swipe	22
Top-edge swipe and bottom-edge swipe	22
Setting touch screen preferences	23

Using the on-screen keyboard .....	23
<b>3 Connecting to a network .....</b>	<b>25</b>
Connecting to a wireless network .....	25
Using the wireless controls .....	25
Using the wireless button .....	25
Using operating system controls .....	26
Using a WLAN .....	26
Using an Internet service provider .....	26
Setting up a WLAN .....	27
Configuring a wireless router .....	27
Protecting your WLAN .....	27
Connecting to a WLAN .....	28
Using Bluetooth wireless devices .....	28
<b>4 Enjoying entertainment features .....</b>	<b>29</b>
Multimedia features .....	29
Using the webcam .....	33
Using audio .....	33
Connecting speakers .....	33
Using Beats Audio .....	33
Accessing Beats Audio Control Panel .....	33
Enabling and disabling Beats Audio .....	34
Checking the sound .....	34
Using video .....	35
Connecting an HDMI device .....	35
Configuring HDMI audio settings .....	36
Camera .....	37
<b>5 Navigating using the keyboard, touch gestures and pointing devices .....</b>	<b>38</b>
Using the TouchPad .....	38
Using TouchPad gestures .....	38
Tapping .....	39
Scrolling .....	39
Pinching/zooming .....	40
Rotating (select models only) .....	40
Flicking (select models only) .....	41
Edge swipes .....	41
Right-edge swipe .....	42
Top-edge swipe .....	42

Left-edge swipe .....	43
Using the keyboard and mouse .....	43
Using the keys .....	43
Using the action keys .....	43
Using Microsoft Windows 8 shortcut keys .....	45
Using the hot keys .....	46
<b>6 Managing power .....</b>	<b>47</b>
Initiating Sleep and Hibernation .....	47
Initiating and exiting Sleep .....	47
Enabling and exiting Hibernation (select models only) .....	48
Setting password protection on wakeup .....	48
Using the power meter and power settings .....	49
Running on battery power .....	49
Factory-sealed battery .....	49
Finding battery information .....	49
Conserving battery power .....	50
Identifying low battery levels .....	50
Resolving a low battery level .....	50
Resolving a low battery level when external power is available .....	50
Resolving a low battery level when no power source is available .....	50
Resolving a low battery level when the computer cannot exit Hibernation .....	51
Running on external AC power .....	51
Shutting down (turning off) the computer .....	51
<b>7 Managing and sharing information .....</b>	<b>53</b>
Using a USB device .....	53
Connecting a USB device .....	53
Removing a USB device .....	54
Connecting a powered USB device .....	54
Inserting and removing a memory card .....	55
<b>8 Maintaining your computer .....</b>	<b>56</b>
Improving performance .....	56
Using Disk Cleanup .....	56
Updating programs and drivers .....	56
Cleaning your computer .....	56
Cleaning products .....	56
Cleaning procedures .....	57
Cleaning the display .....	57

Cleaning the sides and cover .....	57
Cleaning the TouchPad, keyboard, or mouse .....	57
Traveling with or shipping your computer .....	58
<b>9 Securing your computer and information .....</b>	<b>59</b>
Using passwords .....	59
Setting Windows passwords .....	60
Setting Setup Utility (BIOS) passwords .....	60
Using Internet security software .....	61
Using antivirus software .....	61
Using firewall software .....	61
Installing software updates .....	61
Installing Windows updates .....	61
Installing HP and third-party software updates .....	62
Securing your wireless network .....	62
Backing up your software applications and information .....	62
<b>10 Using Setup Utility (BIOS) and System Diagnostics .....</b>	<b>63</b>
Starting Setup Utility (BIOS) .....	63
Updating the BIOS .....	63
Determining the BIOS version .....	63
Downloading a BIOS update .....	64
Using HP PC Hardware Diagnostics (UEFI) .....	64
Downloading HP PC Hardware Diagnostics (UEFI) to a USB device .....	65
<b>11 Backing up, restoring, and recovering .....</b>	<b>66</b>
Creating recovery media and backups .....	66
Creating HP Recovery media .....	67
Restore and recovery .....	68
Using Windows Refresh for quick and easy recovery .....	69
Remove everything and reinstall Windows .....	69
Recovering using HP Recovery Manager .....	70
What you need to know .....	70
Using the HP Recovery partition .....	71
Using HP Recovery media to recover .....	71
Changing the computer boot order .....	71
Removing the HP Recovery partition .....	72
<b>12 Specifications .....</b>	<b>73</b>
Input power .....	73



Operating environment ..... 73

**13 Electrostatic Discharge ..... 75**

**Index ..... 76**




---

# 1 Starting right

This computer is a powerful tool designed to enhance your work and entertainment. Read this chapter to learn about best practices after setup, fun things to do with your computer, and where to get more HP resources.

## HP Quick Start

HP Quick Start gives you the option to use the familiar Start menu from the Windows desktop. Quick Start functions like the traditional Windows Start menu and enables you to conveniently open files and programs using the Windows desktop.

- To open HP Quick Start from the Windows desktop, click the HP Quick Start  icon on the taskbar.

## Best practices

To get the most out of your smart investment, after you set up and register the computer, we recommend the following steps:

- Take a minute to browse the printed *Windows 8 Basics* guide to explore the new Windows® features.
- If you haven't already done so, connect to a wired or wireless network. See details in [Connecting to a network on page 25](#).
- Become familiar with the computer hardware and software. Go to [Getting to know your computer on page 5](#) and [Finding your hardware and software information on page 5](#) for information.
- Back up your computer. See [Backing up, restoring, and recovering on page 66](#).

## Fun things to do

- You know that you can watch a YouTube video on the computer. But did you know that you can also connect your computer to a television or gaming console? For more information, see [Connecting an HDMI device on page 35](#).
- You know you can listen to music on the computer. But did you know that you can also stream live radio to the computer and listen to music or talk radio from all over the world? See [Using audio on page 33](#).

- Experience music the way the artist intended, with deep, controlled bass and clear, pure sound. See [Using Beats Audio on page 33](#).
- Use the TouchPad and the new Windows 8 touch gestures for smooth control of images and pages of text. See [Using TouchPad gestures on page 38](#) and [Using touch screen gestures on page 18](#).

## More HP resources

You have already used *Setup Instructions* to turn on the computer and locate this guide. To locate resources that provide product details, how-to information, and more, use the information in this table.

Resource	Contents
<i>Setup Instructions</i>	<ul style="list-style-type: none"><li>• Overview of computer setup and features</li></ul>
<i>Windows 8 Basics</i> guide	<ul style="list-style-type: none"><li>• Overview of using and navigating with Windows 8</li></ul>
Help and Support  To access Help and Support, from the Start screen, type <b>h</b> , and then select <b>Help and Support</b> . For U.S. support, go to <a href="http://www.hp.com/go/contactHP">http://www.hp.com/go/contactHP</a> . For worldwide support, go to <a href="http://welcome.hp.com/country/us/en/wwcontact_us.html">http://welcome.hp.com/country/us/en/wwcontact_us.html</a> .	<ul style="list-style-type: none"><li>• A broad range of how-to information and troubleshooting tips</li></ul>
<i>Safety &amp; Comfort Guide</i>  To access this guide, from the Start screen, type <b>support</b> , select the <b>HP Support Assistant</b> app, select <b>My computer</b> , and then select <b>User guides</b> , or go to <a href="http://www.hp.com/ergo">http://www.hp.com/ergo</a> .	<ul style="list-style-type: none"><li>• Proper workstation setup</li><li>• Guidelines for posture and work habits that increase your comfort and decrease your risk of injury</li><li>• Electrical and mechanical safety information</li></ul>
Worldwide support web page  To get support in your language, go to <a href="http://welcome.hp.com/country/us/en/wwcontact_us.html">http://welcome.hp.com/country/us/en/wwcontact_us.html</a> .	<ul style="list-style-type: none"><li>• Online chat with an HP technician</li><li>• Email support</li><li>• Support telephone numbers</li><li>• Locate HP service center locations</li></ul>
<i>Regulatory, Safety and Environmental Notices</i>  To access this guide, from the Start screen, type <b>support</b> , select the <b>HP Support Assistant</b> app, select <b>My computer</b> , and then select <b>User guides</b> .	<ul style="list-style-type: none"><li>• Important regulatory notices</li></ul>

---

Resource	Contents
<p data-bbox="239 210 766 252"><i>Limited Warranty*</i></p> <p data-bbox="239 252 766 451">To access this guide, from the Start screen, type <code>support</code>, select the <b>HP Support Assistant</b> app, select <b>My computer</b>, and then select <b>Warranty and services</b>, or go to <a href="http://www.hp.com/go/orderdocuments">http://www.hp.com/go/orderdocuments</a>.</p>	<ul data-bbox="766 210 1449 252" style="list-style-type: none"><li data-bbox="766 210 1449 252">• Specific warranty information about this computer</li></ul>
<hr/> <p data-bbox="239 451 1449 577">*You can find the expressly provided HP Limited Warranty applicable to your product located with the user guides on your computer and/or on the CD/DVD provided in the box. In some countries/regions, HP may provide a printed HP Limited Warranty in the box. For countries/regions where the warranty is not provided in printed format, you may request a printed copy from <a href="http://www.hp.com/go/orderdocuments">http://www.hp.com/go/orderdocuments</a> or write to:</p> <ul data-bbox="239 577 1449 724" style="list-style-type: none"><li data-bbox="239 577 1449 619">• <b>North America:</b> Hewlett-Packard, MS POD, 11311 Chinden Blvd., Boise, ID 83714, USA</li><li data-bbox="239 619 1449 661">• <b>Europe, Middle East, Africa:</b> Hewlett-Packard, POD, Via G. Di Vittorio, 9, 20063, Cernusco s/Naviglio (MI), Italy</li><li data-bbox="239 661 1449 724">• <b>Asia Pacific:</b> Hewlett-Packard, POD, P.O. Box 200, Alexandra Post Office, Singapore 911507</li></ul> <p data-bbox="239 724 1449 798">When you request a printed copy of your warranty, please include your product number, warranty period (found on your service label), name, and postal address.</p> <p data-bbox="239 798 1449 886"><b>IMPORTANT:</b> Do NOT return your HP product to the addresses above. For U.S. support, go to <a href="http://www.hp.com/go/contactHP">http://www.hp.com/go/contactHP</a>. For worldwide support, go to <a href="http://welcome.hp.com/country/us/en/wwcontact_us.html">http://welcome.hp.com/country/us/en/wwcontact_us.html</a>.</p> <hr/>	

---

## 2 Getting to know your computer

### Finding your hardware and software information

#### Locating hardware

To find out what hardware is installed on your computer:


1. From the Start screen, type **c**, and then select **Control Panel**.
2. Select **System and Security**, and then in the System area, click **Device Manager**.  
A list reveals all the devices installed on your computer.





#### Locating software

To find out what software is installed on your computer:

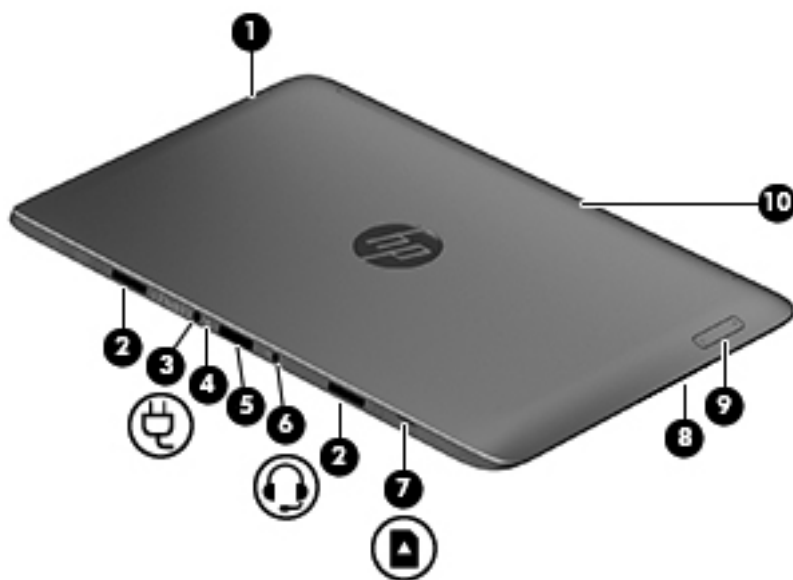

1. From the Start screen, right-click using the mouse  
– or –  
Swipe from the top of the TouchPad to reveal all apps.
2. Select the **All apps** icon.

### Tablet edge components






Components	Description
<b>(1)</b>  Power button	<ul style="list-style-type: none"> <li>• When the computer is off, press the button to turn on the tablet.</li> <li>• When the computer is on, press the button briefly to initiate Sleep.</li> <li>• When the computer is in the Sleep state, press the button briefly to exit Sleep.</li> </ul> <p><b>CAUTION:</b> Pressing and holding down the power button results in the loss of unsaved information.</p> <p><b>NOTE:</b> If the computer has stopped responding and Microsoft® Windows shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the tablet.</p>
	 Swipe from the right edge of the TouchPad or touch screen to display the charms, tap <b>Search</b> , and then tap the search box. In the search box, type <code>power</code> , tap <b>Settings</b> , and then tap <b>Power options</b> , or see <a href="#">Managing power on page 47</a> .
	<p>– or –</p>  To learn more about your power settings, on the Start screen, type <code>p</code> . In the search box, type <code>power</code> , select <b>Settings</b> , and then select <b>Power options</b> , or see <a href="#">Managing power on page 47</a> .
<b>(2)</b> Alignment post connectors (2)	Align and attach the tablet to the keyboard dock.
<b>(3)</b>  Power connector	Connects an AC adapter.
<b>(4)</b> AC adapter/Battery light	<ul style="list-style-type: none"> <li>• White: The AC adapter is connected and the battery is charged.</li> <li>• Blinking white: The battery has reached a low battery level.</li> <li>• Amber: The AC adapter is connected and the battery is charging.</li> <li>• Off: The computer is using DC power.</li> </ul>
<b>(5)</b> Docking port	Connects the tablet to the keyboard dock.




Components	Description
<b>(6)</b>  Audio-out (headphone) jack/Audio-in (microphone) jack	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable.</p> <p><b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before using headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety and Environmental Notices</i>.</p> <p><b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled.</p> <p><b>NOTE:</b> Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone).</p> <p><b>NOTE:</b> Stand-alone microphones and headphones with separate microphone jacks are not supported.</p>
<b>(7)</b>  Micro SD memory card reader	<p>Supports micro Secure Digital (SD) memory cards.</p>
<b>(8)</b> Vent	<p>Enables airflow to cool internal components.</p> <p><b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
<b>(9)</b> Volume button	<p>Controls speaker volume on the tablet.</p> <ul style="list-style-type: none"> <li>• To increase speaker volume, press the + edge of the button.</li> <li>• To decrease speaker volume, press the – edge of the button.</li> </ul>
<b>(10)</b> Vent	<p>Enables airflow to cool internal components.</p> <p><b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
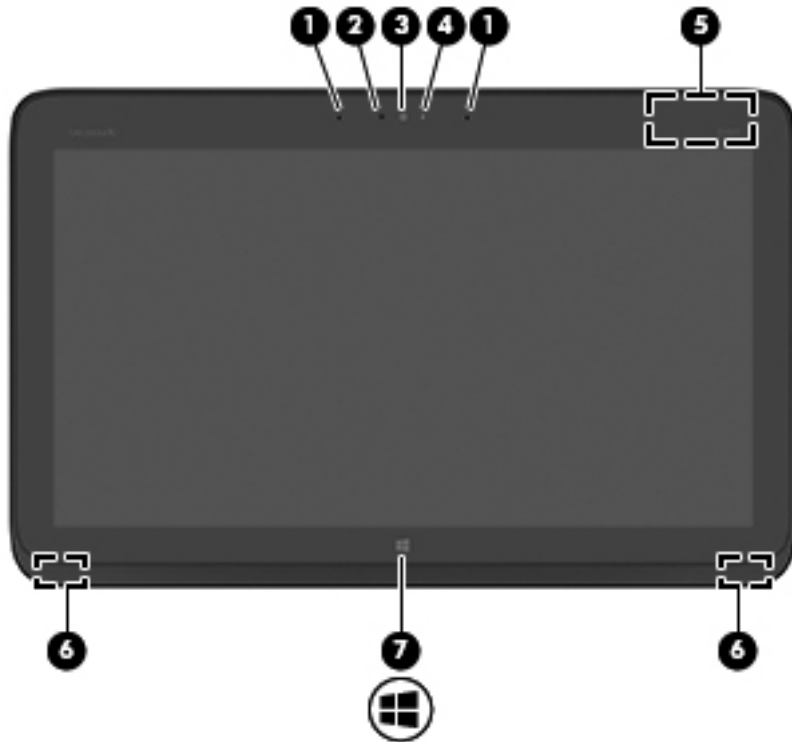
# Display



Component	Description
(1)	Internal microphones (2) Record audio, automatically filtering out the noise around you and cancelling echoes.
(2)	Webcam light On: The webcam is on.
(3)	HP TrueVision Full HD Webcam Records video, captures still photographs, and provides access to video conferences and online chat by means of streaming video.
	 Swipe from the right edge of the TouchPad or touch screen to display the charms, tap <b>Search</b> , and then tap the search box. Type <b>c</b> , and then tap <b>CyberLink YouCam</b> from the list of applications.  – or –  From the Start screen, type <b>c</b> , and then select <b>CyberLink YouCam</b> from the list of applications.
(4)	Ambient light sensor Automatically adjusts the display brightness based on the lighting conditions in your environment.
(5)	WLAN antenna* Send and receive wireless signals.
(6)	Speakers (2) Produce sound.

---

Component	Description
(7)  Windows button	Returns you to the Start screen from an open app or the Windows desktop.  <b>NOTE:</b> Pressing the Windows button again returns you to the previous screen.


---

\*The antenna is not visible from the outside of the computer. For optimal transmission, keep the area immediately around the antenna free from obstructions. For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

---


# Keyboard dock

## Top

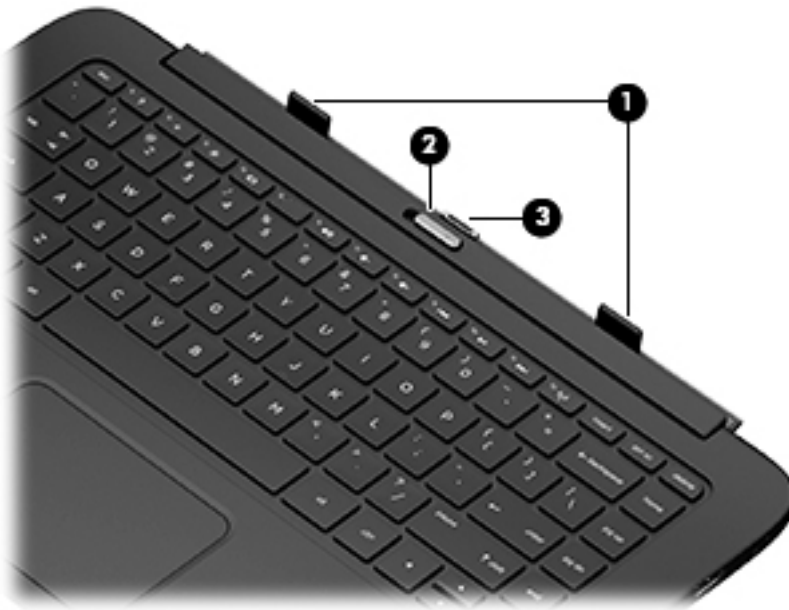

Component		Description
(1)	Alignment posts	Align and attach the tablet to the keyboard dock.
(2)	Release latch	Releases the tablet from the keyboard dock. To release the tablet, slide the release latch to the left.
(3)	Docking connector	Connects the tablet to the keyboard dock.



## TouchPad

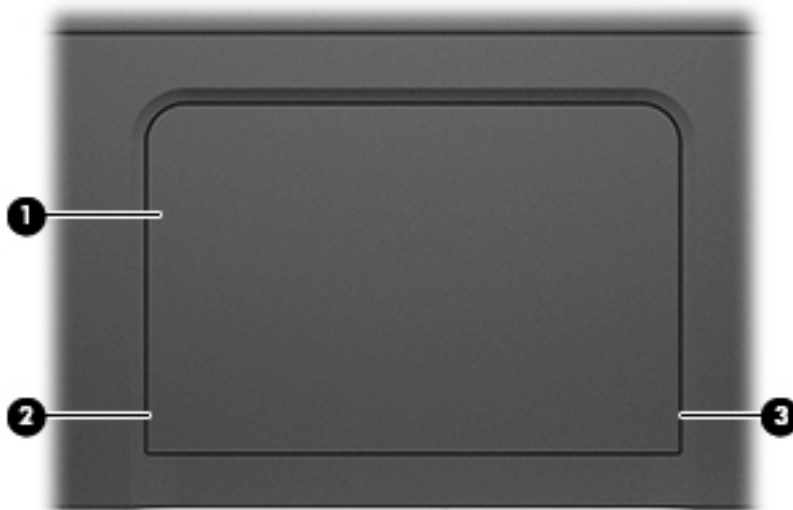


Component	Description
(1) TouchPad zone	Reads your finger gesture to move the pointer or activate items on the screen.
(2) Left TouchPad button	Functions like the left button of an external mouse.
(3) Right TouchPad button	Functions like the right button on an external mouse.


## Lights




Component	Description
(1) Caps lock light	<ul style="list-style-type: none"><li>• White: Caps lock is on.</li><li>• Off: Caps lock is off.</li></ul>
(2)  Mute light	<ul style="list-style-type: none"><li>• Amber: Computer sound is off.</li><li>• Off: Computer sound is on.</li></ul>
(3)  Wireless light	<ul style="list-style-type: none"><li>• White: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on.</li><li>• Amber: All wireless devices are off.</li></ul>

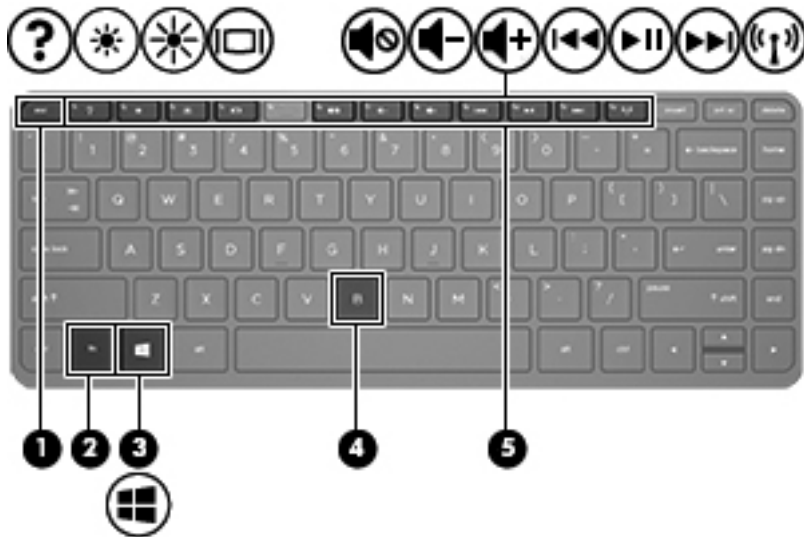


## Keys



Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Displays system information when pressed in combination with the <code>esc</code> key, and enables or disables Beats Audio when pressed in combination with the <code>fn</code> key.
(3)  Windows key	Returns you to the Start screen from an open app or the Windows desktop. <b>NOTE:</b> Pressing the Windows key again returns you to the previous screen.
(4) <code>b</code> key	Enables or disables Beats Audio when pressed in combination with the <code>fn</code> key.
(5) Action keys	Execute frequently used system functions. <b>NOTE:</b> Action keys do not display or function from the on-screen tablet keyboard.

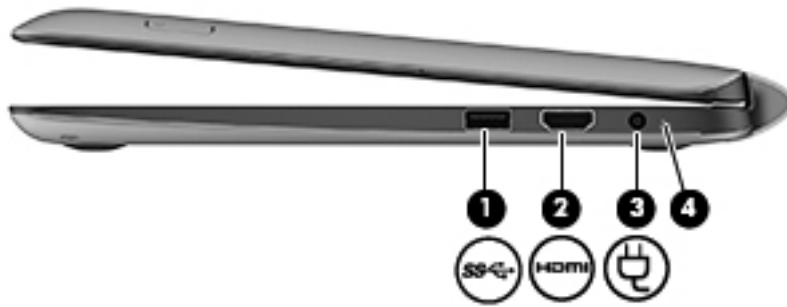
## Right side






Component	Description
(1)  USB 3.0 port	Connects an optional USB device. <b>NOTE:</b> For details about different types of USB ports, see <a href="#">Using a USB device on page 53</a> .
(1)  HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed HDMI device.
(3)  Power connector	Connects an AC adapter.
(4) AC adapter/Battery light	<ul style="list-style-type: none"><li>• White: The AC adapter is connected and the battery is charged.</li><li>• Blinking white: The battery has reached a low battery level.</li><li>• Amber: The AC adapter is connected and the battery is charging.</li><li>• Off: The computer is using battery power.</li></ul>

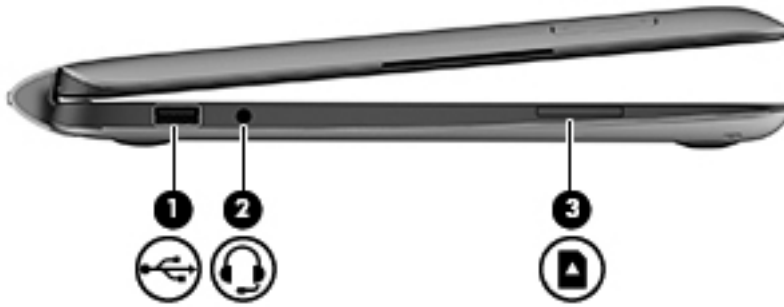


## Left side



Component	Description
(1)  USB 2.0 port	Connects an optional USB device. <b>NOTE:</b> For details about different types of USB ports, see <a href="#">Using a USB device on page 53</a> .
(2)  Audio-out (headphone) jack/Audio-in (microphone) jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. <b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before using headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety and Environmental Notices</i> . <b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled. <b>NOTE:</b> Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone). <b>NOTE:</b> Stand-alone microphones and headphones with separate microphone jacks are not supported.
(3)  Memory card reader	Reads data from and writes data to memory cards such as SD.

## Releasing the tablet from the keyboard dock

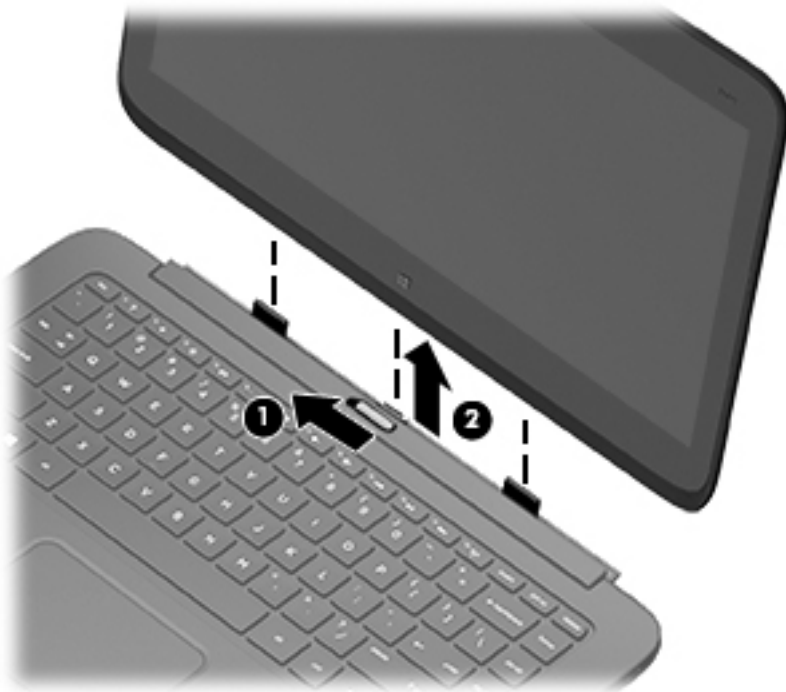

To release the tablet from the keyboard dock, follow these steps:

1. Slide the release latch on the keyboard dock to the left **(1)**.
2. Lift and remove the tablet **(2)**.

## Locating system information

Important system information is located on the bottom edge of the tablet. You may need the information when travelling internationally or when you contact support:

- Serial number
- Product number
- Warranty period
- Regulatory and wireless certification information

Using Windows, briefly press the **fn+esc** key combination to display the System Information screen, which provides the product name and serial number of your computer, as well as information about the memory, processor, BIOS, and keyboard.

# Changing your tablet's settings

You can change view and screen brightness.

## Changing your tablet's view

Your tablet's orientation, or view, changes automatically from landscape to portrait view, or from portrait to landscape view.

1. To change the view of your tablet from landscape view to portrait view:  
Hold the tablet vertically, and then turn it 90 degrees to the right (in a clockwise direction).
2. To change the view of your tablet from portrait view to landscape view:  
Hold the tablet vertically, and then turn it 90 degrees to the left (in a counter-clockwise direction).

## Adjusting your tablet's autorotate lock

To adjust your tablet's autorotate lock when the tablet is undocked:


1. Swipe from the right edge of the TouchPad or touch screen to display the charms, and then tap **Settings**.
2. Tap the **Screen** icon at the bottom right. Tap the **Autorotate Lock** icon to lock your current tablet screen in place and to prevent rotation. The icon displays a lock symbol when autorotate lock is active. To turn off the autorotate lock, tap the **Autorotate Lock** icon again.

## Adjusting your tablet's screen brightness

To adjust the screen brightness:

1. Swipe from the right edge of the TouchPad or touch screen to display the charms, and then tap **Settings**.
2. Tap the **Screen** icon at the bottom right. A vertical slider displays that controls the screen brightness.


---

 **NOTE:** From the Windows desktop, you can also tap the **Power Meter** icon in the notification area at the far right of the taskbar, tap **Adjust screen brightness**, and then move the slider next to **Screen brightness** at the bottom of the screen.

---

# Using touch screen gestures

A touch screen computer allows you to control items on the screen directly with your fingers.


 **TIP:** On touch screen computers, you can perform the gestures on the screen or on the TouchPad. You can also perform on-screen actions with the keyboard and mouse.

---

## One-finger slide


The one-finger slide is mostly used to pan or scroll through lists and pages, but you can use it for other interactions, too, such as moving an object.

- To scroll across the screen, lightly slide one finger across the screen in the direction you want to move.

 **NOTE:** When many apps are displayed on the Start screen, you can slide your finger to move the screen left or right.

---

- To drag, press and hold an object, and then drag the object to move it.

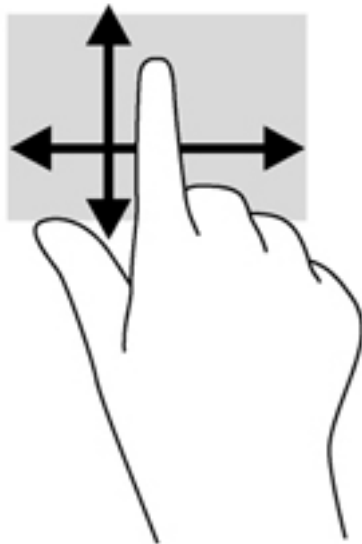


## Tapping

To make an on-screen selection, use the tap function.

- Use one finger to tap an object on the screen to make a selection. Double-tap an item to open it.

---

 **NOTE:** Press and hold your finger on an object to open a help screen that provides information about the object.


---



## Scrolling

Scrolling is useful for moving the pointer up, down, left, or right on a page or image.


- Place two fingers on the screen and then drag them in an up, down, left, or right motion.

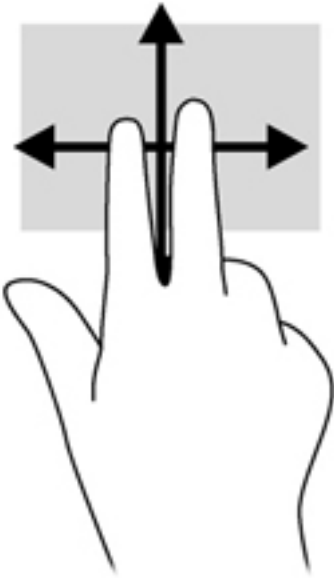

## Pinching/stretching

Pinching and stretching allows you to zoom out or in on images or text.

- Zoom in by placing two fingers together on the display and then move your fingers apart.
- Zoom out by placing two fingers apart on the display and then move your fingers together.

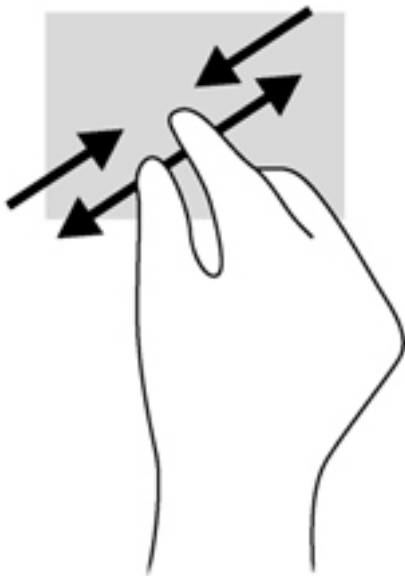


## Rotating (select models only)

Rotating allows you to turn items such as photos.

- Anchor the forefinger of your left hand on the object you want to rotate. Using your right hand, slide your forefinger around in a sweeping motion from 12 o'clock to 3 o'clock. To reverse the rotation, move your forefinger from 3 o'clock to 12 o'clock.



**NOTE:** Rotate is intended for specific apps where you can manipulate an object or image. Rotate may not be functional for all apps.

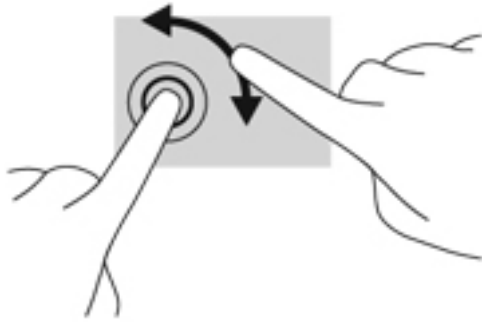


## Edge swipes

With edge swipes you can perform tasks such as changing settings and finding or using apps.

### Right-edge swipe

The right-edge swipe reveals the charms, which let you search, share, start apps, access devices, or change settings.


- Gently swipe your finger inward from the right edge of the display bezel onto the screen to display the charms.

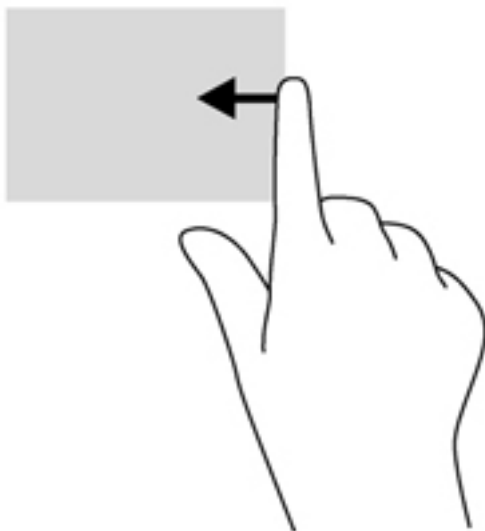

## Left-edge swipe

The left-edge swipe accesses your recently opened apps so that you can switch between them quickly.

- Gently swipe your finger inward from the left edge of the display bezel to switch between recently opened apps.
- Without lifting your finger, swipe back toward the left edge to display all recently opened apps.

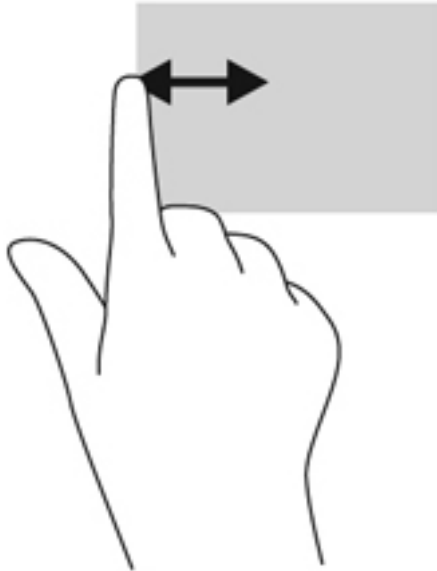


## Top-edge swipe and bottom-edge swipe

The top-edge swipe or bottom-edge swipe allows you to open a list of apps available on your computer.



1. Gently swipe finger from the top edge or the bottom edge of the display bezel onto the screen.

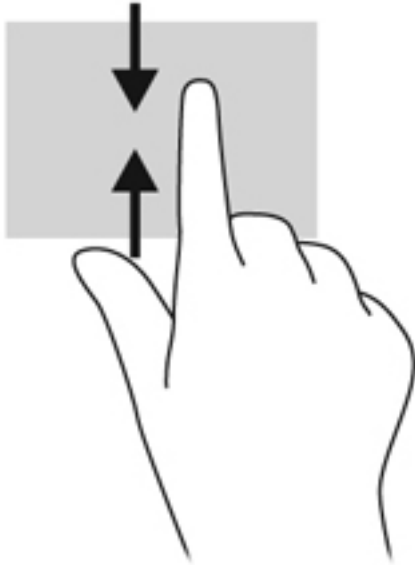

2. Tap **All apps** to view available apps.



## Setting touch screen preferences

Mode	Steps
	<ol style="list-style-type: none"><li>1. Swipe from the right edge of the TouchPad or touch screen to display the charms, tap <b>Search</b>, and then tap the search box.</li><li>2. Type <b>c</b>, tap <b>Control Panel</b>, tap <b>Hardware and Sound</b>, tap <b>Pen and Touch</b>, and then follow the on-screen instructions.</li></ol>
	<ol style="list-style-type: none"><li>1. On the Start screen, type <b>c</b>, and then select <b>Control Panel</b>.</li><li>2. Select <b>Hardware and Sound</b>, select <b>Pen and Touch</b>, and then follow the on-screen instructions.</li></ol>

These preferences are specific to the touch screen and the computer.

## Using the on-screen keyboard

You may want to enter data into a data field. This may be required when you set up a wireless network configuration or a weather reporting location, or when you access user accounts on Internet sites. The computer has an on-screen keyboard that is displayed when you need to enter such information.

1. To display the keyboard, tap in the first data field. Tap the small keyboard icon that is displayed.  
– or –  
Tap the keyboard icon on the right side of the notification area.
2. To enlarge the size of the on-screen keyboard, tap the lower-right corner and drag it to the desired size.

3. Tap each character, continuing until you have spelled out the name or word that you are entering into the data field.



---

**NOTE:** Action keys do not display or function on the on-screen keyboard.



**NOTE:** Suggested words may be displayed at the top of the on-screen keyboard. If an appropriate word is displayed, tap it to select it.

---

4. Tap **enter** on the keyboard.

---

## 3 Connecting to a network

Your computer can travel with you wherever you go. But even at home, you can explore the globe and access information from millions of websites using your computer and a wired or wireless network connection. This chapter will help you get connected to that world.

### Connecting to a wireless network

Wireless technology transfers data across radio waves instead of wires. Your computer may be equipped with one or more of the following wireless devices:

- Wireless local area network (WLAN) device—Connects the computer to wireless local area networks (commonly referred to as Wi-Fi networks, wireless LANs, or WLANs) in corporate offices, your home, and public places such as airports, restaurants, coffee shops, hotels, and universities. In a WLAN, the mobile wireless device in your computer communicates with a wireless router or a wireless access point.
- Bluetooth device—Creates a personal area network (PAN) to connect to other Bluetooth-enabled devices such as computers, phones, printers, headsets, speakers, and cameras. In a PAN, each device communicates directly with other devices, and devices must be relatively close together—typically within 10 meters (approximately 33 feet) of each other.

For more information about wireless technology, see the information and website links provided in Help and Support. From the Start screen, type **h**, and then select **Help and Support**.

### Using the wireless controls

You can control the wireless devices in your computer using these features:

- Wireless button, wireless switch, or wireless key (referred to in this chapter as the wireless button) (select models only)
- Operating system controls

### Using the wireless button

The computer has a wireless button, one or more wireless devices, and one or two wireless lights, depending on the model. All of the wireless devices on your computer are enabled at the factory, so the wireless light is on (white) when you turn on the computer.

The wireless light indicates the overall power state of your wireless devices, not the status of individual devices. If the wireless light is white, at least one wireless device is on. If the wireless light is off, all wireless devices are off.





**NOTE:** On some models, the wireless light is amber when all wireless devices are off.

Because the wireless devices are enabled at the factory, you can use the wireless button to turn on or turn off the wireless devices simultaneously.

## Using operating system controls

The Network and Sharing Center allows you to set up a connection or network, connect to a network, and diagnose and repair network problems.


To use operating system controls:

Mode	Steps
	<ol style="list-style-type: none"><li>1. Swipe from the right edge of the TouchPad or touch screen to display the charms, tap <b>Search</b>, and then tap the search box.</li><li>2. Type <code>network</code> and <code>sharing</code> in the search box, and then tap <b>Settings</b>.</li><li>3. Tap <b>Network and Sharing Center</b>.</li></ol>
	<ol style="list-style-type: none"><li>1. From the Start screen, type <code>network</code> and <code>sharing</code>, and then select <b>Settings</b>.</li><li>2. Select <b>Network and Sharing Center</b>.</li></ol>

For more information, from the Start screen, type `h`, and then select **Help and Support**.

## Using a WLAN

With a WLAN device, you can access a wireless local area network (WLAN), which is composed of other devices and accessories that are linked by a wireless router or a wireless access point.


 **NOTE:** The terms *wireless router* and *wireless access point* are often used interchangeably.

- A large-scale WLAN, such as a corporate or public WLAN, typically uses wireless access points that can accommodate a large number of devices and accessories and can separate critical network functions.
- A home or small office WLAN typically uses a wireless router, which allows several wireless and wired devices to share an Internet connection, a printer, and files without requiring additional pieces of hardware or software.

To use the WLAN device in your computer, you must connect to a WLAN infrastructure (provided through a service provider or a public or corporate network).

## Using an Internet service provider

When you are setting up Internet access in your home, you must establish an account with an Internet service provider (ISP). To purchase Internet service and a modem, contact a local ISP. The ISP will help set up the modem, install a network cable to connect your wireless router to the modem, and test the Internet service.


 **NOTE:** Your ISP will give you a user ID and a password to use for Internet access. Record this information and store it in a safe place.

## Setting up a WLAN

To set up a WLAN and connect to the Internet, you need the following equipment:

- A broadband modem (either DSL or cable) **(1)** and high-speed Internet service purchased from an Internet service provider
- A wireless router **(2)** (purchased separately)
- A wireless computer **(3)**

---

 **NOTE:** Some modems have a built-in wireless router. Check with your ISP to determine what type of modem you have.

---

The illustration below shows an example of a wireless network installation that is connected to the Internet.




As your network grows, additional wireless and wired devices can be connected to the network to access the Internet.

For help in setting up your WLAN, see the information provided by your router manufacturer or your ISP.

## Configuring a wireless router

For help in setting up a WLAN, see the information provided by your router manufacturer or your ISP.

---

 **NOTE:** It is recommended that you initially connect your new wireless device to the router by using the network cable provided with the router. When the device successfully connects to the Internet, disconnect the cable, and access the Internet through your wireless network.

---

## Protecting your WLAN

When you set up a WLAN or access an existing WLAN, always enable security features to protect your network from unauthorized access. WLANs in public areas (hotspots) like coffee shops and airports may not provide any security. If you are concerned about the security of your device when connected to a hotspot, limit your network activities to email that is not confidential and basic Internet surfing.

Wireless radio signals travel outside the network, so other WLAN devices can pick up unprotected signals. Take the following precautions to protect your WLAN:

- Use a firewall.  
A firewall checks both data and requests for data that are sent to your network, and discards any suspicious items. Firewalls are available in both software and hardware. Some networks use a combination of both types.
- Use wireless encryption.


Wireless encryption uses security settings to encrypt and decrypt data that is transmitted over the network. For more information, from the Start screen, type **h**, and then select **Help and Support**.


## Connecting to a WLAN

To connect to the WLAN, follow these steps:

1. Be sure that the WLAN device is on.
2. From the Windows desktop, tap or click the network status icon in the notification area, at the far right of the taskbar.
3. Select your WLAN from the list.
4. Click **Connect**.
5. If the WLAN is a security-enabled WLAN, you are prompted to enter a security code. Type the code, and then click **OK** to complete the connection.

---


 **NOTE:** If no WLANs are listed, you may be out of range of a wireless router or access point.

 **NOTE:** If you do not see the WLAN you want to connect to, from the Windows desktop, right-click the network status icon, and then select **Open Network and Sharing Center**. Click **Set up a new connection or network**. A list of options is displayed, allowing you to manually search for and connect to a network or to create a new network connection.

---

After the connection is made, place the mouse pointer over the network status icon in the notification area, at the far right of the taskbar, to verify the name and status of the connection.

---

 **NOTE:** The functional range (how far your wireless signals travel) depends on WLAN implementation, router manufacturer, and interference from other electronic devices or structural barriers such as walls and floors.

---

## Using Bluetooth wireless devices

A Bluetooth device provides short-range wireless communications that replace the physical cable connections that traditionally link electronic devices such as the following:

- Computers (desktop, notebook, PDA)
- Phones (cellular, cordless, smart phone)
- Imaging devices (printer, camera)
- Audio devices (headset, speakers)
- Mouse

Bluetooth devices provide peer-to-peer capability that allows you to set up a personal area network (PAN) of Bluetooth devices. For information about configuring and using Bluetooth devices, see the Bluetooth software Help.

---


## 4 Enjoying entertainment features

Use your HP computer as an entertainment hub to socialize via the webcam, enjoy and manage your music, and download and watch movies. Or, to make your computer an even more powerful entertainment center, connect external devices like a monitor, projector, or television, or speakers and headphones.

### Multimedia features



Here are some of the entertainment features on your computer.







Component	Description	
(1)		<p data-bbox="639 233 986 289">Audio-out (headphone) jack/Audio-in (microphone) jack</p> <p data-bbox="1046 233 1437 373">Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone.</p> <p data-bbox="1046 401 1437 569"><b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before using headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety and Environmental Notices</i>.</p> <p data-bbox="1046 596 1437 667"><b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled.</p> <p data-bbox="1046 695 1437 804"><b>NOTE:</b> Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone).</p> <p data-bbox="1046 831 1437 905"><b>NOTE:</b> Stand-alone microphones and headphones with separate microphone jacks are not supported.</p>
(2)	Volume button	<p data-bbox="1046 936 1278 961">Controls speaker volume.</p> <ul data-bbox="1046 989 1437 1115" style="list-style-type: none"> <li data-bbox="1046 989 1437 1045">• To increase speaker volume, press the + edge of the button.</li> <li data-bbox="1046 1066 1437 1115">• To decrease speaker volume, press the – edge of the button.</li> </ul>







Component	Description	
(1)	Internal microphones (2)	Record sound.
(2)	Webcam light	On: The webcam is in use.
(3)	HP TrueVision Full HD Webcam	Records video, captures still photographs, allows you to video conference and chat online using streaming video.   Swipe from the right edge of the TouchPad or touch screen to display the charms, tap <b>Search</b> , and then tap the search box. type <b>c</b> , and then tap <b>CyberLink YouCam</b> from the list of applications.  – or –   From the Start screen, type <b>c</b> , and then select <b>CyberLink YouCam</b> from the list of applications.
(4)	Ambient light sensor	Automatically adjusts the display brightness based on the lighting conditions in your environment.
(5)	Speakers (2)	Produce sound.

Component	Description	
(6) 	HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed HDMI device.
(7) 	USB 3.0 port	Connects an optional USB device.  <b>NOTE:</b> For details about different types of USB ports, see <a href="#">Using a USB device on page 53</a> .
(8)	b key	Enables or disables Beats Audio when pressed in combination with the fn key.  Beats Audio is an enhanced audio feature that provides a deep, controlled bass while maintaining a clear sound. Beats Audio is enabled by default.  You can also view and control the bass settings through the Windows operating system. To view and control the bass properties, open the Beats Audio Control Panel.  To open Beats Audio Control Panel, from the Start screen on the keyboard dock, type c, select <b>Control Panel</b> , select <b>Hardware and Sound</b> , and then select <b>Beats Audio Control Panel</b> .
(9) 	Audio-out (headphone) jack/Audio-in (microphone) jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone.  <b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before using headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety and Environmental Notices</i> .  <b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled.  <b>NOTE:</b> Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone).  <b>NOTE:</b> Stand-alone microphones and headphones with separate microphone jacks are not supported.
(10) 	USB 2.0 port	Connects an optional USB device.

## Using the webcam

The computer has an integrated HP TrueVision Full HD Webcam, a powerful social networking tool that allows you to communicate up close with friends and colleagues, whether they are next door or on the other side of the world. With the webcam, you can stream video with your instant messaging software, capture and share video, and take still photos.

To start the webcam:

Mode	Steps
	<ol style="list-style-type: none"><li>1. Swipe from the right edge of the TouchPad or touch screen to display the charms, tap <b>Search</b>, and then tap the search box.</li><li>2. Type <b>c</b>, and then tap <b>CyberLink YouCam</b> from the list of applications.</li></ol>
	From the Start screen, type <b>c</b> , and then select <b>CyberLink YouCam</b> from the list of applications.

For details about using the webcam, go to Help and Support. From the Start screen, type **h**, and then select **Help and Support**.

## Using audio

On your computer, you can play music CDs, download and listen to music, stream audio content from the web (including radio), record audio, or mix audio and video to create multimedia. To enhance your listening enjoyment, attach external audio devices such as speakers or headphones.

## Connecting speakers

You can attach wired speakers to your computer by connecting them to a USB port (or to the audio-out jack) on your computer or on a docking station.

To connect *wireless* speakers to your computer, follow the device manufacturer's instructions. To connect high-definition speakers to the computer, see [Configuring HDMI audio settings on page 36](#). Before connecting speakers, lower the volume setting.



## Using Beats Audio

Beats Audio is an enhanced audio feature that provides a deep, controlled bass while maintaining a clear sound. You can experience Beats Audio through the computer's internal speakers, through external speakers connected to a USB port, or through Beats Audio headphones connected to the headphone jack.

## Accessing Beats Audio Control Panel



Use Beats Audio Control Panel to view and manually control audio and bass settings.

To open Beats Audio Control Panel:

Mode	Steps
	<ol style="list-style-type: none"> <li>1. Swipe from the right edge of the TouchPad or touch screen to display the charms, tap <b>Search</b>, and then tap the search box.</li> <li>2. Type <b>c</b>, tap <b>Control Panel</b>, tap <b>Hardware and Sound</b>, and then tap <b>Beats Audio Control Panel</b>.</li> </ol>
	From the Start screen, type <b>c</b> , select <b>Control Panel</b> , select <b>Hardware and Sound</b> , and then select <b>Beats Audio Control Panel</b> .



## Enabling and disabling Beats Audio

To enable or disable Beats Audio:



Mode	Steps
	<ol style="list-style-type: none"> <li>1. Swipe from the right edge of the TouchPad or touch screen to display the charms, tap <b>Search</b>, and then tap the search box.</li> <li>2. Type <b>c</b>, tap <b>Control Panel</b>, tap <b>Hardware and Sound</b>, and then tap <b>Beats Audio Control Panel</b>.</li> <li>3. Follow the on-screen instructions</li> </ol>
	<ol style="list-style-type: none"> <li>1. From the Start screen, type <b>c</b>, select <b>Control Panel</b>, select <b>Hardware and Sound</b>, and then select <b>Beats Audio Control Panel</b>.</li> <li>2. Follow the on-screen instructions.</li> </ol>

## Checking the sound



To check the audio functions on your computer, follow these steps:

Mode	Steps
	<ol style="list-style-type: none"> <li>1. Swipe from the right edge of the TouchPad or touch screen to display the charms, tap <b>Search</b>, and then tap the search box.</li> <li>2. Type <b>c</b>, tap <b>Control Panel</b>, tap <b>Hardware and Sound</b>, and then tap <b>Sound</b>.</li> <li>3. When the Sound window opens, tap the <b>Sounds</b> tab. Under Program Events, tap any sound event, such as a beep or alarm, and then tap <b>Test</b>.</li> </ol>
	<ol style="list-style-type: none"> <li>1. On the Start screen, type <b>c</b>, and then select <b>Control Panel</b> from the list of applications.</li> <li>2. Select <b>Hardware and Sound</b>, and then select <b>Sound</b>.</li> <li>3. When the Sound window opens, select the <b>Sounds</b> tab. Under Program Events, select any sound event, such as a beep or alarm, and then click <b>Test</b>.</li> </ol> <p>You should hear sound through the speakers or through connected headphones.</p>

To check the recording functions on your computer, follow these steps:

Mode	Steps
	<ol style="list-style-type: none"> <li>1. Swipe from the right edge of the TouchPad or touch screen to display the charms, tap <b>Search</b>, and then tap the search box.</li> <li>2. Type <b>s</b>, and then tap <b>Sound Recorder</b>.</li> <li>3. Tap <b>Start Recording</b> and speak into the microphone. Save the file to your desktop.</li> <li>4. Open a multimedia program and play the recording.</li> </ol>
	<ol style="list-style-type: none"> <li>1. From the Start screen, type <b>s</b>, and then select <b>Sound Recorder</b>.</li> <li>2. Click <b>Start Recording</b> and speak into the microphone. Save the file to your desktop.</li> <li>3. Open a multimedia program and play the recording.</li> </ol>


To confirm or change the audio settings on your computer:

Mode	Steps
	<ol style="list-style-type: none"> <li>1. Swipe from the right edge of the TouchPad or touch screen to display the charms, tap <b>Search</b>, and then tap the search box.</li> <li>2. Type <b>c</b>, and then tap <b>Control Panel</b> from the list of applications.</li> <li>3. Tap <b>Hardware and Sound</b>, and then tap <b>Sound</b>.</li> </ol>
	<ol style="list-style-type: none"> <li>1. From the Start screen, type <b>c</b>, and then select <b>Control Panel</b> from the list of applications.</li> <li>2. Select <b>Hardware and Sound</b>, and then select <b>Sound</b>.</li> </ol>


## Using video

Your HP computer is a powerful video device that enables you to watch streaming video from your favorite websites and download video and movies to watch on your computer without needing to connect to a network.

To enhance your viewing enjoyment, use one of the video ports on the keyboard dock to connect an external monitor, projector, or television. Your computer has a high-definition multimedia interface (HDMI) port, which allows you to connect a high-definition monitor or television.


 **IMPORTANT:** Be sure that the external device is connected to the correct port on the computer, using the correct cable. Check the device manufacturer's instructions if you have questions.

## Connecting an HDMI device

 **NOTE:** To connect an HDMI device to your keyboard dock, you need an HDMI cable, sold separately.


To see the computer screen image on a high-definition television or monitor, connect the high-definition device according to the following instructions.

1. Connect one end of the HDMI cable to the HDMI port on the computer.

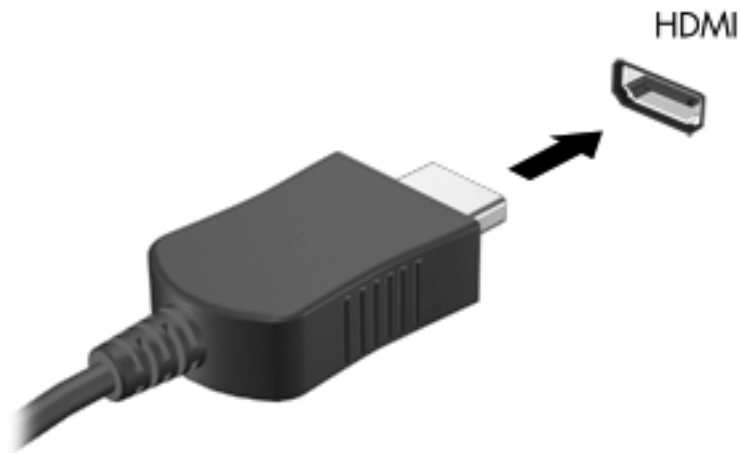

2. Connect the other end of the cable to the high-definition television or monitor.
3. Press **f4** on the computer to alternate the computer screen image between 4 display states:
  - **PC screen only:** View the screen image on the computer only.
  - **Duplicate:** View the screen image simultaneously on *both* the computer and external device.
  - **Extend:** View the screen image extended across *both* the computer and external device.
  - **Second screen only:** View the screen image on the external device only.

Each time you press **f4** on the computer, the display state changes.

 **NOTE:** Adjust the screen resolution of the external device, especially if you choose the “Extend” option. From the Start screen on the keyboard dock, type **c**, and then select **Control Panel** from the list of applications. Select **Appearance and Personalization**. Under **Display**, select **Adjust screen resolution** for best results.

## Configuring HDMI audio settings

HDMI is the only video interface that supports high-definition video and audio. After you connect an HDMI television to the computer, you can then turn on HDMI audio by following these steps:

1. From the Windows desktop, right-click the **Speakers** icon in the notification area, at the far right of the taskbar, and then select **Playback devices**.
2. On the Playback tab, select the name of the digital output device.
3. Click **Set Default**, and then click **OK**.

To return the audio stream to the computer speakers:

1. From the Windows desktop, right-click the **Speakers** icon in the notification area, at the far right of the taskbar, and then click **Playback devices**.
2. On the Playback tab, click **Speakers and Headphones**.
3. Click **Set Default**, and then click **OK**.

## Camera


Your tablet includes an integrated HP TrueVision Full HD Webcam which is an input device that allows you to record video and take photos.

---

# 5 Navigating using the keyboard, touch gestures and pointing devices

Your computer allows navigation using touch gestures in addition to the keyboard and mouse. Touch gestures can be used on your computer's TouchPad or on a touch screen.

---

 **NOTE:** An external USB mouse (purchased separately) can be connected to one of the USB ports on the keyboard dock.

---

Review the *Windows 8 Basics* guide included with your computer. The guide provides information on common tasks using the TouchPad, touch screen, or the keyboard.

Action keys do not display or function on the on-screen keyboard of the tablet. Tablet models have special hot key functions on the keyboard to perform routine tasks.


## Using the TouchPad

The TouchPad allows you to navigate the computer screen by using simple finger movements.

You can customize the touch gestures by changing settings, button configurations, click speed, and pointer options. From the Start screen, type **c**, select **Control Panel**, and then select **Hardware and Sound**. Under **Devices and Printers**, select **Mouse**.

## Using TouchPad gestures

---

 **NOTE:** TouchPad gestures are not supported in all apps.


---



## Tapping

To make an on-screen selection, use the Tap function on the TouchPad.

- Point to an item on the screen, and then tap one finger on the TouchPad zone to make a selection. Double-tap an item to open it.

 **NOTE:** Press and hold on the TouchPad to open a help screen that provides information about the selected item.


---



## Scrolling

Scrolling is useful for moving up, down, or sideways on a page or image.


- Place two fingers slightly apart on the TouchPad zone and then drag them up, down, left, or right.

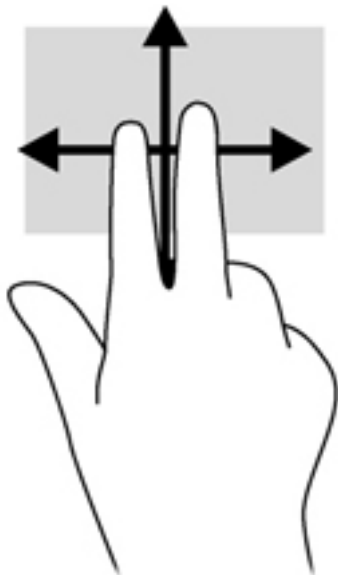

## Pinching/zooming

Pinching and zooming allow you to zoom out or in on images or text.

- Zoom in by placing two fingers together on the TouchPad zone and then moving your fingers apart.
- Zoom out by placing two fingers apart on the TouchPad zone and then moving your fingers together.

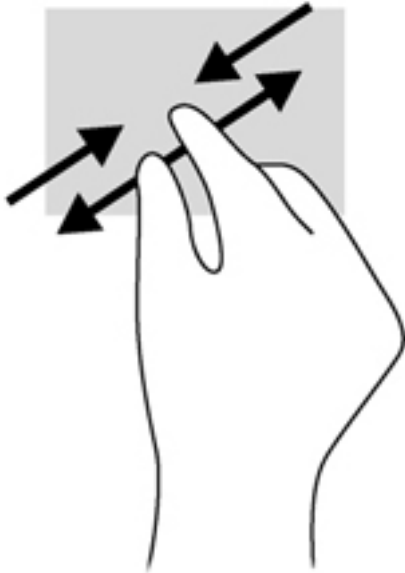


## Rotating (select models only)

Rotating allows you to turn items such as photos.

- Point to an object, then anchor the forefinger of your left hand in the TouchPad zone. Using your right hand, slide your forefinger in a sweeping motion from 12 o'clock to 3 o'clock. To reverse the rotation, move your forefinger from 3 o'clock to 12 o'clock.




**NOTE:** Rotate is intended for specific apps where you can manipulate an object or image. It may not be functional for all apps.

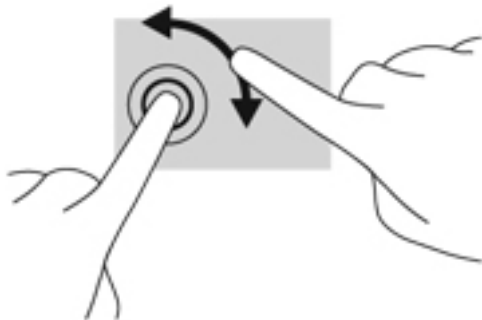

## Flicking (select models only)

Flicking allows you to navigate through screens or quickly scroll through documents.

- Place three fingers on the TouchPad zone and flick your fingers in a light, quick motion up, down, left or right.

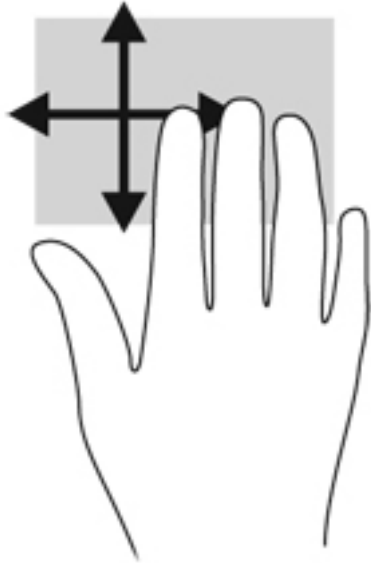


## Edge swipes

Edge swipes allow you to access toolbars on your computer for tasks such as changing settings and finding or using apps.

## Right-edge swipe


The right-edge swipe accesses the charms, which let you search, share, start apps, access devices, or change settings.

- Swipe your finger gently from the right edge to display the charms.

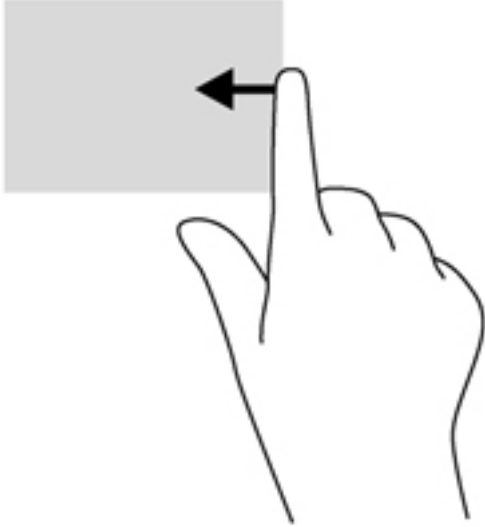


## Top-edge swipe

The top-edge swipe allows you to open apps available on the Start screen.

 **IMPORTANT:** When an app is active, the top-edge gesture varies depending on the app.


- Swipe your finger gently from the top edge to display available apps.

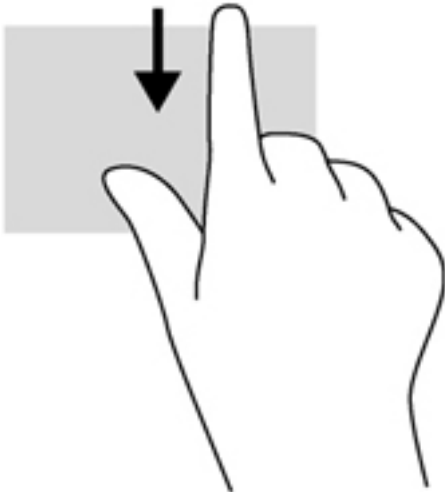

## Left-edge swipe

The left-edge swipe accesses your recently opened apps so that you can switch between them quickly.


- Swipe your finger gently from the left edge of the TouchPad to switch between recently opened apps.

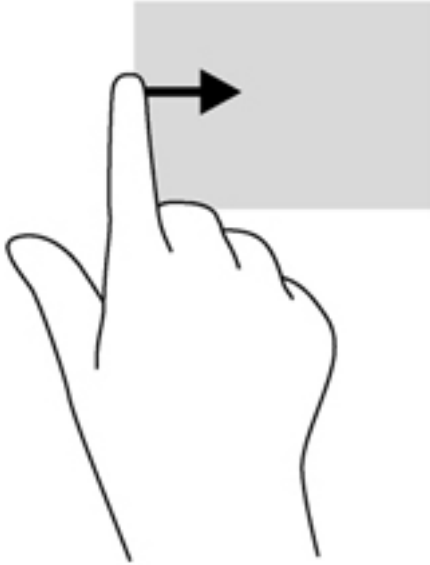




## Using the keyboard and mouse

The keyboard and mouse allow you to type, select items, scroll and perform the same functions as using touch gestures. The keyboard dock allows you to use special action keys and hot keys to perform specific functions.

---

 **NOTE:** Action keys do not display or function on the on-screen keyboard of the tablet.

 **TIP:** The Windows key  on the keyboard allows you to quickly return to the Start screen from an open app or the Windows desktop. Pressing the Windows key again returns you to the previous screen.

 **NOTE:** Depending on the country or region, your keyboard may have different keys and keyboard functions than those discussed in this section.


---

## Using the keys

Your computer has different ways to quickly access information or perform functions with certain key combinations.

## Using the action keys

---

 **NOTE:** Action keys do not display or function on the on-screen keyboard of the tablet.

---












An action key on the keyboard dock performs an assigned function. The icon on each of the **f1** through **f4** and **f6** through **f12** keys illustrates the assigned function for that key.

To use an action key function, press and hold the key.


The keyboard dock action key feature is enabled at the factory. You can disable this feature in Setup Utility (BIOS). See [Using Setup Utility \(BIOS\) and System Diagnostics on page 63](#) for instructions on opening Setup Utility (BIOS), and then follow the instructions at the bottom of the screen.


To activate the assigned function after disabling the action key feature on the keyboard dock, you must press the **fn** key in combination with the appropriate action key.

**CAUTION:** Use extreme care when making changes in Setup Utility. Errors can prevent the computer from operating properly.






Icon	Key	Description
	<b>f1</b>	Opens Help and Support, which provides tutorials, information about the Windows operating system and your computer, answers to questions, and updates to your computer.  Help and Support also provides automated troubleshooting tools and access to support.
	<b>f2</b>	Decreases the screen brightness incrementally as long as you hold down the key.
	<b>f3</b>	Increases the screen brightness incrementally as long as you hold down the key.
	<b>f4</b>	Switches the screen image between display devices connected to the system. For example, if a monitor is connected to the computer, pressing this key alternates the screen image from the computer display to the monitor display to a simultaneous display on both the computer and the monitor.  This action key can also alternate images among other devices that are receiving video information from the computer.
	<b>f6</b>	Mutes or restores speaker sound.
	<b>f7</b>	Decreases speaker volume incrementally as long as you hold down the key.
	<b>f8</b>	Increases speaker volume incrementally as long as you hold down the key.
	<b>f9</b>	Plays the previous track of an audio CD or the previous section of a DVD or a BD.
	<b>f10</b>	Begins, pauses, or resumes playback of an audio CD, a DVD, or a BD.
	<b>f11</b>	Plays the next track of an audio CD or the next section of a DVD or a BD.
	<b>f12</b>	Turns the wireless feature on or off.  <b>NOTE:</b> A wireless network must be set up before a wireless connection is possible.

## Using Microsoft Windows 8 shortcut keys

Microsoft Windows 8 provides shortcuts to perform actions quickly. Press the Windows key  in combination with the key to perform the action.

 **NOTE:** Action keys do not display or function from the on-screen keyboard of the tablet.

For additional information on Windows 8 shortcut keys go to HP Support Assistant. To access HP Support Assistant, on the Start screen, select the **HP Support Assistant** app.

Shortcut key	Key	Description
		Opens the Start screen.
	+ c	Opens the charms.
	+ d	Opens the Windows desktop.
	+ q	Opens the All Apps screen.
	+ tab	Switches between open apps. <b>NOTE:</b> Continue to press this key combination until the app you want opens.
alt	+ f4	Closes an active app. <b>NOTE:</b> Action keys do not display or function on the on-screen keyboard of the tablet.

## Using the hot keys

A hot key is a combination of the **fn** key and either the **esc** key or the **b** key.

To use a hot key:

- ▲ Briefly press the **fn** key, and then briefly press the second key of the combination.

Function	Hot key	Description
Display system information.	<b>fn+esc</b>	Displays information about system hardware components and the system BIOS version number.
Control the bass settings.	<b>fn+b</b>	<p>Enables or disables the Beats Audio bass settings.</p> <p>Beats Audio is an enhanced audio feature that provides a deep, controlled bass while maintaining a clear sound. Beats Audio is enabled by default.</p> <p>You can also view and control the bass settings through the Windows operating system. To view and control the bass properties, open the Beats Audio Control Panel.</p> <p>To open Beats Audio Control Panel, from the Start screen on the keyboard dock, type <b>c</b>, select <b>Control Panel</b>, select <b>Hardware and Sound</b>, and then select <b>Beats Audio Control Panel</b>.</p>



---

## 6 Managing power

Your computer can operate on either battery power or external power. When the computer is only running on battery power and an AC power source is not available to charge the battery, it is important to monitor and conserve the battery charge. Your computer supports an optimal power plan to manage how your computer uses and conserves power so that computer performance can be balanced with power conservation.

### Initiating Sleep and Hibernation

Microsoft Windows has two power-saving states, Sleep and Hibernation.

- **Sleep**—The Sleep state is automatically initiated after a period of inactivity when running on battery power or on external power. Your work is saved to memory, allowing you to resume your work very quickly. You can also initiate Sleep manually. For more information, see [Initiating and exiting Sleep on page 47](#).
- **Hibernation**—The Hibernation state is automatically initiated if the battery reaches a critical level. In the Hibernation state, your work is saved to a hibernation file and the computer powers down.



**NOTE:** If you want to initiate Hibernation manually, you can enable Hibernation using Power Options. For more information, see [Enabling and exiting Hibernation \(select models only\) on page 48](#).




**CAUTION:** To reduce the risk of possible audio and video degradation, loss of audio or video playback functionality, or loss of information, do not initiate Sleep while reading from or writing to a disc or an external media card.



**NOTE:** You cannot initiate any type of networking connection or perform any computer functions while the computer is in the Sleep state or in Hibernation.

### Initiating and exiting Sleep

With the computer on, you can initiate Sleep in the following ways:

- Briefly press the power button.
-  Swipe from the right edge of the TouchPad or touch screen to display the charms, tap **Settings**, tap the **Power** icon, and then tap **Sleep**.

– or –




From the Start screen, point to the upper-right or lower-right corner of the screen. When the charms list opens, select **Settings**, select the **Power** icon, and then select **Sleep**.

To exit Sleep:

- Press the Windows key.
- Briefly press the power button.
- If the display is closed, and the tablet is connected to the keyboard dock, open the display.
- Press a key on the keyboard.
- Tap or swipe the TouchPad.

When the computer exits Sleep, the power lights turn on and the computer returns to the screen where you stopped working.

---

 **NOTE:** If you have set a password to be required on wakeup, you must enter your Windows password before the computer will return to the screen.

---


## Enabling and exiting Hibernation (select models only)

You can enable user-initiated Hibernation and change other power settings and timeouts using Power Options:

1. From the Start screen, type `power`, select **Settings**, and then select **Power Options** from the list of applications.
2. In the left pane, click **Choose what the power button does**.
3. Click **Change Settings that are currently unavailable**.
4. In the **When I press the power button** area, select **Hibernate**.
5. Click **Save changes**.

When the computer exits Hibernation, the power lights turn on and your work returns to the screen.

---

 **NOTE:** If you have set a password to be required on wakeup, you must enter your Windows password before your work will return to the screen.


---

## Setting password protection on wakeup

To set the computer to prompt for a password when the computer exits Sleep or Hibernation, follow these steps:

1. From the Start screen, type `power`, select **Settings**, and then select **Power Options** from the list of applications.
2. In the left pane, click **Require a password on wakeup**.
3. Click **Change Settings that are currently unavailable**.
4. Click **Require a password (recommended)**.

---

 **NOTE:** If you need to create a user account password or change your current user account password, click **Create or change your user account password**, and then follow the on-screen instructions. If you do not need to create or change a user account password, go to step 5.

---

5. Click **Save changes**.

# Using the power meter and power settings

The power meter is located on the Windows desktop. The power meter allows you to quickly access power settings and view the remaining battery charge.

- To display the percentage of remaining battery charge and the current power plan, on the Windows desktop, point over the power meter icon.
- To use Power Options, click the power meter icon and select an item from the list. From the Start screen, type `power`, select **Settings**, and then select **Power Options**.

Different power meter icons indicate whether the computer is running on battery or external power. The icon also displays a message if the battery has reached a low or critical battery level.

## Running on battery power

When a charged battery is in the tablet and the tablet is not plugged into external power, the tablet runs on battery power. If the tablet has a charged battery installed and the AC adapter is disconnected from the tablet, the tablet automatically switches to battery power and the display brightness decreases to conserve battery life. The battery in the tablet slowly discharges when the tablet is off and unplugged from external power. When the tablet is attached to the keyboard dock, the system is powered by the keyboard dock's battery until the battery reaches a critical level in the keyboard dock. At that time, the system switches to the tablet's battery.

Computer battery life varies, depending on power management settings, programs running on the computer, display brightness, external devices connected to the tablet, and other factors.



**NOTE:** There is a secondary battery in the keyboard dock. When the tablet is attached to the keyboard dock, the system is powered by the keyboard dock's battery.

## Factory-sealed battery

To monitor the status of your battery, or if the battery is no longer holding a charge, run Battery Check in HP Support Assistant. To access battery information, from the Start screen, type `support`, select the **HP Support Assistant** app, and then select **Battery and performance**. If Battery Check indicates that your battery should be replaced, contact support.

## Finding battery information

To monitor the status of your battery, or if the battery is no longer holding a charge, run Battery Check in HP Support Assistant. To access battery information, from the Start screen, type `support`, select the **HP Support Assistant** app, and then select **Battery and performance**.

HP Support Assistant provides the following tools and information about the battery:

- Battery test
- Information on battery types, specifications, life cycles, and capacity

## Conserving battery power

Tips for conserving battery power and maximizing battery life:

- Lower the brightness on the display.
- Select the **Power saver** setting in Power Options.
- Turn off wireless when you are not using them.
- Disconnect unused external devices that are not plugged into an external power source, such as an external hard drive connected to a USB port.
- Stop, disable, or remove any external media cards that you are not using.
- Before you leave your work, initiate Sleep or shut down the computer.

## Identifying low battery levels

When a battery that is the sole power source for the computer reaches a low or critical battery level, the following behavior occurs:

- The battery light (select models only) indicates a low or critical battery level.

– or –

- The power meter icon on the Windows desktop shows a low or critical battery notification.



**NOTE:** For additional information about the power meter, see [Using the power meter and power settings on page 49](#).

The computer takes the following actions for a critical battery level:

- If Hibernation is disabled and the computer is on or in the Sleep state, the computer remains briefly in the Sleep state, and then shuts down and loses any unsaved information.
- If Hibernation is enabled and the computer is on or in the Sleep state, the computer initiates Hibernation.

## Resolving a low battery level

### Resolving a low battery level when external power is available

- Connect an AC adapter.
- Connect the keyboard dock to the tablet.
- Connect an optional power adapter purchased as an accessory from HP.

### Resolving a low battery level when no power source is available

- Initiate Hibernation (see [Enabling and exiting Hibernation \(select models only\) on page 48](#)).
- Save your work and shut down the computer.

## Resolving a low battery level when the computer cannot exit Hibernation

When the computer lacks sufficient power to exit Hibernation, follow these steps:

1. Connect the AC adapter to the computer and to external power.
2. Exit Hibernation by pressing the power button.

## Running on external AC power

For information on connecting to AC power, refer to the *Setup Instructions* poster provided in the computer box.

The computer does not use battery power when the computer is connected to AC external power with an approved AC adapter or an optional docking/expansion device.

---

**⚠ WARNING!** To reduce potential safety issues, use only the AC adapter provided with the computer, a replacement AC adapter provided by HP, or a compatible AC adapter purchased from HP specifically for this system.

**⚠ CAUTION:** To prevent damage to your system, do not use AC adapters from other tablets or computers.

---

Connect the computer to external AC power under any of the following conditions:

---

**⚠ WARNING!** Do not charge the computer battery while you are onboard aircraft.

---

- When charging or calibrating a battery
- When installing or modifying system software
- When writing information to a disc (select models only)
- When performing a backup or recovery

When you connect the computer to external AC power:

- The battery begins to charge.
- The display brightness increases.
- The power meter icon on the Windows desktop changes appearance.

When you disconnect external AC power, the following events occur:

- The computer switches to battery power.
- The display brightness automatically decreases to save battery life.
- The power meter icon on the Windows desktop changes appearance.

## Shutting down (turning off) the computer

---

**⚠ CAUTION:** Unsaved information is lost when the computer shuts down. Be sure to save your work before shutting down the computer.

---

The Shut down command closes all open programs, including the operating system, and then turns off the display and computer.

Shut down the computer under any of the following conditions:

- When you are connecting an external hardware device that does not connect to a USB or video port
- When the computer will be unused and disconnected from external power for an extended period

To shut down the tablet when it is not connected to the keyboard dock:

- ▲ Press the Windows key and the power button at the same time, and then tap **Shut down**.

Although you can turn off the computer by holding down the power button, the recommended procedure to shut down computer is to use the Windows Shut down command.



---

**NOTE:** If the computer is in the Sleep state or in Hibernation, you must first exit Sleep or Hibernation before shutdown is possible by briefly pressing the power button.

---

1. Save your work and close all open programs.
2. Swipe from the right edge of the TouchPad or touch screen to display the charms, tap **Settings**, tap the **Power** icon, and then tap **Shut down**.

– or –

From the Start screen, point to the upper-right or lower-right corner of the screen.

3. When the charms list opens, click **Settings**, click the **Power** icon, and then click **Shut down**.

If the computer is unresponsive and you are unable to use the preceding shutdown procedures, try the following emergency procedures in the sequence provided:

To shut down the unresponsive tablet:

- ▲ Press both the Windows key and the power button at the same time.

To shut down the unresponsive tablet when it is connected to the keyboard dock:

- Press **ctrl+alt+delete**, click the **Power** icon, and then select **Shut down**.
- Press and hold the power button for at least 5 seconds.
- Disconnect the computer from external power.


---


# 7 Managing and sharing information

Drives are digital storage devices that help you store, manage, share, and access information. Your computer has a solid state drive that stores your computer's software, operating system, and also provides storage for all of your personal files.

For added capacity or functionality, connect an external drive (purchased separately), such as an optical drive or hard drive, or insert a memory card directly from your phone or camera. A USB flash drive, connected to the Universal Serial Bus (USB) port on your computer, also allows quick data transfer. Some devices use the computer's power to run; others have their own power source. Some devices come with software that must be installed.

---

 **NOTE:** For information about connecting external wireless devices, see [Connecting to a network on page 25](#).


 **NOTE:** For more information about required software and drivers, or to learn which computer port to use, see the manufacturer's instructions.

---

## Using a USB device

Most computers have more than one USB port, because this versatile interface allows you to connect numerous kinds of external devices—such as a USB keyboard, mouse, external drive, printer, scanner, or USB hub—to your computer.

---

 **NOTE:** Some USB devices may not be supported when the computer is running on AC or battery power if they do not have their own AC adapters. More than one USB device may not be supported simultaneously when the computer is running on AC or battery power.


---

Type	Description
USB 2.0	Transfers data at 60 MB/s.
USB 3.0	Transfers data at 640 MB/s. USB 3.0 ports, also known as SuperSpeed ports, are also compatible with USB 1.0 and 2.0 devices.

---

## Connecting a USB device


---

 **CAUTION:** To reduce the risk of damage to a USB connector, use minimal force to connect the device.

---

- ▲ Connect the USB cable for the device to the USB port.

---


 **NOTE:** The USB port on your computer may look slightly different from the illustration in this section.

---



A sound indicates that the device has been detected.


---

 **NOTE:** The first time you connect a USB device, a message displays on the Windows desktop and an icon appears in the notification area, letting you know that the device is recognized by the computer.

---

## Removing a USB device

---


 **CAUTION:** To reduce the risk of damage to a USB connector, do not pull on the cable to remove the USB device.

**CAUTION:** To reduce the risk of loss of information or an unresponsive system, use the following procedure to safely remove the USB device.

1. Save your information and close all programs associated with the device.
2. From the Windows desktop, tap or click the hardware icon in the notification area, at the far right of the taskbar. A message, **Safely remove hardware and eject media** is revealed. Follow the on-screen instructions.

## Connecting a powered USB device

---

 **CAUTION:** To reduce the risk of damage to the equipment when connecting a powered device, be sure that the device is turned off and its AC power cord is unplugged.

---

1. Connect the device to the computer.
2. Plug the device power cord into a grounded AC outlet.
3. Turn on the device.

To disconnect an unpowered external device, stop the device, and then disconnect it from the computer. To disconnect a powered external device, turn off the device, disconnect it from the computer, and then unplug the AC power cord.




# Inserting and removing a memory card

To insert a memory card:

**⚠ CAUTION:** To reduce the risk of damage to the memory card connectors, use minimal force to insert a memory card.

1. Hold the card label-side up, with the connectors facing the computer.
2. Insert the card into the memory card reader, and then press in on the card until it is firmly seated.

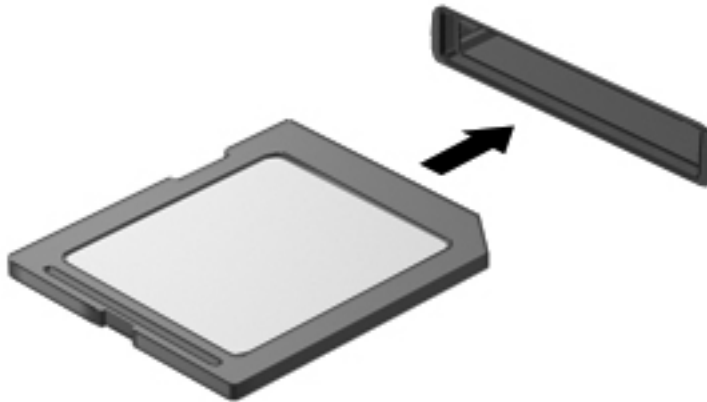


A sound indicates that the device has been detected.

To remove a memory card:

**⚠ CAUTION:** To reduce the risk of loss of data or an unresponsive system, use the following procedure to safely remove the memory card.

1. Save your information and close all programs associated with the memory card.
2. From the Windows desktop, tap or click the remove hardware icon in the notification area, at the far right of the taskbar. Then, follow the on-screen instructions.
3. Press in on the card **(1)**, and then remove it from the slot **(2)**.

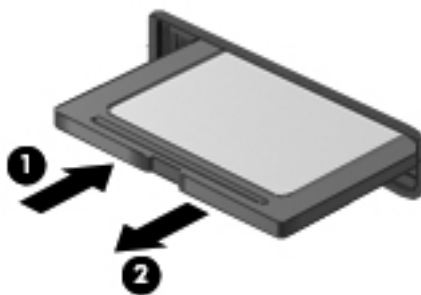

**📝 NOTE:** If the card is not ejected, pull the card out of the slot.

---

# 8 Maintaining your computer

It is important to perform regular maintenance to keep your computer in optimal condition. This chapter provides information about improving the performance of your computer by running tools such as Disk Defragmenter and Disk Cleanup. It also provides information about updating your programs and drivers, instructions for cleaning your computer, and tips for traveling with your computer.

## Improving performance

Everyone wants a fast computer and by performing regular maintenance tasks, using tools such as Disk Defragmenter and Disk Cleanup, you can drastically improve the performance of your computer. Also, as your computer gets older, you might consider installing larger drives and adding more memory.

### Using Disk Cleanup

Disk Cleanup searches the hard drive for unnecessary files that you can safely delete to free up disk space and help the computer run more efficiently.

To run Disk Cleanup:

1. From the Start screen, type `disk`, select **Settings**, and then select **Free up disk space by deleting unnecessary files**.
2. Follow the on-screen instructions.

## Updating programs and drivers

HP recommends that you update your programs and drivers on a regular basis to the latest versions. Updates can resolve issues and bring new features and options to your computer. Technology is always changing, and updating programs and drivers allows your computer to run the latest technology available. For example, older graphics components might not work well with the most recent gaming software. Without the latest driver, you would not be getting the most out of your equipment.

## Cleaning your computer

### Cleaning products

Use the following products to safely clean your computer:

- Dimethyl benzyl ammonium chloride 0.3 percent maximum concentration (For example: disposable wipes. These wipes come in a variety of brand names.)
- Alcohol-free glass cleaning fluid
- Water with mild soap solution

- Dry microfiber cleaning cloth or a chamois (static-free cloth without oil)
- Static-free cloth wipes

---

**⚠ CAUTION:** Avoid strong cleaning solvents that can permanently damage your computer. If you are not sure that a cleaning product is safe for your computer, check the product contents to make sure that ingredients such as alcohol, acetone, ammonium chloride, methylene chloride, and hydrocarbons are not included in the product.

---

Fibrous materials, such as paper towels, which can scratch the computer. Over time, dirt particles and cleaning agents can get trapped in the scratches.

## Cleaning procedures

Follow the procedures in this section to safely clean your computer.

---

**⚠ WARNING!** To prevent electric shock or damage to components, do not attempt to clean your computer while it is turned on:

Turn off the computer.

Disconnect external power.

Disconnect all powered external devices.

---

**⚠ CAUTION:** To prevent damage to internal components, do not spray cleaning agents or liquids directly on any computer surface. Liquids dripped on the surface can permanently damage internal components.

---

## Cleaning the display

Gently wipe the display using a soft, lint-free cloth moistened with an *alcohol-free* glass cleaner. Be sure that the display is dry before closing the display.

## Cleaning the sides and cover

To clean the sides and cover, use a soft microfiber cloth or chamois moistened with one of the cleaning solutions listed previously or use an acceptable disposable wipe.

---

**📝 NOTE:** When cleaning the cover of the computer, use a circular motion to aid in removing dirt and debris.

---

## Cleaning the TouchPad, keyboard, or mouse

---

**⚠ WARNING!** To reduce the risk of electric shock or damage to internal components, do not use a vacuum cleaner attachment to clean the keyboard. A vacuum cleaner can deposit household debris on the keyboard surface.

---

**⚠ CAUTION:** To prevent damage to internal components, do not allow liquids to drip between the keys.

---

- To clean the TouchPad, keyboard, or mouse, use a soft microfiber cloth or chamois moistened with one of the cleaning solutions listed previously or use an acceptable disposable wipe.
- To prevent keys from sticking and to remove dust, lint, and particles from the keyboard, use a can of compressed air with a straw extension.

# Traveling with or shipping your computer

If you have to travel with or ship your computer, here are some tips to keep in mind to keep your equipment safe.

- Prepare the computer for traveling or shipping:
  - Attach the tablet to the keyboard dock to protect the tablet screen.
  - Back up your information to an external drive.
  - Remove all discs and all external media cards, such as memory cards, from the computer.
  - Turn off, and then disconnect all external devices.
  - Shut down the computer.
- Take along a backup of your information. Keep the backup separate from the computer.
- When traveling by air, carry the computer as hand luggage; do not check it in with the rest of your luggage.

---

**⚠ CAUTION:** Avoid exposing a drive to magnetic fields. Security devices with magnetic fields include airport walk-through devices and security wands. Airport conveyer belts and similar security devices that check carry-on baggage use X-rays instead of magnetism and do not damage drives.

---

- If you plan to use the computer during a flight, listen for the in-flight announcement that tells you when you are allowed to use your computer. In-flight computer use is at the discretion of the airline.
- If you are shipping the computer or a drive, use suitable protective packaging and label the package "FRAGILE."
- If the computer has a wireless device installed, the use of these devices may be restricted in some environments. Such restrictions may apply onboard aircraft, in hospitals, near explosives, and in hazardous locations. If you are uncertain of the policy that applies to the use of a particular device, ask for authorization to use your computer before you turn it on.
- If you are traveling internationally, follow these suggestions:
  - Check the computer-related customs regulations for each country or region on your itinerary.
  - Check the power cord and adapter requirements for each location in which you plan to use the computer. Voltage, frequency, and plug configurations vary.

---

**⚠ WARNING!** To reduce the risk of electric shock, fire, or damage to the equipment, do not attempt to power the computer with a voltage converter kit sold for appliances.

---

# 9 Securing your computer and information

Tablet security is essential for protecting the confidentiality, integrity, and availability of your information. Standard security solutions provided by the Windows operating system, HP applications, the non-Windows Setup Utility (BIOS), and other third-party software can help protect your computer from a variety of risks, such as viruses, worms, and other types of malicious code.



**IMPORTANT:** Some security features listed in this chapter may not be available on your computer.

Tablet risk	Security feature
Unauthorized use of the computer	Power-on password
Computer viruses	Antivirus software
Unauthorized access to data	Firewall software
Unauthorized access to Setup Utility (BIOS) settings and other system identification information	Administrator password
Ongoing or future threats to the computer	Software updates
Unauthorized access to a Windows user account	User password

## Using passwords

A password is a group of characters that you choose to secure your computer information and to protect online transactions. Several types of passwords can be set. For example, when you set up your computer for the first time, you were asked to create a user password to secure your computer. Additional passwords can be set in Windows or in the HP Setup Utility (BIOS) that is preinstalled on your computer.

You may find it helpful to use the same password for a Setup Utility (BIOS) feature and for a Windows security feature.

Use the following tips for creating and saving passwords:

- To reduce the risk of being locked out of the computer, record each password and store it in a secure place away from the computer. Do not store passwords in a file on the computer.
- When creating passwords, follow requirements set by the program.
- Change your passwords at least every three months.
- An ideal password is long and has letters, punctuation, symbols, and numbers.
- Before you send your computer for service, back up your files, delete confidential files, and then remove all password settings.

For additional information about Windows passwords, such as screen-saver passwords, from the Start screen, type `support`, and then select the **HP Support Assistant** app.

## Setting Windows passwords

Password	Function
User password	Protects access to a Windows user account. You may also set up your computer to require the user password to exit Sleep. See <a href="#">Setting password protection on wakeup on page 48</a> for more information.
Administrator password	Protects administrator-level access to computer contents. <b>NOTE:</b> This password cannot be used to access Setup Utility (BIOS) contents.

## Setting Setup Utility (BIOS) passwords

Password	Function
Administrator password	<ul style="list-style-type: none"><li>• Must be entered each time you access Setup Utility (BIOS).</li><li>• If you forget your administrator password, you cannot access Setup Utility (BIOS).</li></ul> <b>NOTE:</b> The administrator password can be used in place of the power-on password. <b>NOTE:</b> Your administrator password is not interchangeable with an administrator password set in Windows, nor is it displayed as it is set, entered, changed, or deleted. <b>NOTE:</b> If you enter the power-on password at the first password check before the "Press the ESC key for Startup Menu" message is displayed, you must enter the administrator password to access Setup Utility (BIOS).
Power-on password	<ul style="list-style-type: none"><li>• Must be entered each time you turn on or restart the computer.</li><li>• If you forget your power-on password, you cannot turn on or restart the computer.</li></ul> <b>NOTE:</b> The administrator password can be used in place of the power-on password. <b>NOTE:</b> A power-on password is not displayed as it is set, entered, changed, or deleted.

To set, change, or delete an administrator or power-on password in Setup Utility (BIOS):

1. To start Setup Utility (BIOS), turn on or restart the computer, quickly press `esc`, and then press `f10`.
2. Use the arrow keys to select **Security**, and then follow the on-screen instructions.

Your changes take effect when the computer restarts.

## Using Internet security software

When you use your computer to access email, a network, or the Internet, you potentially expose your computer to computer viruses, spyware, and other online threats. An antivirus program may be preinstalled on your computer. It is strongly recommended that you use an antivirus program of your choice in order to fully protect your computer.

### Using antivirus software

Computer viruses can disable programs, utilities, or the operating system, or cause them to function abnormally. Antivirus software can detect most viruses, destroy them, and in most cases, repair any damage they have caused.

To provide ongoing protection against newly discovered viruses, antivirus software must be kept up to date.

An antivirus program may be preinstalled on your computer. It is strongly recommended that you use the antivirus program of your choice in order to fully protect your computer.

For more information about computer viruses, from the Start screen, type `support`, and then select the **HP Support Assistant** app.

### Using firewall software

Firewalls are designed to prevent unauthorized access to a system or network. A firewall can be software you install on your computer and/or network, or it can be a combination of both hardware and software.

There are two types of firewalls to consider:

- Host-based firewalls—Software that protects only the computer it is installed on.
- Network-based firewalls—Installed between your DSL or cable modem and your home network to protect all the computers on the network.

When a firewall is installed on a system, all data sent to and from the system is monitored and compared with a set of user-defined security criteria. Any data that does not meet those criteria is blocked.

## Installing software updates

HP, Microsoft Windows, and third-party software installed on your computer should be regularly updated to correct security problems and improve software performance. For more information, see [Updating programs and drivers on page 56](#).

### Installing Windows updates

Updates to the operating system and other software may have become available after the computer left the factory. Microsoft sends out alerts regarding critical updates. To protect the computer from security breaches and viruses, install all critical updates from Microsoft as soon as you receive an alert.

To be sure that all available updates are installed on the computer, observe these guidelines:

- Run Windows Update as soon as possible after you set up your computer. From the Start screen, type *w*, select **Settings**, and then select **Windows Update**.
- Run Windows Update monthly thereafter.
- Obtain updates to Windows and other Microsoft programs, as they are released, from the Microsoft website and through the updates link in Help and Support.

## Installing HP and third-party software updates

HP recommends that you regularly update the software and drivers that were originally installed on your computer. To download the latest versions, go to <http://www.hp.com/support>. At this location, you can also register to receive automatic update notifications when they become available.

If you have installed third-party software after you purchased your computer, regularly update the software. Software companies provide software updates to their products to correct security problems and improve functionality of the software.

## Securing your wireless network

When you set up your wireless network, always enable security features. For more information, see [Protecting your WLAN on page 27](#).

## Backing up your software applications and information

Regularly back up your software applications and information to protect them from being permanently lost or damaged through a virus attack or a software or hardware failure. For more information, see [Backing up, restoring, and recovering on page 66](#).



---

# 10 Using Setup Utility (BIOS) and System Diagnostics


Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

## Starting Setup Utility (BIOS)

To start Setup Utility (BIOS), turn on or restart the computer, quickly press **esc**, and then press **f10**.

Information about how to navigate in Setup Utility (BIOS) is located at the bottom of the screen.

---

 **NOTE:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

---

## Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.


## Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by pressing **fn** + **esc** (if you are already in Windows) or by using Setup Utility (BIOS).

1. Start Setup Utility (BIOS) see [Starting Setup Utility \(BIOS\) on page 63](#).
2. Use the arrow keys to select **Main**.
3. To exit Setup Utility (BIOS) without saving your changes, use the arrow keys to select **Exit**, select **Exit Discarding Changes**, and then press **enter**.
4. Click **Yes**.

## Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power or connected to an optional power source. During the download and installation, follow these instructions:


Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. From the Start screen, type `support`, and then select the **HP Support Assistant** app.
2. Click **Updates and tune-ups**, and then click **Check for HP updates now**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
  - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
  - b. Follow the on-screen instructions to download your selection to the hard drive.


If the update is more recent than your BIOS, make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps:

1. From the Start screen, type `e`, and then select **File Explorer**.
2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).

The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

## Using HP PC Hardware Diagnostics (UEFI)

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs

outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

To start HP PC Hardware Diagnostics UEFI:

1. Turn on or restart the computer, quickly press **esc**, and then press **f2**.

The BIOS searches three places for the HP PC Hardware Diagnostics (UEFI) tools in the following order:

- a. Connected USB drive



**NOTE:** To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 65](#).

- b. Hard drive
- c. BIOS

2. Click the type of diagnostic test you want to run, and then follow the on-screen instructions.



**NOTE:** If you need to stop a diagnostic test, press **esc**.

## Downloading HP PC Hardware Diagnostics (UEFI) to a USB device



**NOTE:** The HP PC Hardware Diagnostics (UEFI) download instructions are provided in English only.

1. Go to <http://www.hp.com>.
2. Click **Support & Drivers**, and then click the **Drivers & Software** tab.
3. Enter the product name in the text box, and then click **Search**.
4. Select your computer model, and then select your operating system.
5. In the **Diagnostic** section, click **HP UEFI Support Environment**.

– or –

Click **Download**, and then select **Run**.

---


# 11 Backing up, restoring, and recovering

Your computer includes tools provided by HP and Windows to help you safeguard your information and retrieve it if you ever need to. These tools will help you return your computer to a proper working state or even back to the original factory state, all with simple steps.

This chapter provides information about the following processes:

- Creating recovery media and backups
- Restoring and recovering your system

---

 **NOTE:** This guide describes an overview of backing up, restoring and recovering options. For more details about the tools provided, see Help and Support. From the Start screen, type **h**, and then select **Help and Support**.

---

## Creating recovery media and backups

Recovery after a system failure is only as good as your most recent backup.

1. After you successfully set up the computer, create HP Recovery media. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced.

HP Recovery media you create will provide the following recovery options:


- System Recovery—Reinstalls the original operating system and the programs that were installed at the factory.
- Minimized Image Recovery—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

See [Creating HP Recovery media on page 67](#).

2. As you add hardware and software programs, create system restore points. A system restore point is a snapshot of certain hard drive contents saved by Windows System Restore at a specific time. A system restore point contains information that Windows uses, such as registry settings. Windows creates a system restore point for you automatically during a Windows update and during other system maintenance (such as a software update, security scanning, or system diagnostics). You can also manually create a system restore point at any time. For more information and steps for creating specific system restore points, see Help and Support. From the Start screen, type **h**, and then select **Help and Support**.
3. As you add photos, video, music, and other personal files, create a backup of your personal information. Windows File History can be set to regularly and automatically back up files from

libraries, desktop, contacts, and favorites. If files are accidentally deleted from the hard drive and they can no longer be restored from the Recycle Bin, or if files become corrupted, you can restore the files that you backed up using File History. Restoring files is also useful if you ever choose to reset the computer by reinstalling Windows or choose to recover using HP Recovery Manager.

---

 **NOTE:** File History is not enabled by default, so you must turn it on.

---

For more information and steps for enabling Windows File History, see Help and Support. From the Start screen, type **h**, and then select **Help and Support**.

## Creating HP Recovery media

HP Recovery Manager is a software program that offers a way to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and the software programs installed at the factory, and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace a hard drive.

- Only one set of HP Recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the blank USB flash drive or the number of blank DVD discs that will be required.
- To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or instead you can use a high-quality blank USB flash drive.
- If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs, or you can obtain recovery discs for your computer from the HP website. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html). If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub.
- Be sure that the computer is connected to AC power before you begin creating the recovery media.
- The creation process can take up to an hour or more. Do not interrupt the creation process.
- If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue, and the remaining discs will be burned.

To create HP Recovery media:

1. Connect the tablet to the keyboard dock.
2. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
3. Select **Recovery Media Creation**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 70](#).

## Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:

- If you need to restore your personal files and data, you can use Windows File History to restore your information from the backups you created. For more information and steps for using File History, see Help and Support. From the Start screen, type `h`, and then select **Help and Support**.
- If you need to correct a problem with a preinstalled application or driver, use the Drivers and Applications Reinstall option of HP Recovery Manager to reinstall the individual application or driver.

From the Start screen, type `recovery`, select **HP Recovery Manager**, select **Drivers and Applications Reinstall**, and then follow the on-screen instructions.

- If you want to restore the system to a previous state without losing any personal information, Windows System Restore is an option. System Restore allows you to restore without the requirements of Windows Refresh or a reinstallation. Windows creates system restore points automatically during a Windows update and other system maintenance events. Even if you did not manually create a restore point, you can choose to restore to an automatically created restore point. For more information and steps for using Windows System Restore, see Help and Support. From the Start screen, type `h`, and then select **Help and Support**.
- If you want a quick and easy way to recover the system without losing your personal information, settings, or apps that came preinstalled on your computer or were purchased from the Windows Store, consider using Windows Refresh. This option does not require backing up data to another drive. See [Using Windows Refresh for quick and easy recovery on page 69](#).
- If you want to reset your computer to its original state, Windows provides an easy way to remove all personal data, apps, and settings, and reinstall Windows.

For more information, see [Remove everything and reinstall Windows on page 69](#).

- If you want to reset your computer using a minimized image, you can choose the HP Minimized Image Recovery option from the HP Recovery partition (select models only) or HP Recovery media. Minimized Image Recovery installs only drivers and hardware-enabling applications. Other applications included in the image continue to be available for installation through the Drivers and Applications Reinstall option in HP Recovery Manager.

For more information, see [Recovering using HP Recovery Manager on page 70](#).


- If you want to recover the computer's original factory partitioning and content, you can choose the System Recovery option from the HP Recovery partition or the HP Recovery media that you have created. For more information, see [Recovering using HP Recovery Manager on page 70](#).


- If you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media to restore the factory image to the replacement drive. For more information, see [Recovering using HP Recovery Manager on page 70](#).
- If you wish to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.


For more information, see [Removing the HP Recovery partition on page 72](#).

## Using Windows Refresh for quick and easy recovery

When your computer is not working properly and you need to regain system stability, the Windows Refresh option allows you to start fresh and keep what is important to you.

 **IMPORTANT:** Refresh removes any traditional applications that were not originally installed on the system at the factory. Any Windows 8 apps that came preinstalled on your computer or were purchased from the Windows Store will be saved.

 **NOTE:** During Refresh, a list of removed traditional applications will be saved so that you have a quick way to see what you might need to reinstall. See Help and Support for instructions on reinstalling traditional applications. From the Start screen, type **h**, and then select **Help and Support**.


 **NOTE:** You may be prompted for your permission or password when using Refresh. See Help and Support for more information. From the Start screen, type **h**, and then select **Help and Support**.

To start Refresh:

1. Connect the tablet to the keyboard dock.
2. From the Start screen, point to the upper-right or lower-right corner of the screen to reveal the charms.
3. Click **Settings**.
4. Click **Change PC settings** in the bottom-right corner of the screen, and then select **General** from the PC settings screen.
5. Scroll the right-side choices down to display **Refresh your PC without affecting your files**.
6. Under **Refresh your PC without affecting your files**, select **Get started**, and then follow the on-screen instructions.

## Remove everything and reinstall Windows

Sometimes you want to perform detailed reformatting of your computer, or you want to remove personal information before you give away or recycle your computer. The process described in this section provides a speedy, simple way to return the computer to its original state. This option removes all personal data, apps, and settings from your computer, and reinstalls Windows.

 **IMPORTANT:** This option does not provide backups of your information. Before using this option, back up any personal information you wish to retain.

You can initiate this option by using the **f11** key or from the Start screen.

To use the **f11** key:

1. Connect the tablet to the keyboard dock.
2. Press **f11** while the computer boots.  
– or –  
Press and hold **f11** as you press the power button.
3. Select **Troubleshoot** from the boot options menu.
4. Select **Reset your PC**, and then follow the on-screen instructions.

To use the Start screen:

1. Connect the tablet to the keyboard dock.
2. From the Start screen, point to the upper-right or lower-right corner of the screen to reveal the charms.
3. Click **Settings**.
4. Click **Change PC settings** in the bottom-right corner of the screen, and then select **General** from the PC settings screen.
5. Scroll the right-side choices down to display **Remove everything and reinstall Windows**.
6. Under **Remove everything and reinstall Windows**, select **Get started**, and follow the on-screen instructions.

## Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media you created or by using the HP Recovery partition. You can choose from one of the following recovery options:

- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Minimized Image Recovery—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.


The HP Recovery partition allows Minimized Image Recovery and System Recovery.

### What you need to know

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
- Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.



- HP Recovery media must be used if the computer hard drive fails. If you have not already created recovery media, see [Creating HP Recovery media on page 67](#).
- To use the Factory Reset option, you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media on page 67](#).
- If the HP Recovery media do not work, you can obtain recovery media for your system from the HP website. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

 **IMPORTANT:** HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you wish to retain.

---

## Using the HP Recovery partition

The HP Recovery partition (select models only) allows you to perform a minimized image recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can only be used if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:

1. Connect the tablet to the keyboard dock.
2. Press **f11** while the computer boots.  
– or –  
Press and hold **f11** as you press the power button.
3. Select **Troubleshoot** from the boot options menu.
4. Select **HP Recovery Manager**, and follow the on-screen instructions.

## Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the first HP Recovery disc you created into the optical drive on your computer or into an optional external optical drive, and then restart the computer.

– or –

Insert the HP Recovery USB flash drive you created into a USB port on your computer, and then restart the computer.

 **NOTE:** If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 71](#).

---

3. Follow the on-screen instructions.

## Changing the computer boot order

If computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection for an optical drive or a USB flash drive.

To change the boot order:

1. Insert the HP Recovery media you created.
2. Restart the computer.
3. Press and hold `esc` while the computer is restarting, and then press `f9` for boot options.
4. Select the optical drive or USB flash drive you want to boot from.
5. Follow the on-screen instructions.

## Removing the HP Recovery partition

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.



**IMPORTANT:** After you remove the HP Recovery partition, you can no longer use the Windows Refresh option, the Windows option to remove everything and reinstall Windows, or the HP Recovery Manager option. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media on page 67](#).

Follow these steps to remove the HP Recovery partition:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.


# 12 Specifications


## Input power


The power information in this section may be helpful if you plan to travel internationally with the computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100–240 V, 50–60 Hz. Although the computer can be powered from a standalone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for use with this computer.

The computer can operate on DC power within the following specifications. Operating voltage and current varies by platform.

Input power	Rating
Operating voltage and current	19.5 V dc @ 2.31 A - 45 W
DC plug of external HP power supply	

 **NOTE:** This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

 **NOTE:** The computer operating voltage and current can be found on the system regulatory label.

## Operating environment

Factor	Metric	U.S.
<b>Temperature</b>		
Operating	<b>5°C to 35°C</b>	41°F to 95°F
Nonoperating	<b>-20°C to 60°C</b>	-4°F to 140°F
<b>Relative humidity</b> (noncondensing)		
Operating	<b>10% to 90%</b>	10% to 90%
Nonoperating	<b>5% to 95%</b>	5% to 95%
<b>Maximum altitude</b> (unpressurized)		

---

Operating	<b>-15 m to 3,048 m</b>	-50 ft to 10,000 ft
Nonoperating	<b>-15 m to 12,192 m</b>	-50 ft to 40,000 ft

---

---

# 13 Electrostatic Discharge

Electrostatic discharge is the release of static electricity when two objects come into contact—for example, the shock you receive when you walk across the carpet and touch a metal door knob.

A discharge of static electricity from fingers or other electrostatic conductors may damage electronic components. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- If removal or installation instructions direct you to unplug the computer, first make sure that it is properly grounded, and then remove the cover.
- Keep components in their electrostatic-safe containers until you are ready to install them.
- Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
- Use nonmagnetic tools.
- Before handling components, discharge static electricity by touching an unpainted metal surface of the component.
- If you remove a component, place it in an electrostatic-safe container.

If you need more information about static electricity or assistance with component removal or installation, contact support.

# Index

- A**
  - AC adapter light 6, 14
  - action keys
    - decrease screen brightness 44
    - Help and Support 44
    - identifying 13
    - increase screen brightness 44
    - next track or section 44
    - play, pause, resume 44
    - previous track or section 44
    - switch screen image 44
    - volume down 44
    - volume mute 44
    - volume up 44
  - alignment post connectors, identifying 6
  - alignment posts, identifying 10
  - ambient light sensor, identifying 8, 31
  - antivirus software, using 61
  - audio functions, checking 34
  - audio-out (headphone) jacks 7, 15, 30, 32
  - autorotate lock
    - adjusting 17
- B**
  - backing up
    - personal files 67
  - backing up software and information 62
  - backups 66
  - bass settings hot key 46
  - battery
    - discharging 50
    - low battery levels 50
  - battery information, finding 49
  - battery light 6, 14
  - battery power 49
  - Beats Audio
    - Control Panel 32, 33
    - enabling and disabling 34
    - hot key 13, 32, 46
    - using 33
  - best practices 1
- BIOS**
  - determining version 63
  - downloading an update 64
  - updating 63
- Bluetooth device 25, 28
- boot order
  - changing HP Recovery Manager 71
- bottom-edge swipe
  - Touch screen 22
- brightness
  - adjusting 17
- buttons
  - left TouchPad 11
  - power 6
  - right TouchPad 11
  - volume 7, 30
  - Windows 9
- C**
  - cables
    - USB 54
  - caps lock light, identifying 12
  - caring for your computer 56
  - checking audio functions 34
  - cleaning your computer 56
  - components
    - display 8
    - left-side 15
    - right-side 14
    - top 10
  - computer reset 69
  - configuring audio for HDMI 36
  - connecting to a WLAN 28
  - connector
    - alignment post 6
    - power 6, 14
  - corporate WLAN connection 28
  - critical battery level 50
- D**
  - deleted files, restoring 68
  - Disk Cleanup software 56
  - docking connector, identifying 10
  - docking port, identifying 6
- E**
  - edge swipe gestures 21
    - bottom-edge swipe 22
    - left-edge swipe 22, 43
    - right-edge swipe 21, 42
    - top-edge swipe 22, 42
  - electrostatic discharge 75
  - esc key, identifying 13
  - external AC power, using 51
  - external devices 54
- F**
  - firewall software 61
  - flicking TouchPad gesture 41
  - fn key, identifying 13, 46
  - fun things to do 1
- H**
  - HDMI
    - configuring audio 36
  - HDMI port
    - connecting 35
    - identifying 14, 32
  - Hibernation
    - exiting 48
    - initiated during critical battery level 50
    - initiating 48
  - high-definition devices, connecting 35
  - hot keys
    - bass settings 46
    - Beats Audio 13
    - description 46
    - display system information 46
    - using 46
  - HP and third-party software
    - updates, installing 62
  - HP PC Hardware Diagnostics (UEFI) using 64
  - HP Quick Start 1
  - HP Recovery Manager 70
    - correcting boot problems 71
    - starting 71

- HP Recovery media
  - creating 67
  - recovery 71
- HP Recovery partition 71
  - recovery 71
  - removing 72
- HP TrueVision Full HD Webcam
  - identifying 8, 31
  - using 33
- hubs 53

- I**
- input power 73
- installing
  - critical updates 61
- internal microphones, identifying 8, 31
- Internet connection setup 27
- Internet security software, using 61

- J**
- jacks
  - audio-out (headphone) 7, 15, 30, 32

- K**
- keyboard dock
  - identifying 10
  - releasing the tablet 16
- keyboard hot keys, identifying 46
- keys
  - action 13
  - esc 13
  - fn 13
  - Windows 13

- L**
- labels
  - serial number 16
- left-edge swipe
  - Touch screen 22
  - TouchPad 43
- lights
  - AC adapter 6, 14
  - battery 6, 14
  - caps lock 12
  - mute 12
  - wireless 12
- low battery level 50

- M**
- maintenance
  - Disk Cleanup 56
- memory card
  - inserting 55
- memory card reader, identifying 15
- micro SD memory card reader, identifying 7
- minimized image
  - creating 70
  - recovery 71
- mouse, external
  - setting preferences 38
- mute light, identifying 12

- O**
- operating environment 73
- optional external devices, using 54
- original system recovery 70

- P**
- passwords
  - Setup Utility (BIOS) 60
  - Windows 60
- pinching
  - Touch screen 20
  - TouchPad 40
- ports
  - HDMI 14, 32, 35
  - USB 14, 15, 32
- power
  - battery 49
- power button, identifying 6
- power connector, identifying 6, 14
- product name and number, computer 16
- public WLAN connection 28

- R**
- recovery 68, 69
  - discs 67, 71
  - HP Recovery Manager 70
  - media 71
  - starting 71
  - supported discs 67
  - system 70
  - USB flash drive 71
  - using HP Recovery media 68

- recovery media
  - creating 67
  - creating using HP Recovery Manager 68
- recovery partition 71
  - removing 72
- recycle
  - computer 68, 69
- refresh 69
  - computer 68
- regulatory information 16
- release latch, identifying 10
- remove everything and reinstall Windows 69
- reset
  - computer 68, 69
  - steps 69
- restore, Windows File History 68
- right-edge swipe
  - Touch screen 21
  - TouchPad 42
- rotating
  - Touch screen 21
  - TouchPad 40

- S**
- scrolling
  - Touch screen 20
  - TouchPad 39
- security, wireless 27
- serial number 16
- serial number, computer 16
- setting password protection on wakeup 48
- settings
  - autorotate lock 17
  - brightness 17
  - changing 17
  - landscape view 17
  - portrait view 17
  - tablet orientation 17
- setup of WLAN 27
- Setup Utility (BIOS) passwords 60
- shipping the computer 58
- shutdown 52
- Sleep
  - exiting 47
  - initiating 47
- slots
  - memory card reader 15

- software
  - Disk Cleanup 56
- software updates, installing 61
- speakers
  - connecting 33
  - identifying 8, 31
- stretching
  - Touch screen 20
- supported discs, recovery 67
- system information
  - hot key 46
  - locating 16
- system recovery 70, 71
- system restore point
  - creating 66
  - restoring 68

## T

- tapping
  - Touch screen 19
  - TouchPad 39
- top-edge swipe
  - Touch screen 22
  - TouchPad 42
- Touch screen gestures 21
  - edge swipe gestures 21, 22
  - one-finger slide 18
  - pinching 20
  - rotating 21
  - scrolling 20
  - stretching 20
  - tapping 19
  - using 18
- TouchPad
  - buttons 11
  - identifying 11
- TouchPad gestures
  - edge swipe gestures 41, 42, 43
  - flicking 41
  - pinching 40
  - rotating 40
  - scrolling 39
  - tapping 39
  - using 38
  - zooming 40
- TouchPad zone, identifying 11
- traveling with the computer 58
- turning off the computer 52

## U

- unresponsive system 52
- USB cable, connecting 54
- USB devices
  - connecting 53
  - description 53
  - removing 54
- USB hubs 53
- USB ports, identifying 14, 15, 32
- using external AC power 51
- using passwords 59

## V

- vent, identifying 7
- video 35
- volume button, identifying 7, 30

## W

- warranty period 16
- Webcam
  - identifying 8, 31
- webcam
  - using 33
- webcam light, identifying 8, 31
- Windows
  - backup 67
  - File History 67, 68
  - Refresh 68, 69
  - reinstall 68, 69
  - remove everything and reinstall option 69
  - reset 69
  - restoring files 68
  - system restore point 66, 68
- Windows button, identifying 9
- Windows key, identifying 13
- Windows passwords 60
- Windows updates, installing 61
- wireless certification information 16
- wireless controls
  - operating system 25
- wireless light 12
- wireless network (WLAN)
  - connecting 28
  - corporate WLAN connection 28
  - equipment needed 27
  - functional range 28
  - public WLAN connection 28
  - securing 62
  - security 27
  - using 26
- WLAN antenna, identifying 8
- WLAN device 26

## Z

- zooming
  - TouchPad 40