

Leica Zeno 20 Android User Manual



Version 1.1
English

- when it has to be **right**

Leica
Geosystems

Introduction

Purchase

Congratulations on the purchase of a Leica Zeno 20.



This manual contains important safety directions as well as instructions for setting up the product and operating it. Refer to "1 Safety Directions" for further information. Read carefully through the User Manual before you switch on the product.

Product Identification

The type and serial number of your product are indicated on the type plate. Always refer to this information when you need to contact your agency or Leica Geosystems authorised service workshop.

Trademarks and Licenses

- The operating system is using the Android Open Source Project (AOSP). The license associated with it is available at <https://source.android.com/source/licenses.html#android-open-source-project-license>.
 - CompactFlash and CF are trademarks of SanDisk Corporation
 - Bluetooth® is a registered trademark of Bluetooth SIG, Inc.
 - SD Logo is a trademark of SD-3C, LLC.
- All other trademarks are the property of their respective owners.

Validity of this manual

This manual applies to the Android version of the Leica Zeno 20 device.

Available documentation

Name	Description/Format		
Leica Zeno 20 Quick Guide	Provides an overview of the product together with technical data and safety directions. Intended as a quick reference guide.	✓	✓
Leica Zeno 20 User Manual	All instructions required in order to operate the product to a basic level are contained in the User Manual. Provides an overview of the product together with technical data and safety directions.	-	✓

Name	Description/Format		
Zeno GIS Getting Started Guide	Describes the general working of the product in standard use. Intended as a quick reference field guide.	-	✓
Zeno Connect Getting Started Guide	Describes the general working of the product in standard use. Intended as a quick reference field guide.	-	✓
Zeno Mobile Quick Guide	Describes the general working of the product in standard use. Intended as a quick reference field guide.	-	✓
Zeno GIS Help*	Overall comprehensive help to the product and application functions. Included are detailed descriptions of special software/hardware settings and software/hardware functions.	-	-

* only available as Online Help

Refer to the following resources for all Zeno 20 documentation/software:

- the Leica USB documentation card
- <https://myworld.leica-geosystems.com>

myWorld@Leica Geosystems (<https://myworld.leica-geosystems.com>) offers a wide range of services, information and training material.

With direct access to myWorld, you are able to access all relevant services whenever it is convenient for you, 24 hours a day, 7 days per week. This increases your efficiency and keeps you and your equipment instantly updated with the latest information from Leica Geosystems.

Service	Description
myProducts	Add all Leica Geosystems products that you and your company own. View detailed information on your products, buy additional options or Customer Care Packages (CCPs), update your products with the latest software and keep up-to-date with the latest documentation.
myService	View the service history of your products in Leica Geosystems Service Centres and detailed information on the services performed on your products. For your products that are currently in Leica Geosystems Service Centres view the current service status and the expected end date of service.
mySupport	Create new support requests for your products that will be answered by your local Leica Geosystems Support Team. View the complete history of your Support and view detailed information on each request in case you want to refer to previous support requests.
myTraining	Enhance your product knowledge with the Leica Geosystems Campus - Information, Knowledge, Training. Study the latest online training material or download training material on your products. Keep up-to-date with the latest News on your products and register for Seminars or Courses in your country.
myTrustedServices	Offers increased productivity while at the same time providing maximum security. <ul style="list-style-type: none"> <li data-bbox="687 1087 1474 1182">• myExchange With myExchange you can exchange any files/objects from your computer to any of your Leica Exchange Contacts. <li data-bbox="687 1182 1474 1308">• mySecurity If your instrument is ever stolen, a locking mechanism is available to ensure that the instrument is disabled and can no longer be used.

Table of Contents

In this manual	Chapter	Page
1	Safety Directions	6
1.1	General Introduction	6
1.2	Definition of Use	7
1.3	Limits of Use	7
1.4	Responsibilities	8
1.5	Hazards of Use	8
1.6	Electromagnetic Compatibility EMC	10
1.7	FCC Statement, Applicable in U.S.	12
1.8	ICES-003 Statement, Applicable in Canada	13
2	Description of the System	14
2.1	Overview	14
2.2	System Concept	15
2.2.1	Software Concept	15
2.2.2	Power Concept	15
2.2.3	Data Storage Concept	16
2.3	System Components	16
2.4	Zeno 20 Components	17
3	User Interface	18
3.1	Keyboard	18
3.2	Operating Principles	19
3.3	LED Indicators on Zeno 20	20
4	Operation	21
4.1	Equipment Setup	21
4.1.1	Fixing the Display Foil to the Zeno 20	21
4.1.2	Inserting and Removing a SIM Card and SD Card	21
4.1.3	Attaching the AS10/AS05 Antenna to the Zeno 20	23
4.2	Batteries	23
4.2.1	Operating Principles	23
4.2.2	Changing the Battery	24
4.2.3	Charging the Battery	25
4.3	Power Functions	26
4.4	Connecting the Zeno 20 to a PC with the Micro-USB Cable	27
4.5	Optimising the Zeno 20 for GNSS Tracking	27
4.6	Setting up the Zeno 20 with a Disto S910	28
5	Software	29
5.1	Overview: Home Screen, Navigation, Apps and Widgets	29
5.2	Settings	32
5.2.1	Changing the Operating System Language	33
5.2.2	Resetting the Zeno 20 Device	33
5.3	Useful Applications	34
5.3.1	Hot Keys	34
5.3.2	Screenshots	35
5.3.3	File Manager	35
5.3.4	System Information	35
5.3.5	Using the Digital Camera	35
5.3.6	Boot Logo Changer	36

6	Care and Transport	37
6.1	Transport	37
6.2	Storage	37
6.3	Cleaning and Drying	38
7	Technical Data	39
7.1	Zeno 20 Technical Data	39
7.2	Conformity to National Regulations	40
7.3	Dangerous Goods Regulations	41
8	Software Licence Agreement	42

1 Safety Directions

1.1 General Introduction

Description

The following directions enable the person responsible for the product, and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.

About Warning Messages





Warning messages are an essential part of the safety concept of the instrument. They appear wherever hazards or hazardous situations can occur.

Warning messages...

- make the user alert about direct and indirect hazards concerning the use of the product.
- contain general rules of behaviour.

For the users' safety, all safety instructions and safety messages shall be strictly observed and followed! Therefore, the manual must always be available to all persons performing any tasks described herein.

DANGER, WARNING, CAUTION and **NOTICE** are standardized signal words for identifying levels of hazards and risks related to personal injury and property damage. For your safety it is important to read and fully understand the table below with the different signal words and their definitions! Supplementary safety information symbols may be placed within a warning message as well as supplementary text.

Type	Description
 DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a potentially hazardous situation or an unintended use which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor or moderate injury.
NOTICE	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in appreciable material, financial and environmental damage.
	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

1.2

Definition of Use

Intended use

- Remote control of product.
 - Data communication with external appliances.
-

Reasonably foreseeable misuse

- Use of the product without instruction.
 - Use outside of the intended use and limits.
 - Disabling safety systems.
 - Removal of hazard notices.
 - Opening the product using tools, for example screwdriver, unless this is permitted for certain functions.
 - Modification or conversion of the product.
 - Use after misappropriation.
 - Use of products with obvious damages or defects.
 - Use with accessories from other manufacturers without the prior explicit approval of Leica Geosystems.
 - Inadequate safeguards at the working site.
- Controlling of machines, moving objects or similar monitoring application without additional control and safety installations.
-

Additional Advice

- The Zeno 20 is essentially an enhanced PDA (personal digital assistant) used in geospatial applications. This device is to be used for data logging and data communication for industrial applications only and not for domestic consumer applications.
 - This device does not have held-to-ear voice operations.
 - This device does not have body-worn accessories.
 - This device is designed to be used only in the hand or in fixed installations by mounting it on a pole or a vehicle. When the device is not mounted on a pole or a vehicle, you may use it in handheld mode only and should keep it away from your body (as described in "4.5 Optimising the Zeno 20 for GNSS Tracking"). Do not place the device on your lap or any part of the body.
-

1.3

Limits of Use

Environment

Suitable for use in an atmosphere appropriate for permanent human habitation: not suitable for use in aggressive or explosive environments.



Local safety authorities and safety experts must be contacted before working in hazardous areas, or close to electrical installations or similar situations by the person in charge of the product.



The following advice is only valid for battery charger, power adapter and car adapter.

Environment

Suitable for use in dry environments only and not under adverse conditions.



1.4

Responsibilities

Manufacturer of the product

Leica Geosystems AG, CH-9435 Heerbrugg, hereinafter referred to as Leica Geosystems, is responsible for supplying the product, including the user manual and original accessories, in a safe condition.

Person responsible for the product

The person responsible for the product has the following duties:

- To understand the safety instructions on the product and the instructions in the user manual.
 - To ensure that it is used in accordance with the instructions.
 - To be familiar with local regulations relating to safety and accident prevention.
 - To inform Leica Geosystems immediately if the product and the application becomes unsafe.
 - To ensure that the national laws, regulations and conditions for the operation of e.g. radio transmitters or lasers are respected.
-

1.5

Hazards of Use



DANGER

Because of the risk of electrocution, it is dangerous to use poles, levelling staffs and extensions in the vicinity of electrical installations such as power cables or electrical railways.

Precautions:

Keep at a safe distance from electrical installations. If it is essential to work in this environment, first contact the safety authorities responsible for the electrical installations and follow their instructions.



WARNING

During dynamic applications, for example stakeout procedures there is a danger of accidents occurring if the user does not pay attention to the environmental conditions around, for example obstacles, excavations or traffic.

Precautions:

The person responsible for the product must make all users fully aware of the existing dangers.



WARNING

Inadequate securing of the working site can lead to dangerous situations, for example in traffic, on building sites, and at industrial installations.

Precautions:

Always ensure that the working site is adequately secured. Adhere to the regulations governing safety and accident prevention and road traffic.



CAUTION

If the accessories used with the product are not properly secured and the product is subjected to mechanical shock, for example blows or falling, the product may be damaged or people can sustain injury.

Precautions:

When setting-up the product, make sure that the accessories are correctly adapted, fitted, secured, and locked in position.

Avoid subjecting the product to mechanical stress.



WARNING

If the product is used with accessories, for example masts, staffs, poles, you may increase the risk of being struck by lightning.

Precautions:

Do not use the product in a thunderstorm.



WARNING

During the transport, shipping or disposal of batteries it is possible for inappropriate mechanical influences to constitute a fire hazard.

Precautions:

Before shipping the product or disposing of it, discharge the batteries by running the product until they are flat.

When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping contact your local passenger or freight transport company.



WARNING

High mechanical stress, high ambient temperatures or immersion into fluids can cause leakage, fire or explosions of the batteries.

Precautions:

Protect the batteries from mechanical influences and high ambient temperatures. Do not drop or immerse batteries into fluids.



WARNING

If battery terminals are short circuited e.g. by coming in contact with jewellery, keys, metalized paper or other metals, the battery can overheat and cause injury or fire, for example by storing or transporting in pockets.

Precautions:

Make sure that the battery terminals do not come into contact with metallic objects.



WARNING

Only Leica Geosystems authorised service workshops are entitled to repair these products.



The following advice is only valid for battery charger, power adapter and car adapter.



WARNING

If you open the product, either of the following actions may cause you to receive an electric shock.

- Touching live components
- Using the product after incorrect attempts were made to carry out repairs

Precautions:

Do not open the product. Only Leica Geosystems authorised service workshops are entitled to repair these products.



The following advice is only valid for batteries, power adapter or docking station.




WARNING

If the product is improperly disposed of, the following can happen:

- If polymer parts are burnt, poisonous gases are produced which may impair health.
- If batteries are damaged or are heated strongly, they can explode and cause poisoning, burning, corrosion or environmental contamination.
- By disposing of the product irresponsibly you may enable unauthorised persons to use it in contravention of the regulations, exposing themselves and third parties to the risk of severe injury and rendering the environment liable to contamination.

Precautions:

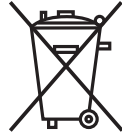

The product must not be disposed with household waste.

Dispose of the product appropriately in accordance with the national regulations in force in your country.

Always prevent access to the product by unauthorised personnel.

Product-specific treatment and waste management information can be downloaded from the Leica Geosystems home page at <http://www.leica-geosystems.com/treatment> or received from your Leica Geosystems dealer.

1.6

Electromagnetic Compatibility EMC

Description

The term Electromagnetic Compatibility is taken to mean the capability of the product to function smoothly in an environment where electromagnetic radiation and electrostatic discharges are present, and without causing electromagnetic disturbances to other equipment.



WARNING

Electromagnetic radiation can cause disturbances in other equipment.

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment may be disturbed.

The product is a class A product when operated with the internal batteries. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



CAUTION

There is a risk that disturbances may be caused in other equipment if the product is used with accessories from other manufacturers, for example field computers, personal computers or other electronic equipment, non-standard cables or external batteries.

Precautions:

Use only the equipment and accessories recommended by Leica Geosystems. When combined with the product, they meet the strict requirements stipulated by the guidelines and standards. When using computers or other electronic equipment, pay attention to the information about electromagnetic compatibility provided by the manufacturer.



CAUTION

Disturbances caused by electromagnetic radiation can result in erroneous measurements.

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that the product may be disturbed by intense electromagnetic radiation, for example, near radio transmitters, two-way radios or diesel generators.

Precautions:

Check the plausibility of results obtained under these conditions.



CAUTION

If the product is operated with connecting cables attached at only one of their two ends, for example external supply cables, interface cables, the permitted level of electromagnetic radiation may be exceeded and the correct functioning of other products may be impaired.

Precautions:

While the product is in use, connecting cables, for example product to external battery, product to computer, must be connected at both ends.

Radios or Digital Cellular Phones



WARNING

Use of product with radio or digital cellular phone devices:

Electromagnetic fields can cause disturbances in other equipment, in installations, in medical devices, for example pacemakers or hearing aids and in aircraft. It can also affect humans and animals.

Precautions:

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment can be disturbed or that humans or animals can be affected.

- Do not operate the product with radio or digital cellular phone devices in the vicinity of filling stations or chemical installations, or in other areas where an explosion hazard exists.
 - Do not operate the product with radio or digital cellular phone devices near to medical equipment.
 - Do not operate the product with radio or digital cellular phone devices in aircraft.
-

1.7

FCC Statement, Applicable in U.S.



WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



WARNING

Changes or modifications not expressly approved by Leica Geosystems for compliance could void the user's authority to operate the equipment.

Labelling Zeno 20

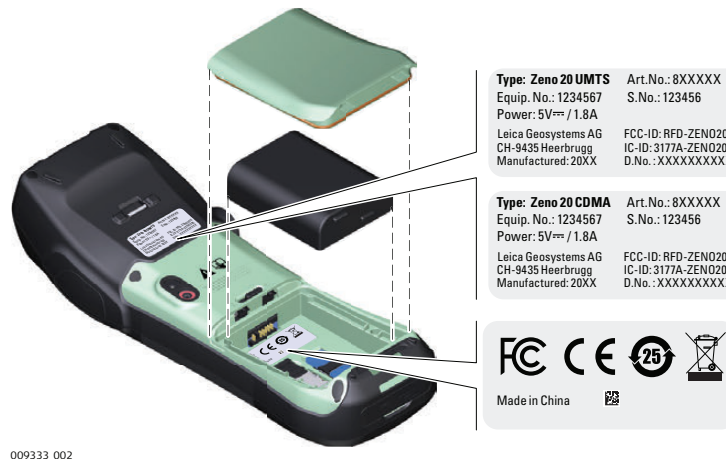

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

**WARNING**

This Class (B) digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe (B) est conforme à la norme NMB-003 du Canada.

Exposure to radio frequency (RF) signals

The wireless device is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy set by the OET Bulletin 65 Supplement C / Ministry of Health (Canada), Safety Code 6. These limits are part of comprehensive guidelines and established permitted levels of RF energy for the general population. These guidelines are based on the safety standards previously set by international standard bodies. These standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This device has been shown to be capable of compliance for localised specific absorption rate (SAR) for uncontrolled environment / general public exposure limits specific in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement procedures specified in IEEE Std. 1528-2003.

IC Canadian Compliance

This radio transmitter has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p) is not more than that necessary for successful communication. This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur. Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) L'appareil ne doit pas produire de brouillage.

(2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

2 Description of the System

2.1 Overview

Zeno 20 General Description

The Zeno 20 is a compact, high performance, low weight device with an integrated high accuracy GNSS, designed for outdoor & fieldwork usage. The Zeno 20 can withstand severe environmental conditions including vibration, shock, moisture and temperature variations. The Zeno 20 is suitable for use in harsh environments such as construction sites, warehouses, military, manufacturing and field service.



009343.001

Zeno 20 Available Models

Model	Zeno 20 3.75G Android	Zeno 20 3.75G WEH	Zeno 20 CDMA Android	Zeno 20 CDMA WEH
Touch screen	✓	✓	✓	✓
Colour display	✓	✓	✓	✓
Internal modem	W/WWAN-GSM	W/WWAN-GSM	W/WWAN-CDMA	W/WWAN-CDMA
Internal batteries* ¹	✓	✓	✓	✓
MicroSD Card	✓	✓	✓	✓
Bluetooth	✓	✓	✓	✓
Wireless LAN 802.11b/g/n	✓	✓	✓	✓
Wi-Fi	✓	✓	✓	✓
Operating System	Android 4.2.2	Windows Embedded Handheld 6.5 Professional	Android 4.2.2	Windows Embedded Handheld 6.5 Professional
L1/L2 GNSS board	✓	✓	✓	✓
FCC etc. (reports)				
Model Name	Zeno 20	Zeno 20	Zeno 20	Zeno 20
FCC ID	RFD-ZENO20G	RFD-ZENO20G	RFD-ZENO20C	RFD-ZENO20C
CE and IC				
Model Name	ZENO20G	ZENO20G	ZENO20C	ZENO20C
IC Number	3177A-ZENO20G	3177A-ZENO20G	3177A-ZENO20C	3177A-ZENO20C

*¹ One removable battery and one backup battery

2.2





System Concept

2.2.1

Software Concept

Software Options for Zeno 20

Software type	Description
Windows Embedded Handheld 6.5 Professional (WEH)	This software includes: <ul style="list-style-type: none">• The English version of WEH.• The basic WEH functionality.• If ordered, the Zeno Field or Zeno Connect for Zeno 20.
Android 4.2.2	This software includes: <ul style="list-style-type: none">• The language-specific version of Android.• The basic Android functionality.• If ordered, the Zeno Mobile or Zeno Connect for Zeno 20.

-  This User Manual only describes the Android version of the Zeno 20. For more information about the other version refer to the respective User Manual.
-  The Zeno 20 is delivered with the operating system and software that you ordered. The software is already licensed. For information on how to switch to a different language version, refer to "5.2.1 Changing the Operating System Language" or to the according software documentation.
-  The installation includes the latest released Zeno updates, the latest released GNSS board firmware and the purchased Auth Code. Refer to the according software documentation for more information. Be aware, that the Zeno 20 is only working correctly with the Android versions released from Leica Zeno.
-  "Google Play Store" will not be available on the Zeno Android. Instead, you can use different app stores such as the "Amazon Appstore" or "1MobileMarket".

NOTICE

Rooting your Android device will void your right for any warranty services and support by Leica!

2.2.2

Power Concept

General

Use the batteries, chargers and accessories recommended by Leica Geosystems to ensure the correct functionality of the instrument.

Power Options

Model	Power supply
Zeno 20	Internally by AZ206 ^{*1} battery, OR Externally by AZ209 ^{*2} AC/DC adapter, OR Externally by AZ208 car adapter. If an external power supply is connected and the internal batteries are inserted, then the external power is used. If the power consumption of the Zeno 20 is less than the charging capacity, the internal batteries are charged.

^{*1} manufacturer: ETI CA Battery Inc.

^{*2} manufacturer: Ktec

2.2.3

Data Storage Concept

Description

Data is stored on a memory device. The memory device can be a USB stick or internal memory.

Memory Device

USB stick:	The device has a USB port fitted as standard.
Internal memory:	The device has an internal memory fitted as standard. Available capacity: 4 GB.
MicroSDHC card:	The device has an MicroSDHC card slot. Maximum card size: 32 GB

☞ The delivered Leica Geosystems USB flash drive contains system software and is not certified for permanent data transfer i.e. as data storage for measurement data. Use only certified industrial grade USB flash drives such as the Leica MS1 (order number 765199).

2.3

System Components

Zeno 20 Package

The Zeno 20 package includes the following components:



- a) Zeno 20 Android
OR
Zeno 20 Windows Embedded Handheld
- b) Rechargeable Battery
- c) Capacitive Stylus
- d) Hand Strap
- e) Data Transfer Cable
- f) AC Adapter
- g) Quick Guide
- h) USB documentation card with software and documents


Optional Accessories

- 16 GB MicroSD card (823058)
- Car Charger (823056)
- Desktop Charger (823055)
- Additional Battery (823054)
- Zeno 20 Pole Plate (823052)
- Zeno 20 Pole Plate and Disto S910 Pole Plate (823053)
- Additional Stylus (823049)
- Disto FTA360 Adapter for Zeno 20 (827546)
- Screen Protection Foil for Zeno 20 (823050)
- AS10 Antenna Cable (667200)
- AS10 (827546)

2.4

Zeno 20 Components

Front Side of the Zeno 20

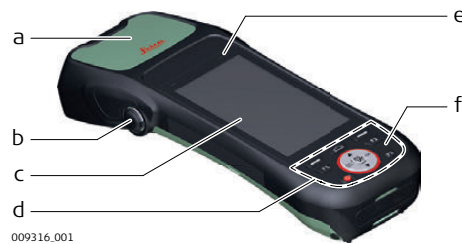


- a) Internal GNSS Antenna and Board
- b) External GNSS Antenna Connector
- c) Screen
- d) Keypad
- e) LED Indicators
- f) Microphone

Back Side of the Zeno 20




- a) Holder for Handstrap
- b) Camera and Flash
- c) Speaker
- d) Compartment with Slots for Battery, SIM Card and SD Card
- e) Release Lever for Battery Compartment
- f) Handstrap Fixation

Bottom Panel of the Zeno 20

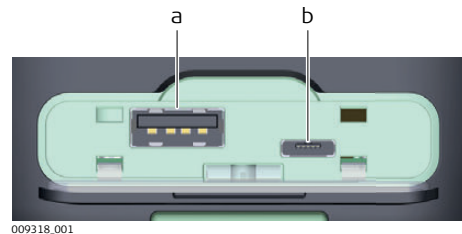

- a) USB A Host Port
- b) Micro USB Host Port, works also as Power Socket

Battery Compartment

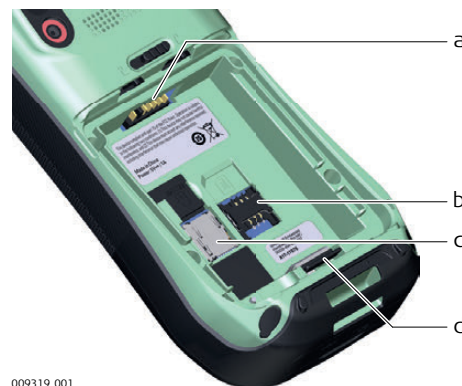

- a) Battery Connectors
- b) SIM Card Slot
- c) MicroSDHC Card Slot
- d) Latch for Battery Pack

3 User Interface

3.1 Keyboard

Keypad



- a) Home key
- b) Left softkey
- c) Direction Pad UP
- d) F1 key
- e) Camera key
- f) Power key
- g) Right softkey
- h) F2 key
- i) OK key
- j) Satellite/GNSS key
- k) F3 key
- l) Direction Pad DOWN

Functions of the Keys

Key	Function (WEH)	Function (Android)
Power key	Power, Suspend & Resume	Power, Suspend & Resume
Left softkey	Left	Back
Home key	Home (Returns to main screen)	Home (Returns to main screen)
Right softkey	Right	Menu
OK key	OK	OK
Satellite/GNSS key	Measure in Zeno Field	Measure in Zeno Mobile
Direction Pad UP	Up	Up
Direction Pad DOWN	Down	Down
Camera Key	Press to open camera app. If camera app is opened: Press to take a picture.	Press to open camera app. If camera app is opened: Press to take a picture.
F1	Programmable hot keys.	Programmable hot keys.
F2		
F3		

For detailed information on the programmable hot keys, refer to "5.3.1 Hot Keys".

How to Use the Power Key

If the handheld is turned off:
To turn on the handheld, press the Power key for 5 s.

If the handheld is turned on:

- To put the handheld into stand-by mode, press the Power key for maximally 4 s. If you press the Power key again, the handheld returns to normal operation.
- To open the Shut-Down menu, press the Power key for at least 4 s. Within the menu, you can choose between the options **Power Off**, **Reboot** or **Airplane Mode**. The Airplane Mode suspends many of the signal transmitting functions of the device. You can also choose between silent mode, vibration mode or normal mode. To close the Shut-Down menu, tap on the screen outside the menu or press the left softkey.


3.2 Operating Principles

Touch Screen

The user interface is operated through the capacitive touch screen. You can either use the supplied stylus or touch the screen with the finger. Multi-touch and gestures are supported.

Operation	Description
To select an item	Tap on the item.
To start the edit mode in editable fields	Tap on the editable field.
To navigate in menus or maps	Swipe with the supplied stylus or via touch from one side to the other or up and down.
To accept data entered into an editable field and exit the edit mode	Tap on the screen outside of the editable field.
To open a context-sensitive menu	Tap on the item and hold for 2 s.
To zoom in maps/pictures/apps	Pinch with your fingers.
To close the virtual keyboard	Press the left softkey on the keypad or the softkey "Back" on the screen.

Gestures for Touch-Screen

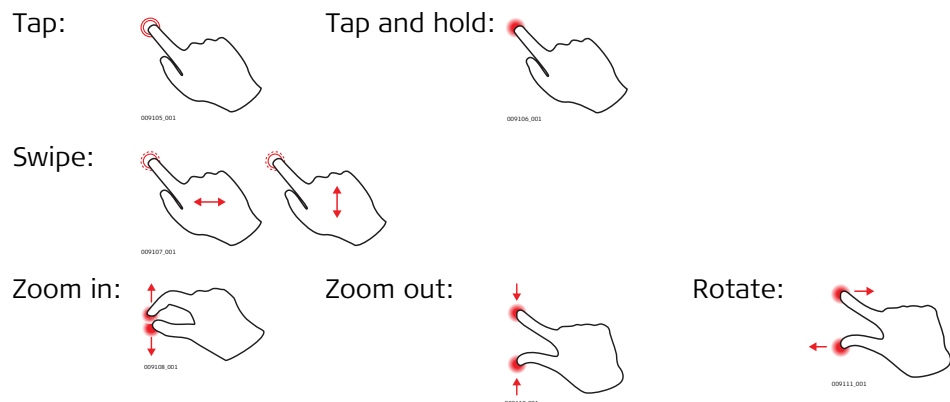

LED Indicators



- a) Battery LED
- b) GPS LED

Status of the LED Indicators

The Zeno 20 device has Light Emitting Diode indicators. They indicate the basic status of the device.

LED	Status of LED	Description
Battery LED	off	Batteries are in use (discharging).
	green	Batteries are fully charged. Device is ready for operation.
	red	Batteries are charging.
	flashing red	Batteries are low and should be charged.
	flashing amber	Error
GPS LED	off	No connection.
	green	GPS FIX is good.
	red	GPS FIX is not good.

4

Operation


4.1

Equipment Setup

4.1.1

Fixing the Display Foil to the Zeno 20

Fixing the Display Foil to the Zeno 20 Handheld Step-by-Step

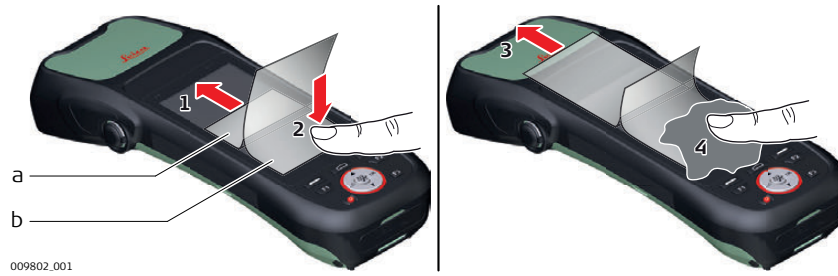

Step	Description
	Ensure that the display of the Zeno 20 is free of dust and grease.
	The non-reflecting display foil (b) has a carrier foil (a) with the name of the foil printed on it.
1.	Peel away the carrier foil from the display foil. Do not peel the carrier foil more than 2 cm - 3 cm away.
2.	Fix the laid open adhesive underside of the display foil at the display border.
3.	While peeling away the carrier foil bit by bit, slowly smooth out the display foil onto the display.
4.	Use a microfibre cloth to smooth out potential air bubbles between display and display foil. Do not use sharp objects!
	If you want to reattach the display foil, you can easily remove and fix it again.

4.1.2

Inserting and Removing a SIM Card and SD Card



- Keep the card dry.
- Use it only within the specified temperature range.
- Do not bend the card.
- Protect the card from direct impacts.



Failure to follow these instructions could result in data loss and/or permanent damage to the card.



CAUTION

Always ground yourself to remove any static charge before touching the CPU card. The electronic devices are sensitive to static electricity.

Precautions:


- 1) Only experienced personnel should open the mechanical housing of the device.
- 2) Use a grounding wrist strap all the time.
- 3) Place all the electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.



Apply general practice for working with static-sensitive devices when you open the device, insert the SIM or SD card and closing the device:

- Discharge any static charge before opening the device and working with the SIM or SD card.
- The device must not be subject to high electrostatic potentials when it is open.
- Minimise contact with internal components of the device.
- Avoid any discharges of static electricity near the device when inserting the SIM or SD card.

Insert and Remove a SIM Card or an SD Card Step-by-step

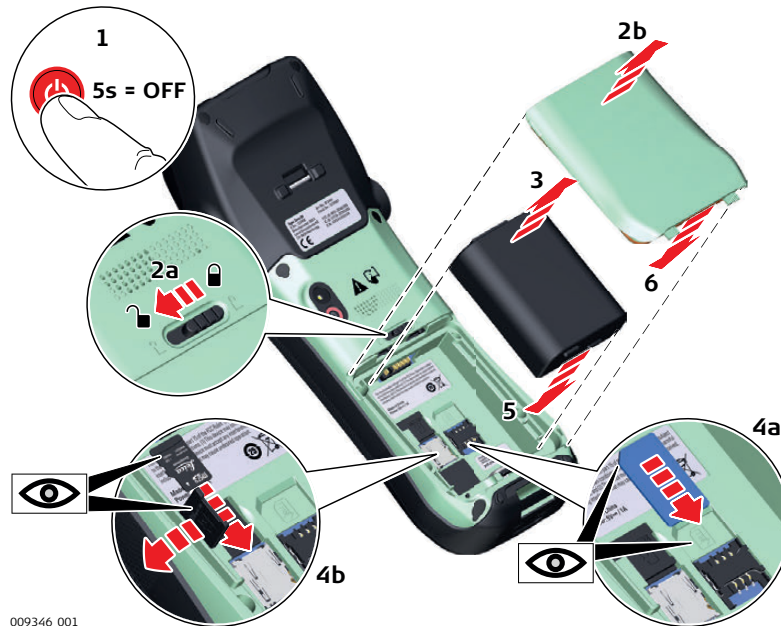


009346_001


Step	Description
	The slots for the SIM card and the SD card are inside the battery compartment of the Zeno 20.
1.	Turn off the Zeno 20.
2.	Push the release lever on the back side of the Zeno 20 to the position "unlocked" and remove the cover of the battery compartment.
3.	Remove the battery.
4.	a) Slide the SIM card firmly into the right slot. b) Slide the SD card firmly into the left slot. Do not force the card into the slot. The card should be held with the contacts facing the slot.
5.	Insert the battery back into the battery compartment.
6.	Reattach the compartment cover by inserting it bottom first. Close the battery compartment until it clicks into place. The release lever jumps back to the position "locked".

4.1.3

Attaching the AS10/AS05 Antenna to the Zeno 20

Attach External Antenna Step-by-Step

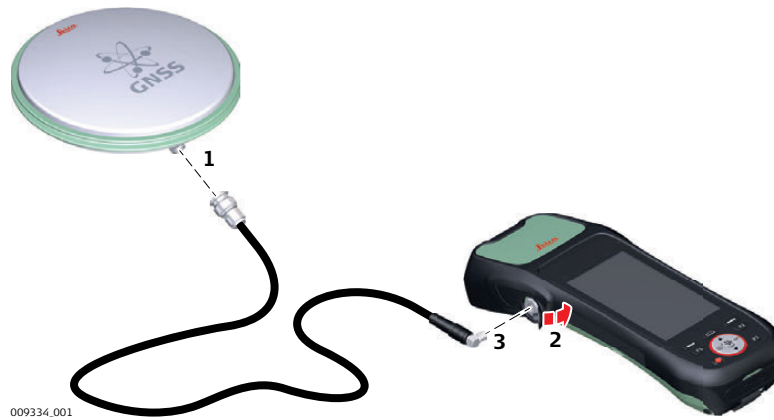

Step	Description
1.	Connect the antenna cable to the AS10/AS05 antenna.
2.	Open the protector cap of the external antenna connector on the left side of the Zeno 20 device.
3.	Plug the antenna cable into the external antenna connector.  If you use Zeno Field, Zeno Connect or Zeno Mobile, attaching the antenna cable automatically sets the external antenna as the currently used antenna. If you detach the antenna cable, the internal antenna is used again automatically.

4.2

Batteries

Battery Power System

The Zeno 20 device is designed to work with one removable battery placed inside the battery compartment. An internal backup battery is also included, which allows to hot-swap the removable battery while the device is running. The fully charged battery provides several hours of battery life.

4.2.1

Operating Principles

First-time Use / Charging Batteries

- The battery must be charged prior to using it for the first time.
- The permissible temperature range for charging is between 0°C to +40°C/ +32°F to +104°F. For optimal charging, we recommend charging the batteries at a low ambient temperature of +10°C to +20°C/+50°F to +68°F if possible.
- It is normal for the battery to become warm during charging. Using the chargers recommended by Leica Geosystems, it is not possible to charge the battery if the temperature is too high.
- For Li-Ion batteries, a single refreshing cycle is sufficient. We recommend carrying out a refreshing cycle when the battery capacity indicated on the charger or on a Leica Geosystems product deviates significantly from the actual battery capacity available.

Operation / Discharging

- The batteries can be operated from -30°C to +60°C/-22°F to +140°F.
- Low operating temperatures reduce the capacity that can be drawn; high operating temperatures reduce the service life of the battery.

4.2.2


Changing the Battery

Replacing an Empty Battery




The batteries are hot-swappable. You can remove an empty battery and replace it with a charged one without turning off the device completely. Before removing an empty battery, put the device into sleep-mode. After replacing the battery you can resume normal operation.

Remove the Battery: Step-by-step

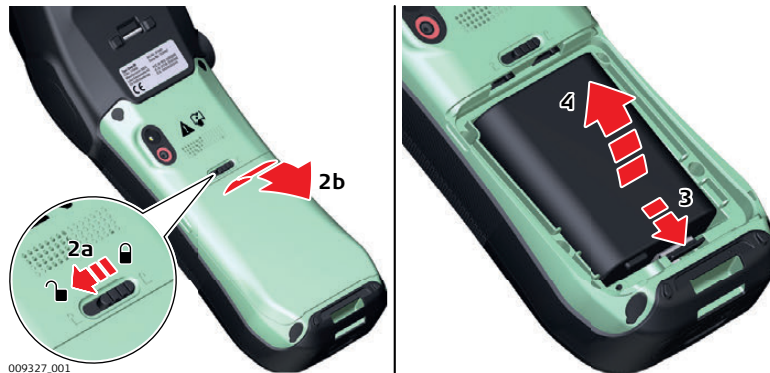

Step	Description
	Ensure that the handheld is put into stand-by mode.
1.	Place the Zeno 20 on a stable surface, with the back side facing up.
2.	While pushing the release lever to the position "unlocked", open and remove the cover of the battery compartment.
3.	To release the battery from the compartment, press down the latch.
4.	While pressing down the latch, lift the battery with your thumb and remove it from the compartment.

Insert the Battery: Step-by-step

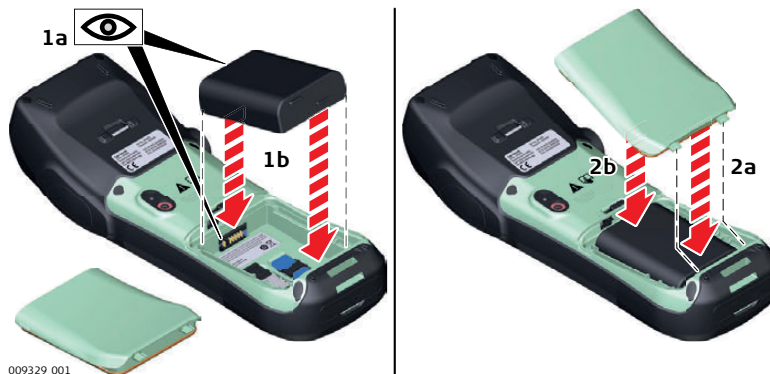

Step	Description
	To open the battery compartment, follow the instructions of the previous paragraph.
1.	Insert the battery into the compartment with the contacts facing the top, until the battery clicks into place.
2.	Reattach the compartment cover by inserting it bottom first. Close the battery compartment until it clicks into place. The release lever jumps back to the position "locked".
	The IP67 protection is only ensured if the battery compartment is attached correctly!

4.2.3

Charging the Battery



WARNING

If unit is not connected to ground, death or serious injury can occur.

Precautions:

To avoid electric shock power cable and power outlet must be grounded.



The following advice is only valid for battery charger, power adapter and car adapter.



WARNING

If you open the product, either of the following actions may cause you to receive an electric shock.

- Touching live components
- Using the product after incorrect attempts were made to carry out repairs

Precautions:

Do not open the product. Only Leica Geosystems authorised service workshops are entitled to repair these products.



The following advice is only valid for batteries, power adapter or docking station.



WARNING


The product is not designed for use under wet and severe conditions. If unit becomes wet it may cause you to receive an electric shock.

Precautions:

Use the product only in dry environments, for example in buildings or vehicles. Protect the product against humidity. If the product becomes humid, it must not be used!




Charge Battery Step-by-Step

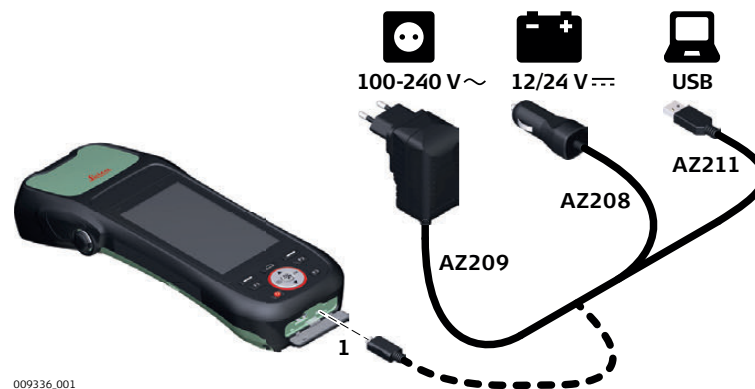

009336.001


Step	Description
	Only use the charger delivered with the Zeno 20.
	Similar to a smartphone, the Zeno 20 switches on automatically when you attach it to a power adapter. While charging, the device cannot be switched off. To reduce the charging time, turn off GPS.

Step	Description
1.	<p>Connect the AZ209 power adapter to the Zeno 20 and to an A/C plug.</p> <p>Alternatives:</p> <ul style="list-style-type: none"> • Connect the AZ208 car charger to the Zeno 20 and to a cigarette lighter of a car (12V/24V DC). • Connect the Zeno 20 to a computer using the AZ211 data transfer cable. Note: The data transfer cable has a lower charging capability than the AC power adapter! • Remove the battery from the Zeno 20 and charge it with the Desktop Charger (823055). This charger allows you to charge up to two batteries simultaneously.
2.	<p>The batteries start charging. The Battery LED switches on to indicate the status of the battery.</p> <p> Refer to "3.3 LED Indicators on Zeno 20" for information about the Battery LED.</p>



4.3

Power Functions

Turning the Zeno 20 On: Step-by-step

Step	Description
1.	Place the Zeno 20 on a flat and stable surface or hold the device in your hand.
2.	Ensure that either the device is connected with the AC power adapter or the batteries are charged up.
3.	<p>Press and hold Power key () for 5 s.</p> <p>While the operating system boots up, the booting screen is displayed. When the main screen is displayed, the Zeno 20 is ready to use.</p>


Turning the Hand-held Device Off: Step-by-step

Step	Description
	Note: While charging, the Power Off function is disabled and the device cannot be switched off.
1.	Press the Power key for at least 4 seconds to open the Shut-Down menu.
2.	<p>Within the menu, select on of the following options:</p> <ul style="list-style-type: none"> • Power Off: The operating system shuts down and the handheld is turned off. • Reboot: The handheld device reboots. • Airplane Mode: Suspends many of the signal transmitting functions. Select this mode in order to save battery power when not using the device. <p>Within the menu, you can also choose between vibration or silent mode. In order to close the Shut-Down menu, press somewhere outside of the dialog.</p>
	After turning off the handheld device, wait for at least 5 seconds before turning it on again.


4.4

Connecting the Zeno 20 to a PC with the Micro-USB Cable

Connect Handheld Device to PC: Step-by-Step

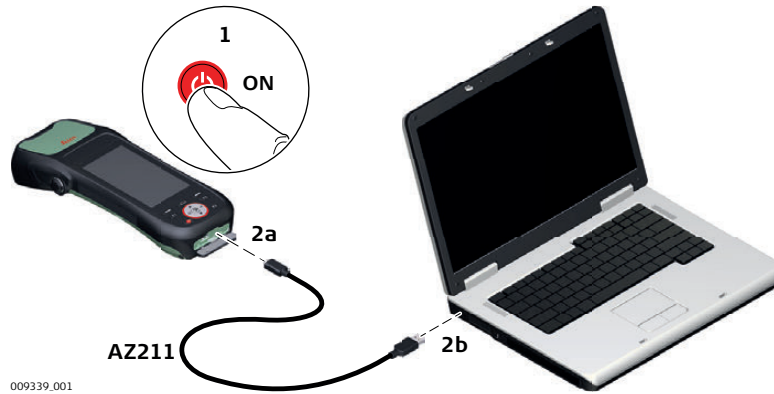

1. Turn on the Zeno 20.
2. With the data transfer cable, connect the handheld device to the PC.
3. On the Zeno 20, you need to select which kind of connection you want to establish to the PC:
Select **Media sync (MTP)**.
The AutoPlay menu opens up automatically and you can browse the files stored on the Zeno 20.

 If an SD card is inserted into the Zeno 20 and the handheld device is connected to a PC, you can also access the data that is stored on the SD card.


4.5

Optimising the Zeno 20 for GNSS Tracking

Recommendations

To optimise the GNSS tracking of the Zeno 20, adhere to the following recommendations:

- Do not hold the device too close to your body to ensure good visibility of satellites.
- Hold the device always pointed towards the direction where the most satellites are probable to be seen. Due to the satellite constellation, this is the southern direction on the northern hemisphere, and the northern direction on the southern hemisphere. This ensures, that you do not impair the visibility of most of the satellites by shielding the device with your body.
- To ensure the best tracking behaviour of the integrated antenna, hold the device in a way that the antenna is aligned horizontally as best as possible.

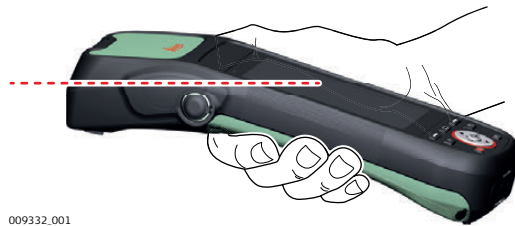

GAMtec-Setup

You can combine the Zeno 20 with a Disto S910 to get a TPS-similar setup. Position the setup close to the asset where the GNSS conditions are good and measure your target with the Disto S910. This method allows you to measure inaccessible or unreachable points from a safe distance and to collect data in areas where the GNSS reception is bad. To increase your productivity, it is also possible to measure multiple assets within sight of one setup point.



009345.001



For more information on how to use the Zeno 20 with a Disto S910, refer to the respective software documentations.

Accuracy of Measured Points

When using the combination of Zeno 20 and Disto S910, the accuracies of the points measured with the Disto S910 depend on different variables. To ensure high point accuracies, keep in mind the following principles:

- 1) The farther away the reference point that you measure for your orientation, the better the resulting point accuracies. Make sure that the reference point is at least 25 m away from your current position.
- 2) When measuring new points with the Disto S910 that are far from your current position, the point accuracy decreases.
- 3) The better the accuracy of the reference point and of the current position, the better the resulting point accuracies. When measuring points with GNSS, make sure that you measure with highest possible accuracy, for example with open sky conditions and averaging of at least 10 seconds.

5

Software

5.1


Overview: Home Screen, Navigation, Apps and Widgets

Home Screen

The home screen is the starting place for accessing all functionalities of the instrument. The screen is displayed after switching on the instrument.




- a) Status bar with icons
- b) Notification area
- c) Widget installed on the home screen
- d) Background image (user definable)
- e) Apps added to the home screen
- f) Access to all apps, settings and widgets
- g) Navigation bar with softkeys

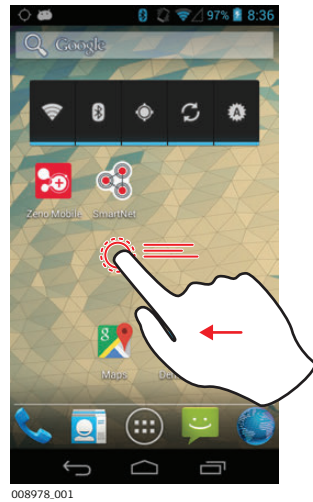

You can customize the home screen by adding different apps and widgets to the home screen pages (refer to "Apps and Widgets"). To access the additional pages of the home screen, swipe to the left or to the right.

Status Icons

The icons within the status bar indicate the current status of the main system functions. If an icon is not displayed, the respective system function is switched off.

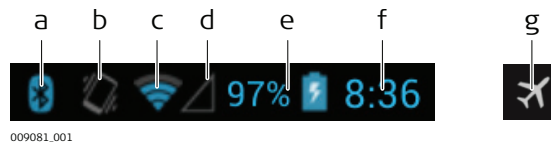

- a) Bluetooth status (on/off)
- b) Current volume setting/vibration mode
- c) Wifi status (on/off) and reception
- d) Modem status (on/off) and reception
- e) Battery status: remaining power and charging/discharging mode
- f) Current time
- g) Airplane mode

Softkeys

Use the softkeys within the navigation bar to navigate through Android. The same function of the softkeys can be executed by pressing the according hard key on the Zeno 20 keyboard (refer to " Functions of the Keys").



009085.001

Back: Returns to the last page. This function also applies to pages within an app.



009086.001

Home: Returns to the Home screen.




009087.001

Menu: Opens an overview over all currently running apps. Within this menu, you can close apps to save battery power.


To close an app, drag it to the left or right until it disappears.



You can hide the navigation bar or show it again. Press the  button to open the **APPS** page. Select **Tools**⇒**NoNavBar**. Tap **OK** to show or hide the navigation bar.


Notifications and Access to Important Settings

Android is able to push information to you using notifications. In this case, an icon appears within the notification area.

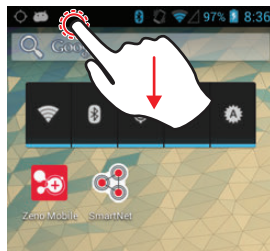

009082.001

To display details on all recently received notifications, slide down the notification area to open the notification drawer.

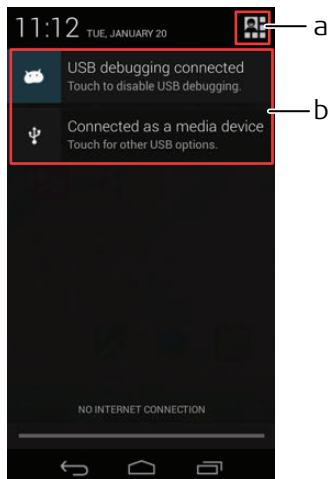


009083.001

Within the notification drawer, the notifications details are displayed.

To display the main settings of the Zeno 20, press the button in the upper right-hand corner.

- a) Button to display the main settings of the Zeno 20.
- b) Received notifications.

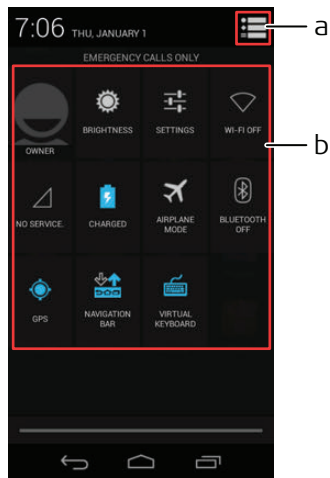

009084.001


- a) Button to display the notification details within the notification drawer.
- b) Buttons to access the main settings of the Zeno 20.

Press one of the buttons to change a setting or enable/disable a function, such as Wi-Fi, Modem, Bluetooth.

☞ For some of these functions, further settings are necessary, for example, when enabling Wi-Fi, you have to select a respective Wi-Fi connection.

☞ Tip: In order to save battery power when not working, disable the functions that you do not need currently. This decreases the power consumption of the Zeno 20 and thus increases the lifetime of the battery.


In order to display the main settings of the Zeno 20 directly from any menu, slide down the notification drawer with two fingers.

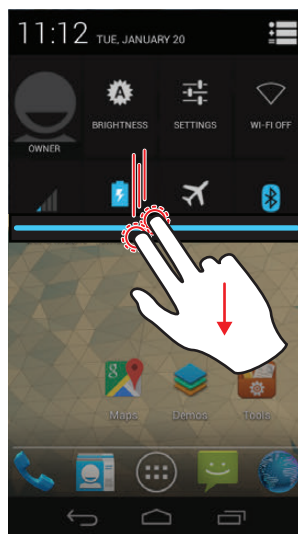


009112.001

Apps and Widgets

The home screen can have multiple pages which you can access by swiping to the left or to the right. You can use apps and widgets to customise the different pages of the home screen by adding an app or a widget to a page.


To access all available apps and widgets, press the  button. The APPS page is displayed.

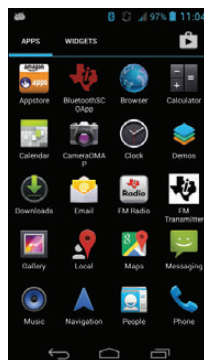

009090.001

APPS page:

- To display further apps, swipe to the left.
- To display the WIDGETS page, swipe to the left or tap on the tab WIDGETS.
- To get faster access to a specific app, drag the app and drop it on a page of the home screen at the desired position.
- To remove an app from a page of the home screen, tap and hold the app, until the text "Remove" appears at the top of the screen, then drag and drop the app on top of the text "Remove".

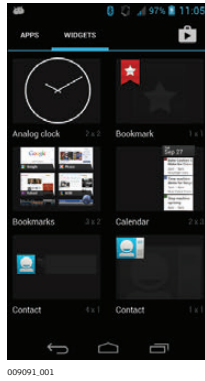

WIDGETS page:


- To display further widgets, swipe to the left.
- To display the APPS page, swipe to the right or tap on the tab APPS.
- To add a specific widget to your home screen, drag the widget and drop it on a page of the home screen at the desired position.
- To remove a widget from a page of the home screen, tap and hold the widget until the text "Remove" appears at the top of the screen, then drag and drop the widget on top of the text "Remove".

5.2

Settings

Settings page

To access the settings page, press the  button and tap on the **Settings** icon.

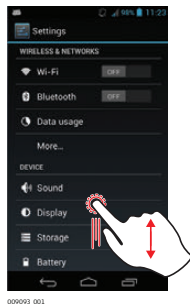

To scroll up or down the list of available settings, swipe across the screen.

On the settings page, you can manage a variety of information and settings:


- WIRELESS & NETWORKS
 - Enable or disable Wi-Fi and Bluetooth.
 - Display information on data usage.
 - Press More... to display further options.
- DEVICE
 - Define the settings for sound and display.
 - Display information on storage use.
 - Display information on power consumption of different apps.
 - Display information on installed apps.
- PERSONAL
 - Define the settings for location access and security.
 - Define the system language and the input method.
 - Execute factory resets.
- ACCOUNTS
 - Add an account.
- SYSTEM
 - Change the settings for date and time.
 - Define the settings for accessibility.
 - Display basic phone information and execute system updates.

5.2.1

Changing the Operating System Language

Language & input page

To access the Language & input page, open the settings menu and tap on the button Language & input within the section PERSONAL.

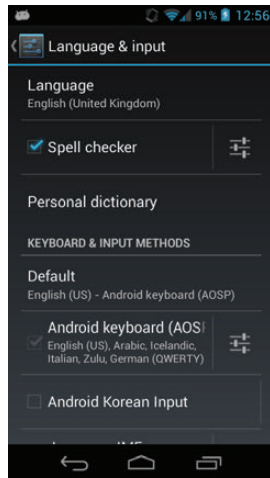

009095_001

To change the Operating System Language, tap on the button Language and select the desired language.


As default, the keyboard language is equivalent to the system language. If you want to change the keyboard language, tap on the button Default within the section KEYBOARD & INPUT METHODS.

Once the device is connected to a mobile data connection using the SIM card, the language is automatically changed according to your location.

5.2.2

Resetting the Zeno 20 Device

Performing a Factory Reset

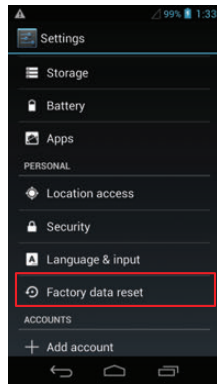

009097_001

Resetting the Zeno 20 device back to factory default is helpful if some components of the device are not working correctly anymore. During a factory reset, Android (including all drivers) is reinstalled completely. A factory reset helps to determine if a problem is hardware or software related.

To prevent data loss, backup all important data to an SD card or an external memory device before performing a factory reset. After a factory reset, you need to install licences and software files again manually.

- 1) Open the Settings menu. Within the section PERSONAL, tap on the button Factory data reset.
- 2) To start the data reset, tap on the button Reset phone.
- 3) Confirm by pressing the button Erase everything.

The device is automatically reset to the last installed version of the operating system. This process may take a few minutes.

5.3



Useful Applications

5.3.1


Hot Keys

Define a Hot Key Step-by-step


The keys **F1**, **F2** and **F3** on the keypad are programmable hot keys. To assign a function or an application to these keys, carry out the following instructions.

Step	Description
1.	<p>Tap on the  button to open the page APPS. Select Tools⇒Program Buttons to open the Program Buttons window.</p>  <p>Within the tab PROPERTIES, a list of the programmable keys and their currently assigned functions is displayed.</p>
2.	Tap on the key for which you want to define a specific function. A window with the available key functions is displayed.
3.	Tap on a function or an application to assign it to the key.
4.	To save your changes and exit the window, tap OK . To reassign the default key function, tap Default . To exit the window without saving any changes, tap Cancel .

Alternative:

 You can also apply a key definition file with already defined key functions.


Step	Description
1.	Within the Program Buttons page, tap on the DEFINE tab.
2.	To select a key definition file, tap the ... button and choose a file from the directory.
3.	To apply the selected key definition file, tap Apply . To reset the key definition file to default, tap Default key definition file .
4.	To exit the window, tap OK in the command bar or press the OK key on the keypad.

 Note: The functions that you assign to the hotkeys do not apply when working within Zeno Mobile. There are predefined functions for Zeno Mobile. For information on these key functions refer to the according software documentation.


5.3.2 Screenshots

Create a Screenshot The system allows you to capture the current screen displayed on the Zeno 20. To create a screenshot, press the Home key and Power key simultaneously for about 2 seconds. The captured screenshot is shortly displayed and then stored in the following directory: **/storage/sdcard0/Pictures/Screenshots/**.

5.3.3 File Manager

Browse for a File with the OI File Manager The OI File Manger allows you to browse for files that are stored on the Zeno 20, on a USB stick plugged into the Zeno 20 or on an SD card inserted in the Zeno 20. To access the file manager, tap on the  button and select **Tools⇒OI File Manager**.


5.3.4 System Information

Save System Information to a File Within the System Information page, you can save the current system information in a file. If there is a problem with the device and the support needs information about the version numbers of the device, you can use this file. To access the System Information page, tap on the  button and select **Tools⇒System Information**.

5.3.5 Using the Digital Camera

Camera App The Zeno 20 is equipped with a digital camera that allows you to capture images. To open the Camera app, press the Camera key or tab on the Camera icon within the APPS page. To capture an image, press the Camera key or press the respective button within the camera app. The image is stored in the following directory: **/storage/sdcard0/Pictures**.

Customise the Start-Up Screen

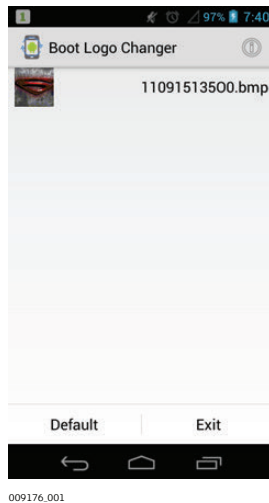


You can customise the start-up screen of the Zeno 20 device by using the app “Boot Logo Changer”. This app is installed per default on your Android device.

1) To change the start-up screen, place the desired image file in the root directory of the device: **/storage/sdcard0** or **/storage/sdcard1**.

The image file must meet the following restrictions:

- Width: 480 pixel
- Height: 854 pixel
- File size: max. 410998 byte
- Bit count: 8
- Format: BMP

2) To open the app, tap on the  button and select **Boot Logo Changer**.

3) Within the app, tap on the image file that you want to install as start-up screen.

A message is displayed to inform you about the status of the start-up screen. To switch back to the default Leica start-up screen, select **Default**.

6 Care and Transport

6.1 Transport

Transport in a road vehicle Never carry the product loose in a road vehicle, as it can be affected by shock and vibration. Always carry the product in its transport container, original packaging or equivalent and secure it.

Shipping When transporting the product by rail, air or sea, always use the complete original Leica Geosystems packaging, transport container and cardboard box, or its equivalent, to protect against shock and vibration.

Shipping, transport of batteries When transporting or shipping batteries, the person responsible for the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping, contact your local passenger or freight transport company.

6.2 Storage

Product Respect the temperature limits when storing the equipment, particularly in summer if the equipment is inside a vehicle. Refer to "7 Technical Data" for information about temperature limits.

Li-Ion batteries

- Refer to "Technical Data" for information about storage temperature range.
- Remove batteries from the product and the charger before storing.
- After storage recharge batteries before using.
- Protect batteries from damp and wetness. Wet or damp batteries must be dried before storing or use.
- A storage temperature range of 0°C to +30°C / +32°F to +86°F in a dry environment is recommended to minimize self-discharging of the battery.
- At the recommended storage temperature range, batteries containing a 30% to 50% charge can be stored for up to one year. After this storage period the batteries must be recharged.

6.3


Cleaning and Drying

Product and accessories

- Use only a clean, soft, lint-free cloth for cleaning. If necessary, moisten the cloth with water or pure alcohol. Do not use other liquids; these may attack the polymer components.
-

Damp products

Dry the product, the transport container, the foam inserts and the accessories at a temperature not greater than 40°C/104°F and clean them. Remove the battery cover and dry the battery compartment. Do not repack until everything is dry. Always close the transport container when using in the field.

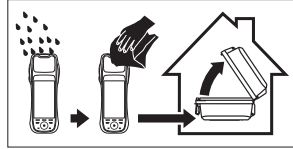

Cables and plugs

Keep plugs clean and dry. Blow away any dirt lodged in the plugs of the connecting cables.

Connectors with dust caps

Wet connectors must be dry before attaching the dust cap.

7

Technical Data

7.1

Zeno 20 Technical Data

Control unit	Touch Screen:	4.7" FWVGA (854 x 480 pixels); IPS; 600 nits, capacitive multi-touch Asahi Dragontrail chemically strengthened glass
	Keyboard:	12 keys, including three programmable function keys and software-specific keys
	Audio:	Built-in receiver, loud-speaker and microphone
	Digital camera:	8-megapixel camera with autofocus and LED flash

System	Processor:	Texas Instrument 4470 dual-core 1.5 GHz
	Operating System:	Windows Embedded Handheld 6.5 Professional OR Android 4.2.2
	System Memory:	1 GB RAM / 4 GB iNAND Flash
	I/O slot:	SIM (user accessible), MicroSD/MicroSDHC slot
	Storage:	4 GB built-in storage

Dimensions	Length [m]	Width [m]	Thickness [m]
	0.27	0.099	0.050

Weight	Type	Weight [kg]/[lbs]
	Zeno 20 with battery	0.87/1.92
	Zeno 20 without battery	0.72/1.59

Recording Data can be recorded on the USB memory stick, on an SD card or in the internal memory.

Power	Type	External supply voltage
	Zeno 20	Nominal voltage 5 V DC (---)

Internal battery	Type	Battery	Voltage	Capacity	Operating time, typical*
	Zeno 20	Li-Ion	3.7 V	7800 mAh	7 h

* Operating time depends on use of wireless communication devices.

Environmental specifications	Temperature
	Operating temperature: -30°C to +60°C
	Storage temperature: -40°C to +70°C
	Protection against water, dust and sand
	IP67 (IEC60529) Dust tight Waterproof to 1 m temporary immersion
Humidity	
Protection: Up to 90 % The effects of condensation are to be effectively counteracted by periodically drying out the device.	

Vibration

Protection: Withstands strong vibration during operation, compliance with MIL-STD-810G - 514.6 I/II - Cat.5

Drops

Protection: Withstands 1.22 m drop, compliance with MIL-STD-810G - 516.6 IV

Interfaces

MicroUSB:	Micro A/B Connector
USB host:	USB A
Bluetooth:	Class 2
WLAN:	802.11 b/g/n
Audio:	Micro-In, Audio-Out
External antenna connector:	SMB connector

L1/L2 GNSS

Type	Values
Channels:	120 channels
Satellite signals tracking:	Basic configuration: GPS L1 only Upgrade options: GPS: L2, L2C GLONASS: L1, L2 BeiDou: B1 Galileo: E1
Integrated real-time:	SBAS (WAAS, EGNOS, GAGAN)
Output data protocols:	NMEA-0183 (GGA, VTG, GLL, GSA, ZDA, GSV, RMC, GST, GRS) via Zeno Connect only
Real-time protocols:	RTCM 2.x, RTCM 3.0, RTCM 3.1, Leica, CMR, CMR+
Update rate:	1 Hz (1 s) Optional: 5 Hz (0.2 s)
Time to first fix*	Typically <45 s

* May vary due to used antenna, atmospheric conditions, multipath, obstructions, signal geometry and number of tracked satellites.

7.2

Conformity to National Regulations

Conformity to national regulations

- FCC Part 15, 22 and 24 (applicable in US).
- Hereby, Leica Geosystems AG, declares that the Zeno 20 and the Zeno 20 are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity may be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA Member state.

- The conformity for countries with other national regulations not covered by the FCC part 15, 22 and 24 or European directive 1999/5/EC has to be approved prior to use and operation.
- Japanese Radio Law and Japanese Telecommunications Business Law Compliance.
 - This device is granted pursuant to the Japanese Radio Law and the Japanese Telecommunications Business Law.
 - This device should not be modified (otherwise the granted designation number will become invalid).

Frequency Band

Type	Frequency band [MHz]
Zeno 20, Bluetooth	2402 ~ 2480
Zeno 20, WWAN	WCDMA: HSDPA/UMTS - 800/850/900/1900/2100
	GSM: Quad-Band EDGE/GPRS/GSM - 850/900/1800/1900
	CDMA: Dual-Band EV-DO Rev. A-800/1900
Zeno 20, WLAN	CE: 2412 ~ 2472
	FCC: 2412 ~ 2462




7.3

Dangerous Goods Regulations

Dangerous Goods Regulations

The products of Leica Geosystems are powered by Lithium batteries.

Lithium batteries can be dangerous under certain conditions and can pose a safety hazard. In certain conditions, Lithium batteries can overheat and ignite.

-  When carrying or shipping your Leica product with Lithium batteries onboard a commercial aircraft, you must do so in accordance with the **IATA Dangerous Goods Regulations**.
-  Leica Geosystems has developed **Guidelines** on "How to carry Leica products" and "How to ship Leica products" with Lithium batteries. Before any transportation of a Leica product, we ask you to consult these guidelines on our web page (<http://www.leica-geosystems.com/dgr>) to ensure that you are in accordance with the IATA Dangerous Goods Regulations and that the Leica products can be transported correctly.
-  Damaged or defective batteries are prohibited from being carried or transported onboard any aircraft. Therefore, ensure that the condition of any battery is safe for transportation.

Software Licence Agreement

This product contains software that is preinstalled on the product, or that is supplied to you on a data carrier medium, or that can be downloaded by you online according to prior authorisation from Leica Geosystems. Such software is protected by copyright and other laws and its use is defined and regulated by the Leica Geosystems Software Licence Agreement, which covers aspects such as, but not limited to, Scope of the Licence, Warranty, Intellectual Property Rights, Limitation of Liability, Exclusion of other Assurances, Governing Law and Place of Jurisdiction. Please make sure, that at any time you fully comply with the terms and conditions of the Leica Geosystems Software Licence Agreement.

Such agreement is provided together with all products and can also be referred to and downloaded at the Leica Geosystems home page at <http://www.leica-geosystems.com/swlicense> or collected from your Leica Geosystems distributor.

You must not install or use the software unless you have read and accepted the terms and conditions of the Leica Geosystems Software Licence Agreement. Installation or use of the software or any part thereof, is deemed to be an acceptance of all the terms and conditions of such Licence Agreement. If you do not agree to all or some of the terms of such Licence Agreement, you must not download, install or use the software and you must return the unused software together with its accompanying documentation and the purchase receipt to the distributor from whom you purchased the product within ten (10) days of purchase to obtain a full refund of the purchase price.

837160-1.1.0en

Original text

Printed in Switzerland

© 2015 Leica Geosystems AG, Heerbrugg, Switzerland

Leica Geosystems AG

Heinrich-Wild-Strasse

CH-9435 Heerbrugg

Switzerland

Phone +41 71 727 31 31

www.leica-geosystems.com

- when it has to be **right**

Leica
Geosystems