



Wireless Monitor QUICK START GUIDE

HVIN:M124EI

ATTENTION

For Returns or Support you MUST contact:
DefenderCameras.com/Support





TABLE OF CONTENTS

WHAT'S INCLUDED	4
WHAT YOU'LL NEED	6
REGULATORY INFORMATION	6
GET TO KNOW YOUR DEVICE	7
10.1" Touchscreen Monitor	7
Camera	8
LIVE VIEW	9
Multiview Mode	9
Single View Mode	10
BASIC SYSTEM SETUP	11
Proper Camera Installation And Placement	12
Camera Settings	13
Camera Setup - Pairing	13
Camera On/Off	14
Camera Brightness	15
Camera Resolution	16
Night Vision Setup	17
Recording Setup	18
Schedule Recording	19
Setting a Schedule	19
Deleting a Recording Schedule	20
File Overwrite	21
Audio On/Off	22
SYSTEM SETTINGS	23
Time Setup	23
Language	24
Default Settings	25
Format Memory Card	26
Firmware Upgrade	27
MOTION DETECTION SETTINGS	28
Sensitivity	28
Mask Area	29
Advanced Sensitivity Settings	30
Alert Settings	31
Monitor Alert	31
Camera Alert	33
PLAYBACK	34
FREQUENTLY ASKED QUESTIONS	35



ACTIVATE YOUR WARRANTY



PROTECT

Covered for the unexpected



SUPPORT

Receive videos, tips & updates for your product



VALUE

Exclusive access to special offers



Open your camera & scan this QR code, or visit: **DefenderCameras.com/Warranty**

EXTEND YOUR WARRANTY

Don't forget to protect your purchase and ease your mind by extending your included 1 year manufacturer warranty to 2 or 3 years. If something goes wrong, our team of Security Experts will get you back up and running fast!

Extended Warranties can be purchased up to 60 days after your product's purchase.



2 YEAR WARRANTY

Extend your peace of mind to two years

- ◆ Product Defects
- ◆ Advanced Replacements
- ◆ Free Return Shipping



3 YEAR WARRANTY

Extend your peace of mind to three years


- ◆ Product Defects
- ◆ Advanced Replacements
- ◆ Free Return Shipping




Open your camera & scan this QR code, or visit: **DefenderCameras.com/pages/extended-warranties**

WHAT'S INCLUDED


PHOENIXHD2C

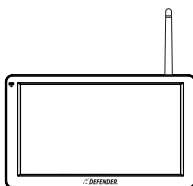


1 x 10.1" Full HD Monitor

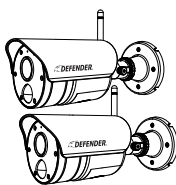

2 x 1080P HD Wireless
Cameras with 7ft Power
Cable Cord & pre-installed
64GB MicroSD Card




2 x 7.6ft Camera Power
Adapters



1 x 5.8ft Monitor Power
Adapter



1 x Window Warning Sticker




2 x Drilling Templates



Camera & Monitor
Mounting Hardware



1 x Warranty Registration
Insert




1 x Quick Start Guide




Lifetime Support


PHOENIXHD4C

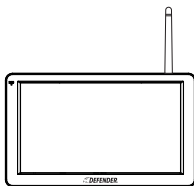


1 x 10.1" Full HD Monitor

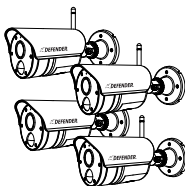

4 x 1080P HD Wireless
Cameras with 7ft Power
Cable Cord & pre-installed
64GB MicroSD Card

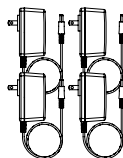


4 x 7.6ft Camera Power
Adapters



1 x 5.8ft Monitor Power
Adapter



1 x Window Warning Sticker

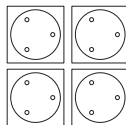


4 x Drilling Templates



Camera & Monitor
Mounting Hardware



1 x Warranty Registration
Insert



1 x Quick Start Guide



Lifetime Support



WHAT YOU'LL NEED

- Drill and or Phillips #2 screwdriver
- 1/4" drill bit for pilot holes
- 1/4" drill bit for wall anchors
- 15/64" (6mm) long drill bit (Choose the right drill bit based on the surface material)

REGULATORY INFORMATION

FCC STATEMENT: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

FCC WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC STATEMENT: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



GET TO KNOW YOUR DEVICE

This system does not connect to the Internet or a mobile app. With your privacy in mind, footage is saved on the local microSD card.


10.1" TOUCHSCREEN MONITOR

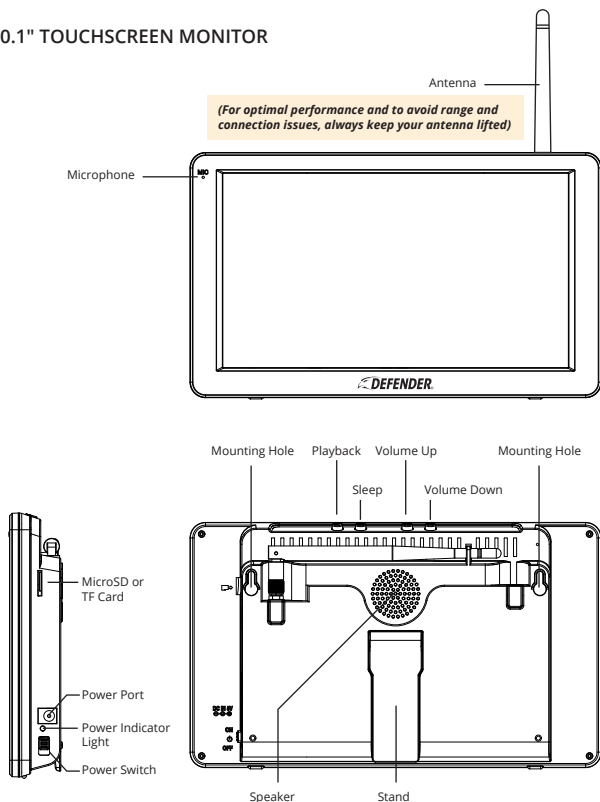

PLEASE NOTE: When Sleep button is pressed the monitor screen will turn off until motion is detected in front of the camera(s). Once motion is no longer detected the monitor will turn back off.



CAMERA

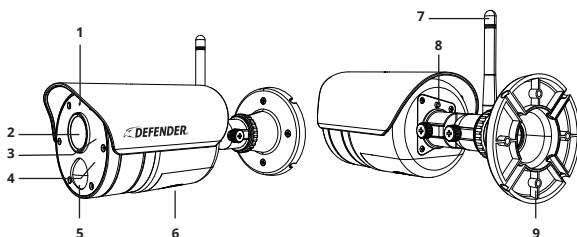


1. **Microphone** - Captures the sound on camera side and transmits the sound from camera to monitor.
2. **Lens** - Captures the view in the cameras field of view and transmits video from the camera to the monitor.
3. **IR LED** - Infrared LEDs provide viewing in no/low light conditions.
4. **Deterrent Light** - Flashes when motion is detected.
5. **PIR Sensor** - Detects motion within the camera's field of view.
6. **Speaker** - Outputs sound from the monitor when manual talk is enabled.
7. **Camera Antenna** - Receives & sends signals to or from the monitor.
8. **Pair Button** - While in pairing mode, press and hold the pairing button to pair the camera to a single monitor.
9. **Camera Base** - Use the camera base to mount the camera on a wall or other flat surfaces.



LIVE VIEW

MULTIVIEW MODE

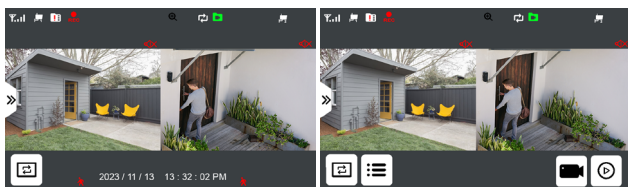

No MicroSD card inserted



Camera channel



Camera volume muted



Camera volume on



Motion Recording Activated



New recordings saved to MicroSD card.



Camera is recording



Enter sequence mode (audio will only play from the active camera)



Open Quick Access Menu



Open Menu



Manually start recording on all cameras




Manual recording on all cameras in-progress




Enter playback menu



Overwrite recordings

PLEASE NOTE: Cameras can be muted and unmuted in multiview by tapping . When more than one camera is paired, your monitor will only provide sound from the active camera. All cameras will continue to record audio, even if the camera is muted in live view mode.

SINGLE VIEW MODE

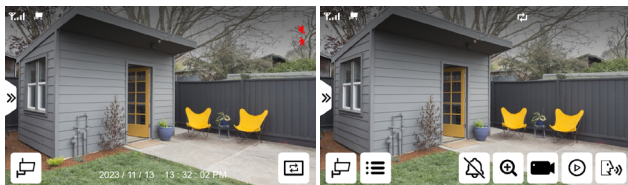

Camera signal strength to the monitor



Zoom in on camera view



Switch camera channel



Manually start recording on the selected channel



Monitor volume muted



Enter playback menu




Tap and hold to turn on siren on the camera



Press and hold to talk



To enter sequence mode from multiview mode tap 
To exit sequence mode tap and return to multiview mode, tap the screen.



Manual recording on the selected channel in-progress


PLEASE NOTE: In single view, to turn the volume on or off, use the volume buttons at the top of the monitor.




BASIC SYSTEM SETUP

PLEASE READ FIRST!


Verify all accessories and complete the monitor and camera setup before installing the cameras.

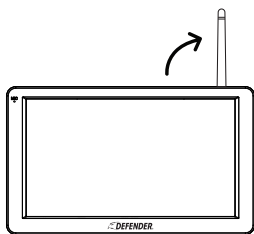

1. For optimal performance and range, lift the antenna.

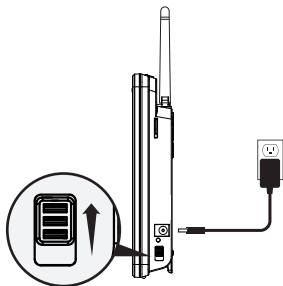

2. Connect the monitor to the AC power adapter, then connect the other end of the adapter to a standard outlet and confirm the power button, located on the right-hand side of the monitor, is in the ON position.

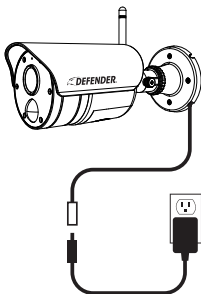


3. Connect each camera to the AC adapter, then connect the other end of the adapter to a standard outlet and extend the camera's antenna into the upright position.
4. Complete camera and monitor setup.

IMPOTRANT: *The camera power supply is not waterproof.*



OPTIMAL SIGNAL TRANSMISSION

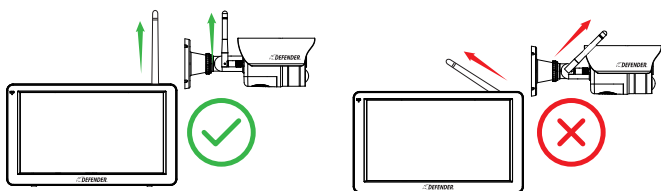


IMPORTANT: To achieve the best signal transmission, angle the camera antenna and the monitor antenna such that they are parallel to each other.

PROPER CAMERA INSTALLATION AND PLACEMENT

PLEASE NOTE: Installing your camera indoors pointing outside through a window, will result in a glare or reflection when "auto" is selected in the night vision settings. This will also disable the cameras PIR sensor and will not be able to detect motion outdoors.

Defender Phoenix HD supports motion detection. Motion detection is influenced by multiple factors such as distance from the camera, the size of the object, the height, angle, and direction of the camera, and your night vision settings. Glass will also disable motion detection accuracy as the sensor can not function through glass.

1. Angle the camera so that objects in the camera's field of view appear in the bottom 2/3 of the camera image.
2. Choose a location where objects of interest will be no further than 33ft (10m) from the camera.
3. Ensure the camera antenna is placed in an upright position.

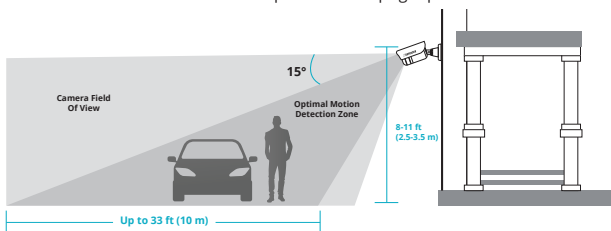


CAMERA SETTINGS

CAMERA SETUP - PAIRING


Your cameras come pre-paired to your monitor. If you have purchased an additional camera or want to assign the camera(s) to a different channel, complete the following steps.




1. Select 

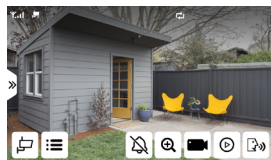

2. Select 

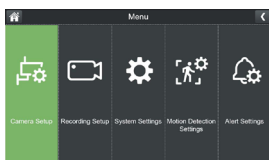


3. Select Camera Setup

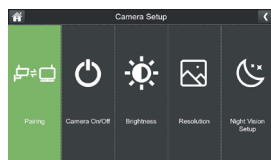


4. Select Pairing



5. Select a channel to pair the camera.

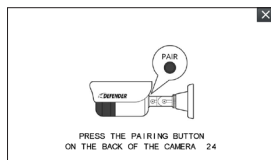


6. Press the pairing button for 3 seconds and release. Wait up to 1 min for your cameras to sync to your monitor and display your footage.

TIP: To unpair a camera(s), press and hold the pairing button on the camera until the  appears.


CAMERA ON/OFF

Your system has a privacy feature built in to allow you to stop recording from the selected camera without unpairing.

PLEASE NOTE: If you turn your camera off you will not be able to live view or record footage until the camera is turned back on.

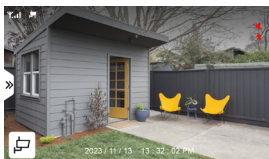


1. Select 

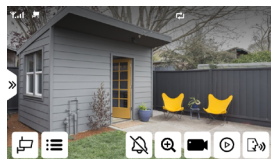

2. Select 



3. Select Camera Setup

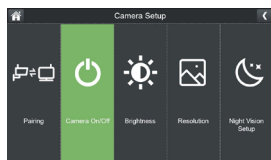

4. Select Camera On/Off



5. Toggle on or off the camera(s) based on your preference.

CAMERA BRIGHTNESS


Select your camera's level of brightness based on your preference. Testing each option after installing the camera is recommended.



1. Select 




2. Select 

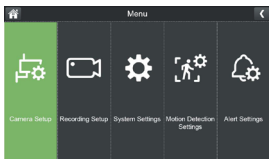

3. Select Camera Setup



4. Select Brightness

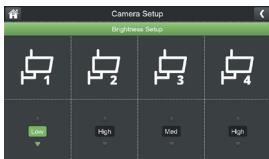


5. Select your preferred Brightness.
Select low, med, or high for each camera.




CAMERA RESOLUTION

The camera's default resolution is HD 1080P.


TIP: Reducing the camera's resolution to 720P, will extend your recording storage capacity up to 50%.

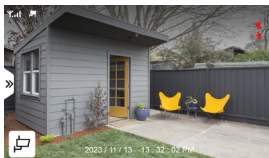


1. Select 

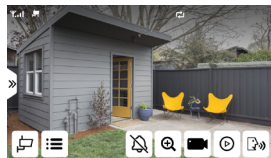


2. Select 

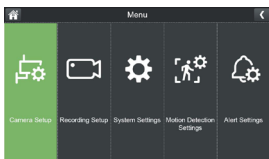

3. Select Camera Setup

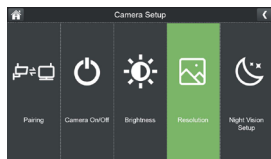

4. Select Resolution

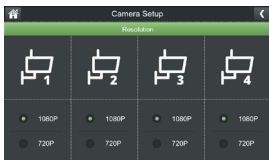

5. Select your preferred resolution for each camera.




NIGHT VISION SETUP

Your camera's default night vision is set to auto.


Auto: The camera will record full color during the day and black and white at night.

Off: The camera will record in color during the day. At night, the camera's recording color will be dependent on ambient lighting.


PLEASE NOTE: When installing your camera indoors pointing outside through a window, select **Off** to avoid a glare or reflection in your live view and recorded footage.

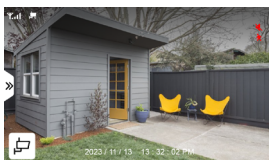


1. Select 

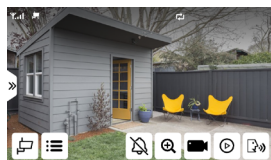


2. Select 

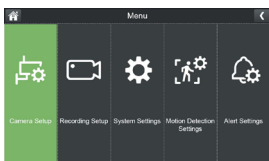

3. Select Camera Setup

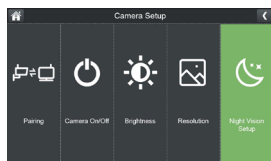

4. Select Night Vision Setup

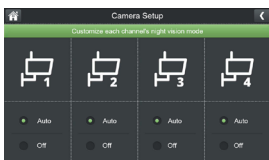

5. Select your preferred night vision setting for each camera.


RECORDING SETUP

Duration: Select the length of time the camera will record when motion is no longer detected. The default setting is 15 seconds.


IMPORTANT: By default, the system is set to record on motion only. Make all necessary changes based on your preference. Please note, when setting a manual recording or scheduled recording, this will override all motion recording settings.



1. Select 

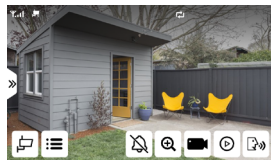

2. Select 

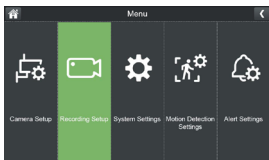

3. Select Recording Setup



4. Select Duration



5. Select the duration of time the camera will record when motion is no longer detected.


SCHEDULE RECORDING

IMPORTANT: When a recording schedule is set, your camera(s) will record continuously during that period and override any motion detection settings.


SETTING A SCHEDULE



1. Select

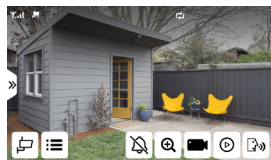


2. Select

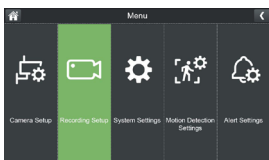


3. Select Recording Setup



4. Select Schedule Recording

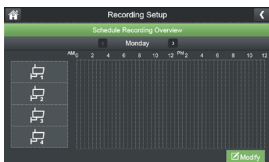

5. Select Modify

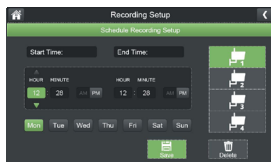


6. Select the camera(s) and day(s) you want to set a recording or and adjust the start and end time. Click Save to apply the changes.

TIP: You can create as many recording schedules as desired. A recording schedule can be continuous or blocks of time during the day.


DELETING A RECORDING SCHEDULE



1. Select 

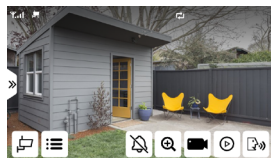

2. Select 

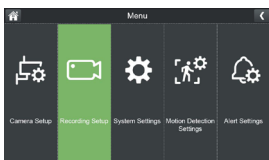

3. Select Recording Setup



4. Select Schedule Recording



5. Select Modify



6. Select the camera(s), day(s) of the week and input the start and end time of a previous recording schedule. Select Delete.

**Repeat to delete additional recording schedules.*


FILE OVERWRITE


Recording time varies depending on the size of the Micro SD card inserted. Once your card is full, old footage will be overwritten to ensure you never stop recording.


The default settings are set to overwrite. If you do not wish to overwrite older footage, turn off this setting.



1. Select 

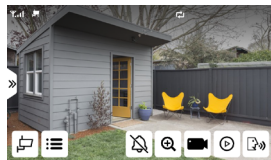

2. Select 

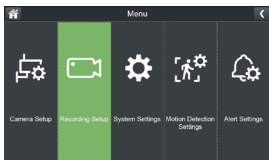

3. Select Recording Setup



4. Select File Overwrite



5. Select No (X)


AUDIO ON/OFF

Your camera is defaulted to record audio. To adjust this setting, follow the steps below.

PLEASE NOTE: This function only turns off audio recording only. Audio will be played in live view. To turn off audio in live view mode, refer to "LIVE VIEW" to turn off monitor audio.



1. Select 

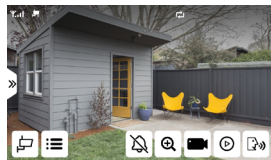

2. Select 



3. Select Recording Setup



4. Select Audio On/Off




5. Turn on/off audio recording for each camera based on your preference.

SYSTEM SETTINGS


TIME SETUP




1. Select 

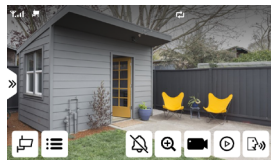


2. Select 

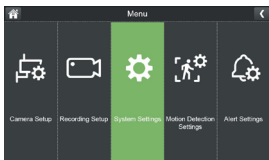

3. Select System Settings

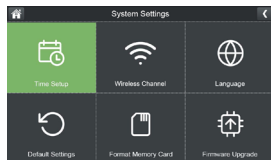

4. Select Time Setup

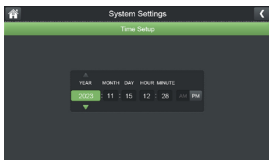


5. Enter your current date and time.

LANGUAGE


Select your preferred monitor language. Default is English.




1. Select 

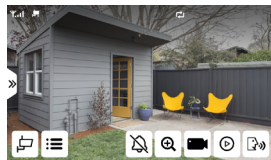


2. Select 

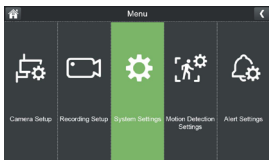

3. Select System Settings

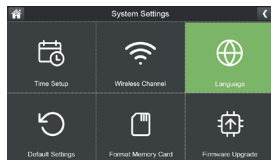

4. Select Language

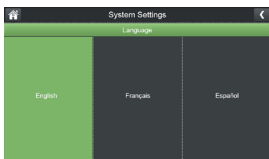

5. Select your preferred language.




DEFAULT SETTINGS

To return your system back to factory settings, restore default settings.


PLEASE NOTE: All custom settings will be lost however, all previously recorded footage will remain on the Micro SD card.




1. Select 

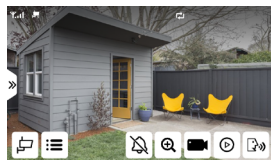

2. Select 

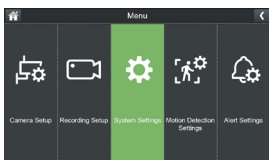

3. Select System Settings

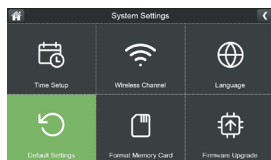

4. Select Default Settings



5. Select Yes






FORMAT MEMORY CARD


IMPORTANT: Formatting your MicroSD card will delete all recordings. This cannot be reversed.


Formatting your SD card may be necessary when you receive an error indicating the SD card is corrupted or when swapping SD cards. To format your SD card please follow the steps below.



1. Select 

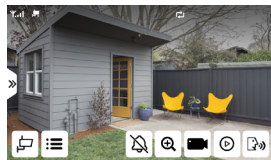


2. Select 

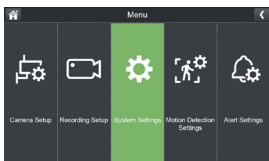


3. Select System Settings



4. Select Format Memory Card

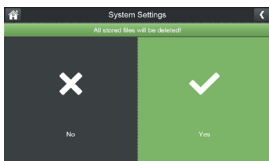

5. Select Yes

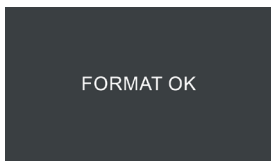


6. System will confirm when formatting is complete




FIRMWARE UPDATE


PLEASE NOTE: Only complete a firmware upgrade when recommended by Customer Support. Once completed, your monitor will restart.

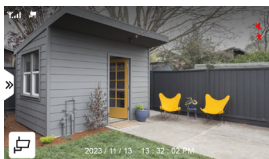

1. Select 

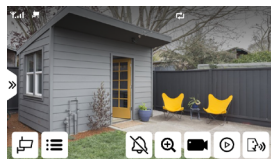

2. Select 

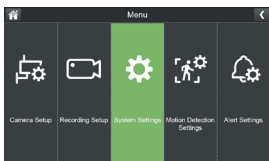

3. Select System Settings



4. Select Firmware Upgrade



5. Select the devices to update, and click Yes to confirm.




6. Wait for the system to finish updating. Once complete the monitor will reboot.


MOTION DETECTION SETTINGS

Customize your motion detection sensitivity level and mask area for each camera. Default sensitivity is set to medium.

SENSITIVITY

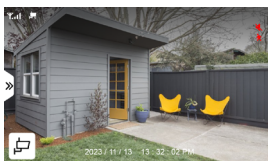

1. Select 

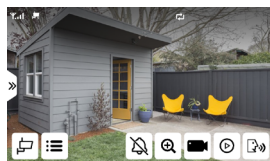

2. Select 




3. Select Motion Detection Settings



4. Select Sensitivity for the camera you want to adjust the settings for




5. Select your preferred motion detection sensitivity level and click  to return to the previous screen.

**Repeat for each camera*


TIP: Refer to page 30 for Advanced Sensitivity Settings.




MASK AREA

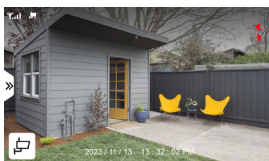

1. Select 

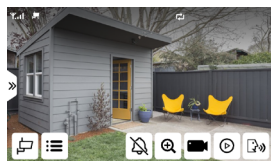

2. Select 

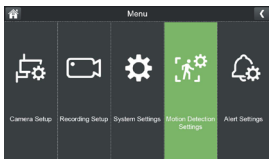

3. Select Motion Detection Settings



4. Tap Mask Area



5. By default, your camera will detect motion in the entire field-of-view. If this is your preferred setting, skip this step. To filter out unwanted motion detection, tap the grid to mask over areas where you do not wish to detect motion. Masked areas will appear white.

**Repeat for each camera.*



ADVANCED SENSITIVITY SETTINGS

IMPORTANT: These settings are based on the average home and environment. Typically, no setting change is required. If you are experiencing a significant amount of inaccurate motion notifications, based on your environment, you can customize this setting.


VMD: Video Motion Detection Algorithm, optimizes motion detection at a wider range and longer distances.

HMD/PIR: Passive Infrared Sensor, optimizes motion detection in short distances triggered by large objects such as cars and humans.


TIP: Shadows will trigger motion alerts if you select VMD or PIR. To avoid alerts from shadows, select both VMD and PIR. The default setting for medium, is to reduce false alerts.



1. Select

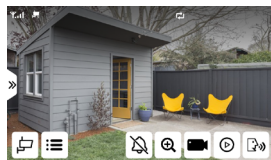

2. Select

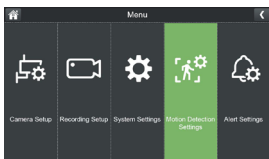


3. Select Motion Detection Settings



4. Select Sensitivity for the camera you want to adjust the settings for.



5. Select Advanced Sensitivity Settings

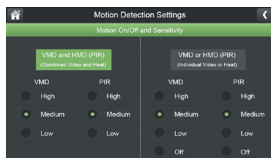

6. Select your preferred settings.

**Repeat for each camera.*

ALERT SETTINGS


There are two types of Alerts - Monitor and Camera(s)


MONITOR ALERT


When motion is detected on one or more cameras, the monitor will beep.




1. Select 

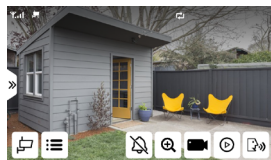


2. Select 

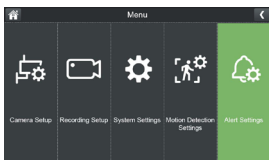


3. Select Alert Settings

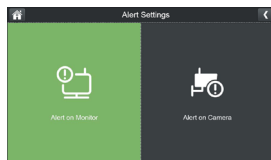


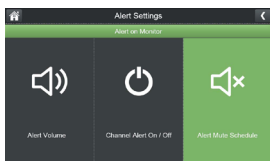
4. Select Alert on Monitor

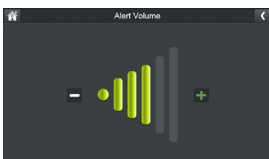


5. Select Alert Volume to adjust the level of sound on your monitor using the - and + symbols, select  once complete.




6. Select Channel Alert On/Off to select which camera(s) will trigger an alert on the monitor, select  once complete.




7. Select Alert Mute Schedule to set a schedule of when you DO NOT want the monitor to alert you to motion.

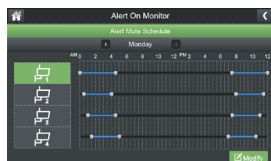


8. Select Modify to set a schedule.

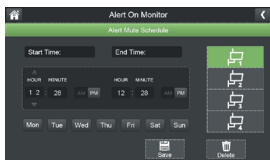


9. Select the camera(s) you wish to set a schedule for.

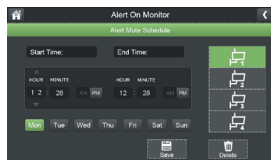

10. Select the days of the week you wish the schedule to apply to.

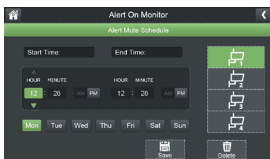

11. Adjust the start and end times to mute notifications for motion alerts.

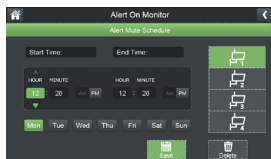

12. Click Save to save your schedule.

TIP: To remove the schedule, select the camera(s) and dates you wish to delete the schedule for, put the times you wish to delete and select Delete.




CAMERA ALERT


There are two types of camera alerts.

Voice Message: The camera will make an announcement “This area is under 24-hour surveillance.”

Light: The deterrent light is a red flashing light in front of the camera.

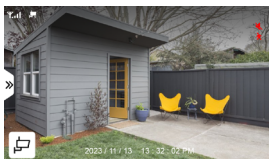


1. Select 

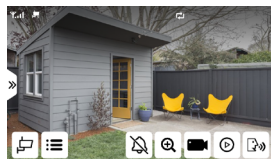


2. Select 



3. Select Alert Settings

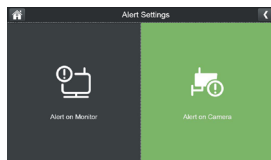

4. Select Alert on Camera

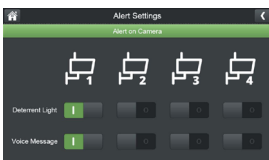


5. Select the camera(s) you wish to have an audio alert and/or deterrent light.


PLAYBACK

TIP: Playback can also be accessed by pressing the Playback button on the top of the monitor.



1. Select 

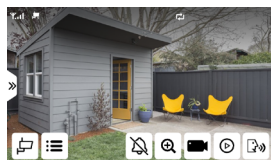


2. Select  to access the Recording File List.



3. Select the camera and day you wish to playback recordings from. Days with recordings will be highlighted in green.



4. Tap the recording to playback.

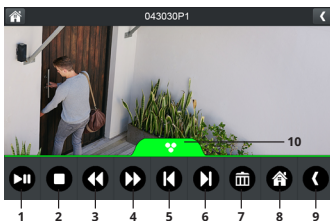

1. Play and pause recording
2. Stop playback
3. Rewind playback up to 16x times speed
4. Fast-forward playback up to 16x times speed

5. Go to previous recording
6. Go to next recording
7. Delete recording
8. Return to live view
9. Return to recording file list
10. Tap to minimize the menu

PLEASE NOTE: In playback mode, to turn the volume on or off, use the volume buttons at the top of the monitor.

TIP: To delete all recordings, format the SD Card.



FREQUENTLY ASKED QUESTIONS

WHAT TO DO WHEN A CAMERA DOES NOT PAIR SUCCESSFULLY TO THE PHOENIX HD MONITOR.

If your camera(s) do not pair automatically after following the pairing steps, unplug your camera(s) from power for one minute. Plug the camera(s) back in and repeat the pairing steps.

WHAT IS THE MAXIMUM SIZE MIRCOSD CARD THAT CAN BE USED IN THE PHOENIX HD?

The maximum size mircoSD card is 512 GB.





Need Help? Visit:
DefenderCameras.com/Support



REV01 03282024 E

Defender is continuously enhancing our products to bring customers the best user experience. For the most up to date Quick Start Guide, please visit defendercameras.com.

DEFENDER® does not endorse any DEFENDER® products for illegal activities. DEFENDER® is not responsible or liable in any way for any damage, vandalism, theft or any other action that may occur while a DEFENDER® product is in use by the purchaser. We reserve the right to change models, configuration, or specifications without notice or liability. Product may not be exactly as shown.

©2024 DEFENDER®. All rights reserved. DEFENDER®, the DEFENDER® logo and other DEFENDER® marks may be registered. All other Trademarks are the property of their respective owners.



ISED Statement

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada.

L'exploitation est soumise aux deux conditions suivantes :

- (1) Cet appareil ne doit pas provoquer d'interférences.
- (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

L'appareil numérique du ciem conforme canadien peut - 3 (b) / nmb - 3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with **minimum distance 20cm** between the radiator and your body.