


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5190MHz
TEST BY :Peter

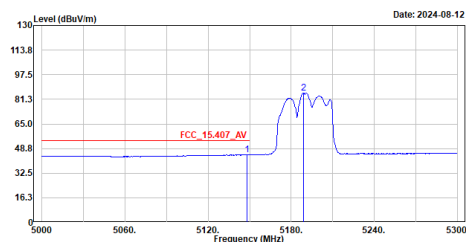


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.200	44.73	54.00	-9.27	30.33	14.40	Average
2	5188.700	85.41	-----	-----	70.92	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5190MHz
TEST BY :Peter

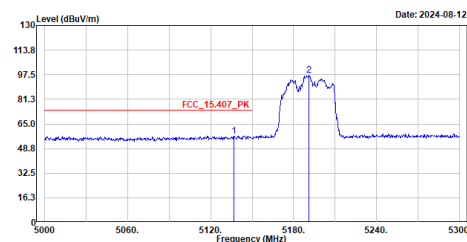


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5137.100	57.08	74.00	-16.92	42.69	14.39	Peak
2	5191.100	96.97	-----	-----	82.47	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5190MHz
TEST BY :Peter

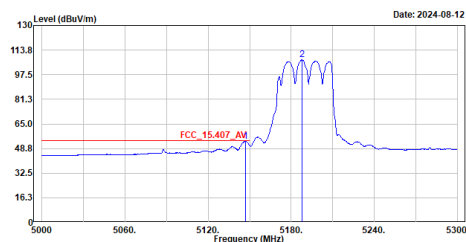


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.000	53.43	54.00	-0.57	39.03	14.40	Average
2	5187.000	107.23	-----	-----	92.75	14.48	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5190MHz
TEST BY :Peter

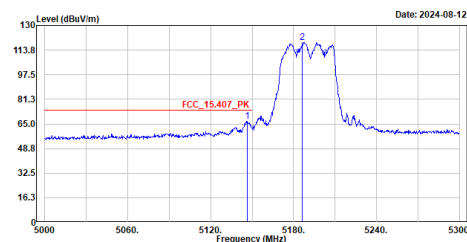


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.400	66.67	74.00	-7.33	52.27	14.40	Peak
2	5186.300	118.56	-----	-----	104.08	14.48	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5230MHz
TEST BY :Peter

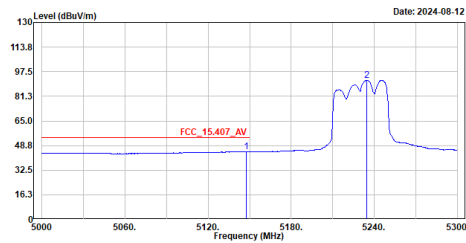


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.600	44.80	54.00	-9.20	30.40	14.40	Average
2	5234.600	91.95	-----	-----	77.46	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5230MHz
TEST BY :Peter

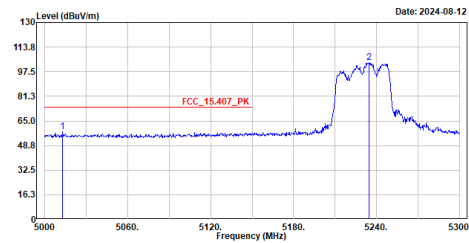


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5012.600	57.81	74.00	-16.19	43.41	14.40	Peak
2	5234.600	103.46	-----	-----	88.97	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5230MHz
TEST BY :Peter

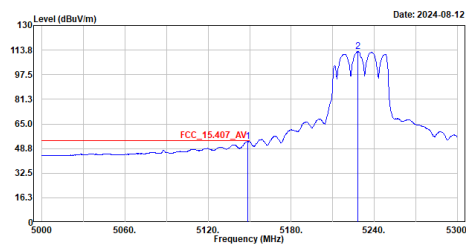


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.800	53.42	54.00	-0.58	39.02	14.40	Average
2	5228.300	112.71	-----	-----	98.21	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5230MHz
TEST BY :Peter

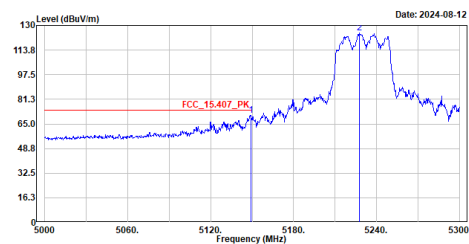


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.400	70.84	74.00	-3.16	56.44	14.40	Peak
2	5227.400	125.16	-----	-----	110.66	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5270MHz
TEST BY :Peter

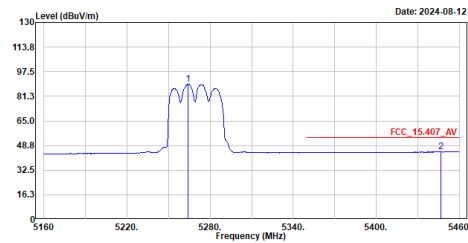


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5264.100	89.23	-----	-----	74.74	14.49	Average
2	5446.800	44.65	54.00	-9.35	29.71	14.94	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5270MHz
TEST BY :Peter

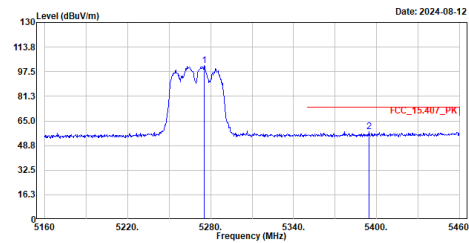


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5275.200	101.33	-----	-----	86.82	14.51	Peak
2	5394.600	57.86	74.00	-16.14	43.22	14.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5270MHz
TEST BY :Peter

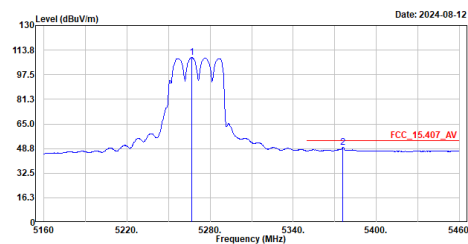


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5266.800	108.75	-----	-----	94.26	14.49	Average
2	5376.000	49.74	54.00	-4.26	35.14	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5270MHz
TEST BY :Peter

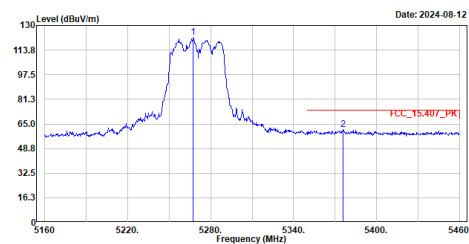


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5267.400	121.91	-----	-----	107.42	14.49	Peak
2	5375.700	61.43	74.00	-12.57	46.83	14.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5310MHz
TEST BY :Peter

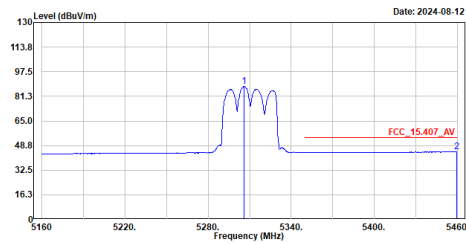


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5306.100	87.77	-----	-----	73.23	14.54	Average
2	5459.400	44.65	54.00	-9.35	29.60	15.05	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5310MHz
TEST BY :Peter

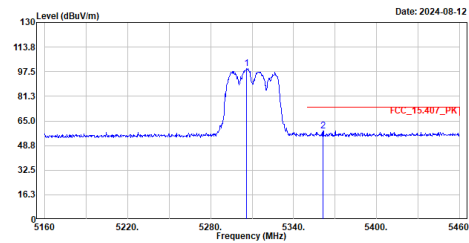


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5306.100	99.63	-----	-----	85.09	14.54	Peak
2	5361.300	58.37	74.00	-15.63	43.81	14.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5310MHz
TEST BY :Peter

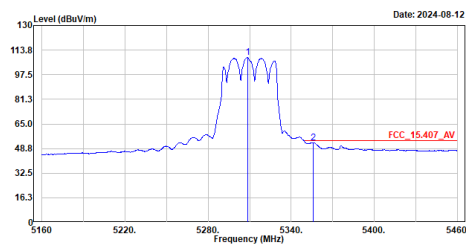


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5308.500	108.87	-----	-----	94.34	14.53	Average
2	5355.900	52.61	54.00	-1.39	38.06	14.55	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5310MHz
TEST BY :Peter

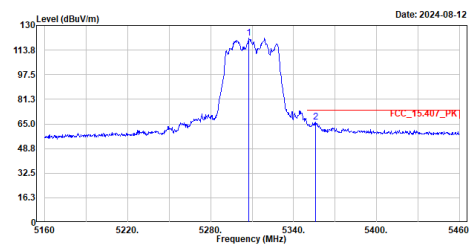


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5307.600	121.53	-----	-----	107.00	14.53	Peak
2	5355.900	66.22	74.00	-7.78	51.67	14.55	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5510MHz
TEST BY :Peter

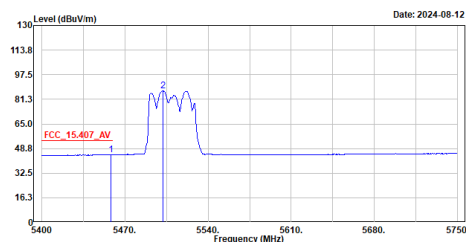


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.450	44.72	54.00	-9.28	29.68	15.04	Average
2	5501.850	86.97	-----	-----	71.52	15.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5510MHz
TEST BY :Peter

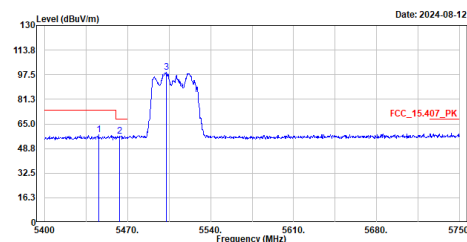


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5445.500	57.84	74.00	-16.16	42.91	14.93	Peak
2	5463.000	57.14	68.22	-11.08	42.05	15.09	Peak
3	5502.900	99.11	-----	-----	83.66	15.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5510MHz
TEST BY :Peter

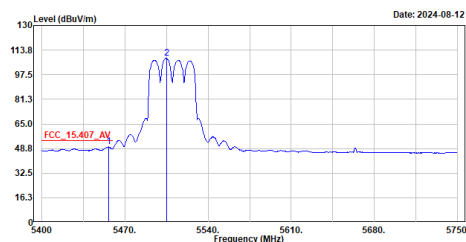


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.350	49.84	54.00	-4.16	34.81	15.03	Average
2	5505.000	108.36	-----	-----	92.89	15.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5510MHz
TEST BY :Peter

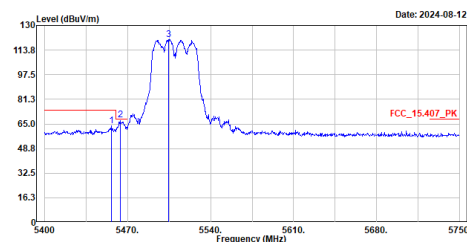


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.350	63.94	74.00	-10.06	48.91	15.03	Peak
2	5464.050	67.49	68.22	-0.73	52.39	15.10	Peak
3	5504.650	120.55	-----	-----	105.08	15.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5550MHz
TEST BY :Peter

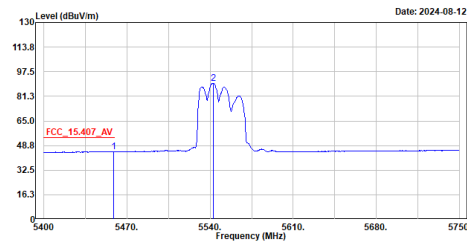


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.800	44.70	54.00	-9.30	29.65	15.05	Average
2	5542.800	89.92	-----	-----	74.49	15.43	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5550MHz
TEST BY :Peter

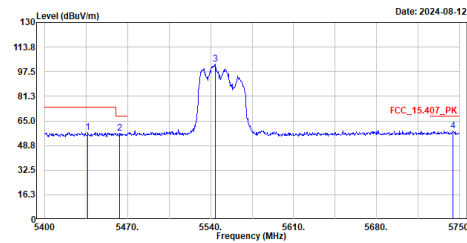


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5436.400	57.59	74.00	-16.41	42.72	14.87	Peak
2	5463.350	56.80	68.22	-11.42	41.71	15.09	Peak
3	5543.850	102.39	-----	-----	86.96	15.43	Peak
4	5744.750	58.57	68.22	-9.65	42.35	16.22	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5550MHz
TEST BY :Peter

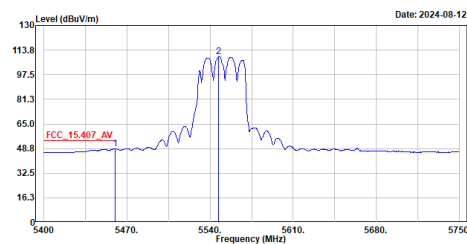


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	48.51	54.00	-5.49	33.46	15.05	Average
2	5547.350	109.38	-----	-----	93.95	15.43	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5550MHz
TEST BY :Peter

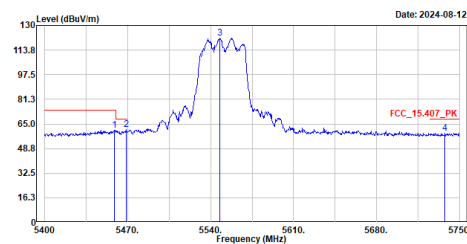

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.800	60.93	74.00	-13.07	45.88	15.05	Peak
2	5468.600	61.37	68.22	-6.85	46.24	15.13	Peak
3	5548.050	121.59	-----	-----	106.17	15.42	Peak
4	5737.750	59.00	68.22	-9.22	42.82	16.18	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

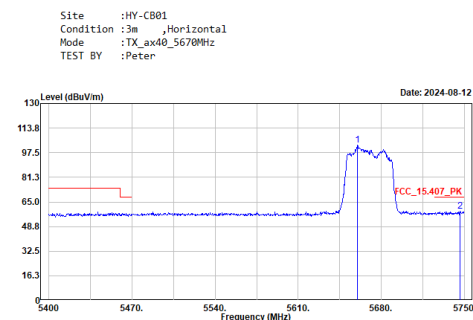


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5660.050	102.52	-----	-----	86.79	15.73	Peak
2	5746.150	58.84	68.22	-9.38	42.62	16.22	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

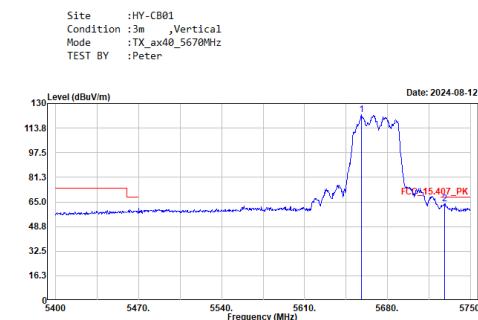


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5658.300	122.68	-----	-----	106.96	15.72	Peak
2	5728.300	63.73	68.22	-4.49	47.60	16.13	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

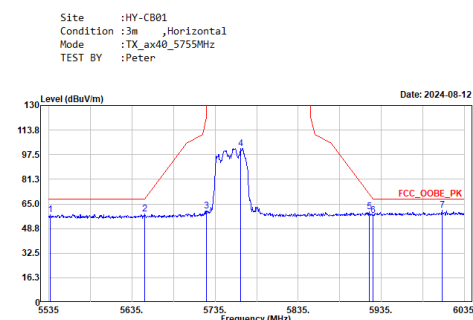

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5536.500	58.08	68.22	-10.14	42.64	15.44	Peak
2	5650.000	58.33	68.23	-9.90	42.67	15.66	Peak
3	5725.000	60.38	122.20	-61.82	44.26	16.12	Peak
4	5765.500	101.73	-----	-----	85.44	16.29	Peak
5	5920.500	59.79	71.55	-11.76	43.41	16.38	Peak
6	5925.000	57.48	68.23	-10.75	41.10	16.38	Peak
7	6008.000	60.88	68.22	-7.34	44.35	16.53	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

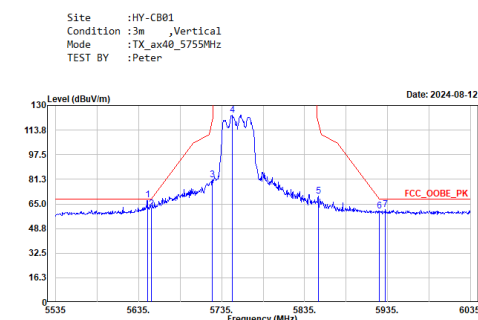

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5645.500	67.46	68.22	-0.76	51.83	15.63	Peak
2	5650.000	61.80	68.23	-6.43	46.14	15.66	Peak
3	5723.500	80.90	118.78	-37.88	64.79	16.11	Peak
4	5748.000	123.74	-----	-----	107.51	16.23	Peak
5	5851.500	69.95	118.78	-48.83	53.69	16.26	Peak
6	5925.000	60.40	68.23	-7.83	44.02	16.38	Peak
7	5932.500	61.34	68.22	-6.88	44.97	16.37	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5795MHz
TEST BY :Peter

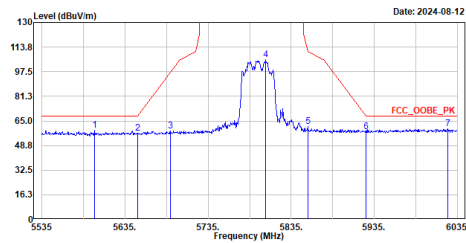


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5598.000	58.77	68.22	-9.45	43.44	15.33	Peak
2	5650.000	57.03	68.23	-11.20	41.37	15.66	Peak
3	5690.000	58.41	97.81	-39.40	42.48	15.93	Peak
4	5804.500	105.60	-----	-----	89.26	16.34	Peak
5	5855.000	61.24	110.80	-49.56	44.98	16.26	Peak
6	5925.000	57.86	68.23	-10.37	41.48	16.38	Peak
7	6023.500	60.00	68.22	-8.22	43.43	16.57	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5795MHz
TEST BY :Peter

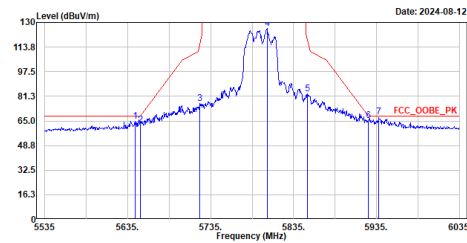


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5644.000	64.76	68.22	-3.46	49.14	15.62	Peak
2	5650.000	62.38	68.23	-5.85	46.72	15.66	Peak
3	5722.000	76.29	115.36	-39.07	60.18	16.11	Peak
4	5803.000	126.29	-----	-----	109.95	16.34	Peak
5	5851.500	82.79	118.78	-35.99	66.53	16.26	Peak
6	5925.000	65.29	68.23	-2.94	48.91	16.38	Peak
7	5938.000	67.50	68.22	-0.72	51.13	16.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_5210MHz
TEST BY :Caster

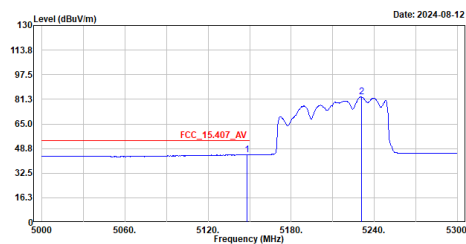


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.200	44.72	54.00	-9.28	30.32	14.40	Average
2	5230.700	82.87	-----	-----	68.38	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_5210MHz
TEST BY :Caster

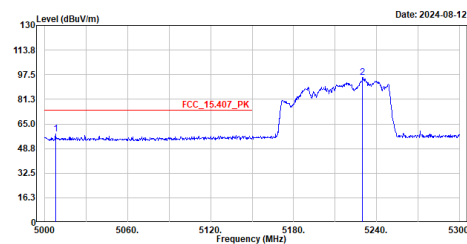


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5007.800	58.15	74.00	-15.85	43.72	14.43	Peak
2	5229.800	95.52	-----	-----	81.03	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5210MHz
TEST BY :Caster

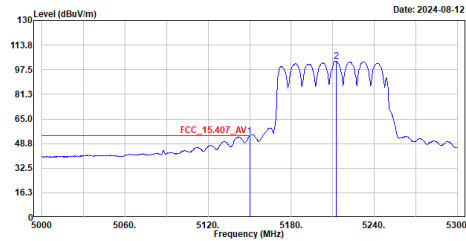


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	53.43	54.00	-0.57	39.03	14.40	Average
2	5212.400	103.14	-----	-----	88.63	14.51	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5210MHz
TEST BY :Caster

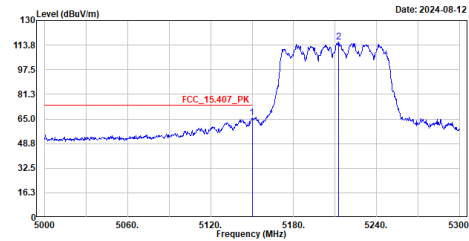


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	65.59	74.00	-8.41	51.19	14.40	Peak
2	5212.400	115.70	-----	-----	101.19	14.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_5290MHz
TEST BY :Caster

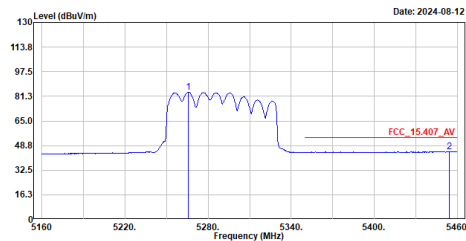


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5265.600	84.03	-----	-----	69.54	14.49	Average
2	5454.300	44.71	54.00	-9.29	29.70	15.01	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_5290MHz
TEST BY :Caster

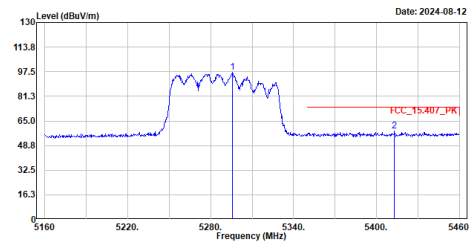


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5295.900	97.35	-----	-----	82.81	14.54	Peak
2	5412.900	58.22	74.00	-15.78	43.50	14.72	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5290MHz
TEST BY :Caster

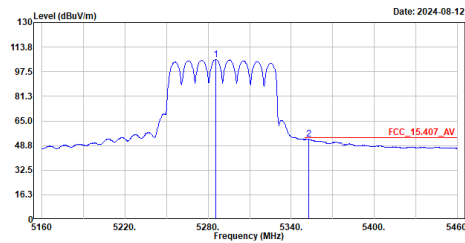


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5285.400	105.64	-----	-----	91.11	14.53	Average
2	5352.900	52.91	54.00	-1.09	38.37	14.54	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5290MHz
TEST BY :Caster

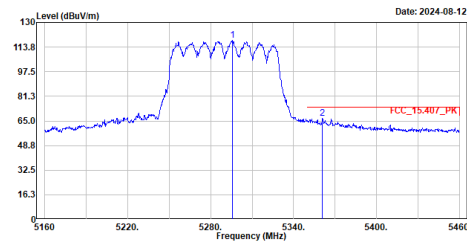


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5295.600	118.22	-----	-----	103.68	14.54	Peak
2	5361.000	66.70	74.00	-7.30	52.14	14.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

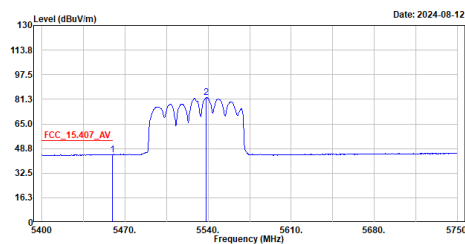


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.150	44.75	54.00	-9.25	29.70	15.05	Average
2	5538.600	82.38	-----	-----	66.95	15.43	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

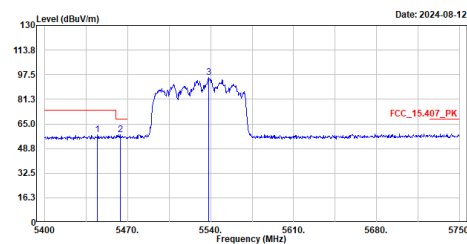


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5444.450	57.80	74.00	-16.20	42.87	14.93	Peak
2	5464.050	57.93	68.22	-10.29	42.83	15.10	Peak
3	5538.600	95.59	-----	-----	80.16	15.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5530MHz
TEST BY :Caster

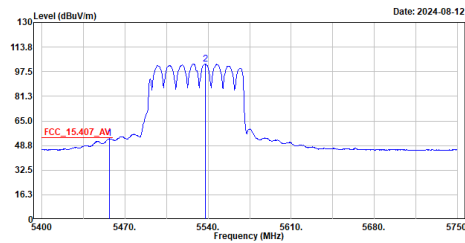

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5457.050	53.33	54.00	-0.67	38.30	15.03	Average
2	5537.550	102.65	-----	-----	87.21	15.44	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5530MHz
TEST BY :Caster

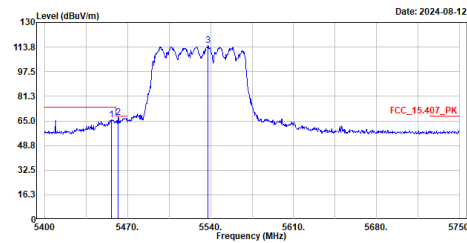

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.000	65.78	74.00	-8.22	50.76	15.02	Peak
2	5461.950	67.17	68.22	-1.05	52.09	15.08	Peak
3	5537.900	114.63	-----	-----	99.20	15.43	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_5610MHz
TEST BY :Caster

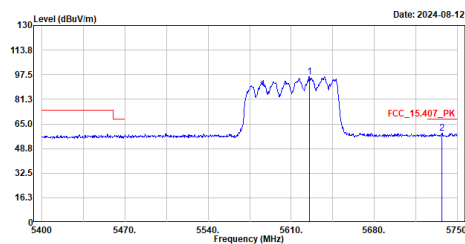

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5625.400	96.29	-----	-----	80.80	15.49	Peak
2	5737.050	58.89	68.22	-9.33	42.71	16.18	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5610MHz
TEST BY :Caster

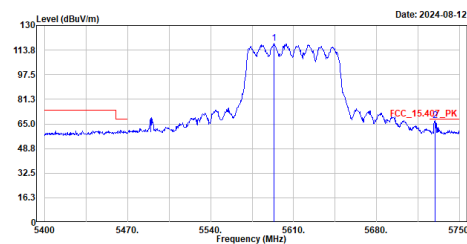

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5593.200	118.41	-----	-----	103.10	15.31	Peak
2	5729.700	67.44	68.22	-0.78	51.29	16.15	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ux80_5775MHz
TEST BY :Caster

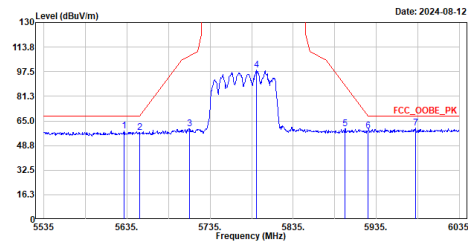


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5631.500	58.56	68.22	-9.66	43.02	15.54	Peak
2	5650.000	57.44	68.23	-10.79	41.78	15.66	Peak
3	5710.500	59.61	108.14	-48.53	43.56	16.05	Peak
4	5790.500	98.39	-----	-----	82.06	16.33	Peak
5	5897.500	59.83	88.56	-28.73	43.47	16.36	Peak
6	5925.000	58.27	68.23	-9.96	41.89	16.38	Peak
7	5982.000	68.32	68.22	-7.90	43.88	16.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ux80_5775MHz
TEST BY :Caster

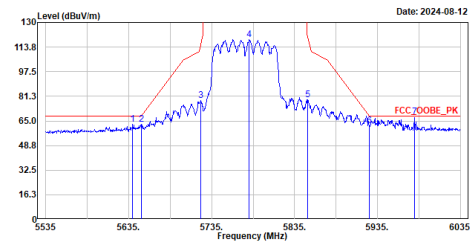

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5640.000	62.96	68.22	-5.26	47.36	15.60	Peak
2	5650.000	63.00	68.23	-5.23	47.34	15.66	Peak
3	5722.000	78.47	115.36	-36.89	62.36	16.11	Peak
4	5780.500	118.86	-----	-----	102.54	16.32	Peak
5	5851.000	78.74	119.92	-41.18	62.49	16.25	Peak
6	5925.000	61.92	68.23	-6.31	45.54	16.38	Peak
7	5979.500	67.46	68.22	-0.76	51.03	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.