

## Appendix D. SAR Test Setup Photos

### For EUT with Internal Antenna



Direct Laptop Plug-in for USB Configuration 1  
(Horizontal Up with Phantom 0.5 cm Gap)



USB Cable Plug-in for USB Configuration 2  
(Horizontal Down with Phantom 0.5 cm Gap)



Direct Laptop Plug-in for USB Configuration 3  
(Vertical Front with Phantom 0.5 cm Gap)




USB Cable Plug-in for USB Configuration 4  
(Vertical Back with Phantom 0.5 cm Gap)




**USB Cable Plug-in for USB Configuration 5  
(Tip Mode with Phantom 0.5 cm Gap)**

**For EUT with External Antenna**

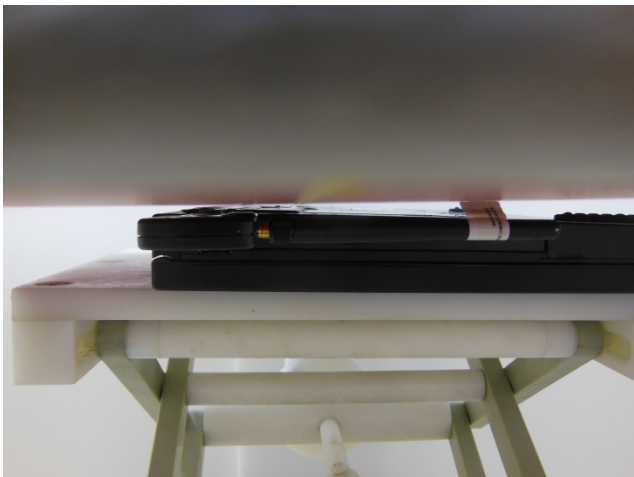


**Direct Laptop Plug-in for USB Configuration 6,  
(Horizontal Up with Phantom 0.5 cm Gap)  
with antenna Horizontal 0 degree**

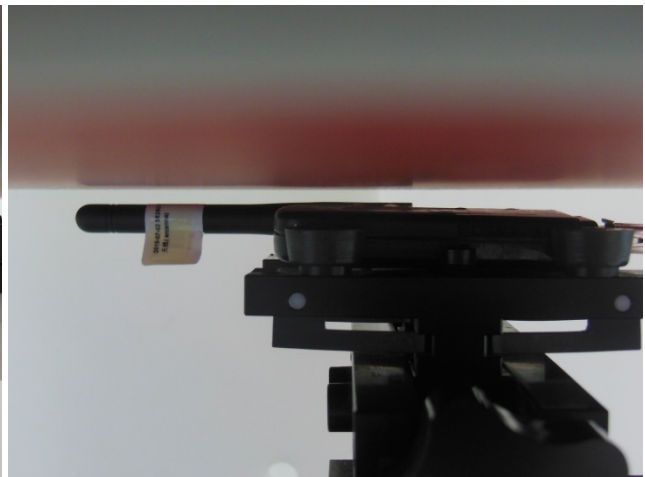


**USB Cable Plug-in for USB Configuration 7,  
(Horizontal Up with Phantom 0.5 cm Gap)  
with antenna Horizontal 90 degree**



**USB Cable Plug-in for USB Configuration 8,  
(Horizontal Up with Phantom 0.5 cm Gap)  
with antenna Vertical 90 degree**

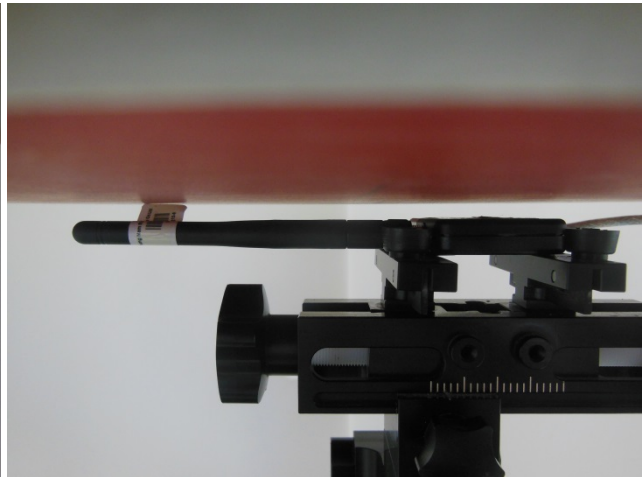


**USB Cable Plug-in for USB Configuration 9,  
(Horizontal Down with Phantom 0.5 cm Gap)  
with antenna Horizontal 0 degree**

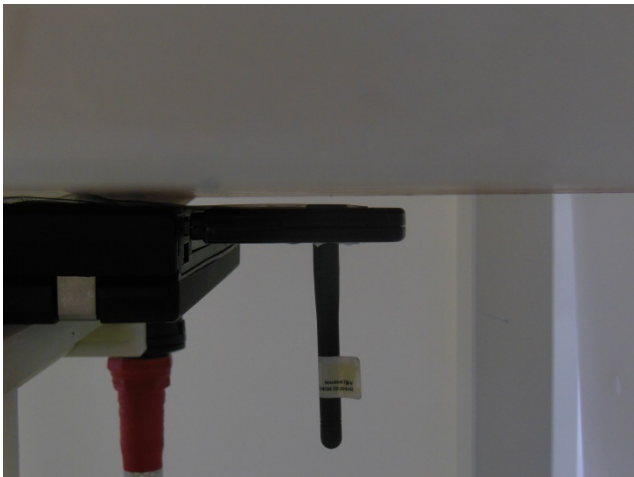

**Direct Laptop Plug-in for USB Configuration 10,  
(Horizontal Down with Phantom 0.5 cm Gap)  
with antenna Vertical 90 degree**



**Direct Laptop Plug-in for USB Configuration 11,  
(Horizontal Down with Phantom 0.5 cm Gap)  
with antenna Horizontal 90 degree**

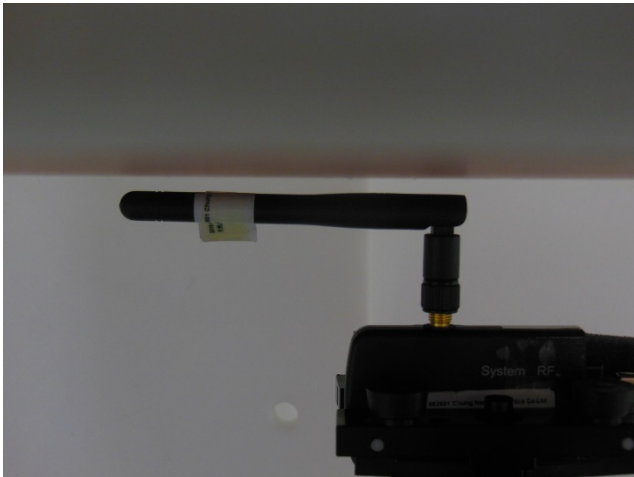

**USB Cable Plug-in for USB Configuration 12  
(Vertical Front with Phantom 0.5 cm Gap)  
Horizontal 90 degrees**



**USB Cable Plug-in for USB Configuration 13  
(Vertical Front with Phantom 0.5 cm Gap)  
Horizontally Reverse 90 degrees**