



APC 2Mi

Quick Installation Guide

Revision 1.2
19 February 2011

Copyright

© 2011 Deliberant

This user's guide and the software described in it are copyrighted with all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of Deliberant.

Notice

Deliberant reserves the right to change specifications without prior notice.

While the information in this manual has been compiled with great care, it may not be deemed an assurance of product characteristics. Deliberant shall be liable only to the degree specified in the terms of sale and delivery.

The reproduction and distribution of the documentation and software supplied with this product and the use of its contents is subject to written authorization from Deliberant.

Trademarks

Deliberant logo is trademark of Deliberant LLC.

All other registered and unregistered trademarks in this document are the sole property of their respective owners.

Contents

Copyright	2
Notice	2
Trademarks	2
CONTENTS	3
INTRODUCTION.....	4
FCC Warning.....	4
FCC Caution	4
FCC Radiation Exposure Statement	4
Antenna Installation	4
CE Mark Warning	5
R&TTE Compliance Statement	5
Safety.....	5
EU Countries Intended for Use.....	5
EU Countries Not Intended for Use	5
ABOUT THIS GUIDE.....	6
Prerequisite Skills and Knowledge	6
Definitions, Acronyms and Abbreviations.....	6
Technical Support	6
Contact us	6
INSTALLATION	7
Package Contents	7
Hardware Introduction	7
LEDs	8
Mounting the APC 2Mi on the Wall	9
ACCESS THE APC 2MI	10
Connection via WEB Browser	10
Resetting to Factory Defaults.....	11
Resetting Device via Ping.....	11

Introduction

FCC Warning

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC Radiation Exposure Statement

To comply with FCC RF exposure requirements in section 1.1307, a minimum separation distance of 20 cm is required between the antenna and all public persons.

CE Mark Warning

In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

R&TTE Compliance Statement

This equipment complies with all the requirements of the Directive 1999/5/EC of the European Parliament and the Council of 9 March 1999 on Radio Equipment and Telecommunication Terminal Equipment and the Mutual Recognition of their Conformity (R&TTE).

The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this manual and of the computer manufacturer must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Denmark, Finland, France (with Frequency channel restrictions), Germany, Greece, Ireland, Italy, Luxembourg, The Netherlands, Portugal, Spain, Sweden and United Kingdom.

The ETSI version of this device is also authorized for use in EFTA member states Iceland, Liechtenstein, Norway and Switzerland.

EU Countries Not Intended for Use

None

About this Guide

Prerequisite Skills and Knowledge

To use this document effectively, you should have a working knowledge of Local Area Networking (LAN) concepts and wireless Internet access infrastructures.

Definitions, Acronyms and Abbreviations

The following typographic conventions and symbols are used throughout this document:



Additional information that may be helpful but which is not required.



Important information that should be observed.

bold

Menu commands, buttons, input fields, links, and configuration keys are displayed in bold

italic

References to sections inside the document are displayed in italic.

`code`

File names, directory names, form names, system-generated output, and user typed entries are displayed in constant-width type

Technical Support

If you encounter problems when installing or using this product, please consult the Deliberant website at www.deliberant.com for:

- Direct contact to the Deliberant support centers.
- Frequently Asked Questions (FAQ).
- Download area for the latest software, user documentation and product updates.

Contact us

EU office:

UAB WILIBOX Veiveriu 150 - IIIa. Kaunas,
LT-46391
Lithuania
support@wilibox.com

US office:

Deliberant
138 Mountain Brook Drive
Canton, GA 30115
United States of America
For support: support@deliberant.com
For sales enquiries: sales@deliberant.com

Installation

This chapter provides installation instructions for the hardware components of the APC 2Mi.

Package Contents

The figure below displays APC 2Mi package contents.

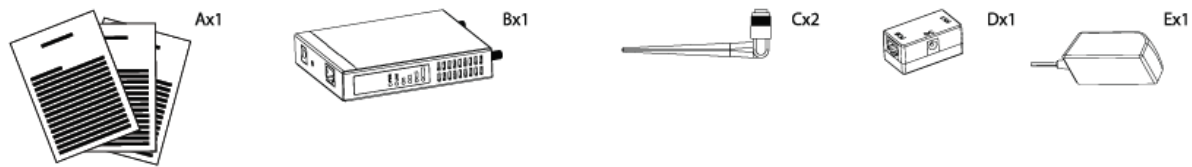


Figure 1 – APC 2Mi Package Contents

Item	Component Name	Quantity
A	APC 2Mi Quick Installation Guide	1
B	APC 2Mi enclosure	1
C	Omni antenna	2
D	PoE injector	1
E	Power adapter	1



If any of these items are missing or damaged, please contact your reseller.

Hardware Introduction

APC 2Mi is housed in a rugged metal enclosure and has two omni antennas:

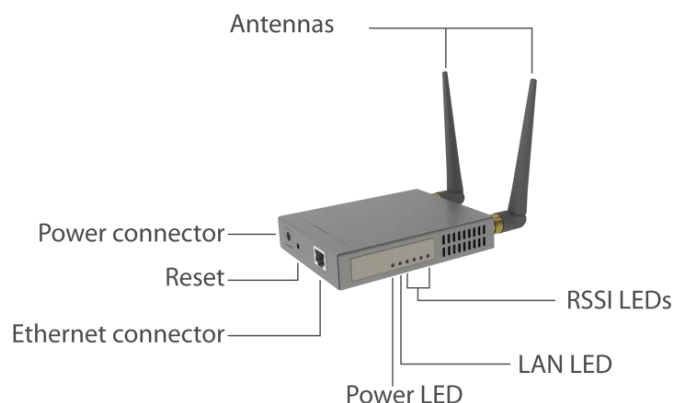


Figure 2 – APC 2Mi Overview

The APC 2Mi contains:

- **Power connector**
- **Ethernet port**
- **Reset button** enables to reboot and reset the device configuration to the factory defaults.
- **6 LEDs:** power LED, LAN activity LED and 4 LEDs for device RSSI level indication
- **2 omni antennas**

The APC 2Mi has label with following information:



Figure 3 – APC 2Mi Label

The label of the APC 2Mi contains:

- **Model** name. The official model name is **APC 2Mi**.
- **Serial Number**
- **Radio MAC** address
- **LAN MAC** address
- **FCC ID: UB8-APC2Mi**
- **IC ID: 6607-APC2Mi**

LEDs


The APC 2Mi has 6 LEDs located on the side panel: power, LAN and 4 RSSI LEDs (refer at the *Figure 2 – APC 2Mi Overview* for details). The various states of the LEDs indicate different connection operations as follows:

LED	Color	Status	Indication
Power	Green	On	APC 2Mi is active/working
		Off	No power on APC 2Mi
LAN	Green	On	LAN connection exists.
		Blinking	Indicates the traffic on LAN interface.
		Off	No LAN connection.
RSSI (1, 2, 3, 4)	Yellow	On	The RSSI level has reached the appropriate threshold level (default RSSI threshold levels: 10, 25, 35, 50)
		Off	The RSSI level has not reached the appropriate threshold level


Mounting the APC 2Mi on the Wall

The indoor unit APC 2Mi unit can be mounted on a wall easy. Follow the steps for APC 2Mi installation on a wall:

- Step 1.** Attach the unit by a two screws on a wall and push it downwards until it clicks into position:

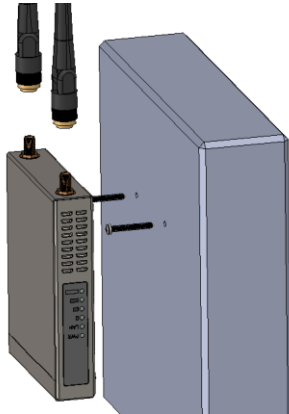

- Step 2.** Connect omni antennas (item C in the *Figure 1 – APC 2Mi Package Contents*), Ethernet cable and power adapter (item D and E in the *Figure 1 – APC 2Mi Package Contents*), to the APC 2Mi:

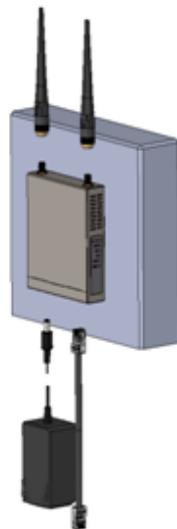

- Step 3.** After the power adapter was connected to the APC 2Mi, the green power LED and LAN LED must be on (refer at the respective section *LEDs*). Dependently on link quality, up to four yellow LEDs will switch on indicating that the link between two units was established successfully.
- Step 4.** After the link between two devices was established, align antennas for the maximal performance. Run the **Antenna Alignment** tool in the Web management interface and move omni antennas in the horizontal and vertical planes until the maximum RSSI visible on the Antenna Alignment graph is achieved.


Access the APC 2Mi

The first connection to the APC 2Mi can be made using a standard Ethernet cable connected directly to your PC. See next sections for the instructions on how to access the APC 2Mi management interfaces.

Connection via WEB Browser

The default IP address of the APC 2Mi is 192.168.2.66 with a subnet mask of 255.255.255.0.

- Step 1.** Configure your PC with a static IP address on the 192.168.2.0 subnet with mask 255.255.255.0. Connect the APC 2Mi Ethernet interface in to the same physical network as your PC. Open the Web browser and type the default IP address of the APC 2Mi: <https://192.168.2.66/>

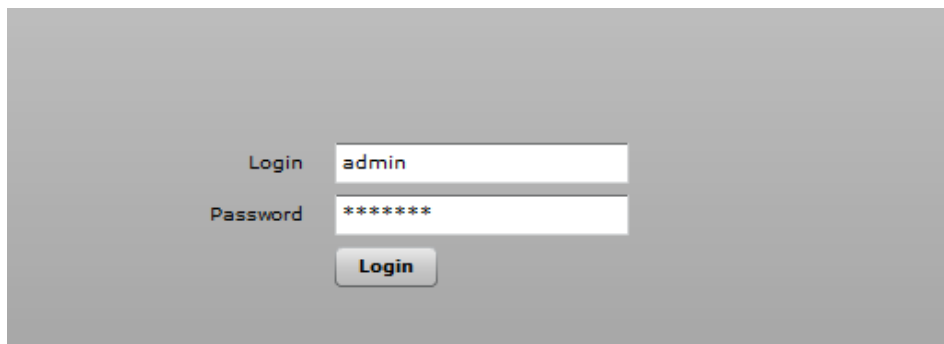

- Step 2.** Enter the APC 2Mi administrator login details to access the Web management:



The default administrator login settings for all APC 2Mi are:

Login: **admin**

Password: **admin01**

- Step 3.** After successful administrator log on you will see the main page of the APC 2Mi Web management interface. The APC 2Mi now is ready for configuration. For further instructions on Web management refer to the respective document APC 2Mi User Guide.

Resetting to Factory Defaults

The APC 2Mi device has 2 options how to reset device to factory defaults:

- **Reset button** (refer at the *Figure 2 – APC 2Mi Overview*). Press and hold the **Reset** button for 1 second to reboot the controller; press and hold the **Reset** button for more than 5 seconds to set the controller to factory defaults.
- **Resetting to defaults via Ping.**

Resetting Device via Ping

APC 2Mi has the capability of being reset to defaults by pinging the device with a certain packet size when the device is booting. During the startup of the device, when the drivers of the ethernet interfaces are loaded, the reset daemon is started. The daemon suspends startup process for 3 seconds and waits for ICMP "echo request" packet of length 369 bytes. If the packet received, the reset daemon sets the device to default configuration.



It is recommended to connect PC to the device via switch, as depending on PC OS settings, the ARP table might be flushed during wired link status change (connecting the device that will be reset).

Steps to reset to default settings:

- Step 1.** Power off the APC 2Mi device.
- Step 2.** Obtain the device MAC address.
- Step 3.** Connect a PC to the same physical subnet as the device.
- Step 4.** Execute 'arp -s' command to assign the IP address (IP address should be from the same subnet as PC) to the device MAC address:

```
arp -s <IP address to assign> <device MAC address>
```



Note that syntax of MAC address differs depending on OS:

- Linux OS: AA:BB:CC:DD:EE:FF
- Windows OS: AA-BB-CC-DD-EE-FF

- Step 5.** Start ping the APC 2Mi device:
For Linux users: ping <IP address> -s 369
For Windows users: ping <IP address> -l 369 -t -w 200
- Step 6.** Power up device and wait about 30sec or more (depending on device hardware).
- Step 7.** Stop ping the APC 2Mi, and let the device boot as usual. The device should start up with factory default settings.