


Quick View Guide

T700

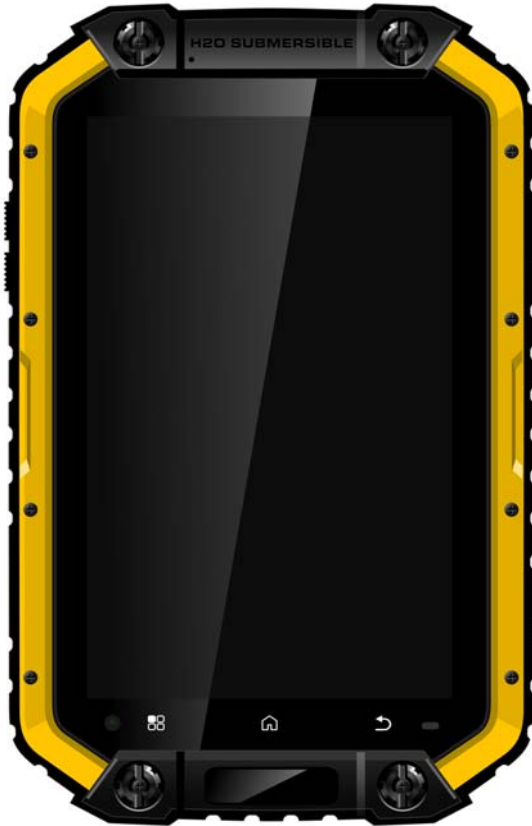

All Rights Reserved


No part of this manual may be reproduced or forwarded in any form or by any means without prior written consent of 17FOX

Statement

17FOX reserves the right to revise this document or withdraw it at any time without prior notice.

Know your phone

Mobile view

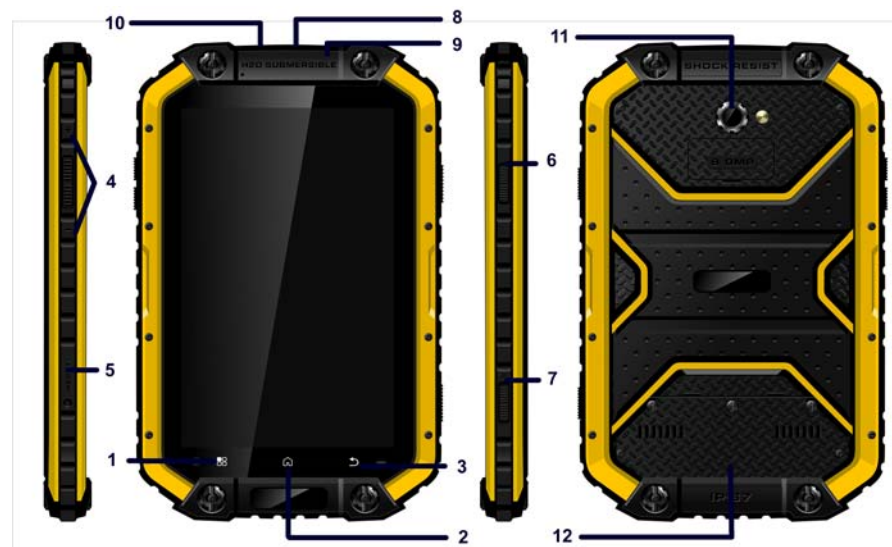

No	Button Name	Help
1	Menu Key	Press to pop-up menu
2	Home Key	Click here to return to the idle screen
3	Back key	Click here to return to previous level
4	Side buttons	You can adjust the volume
5	Reset	Use, such as abnormal must (reset button and switch key) while pressing 8 seconds after the system reset, press the switch button to boot
6	Camera key	Long press directly into the camera
7	ON / OFF button	Press the button on / off

8	Headphone jack	You can plug in your headphones
9	Charger Socket	Dedicated charging jack
10	USB Interface	Data cable jack
11	Camera	Camera and camera lens
12	Card Entry	Open the back cover, insert the phone card and memory card

Screen icon

Icon	Help	Icon	Help
	Battery capacity		Call
	Wifi hotspot		Signal strength
	Data transfer mode		Flight mode
	Open Bluetooth		Bluetooth headset
	Silent mode		Charging

Battery Charging

This product is built-in battery, charging sure to use the original charger and data cable.

When the battery is low, the tone and prompts electricity shortage; further reduced when the battery when the product again beep, and subsequently shut down.

1 Start using this product

Install / Remove SIM / T-FLASH card

Install SIM / T-FLASH card:

- 1.First SIM / T-FLASH card cover unscrew five screws, remove the SIM / T-FLASH card cover.
- 2.The SIM / T-FLASH card into the corresponding slot.
- 3.Installed SIM / T-FLASH card cover and tighten the five screws.

Remove the SIM / T-FLASH Card:

- 1.First SIM / T-FLASH card cover unscrew five screws, remove the SIM / T-FLASH card cover.
- 2.The SIM / T-FLASH card drawn from the corresponding slot.

Note:

This product has 8 waterproof. After installing the SIM / T-FLASH card, be sure to tighten the screws on the battery cover so; avoid waterproof function failure.

Dial

- 1.Standby mode, click on the interface dial icon to enter the dial pad.
- 2.Click the icon to hide the dial pad dial pad interface, view call logs in the contact's number, you can also click directly on the dial pad interface inputs need to dial the phone number.
- 3 Click the icon to make a call to allocate the call.

2 Basic functions

Startup and shutdown

- Turned off, long press [ON/OFF button] boot.
- Turned on, long press [ON/OFF button] lock screen, long press the pop-up selection screen, select Shut Down and click confirm the shutdown.

Enter the phone number directly

- 1.Standby mode, click on the screen to enter the dial pad dial icon, click on the digital input phone number.
- 2.If you enter a wrong character, click on the delete icon to delete the dial pad.
- 3.To end the call or cancel the call, click the icon to hang up the phone hang up.

Lock Products

Lock the product, the interface will be shut down, and the product will enter sleep mode. This can avoid accidentally touching the interface, but can also save battery power.

When not using the product, press the on / off button, the product locked. Such as setting the lock screen time, then the standby time to the rear of the product will automatically lock screen.

Unlocking the product

Press the power button wake up the product. Press and hold the middle of the screen with a finger slide to the right of the screen lock icon to Unlocked.

Sends a document to the product

You can use a variety of documents to take with you. You can also listen to music, or browse your most cherished photos and videos collection.

1. Use the included USB cable to connect the product to the computer.
2. Pull-down status bar appears when the USB is connected, click to open the USB storage device, and then click OK.
3. Computer will argue that this product removable disks. Navigate to the removable disk, and then open the disk.
4. Copy the document to the memory card. After copying the document, in accordance with the requirements of your computer's operating system, uninstall the product, and then in a safe exit.
5. Interrupt the connection between the product and the

computer.

Restore factory settings

You want to re-set this product? If you want the product to someone else, or just want to start from scratch, you can perform a factory reset of the product. You must be careful to face this step because Resetting the product will erase all data, including the previously downloaded and installed any application. Resetting the product will be restored to you first open the product's initial state.

Reset the product by setting

1. In the main menu, tap Settings> Backup & reset> Restore factory settings.
2. Points to restore factory settings> Point Reset phone> Point Clear All contents> phone will automatically shut down and restart.

NFC settings

You want to scan the NFC card? Use the NFC card and close to the backcover of Device.


Turn on the NFC function by setting

1. In the main menu, tap Settings> More> NFC .
2. Use the NFC card and close to the backcover of Device.

T-Flash card:

1. Connect USB, turn on USB storage.

Automatically pop up USB connected interface after connecting USB, and then click **Turn on USB storage** to use the T-Flash as USB storage.

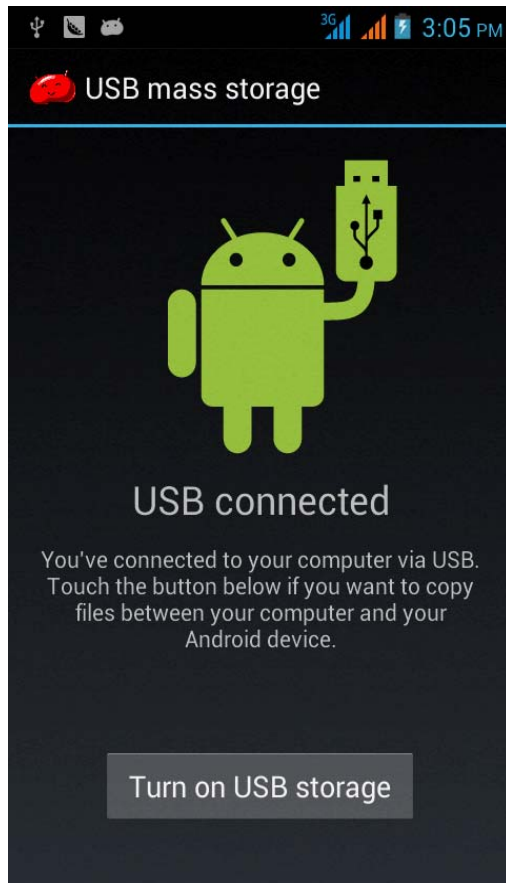

Using of touch screen:


- **Single Click:** To select an icon. For example, click dial to open the keypad which will be displayed on the screen.
- **Double Click:** To zoom-in or zoom-out. For example, to zoom-in or out of a photo, click twice when viewing a photo or browsing on the internet.
- **Hold:** Click and hold the screen, icon or input box to get more operation options.
 - 1) Long-Time Click a picture in the gallery list interface, the status bar prompts to select a picture, you select to share or delete.
 - 2) Long-Time Click the blanks of home screen to add home screen shortcut.
 - 3) Long-Time Click the blanks of home screen wallpaper sources can be selected.
- **Drag the screen:** You can drag the screen to view more applications which are not displayed in one screen.

- **Scratch the screen:** A screen of information can not be displayed scratch scrolling display hidden information.

Home screen:



You can use various functions of the phone screen through the touch screen. Click the icons to open the applications. View all applications by clicking an application tab.



In total, there are 5 home screens in the phone, when you slide to the left or to the right this will move the screen from one to another. To set wallpaper, tap and hold at blank area on any of the screens. You can return to the home screen by pressing the Back key in any screen.

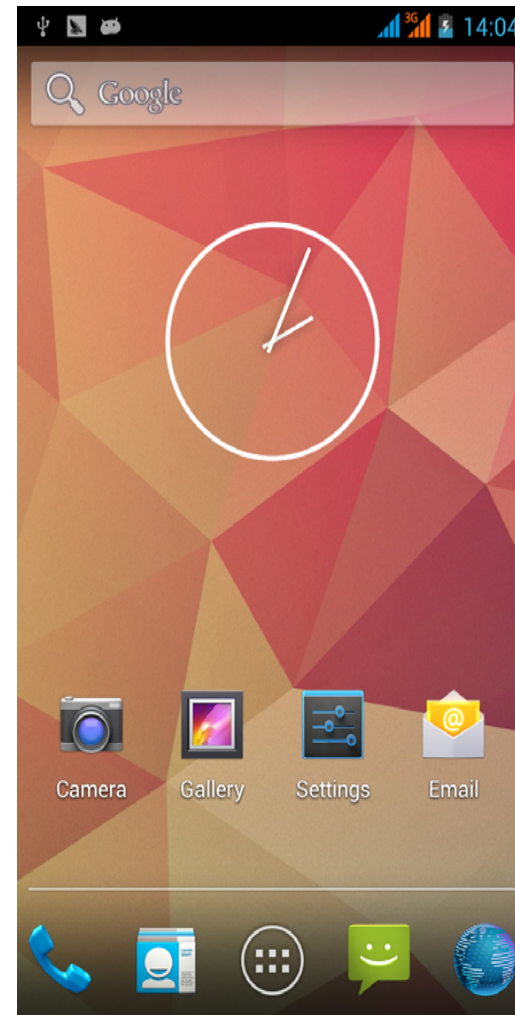

◆ Create shortcuts and widgets


Click the main screen and then Pop-up list of application. Hold and click the application icon which you want to add a shortcut. Interface blue transparent box will pop up analog screen area. Drag the application icon to the area you want to place, release the hand that add. To add widgets the same way as add a shortcut. Applications and widgets interface switching mode, you can click application and widget or slide the screen. As shown the following figure:

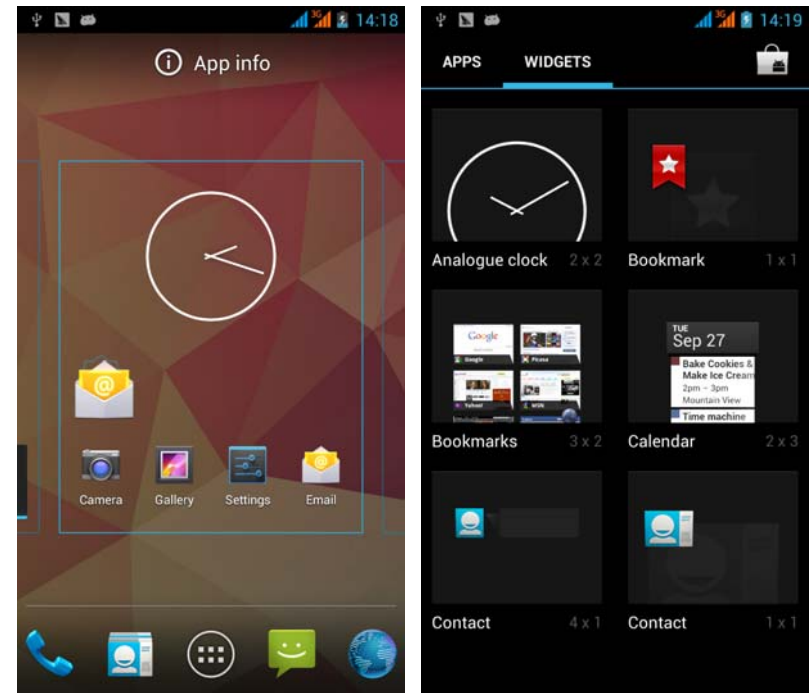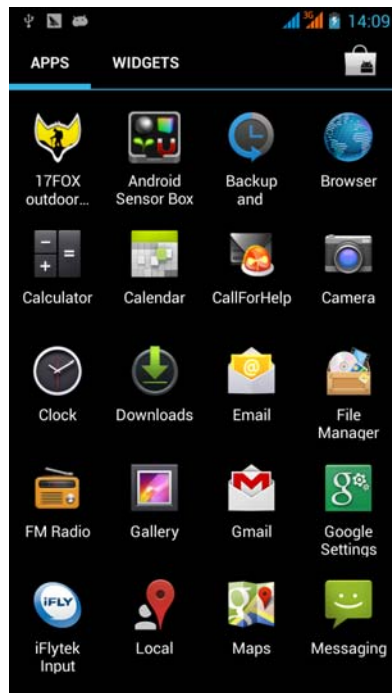

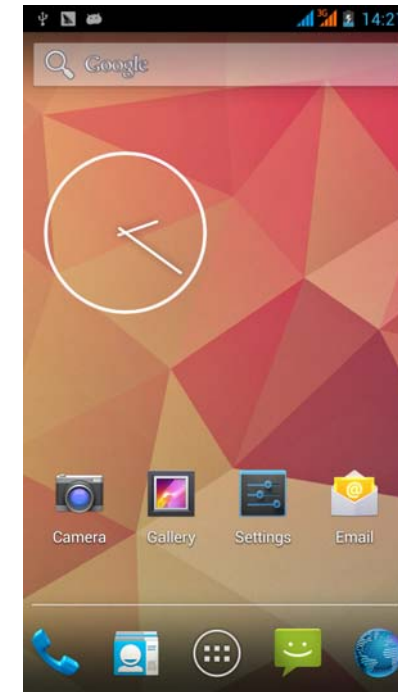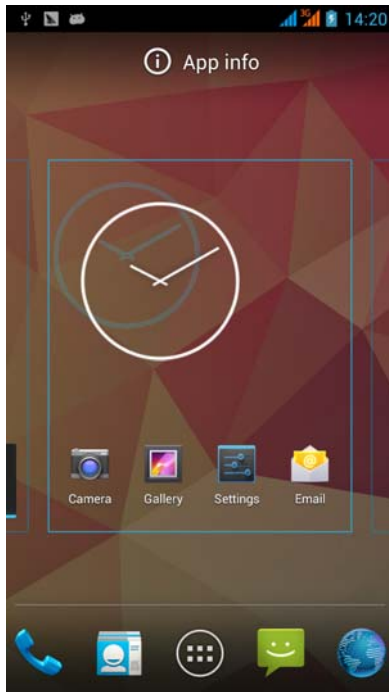

◆ Delete the shortcuts and widgets

To delete an object, tap and hold the object, then drag it towards the bottom of the screen  **Remove**. When the object turns red let go of it and the selected object will be deleted.

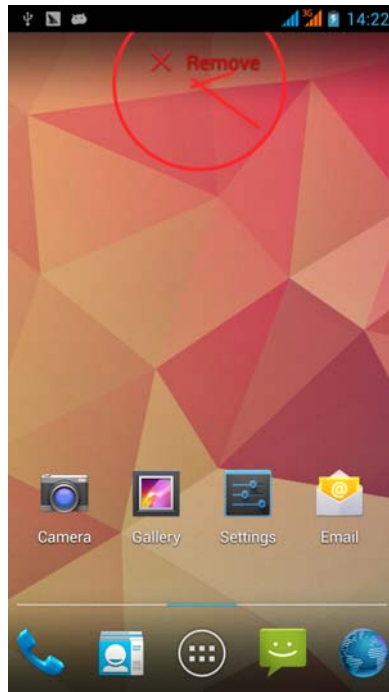

◆ Lock the screen


Lock the phone in order to avoid useless operation and to save the battery by press the power key.

The phone will automatically lock when it is not being used for some time.

◆ Set wallpaper

Hold and click main screen pop-up box and you select


wallpaper source. Click and entering gallery¥live wallpaper¥video wallpaper¥gallery can be set. As shown the following figure:

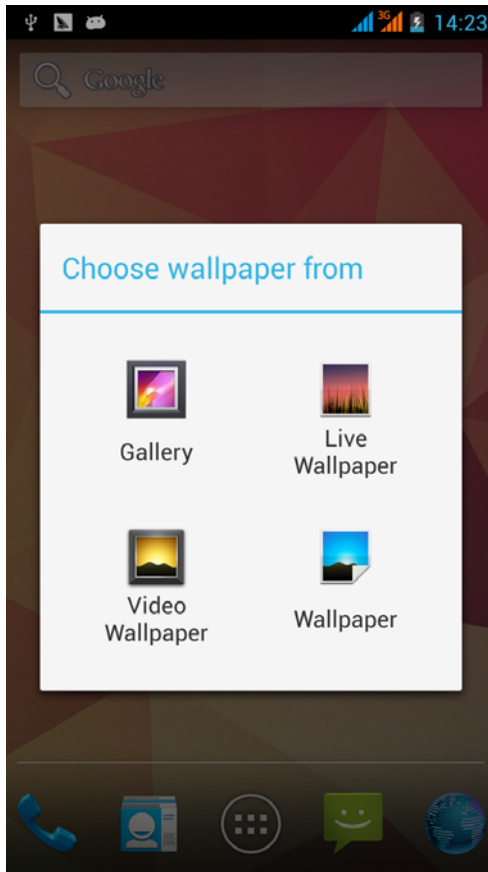

◆ Unlock the phone

Press power key to enter the unlock interface and


then slide  to unlock. As shown the following figure:


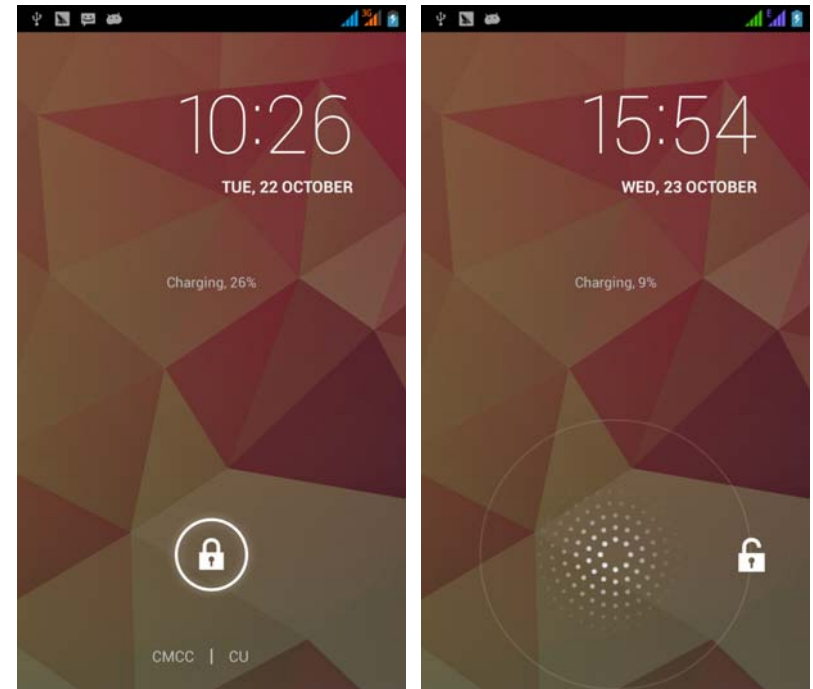




◆ Message board

Drag the status bar of any screen can open the message board. Click the icon in the upper right corner to bring up the settings interface and various parameters setting interface. As shown the following figure:

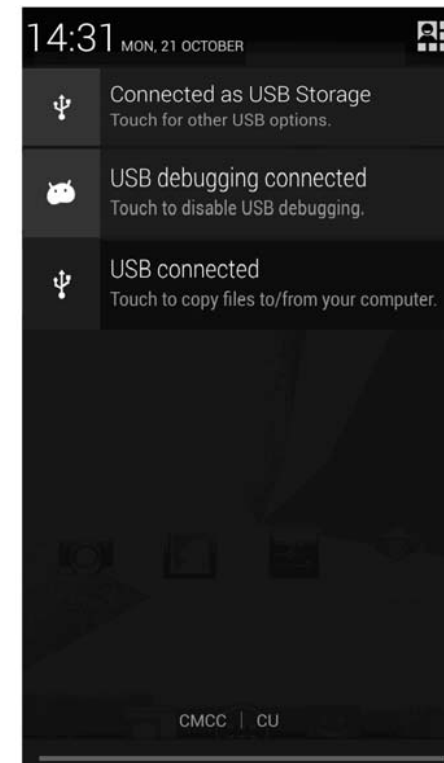

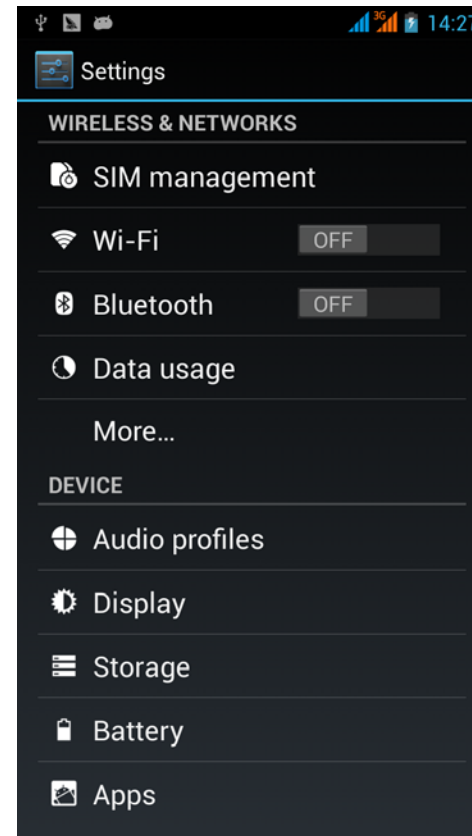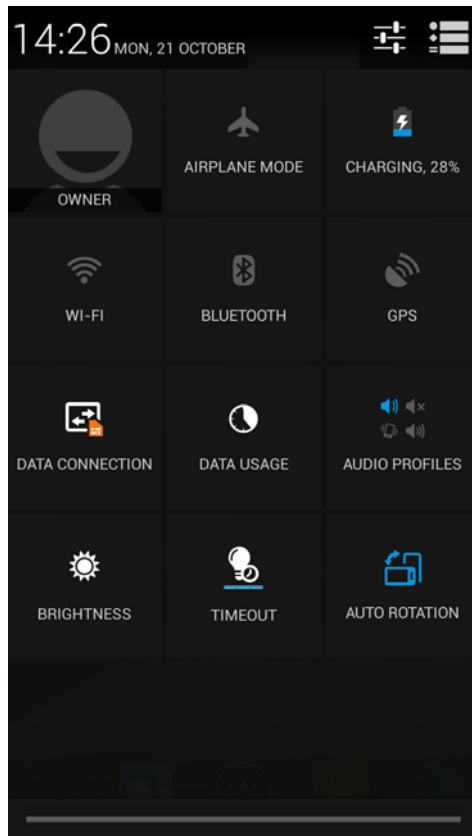

◆ Manage applications

Install applications: Found in the file manager to install the software (. APK), then follow the prompts step by step installation

Uninstall application: Enter **Settings->Apps->Downloaded**, then will be able manage and remove installed applications.

◆ Recently used applications

Press and hold the home key, the screen will display a window which shows your recently used applications. Click the icon to open the application.



Extend the battery life:

Some functions may use up more power, which eventually shorten the battery life. You could:

- Close all the wireless connection when not in use bluetooth, Wi-Fi or GPS.
- Reduce the brightness and shorten the screen timeout to save battery, or press power key to shut down the screen when the phone is not in use.
- Close any automatically synchronized applications such as Email, calendar, contacts and other.
- Some applications which are downloaded could also shorten the battery life.

Warning

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is

determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



T700