



User's Guide

5" Wi-Fi® Video Family Monitor

Models: CONNECT40, CONNECT40-2, CONNECT40-3,
CONNECT40-4

The features described in this User's Guide are subject to modifications without prior notice.

Welcome...

to your new Motorola Video Family Monitor !

Thank you for purchasing the Video Family Monitor. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their playroom.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please call:

US and Canada 1-888-331-3383

Email: support@motorolastore.com

On the Web: www.motorolastore.com/support

This User's Guide provides you with all the information you need to get the most from your product.



Before you can use the Family monitor, we recommend you insert and fully charge the battery in the Parent Unit, so that it continues to work if you disconnect it from the power supply to carry it to another location. Please read the Safety Instructions on pages 7 - 9 before you install the units.

Got everything?

- 1 x Parent Unit (with built-in Li-ion battery)
- 1 x Baby Unit (Camera)
- 2 x Power adapters (Parent Unit and Baby Unit)

In multi-camera packs, you will find one or more additional baby units with power adapter units.

Overview of the Parent Unit

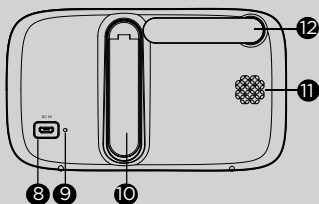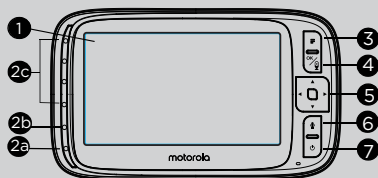


1. Display (LCD screen)
2. Battery status, Power, Sound level, Pairing indicators


a) Lights up in blue when the Parent Unit's battery is being charged.


b) Lights up in green when the Parent Unit is switched on.

c) Green-Orange-Red-Red

Show the sound level detected by the Baby Unit - the louder the sound detected, the more LEDs light up. Flashes rapidly in green when the Parent Unit is searching for the Baby Unit, or is in pairing mode.

3. Main menu button 
- Press to enter/exit menu mode.

4. OK/ button
- When in a menu, press to choose an item, or save a setting.
Press to enter remote scan mode.

5. Control key panel
UP / VOLUME+ 
- Press to increase speaker volume in camera viewing mode.
When in a menu, press to scroll up.
When in remote scan mode, press to tilt up.

DOWN / VOLUME -

Press to decrease speaker volume in camera viewing mode.

When in a menu, press to scroll down.

When in remote scan mode, press to tilt down.

LEFT

Decrease brightness in camera viewing mode.

When in a menu, press to scroll left.


When in remote scan mode, press to pan left.


RIGHT

Increase brightness in camera viewing mode.

When in a menu, press to scroll right.

When in remote scan mode, press to pan right.

6. TALK BACK 
- Hold down to talk back to the baby unit.

7. Power button 
- Press and hold to switch the unit On/ Off.
Press to turn the video screen Off/ On.

8. Power socket

















9. Reset button

10. Support Stand


11. Speaker

12. Antenna

Parent Unit display icons

Signal Strength	
Camera Power Mode - AC or Battery	
Camera Patrol Mode	
Camera Identification Number	
Speaker on / off	
Lullabies menu / mode	
Zoom menu / mode	
Night vision	
Alarm timer	
Parent unit battery status	
Brightness Level	
Speaker volume	
Video on timer	
Add camera	
Delete camera	
View camera	
Talk back function	

Overview of Your Baby Unit (Camera)

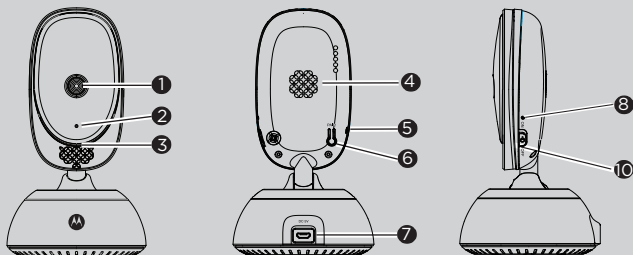

- 1. Camera Lens**
- 2. Microphone**
- 3. Mood Light**
- 4. Speaker**
- 5. Light Sensor (Night Vision Mode)**
- 6. Pair button**
Press and hold to pair with the Parent Unit.
- 7. Power Adapter Socket**
- 8. Power indicator**
Lights up in blue when the Baby Unit is switched on and linked to the Parent Unit.
- 9. Temperature Sensor**
- 10. Power ON/OFF switch**
Slide to switch the Baby Unit on or off.

Important guidelines for installing your Family Monitor

- To use your Video Monitor Baby and the Parent Unit together, you must be able to establish a radio link between them, and the range may be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the Baby and Parent Units may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls or electrical equipment, such as radios, TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi[®] routers), Bluetooth[®] systems, or microwave ovens, may cause interference with this product, so keep the Family Monitor at least 5 feet from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or the Baby Unit to different positions in the rooms.


Table of contents

1. Safety Instructions	7
2. Getting Started	10
2.1 Power up the Baby Unit.....	10
2.2 Charge the Parent Unit.....	11
3. Using the Family Monitor	12
3.1 Setting Up.....	12
3.2 Power On or Off the Baby Unit.....	12
3.3 Power On or Off the Parent Unit.....	12
3.4 Night Vision Mode.....	13
4. Parent Unit Menu Options	14
4.1 Adjust Speaker Volume.....	14
4.2 Set the Screen Brightness.....	14
4.3 Audio Playlist.....	14
5. Wi-Fi® Internet Viewing	20
5.1 Minimum System Requirements.....	20
5.2 Getting started - Connecting Devices.....	20
5.3 Setup.....	20
5.4 User Account and Camera Setup on Android™ Devices or iPhone®/iPad®.....	21
5.4.1 Power ON and Connect the Camera.....	21
5.4.2 Download Hubble Connected App.....	21
5.4.3 Sign up with Hubble on your smart device.....	21
5.4.4 Add the Camera to your account.....	21
6. Working with PC/Notebook	25
7. Procedure for Resetting the Camera	25
8. Disposal of the Device (environment)	26
9. Cleaning	27
10. Help	28
11. General Information	30
12. Technical Specifications	36

1. Safety Instructions

 **WARNING:**

Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft away). Do not remove this tag. Never use extension cords with AC Adapters. Only use the AC Adapters provided.

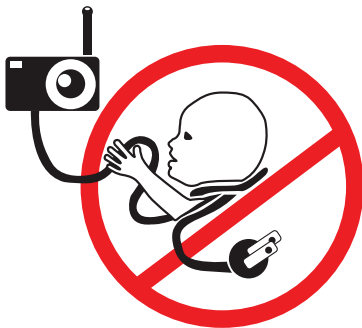

BABY UNIT SET UP & USE:

- Determine a location for the Baby Unit that will provide the best view of your baby in his/her crib.
- Place the Baby Unit on a flat surface, such as a dresser, bureau, or shelf or mount the Unit to a wall securely using the keyhole slots in the underside of the stand.
- **NEVER** place the Baby Unit or cords within the crib.

WARNING

This Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Family Monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Do not place the Baby Unit or cords in the crib or within reach of the baby (the Unit and cords should be more than 1 metre away).
- Keep the cords out of reach of children.
- Do not cover the Family Monitor with a towel or blanket.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor in damp areas or close to water.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Only insert a battery pack of the same type.

- Do not touch the plug contacts with sharp or metal objects.
- Connect the power adapters to easily accessible electrical outlets.


CAUTION


The Parent Unit includes a built-in, lithium-ion rechargeable battery pack, which is not a user-accessible item. If you think the battery needs replacing, please contact the helpline. Do not try to replace it yourself.

Risk of explosion if battery is replaced by an unapproved battery type. Dispose of used batteries according to their instructions.

2. Getting Started

2.1 Power up the Baby Unit

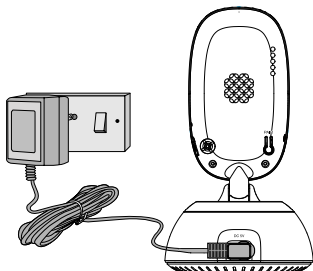


- Place the Baby unit near a suitable electrical outlet in the room where you're going to be monitoring your baby most of the time. It should also be at least 3 feet away from your baby.
- Plug the DC plug of power adapter (DC5V/1000mA) into the Baby unit, connect other end to a suitable electrical outlet.
- Slide the Power ON  OFF switch on the side of the baby unit up to turn it on.

IMPORTANT

Only use the supplied power adapter.

2.2 Charge the Parent Unit

The Parent Unit comes with a built-in Li-ion battery.

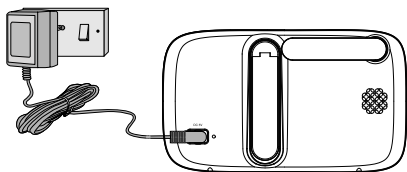



- Plug the micro-USB plug of power adapter (DC5V/1000mA) into the Parent unit, connect the other end to a suitable electrical outlet.
- Leave to charge for 16 hours.

The first time you use the Parent unit, or if you haven't used it for long time, it'll take 16 hours to fully charge. The battery life on a single charge lasts for 4 hours. We recommend you keep the cable plugged into an electrical outlet if you're going to use for longer than this or throughout the night.

When the battery gets very low, it'll take about 30 minutes to charge enough for you to use it for a short time. To charge the Parent unit in the shortest amount of time, turn it off while it's charging.

- After the Parent unit has charged for 16 hours you can switch it on.
- Before you do, move the Parent unit at least 3 feet from the Baby unit. Any closer and you might get audio feedback sounds.

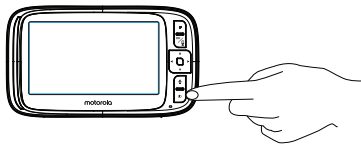

- Press and hold the  button to turn the Parent unit on, the Parent unit and Baby unit are automatically linked and ready to use.

3. Using the Family Monitor

Please read these instructions carefully, and be aware that this baby monitor is only intended as an aid. It is not a substitute for responsible adult supervision.

3.1 Setting Up


- Make sure that the Baby Unit and Parent Unit are both switched on.
- Place the Baby Unit in a convenient location (e.g. on a table) and point the camera lens towards the area you want to monitor.


NOTE

Do not place the Baby Unit within reach of a child or baby! If there is interference with the picture or sound, try moving the units to different locations, and ensure that they are not close to any other electrical equipment.


If you place the Parent Unit and Baby Unit too close together, you may hear a high pitched noise. This is not a fault. The units are designed to be operated at some distance apart. So move the units further apart.


3.2 Power On or Off the Baby Unit

Slide the Power ON  OFF switch to the ON position to switch on the Baby Unit. The power indicator lights up in blue.


Slide the Power ON  OFF switch to the OFF position to switch off the Baby Unit. The power indicator goes off.

3.3 Power On or Off the Parent Unit

Press and hold the Power  button to switch on the Parent Unit. The power indicator lights up in green.

Press and hold the Power  button to switch off the Parent Unit. The power indicator goes off.


3.4 Night Vision Mode

The Baby Unit has high-intensity infrared LEDs for picking up clear images in the dark. When the built-in light sensor on the side of the Baby Unit detects a low level of ambient light, the LEDs will automatically activate and the screen on the Parent Unit will display in black and white. The  icon will be displayed on the screen.

3.5 Talk Mode

Press and hold the **TALK** button  on the parent unit to talk to your lovely baby through the baby unit's loudspeaker.

3.6 Video ON/OFF

When it is at screen On/Off mode, toggle Power On/Off button  to turn the LCD screen on or off, whilst still leaving the audio monitor on.

3.7 Remote Pan Scan

The Family monitor and camera with pan scan to keep an eye on your child from screen, you can remotely pan scan the video image as needed.

1. Press the **OK** button to enter scan mode.
2. Press the ◀ LEFT/▶ RIGHT button to pan scan.
3. Press the ▲ UP /▼ DOWN button to tilt Up/Down the image.
4. Press the **OK** button to exit scan mode.

4. Parent Unit Menu Options

4.1 Adjust Speaker Volume

The Parent Unit has 8 volume levels + off.

To adjust volume, press the ▲ UP or ▼ DOWN button when the Parent Unit is in camera viewing mode.

4.2 Set the Screen Brightness




The Parent Unit has 8 brightness levels.

To adjust brightness, press the ◀ LEFT or ▶ RIGHT button when the Parent Unit is in camera viewing mode.




4.3 Audio Playlist

You can playback audio content - Lullabies, Soothing Sounds and Audio Book (English only) on the Baby Unit. The audio content can be downloaded and stored in the Baby Unit via Hubble App. You have 10 preloaded lullabies/soothing sounds and 10 audio books in the Baby Unit.

4.3.1 Lullaby/Soothing Sounds Playback






- Press  button, Audio Playlist  appears at the menu bar.
- Press **OK** button to select Lullaby/Soothing Sound  option, the song name appears on the screen.
- Press ▲ UP or ▼ DOWN button to view the desired Lullabies /Soothing Sounds.
- Press **OK** button to play the selection.

4.3.2 Audio Book (English only) Playback








- Press  button, Audio Playlist  appears at the menu bar.
- Scroll Up or Down to select  then confirm with **OK** button, the book title appears on the screen.
- Press ▲ UP or ▼ DOWN button to view the desired Audio Books.
- Press **OK** button to play the selection.

4.3.3 Personal Audio Recordings Playback

The device allows to play your personal recording, before this it need to record your personal audio through Hubble for Motorola App.









- Press  button, Audio Playlist  appears at the menu bar.
- Scroll Up or Down to select  then confirm with **OK** button, your recording appears on the screen.
- Press  UP or  DOWN button to view your personal recordings.
- Press **OK** button to play the selection.

4.3.4 Stop Playback

- Press  button then scroll Up or Down to select  or , confirm with **OK** button.
- Press  UP button or  DOWN button until " Press OK to stop playing" appears on screen then confirm with **OK** button to stop.
- Press  button to exit.









4.4 Set Mood Light

The mood light feature provides a soft glow to help soothe your baby to sleep and help keep them calm throughout the night, the mood light has 7 colour options(or auto looping) and 3 levels of brightness available.







- Press  button, Audio Playlist  appears at the menu bar.
- Scroll LEFT or RIGHT to to  then confirm with **OK** button.
- Scroll UP or DOWN to  then press **OK** button to switch mood light on.
- Scroll UP or DOWN to  for color options or  to adjust the brightness of mood light.
- When the mood light is on, select  then press **OK** button to switch the mood light off.
- Press  button to exit.

4.5 Set Alarm

You can use the Parent Unit to set an alarm as a reminder for you to take care of your baby. If an alarm time is selected, the Parent Unit will beep at the end of the selected 2, 4 or 6 hour period. To activate an alarm, proceed as follows:

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the alarm time (**6h, 4h, 2h**), and the  will turn on. (The default setting is Alarm **OFF**.)
4. If an alarm time is selected, the Parent Unit will beep for about 1 minute after every 6, 4 or 2 hour period, and the  will appear at top of screen.
5. The alarm will sound for about 1 minute when the time is reached, or can be stopped by pressing any button.







4.6 Power Saving Mode

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select auto video off after 5 mins, 30 mins or 60 mins if operating on batteries only.

NOTE








The audio will remain and you can press any key to switch the video back on.

4.7 Zoom

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select **1X** or **2X** zoom. (The default setting is **1X**.)

4.8 Set temperature format








The temperature reading from the temperature sensor at the back of the Baby Unit will be displayed at the top of the Parent Unit LCD screen. You can switch temperature format between Centigrade and Fahrenheit as follows:


1. Press the  button and the menu bar will pop up.
2. Press the  LEFT or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select °C or °F.
4. Press  button to exit.

4.9 Add Camera (Registration)

The Baby Unit(Camera) is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit (Camera) loses its link with the Parent Unit.

To add a new compatible camera to the Parent Unit, proceed as follows:

1. Press the  MENU button and the menu bar will pop up.
2. Press the  LEFT or  RIGHT button to select add camera icon , the camera list  appear on the screen.
3. Press the  UP or  DOWN button to select the desired camera, and press the **OK** button to start searching for a camera unit, with "**press PAIR on cam**" shown.

Note: If a baby unit is currently paired with the Parent Unit, its camera location (with a  against it) cannot be selected for a new registration.








4. Press and hold the **PAIR** button on the rear of the camera until the Parent Unit finds the camera, beeps and **PAIR OK** appears on the screen. The video from the camera will then appear.

NOTE

If a particular Baby Unit was registered previously, registering this current Baby Unit again will cancel its old registration.


4.10 View Camera

If you have more than one camera paired with the Parent Unit, to select the transmission image from a specific camera, proceed as follows:

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, the camera list  appear on the screen.
3. Press the  UP button or  DOWN button to select the desired camera.
4. Press the **OK** button to view the picture from that camera.










Note: Only camera locations with a  can be selected.

TIP

*Quick Method to View Cameras instead of entering into the menu bar. Directly press the **OK** button repeatedly to select the available Camera options from .*

4.11 Delete Camera

If you wish to delete the connection to a camera, proceed as follows:










1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, the camera list  appear on the screen.
3. Press the  UP button or  DOWN button to select the camera that you wish to delete.
4. Confirm with **OK** button.
5. Press  DOWN button to select , and then **OK** to confirm delete.

NOTE

You are not allowed to delete the camera if there is only one registered camera in the system.

4.11 Delete Camera

If you wish to delete the connection to a camera, proceed as follows:

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, the camera list  appear on the screen.
3. Press the  UP button or  DOWN button to select the camera that you wish to delete.
4. Confirm with **OK** button.
5. Press  DOWN button to select , and then **OK** to confirm delete.

NOTE

You are not allowed to delete the camera if there is only one registered camera in the system.

5. Wi-Fi® Internet Viewing

5.1 Minimum System Requirements

Android™ System

- Version 7.0 or above

iPhone®/iPad® iOS


- Version 10.0 or above

High Speed (Wi-Fi®) Internet

- At least 0.6 Mbps upload bandwidth per camera (you can test your internet speed on this site: <http://www.speedtest.net>)

5.2 Getting started - Connecting Devices

How does it work?

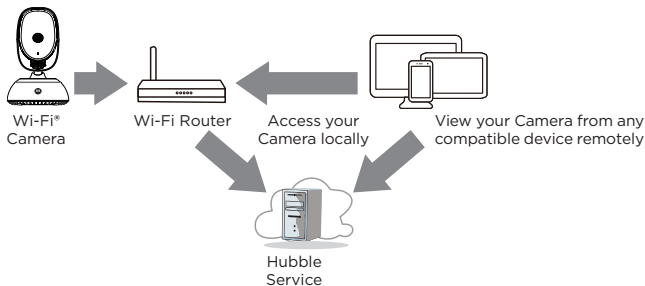

When a user tries to access the Camera, our Hubble server authenticates the user's identity and permits access to the Camera.

5.3 Setup

Connect the Wi-Fi® Camera to the Power Adapter, then plug into mains power. The Camera must be within range of the Wi-Fi® router with which you want to connect. Make sure the password of the router is available for entering during the in-app setup process.

Status of LED Indication:

- Pair / Setup state: LED is Blue and Flashing.
- Unconnected state: LED is Red and Flashing.
- Connected state: LED is Blue and always on.
- Video streaming: LED is Blue and Flashing.

Note: You can only setup via a compatible smartphone or tablet and not via a PC.

5.4 User Account and Camera Setup on Android™ Devices or iPhone®/iPad®

What you need

- Wi-Fi® Camera Unit
- Power adapter for the Camera
- Device with Android™ system version 7.0 and above
- Or iPhone®/iPad® with iOS version 10.0 and above

5.4.1 Power ON and Connect the Camera

- Switch the parent unit off before connect the camera to Wi-Fi®.
- Connect the power adapter to mains power and insert the plug into the power socket on the back of the Camera Unit, the unit turns on.

5.4.2 Download Hubble Connected App



- Scan the QR code with your smart device and download Hubble Connected App from the App Store for iOS devices or from the Google Play™ Store for Android™ devices.
- Install Hubble Connected App on your device.

5.4.3 Sign up with Hubble on your smart device

- Ensure that your smart device is connected to your Wi-Fi® router.
- Run Hubble Connected App, tap Sign Up with Hubble (fig. 1), read through the Privacy Policy, Terms and Conditions, by signing up you agree to our terms of service before tap Done (fig. 2), enter your account information to sign up with Hubble.

Note:

If you already have a Hubble App account, please tap **Log in with Hubble** to go to the next steps.


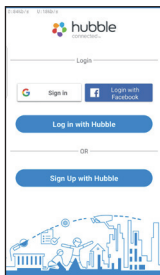



fig. 1

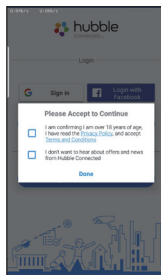

ig. 2

5.4.4 Add the Camera to your account

- Log in your Hubble Account by entering “User Name” and “Password” (fig. 3).
- Tap 

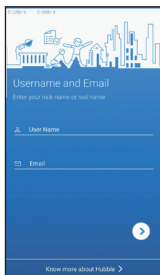


fig. 3



ig. 4

- To select your device for setting up by tapping Baby Monitoring (fig. 5).
- Tap **COMFORT85** to add the new camera (fig. 6).



fig. 5



ig. 6

- The following setup instructions will appear on the screen, select your Wi-Fi network and enter "Password" (fig. 7). (Picture A7)
- Power on your camera and wait for the Red LED flashing on the camera. (fig. 8)


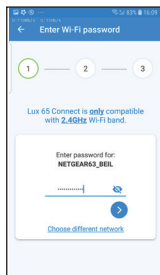


fig. 7

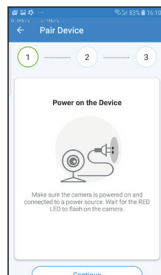

ig. 8

- Press and hold the PAIR button at the side of Camera, you will hear a voice prompt “Ready for Pairing” then tap Continue. (fig. 9)
- Tap Generate QR code on your device and hold the QR code 15 to 30 cm in front of Camera to get scanned till you will hear confirmation message “ Scanning Sucess” from your device. (fig. 10, fig. 10a)

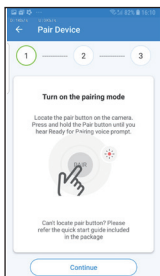


fig. 9




fi



- It will take a few minutes for the Camera to connect to the Wi-Fi® network before showing the connection status (fig. 11).
- The Camera has been successfully connected, name your Camera (fig. 12).



fig. 11

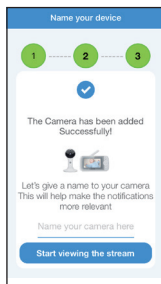

ig. 12

- If connection fails, please tap Retry and repeat the steps starting from 5.4.4.

6. Working with PC/Notebook

- Go to <http://www.hubbleconnected.com/motorola/login/>
- Enter your **User Name** and **Password** and then click Login if you have already created an account.
- Click on the Camera list paired in your account via Android™ device or iPhone®/iPad® and the Camera view will appear on screen. You can easily stay connected with your favorite people, places and pets with live video streaming.
- On the website, you can change the **Settings** by following the Menu instructions.

7. Procedure for Resetting the Camera

Note: If your Camera is moved from one router (e.g. home) to another (e.g. office) or you have Camera setup issues, then the Camera must be reset. Please reset the Camera with the following procedures:

- Press and hold the PAIR button approximately 20 seconds, you will hear a long beep thence release PAIR button, wait for the Camera Unit to complete an internal reset procedure. The Red LED will begin to flash when the Camera Unit is reset successfully.
- You can add your Camera again by following the steps in section 5.4.4.

8. *Disposal of the Device (environment)*

At the end of the product's life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the Product, User's Guide and/or box indicates this.



Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

9. Cleaning

Clean your Family Monitor with a slightly damp or anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals – this may cause permanent damage to the product which is not covered by the Warranty.
- Keep your Family Monitor away from hot, humid areas or conditions, strong sunlight and avoid moisture.
- Every effort has been made to ensure high standards of reliability for your Family Monitor. However, if something does go wrong, please do not try to repair it yourself – contact Customer Service for assistance.

IMPORTANT


Always switch off and disconnect the power adapter before cleaning your family monitor.

10. Troubleshooting

Power Indicator on the Parent Unit does not come on

- Check whether the Parent Unit is powered on.
- Check whether the battery is charged.
- Recharge the Parent Unit by connecting it to the power supply.

The Parent Unit beeps repeatedly

- The Parent Unit and the Baby Unit may be out of range with each other. Reduce the distance between the units, but not closer than 3 feet.
- The Baby Unit may be switched off. Slide the ON/OFF switch  to the On position to switch on the Baby Unit.
- The battery in the Parent Unit is running low. Connect the Parent Unit to the electrical outlet with the supplied power adapter for recharging.

icon on the Parent Unit flashes

- Battery pack in the Parent Unit is running low. Connect the Parent Unit to the electrical outlet with the supplied power adapter for recharging.

The Parent Unit switches itself off

- It could be that the Parent Unit is in standby mode. Check whether the video on timer has been selected in the menu and deactivate it where necessary.

Cannot hear sound or baby crying from the Parent Unit

- The volume level in the Parent Unit may be set too low. Refer to section 4.1 for volume level settings.
- The Parent Unit and the monitoring Baby Unit may be out of range with each other. Reduce the distance between the units, but not closer than 3 feet.

The Family monitor system produces a high-pitched noise

- The Parent Unit and the Baby Unit are too close to each other. Make sure the Parent Unit and Baby Unit are at least 3 feet away from each other.
- The speaker volume of the Parent Unit may be set too high. Decrease the volume of the Parent Unit.

Battery pack in the Parent Unit is running low quickly

- The LCD brightness may be set too high. Try to decrease the brightness level. Refer to section 4.2 for details.
- The volume level of the Parent Unit may be set too high, which consumes power. Decrease the volume level of the Parent Unit. Refer to section 4.1 for volume level settings.


Parent Unit image is not in color

- The Baby Unit is in a dark room, which causes the infra-red illumination to turn on and the picture image to change from color to black and white. When the room becomes brighter, the picture will return to color.

There is no transmission from the Baby Unit to the Parent Unit

- Switch on both the Baby and Parent Units.
- Pair the Baby Unit again as described in see "4.3.6 Add camera".
If there is no free camera location, delete a location first, as described in see "4.3.6 Delete camera".

The Parent Unit is in standby

- To turn on the Parent Unit screen, press the ON/OFF button  briefly.

11. General Information

If your product is not working properly....

1. Read this User's Guide or the Quick Start Guide.
2. Visit our website: www.motorolastore.com/support
3. Contact Customer Service at
US and Canada 1-888-331-3383
Email: support@motorolastore.com

To order a replacement battery pack, contact customer service.

Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product is manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the Products' original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the Accessories' original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for Ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

US and Canada 1-888-331-3383

Email: support@motorolastore.com

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent employee or staff of BINATONE, that may have been made in connection with the said purchase.

FCC and IC regulations

FCC Part 15

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this device.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria.

This Class B digital apparatus complies with Canadian ICES-003.

CAN ICES-3(B)/NMB-3(B)

WARNING

Changes or modifications, to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

FCC RF Radiation Exposure Statement Caution: This Transmitter must be installed to provide a separation distance of at least 20 cm from all persons.

IC Radiation Déclaration d'exposition Attention: Cet émetteur doit être installé pour fournir une distance de séparation d'au moins 20 cm de toute personne.

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions:(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

12. Technical Specifications

Baby Unit

Frequency	2402 MHz - 2477 MHz
Image sensor	Color CMOS 0.3M Pixels
IR LED	8 pcs
Operating Temperature Arange	0 °C ~ +50 °C
Power Adapter	BQ06A-0501000-U (Becky) Input: 100-240V AC, 50/60Hz, 300mA; Out-put: 5.0V DC, 1000mA

WARNING

Use only with provided power supply.

Parent Unit

Frequency	2402 MHz - 2477 MHz
Display	5" diagonal TFT LCD
Display colors	16.7M color
LCD Brightness control	8 steps
Volume control	8 steps
Operating Temperature Arange	0 °C ~ +50 °C
Power Adapter	BQ06A-0501000-U (Becky) Input: 100-240V AC, 50/60Hz, 300mA; Out-put: 5.0V DC, 1000mA

Battery Pack

LENOVO BL253(Built in)
Li-ion Battery, 3.8V/2000mAh

WARNING

Use only the supplied power adapter.

Do not use non-rechargeable batteries for the Parent Unit.

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Specifications are subject to change without prior notice.



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. Apple logo and Safari are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google Play, Android, and Chrome are trademarks of Google Inc. Wi-Fi is a trademark of the Wi-Fi Alliance. Internet Explorer and Windows are trademarks of the Microsoft group of companies. Firefox is a registered trademark of the Mozilla Foundation. Adobe and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated. Java is a registered trademark of Oracle and/or its affiliates. All other trademarks are the property of their respective owners. © 2020 Motorola Mobility LLC. All rights reserved.



US_EN Version 1.0

Printed in China