






Thank you for purchasing this Autel tool. Our tools are manufactured to a high standard and — when used according to these instructions and properly maintained — will provide years of trouble-free performance.

Packing List

Main Unit	
MaxiVCI V150 Lite	
Power Adapter	


USB Type-C Cable	
Quick Reference Guide	

Getting Started



IMPORTANT: Before operating or maintaining this unit, please read these instructions carefully, paying extra attention to the safety warnings and precautions. Use this unit correctly and with care. Failure to do so may cause damage and/or personal injury and will void the limited product warranty.

1

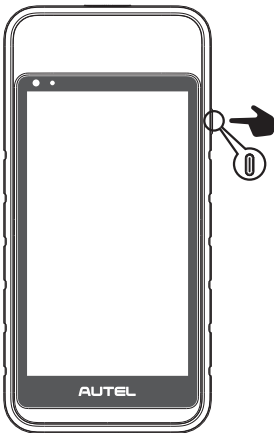


- Long press the **Power/Lock** button to turn on the tool.

2




- Scan the QR code above to visit our website at **pro.autel.com**.
- Create an Autel ID and register the product with its serial number and password, which can be found by tapping **Settings > About**.

3

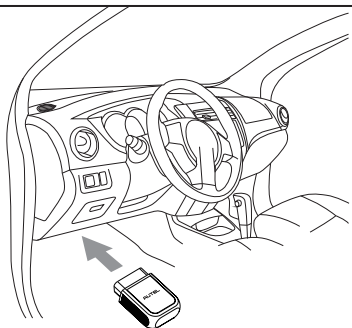

- Insert the MaxiVCI V150 Lite into the vehicle's DLC, which is generally located under the vehicle dashboard.
- Turn the vehicle's ignition to the ON position.

4

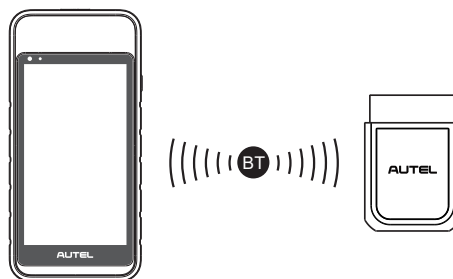

- Connect the tool with the MaxiVCI V150 Lite via Bluetooth to establish a communication.
- When the V150 Lite is properly connected to the vehicle and the tool, the VCI status button will display a green check mark, indicating the tool is ready to start vehicle diagnosis.



NOTE: The illustrations in this Quick Reference Guide are for reference only. The actual product may differ.

FCC Compliance

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure requirements:

This equipment has been tested for SAR compliance. This equipment should be installed and operated with minimum distance 5 mm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

IC Warning

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

SAR Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEC/IEEE 62209-1528. This equipment should be installed and operated with minimum distance 5 mm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet EUT est conforme aux limites d'exposition SAR pour la population générale/non contrôlée de l'IC RSS-102 et a été testé conformément aux méthodes et procédures de mesure spécifiées dans la norme IEC/IEEE 62209-1528. Cet équipement doit être installé et utilisé à une distance minimale de 5 mm entre le radiateur et votre corps. Cet appareil et ses antennes ne doivent pas être situés ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

Operation of this device is restricted to indoor use only. (5150-5250MHz)

Le fonctionnement de cet appareil est limité à une utilisation en intérieur uniquement. (5150-5250MHz)