


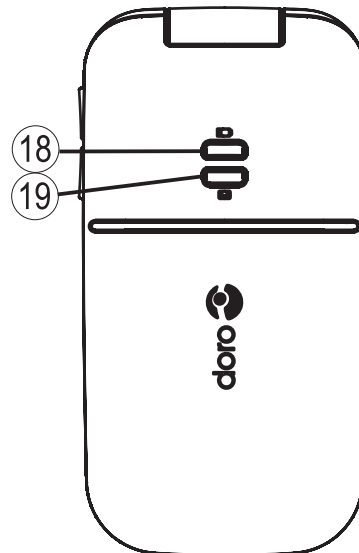
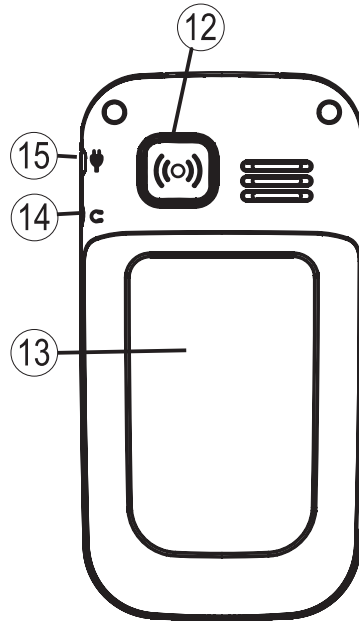


doro 

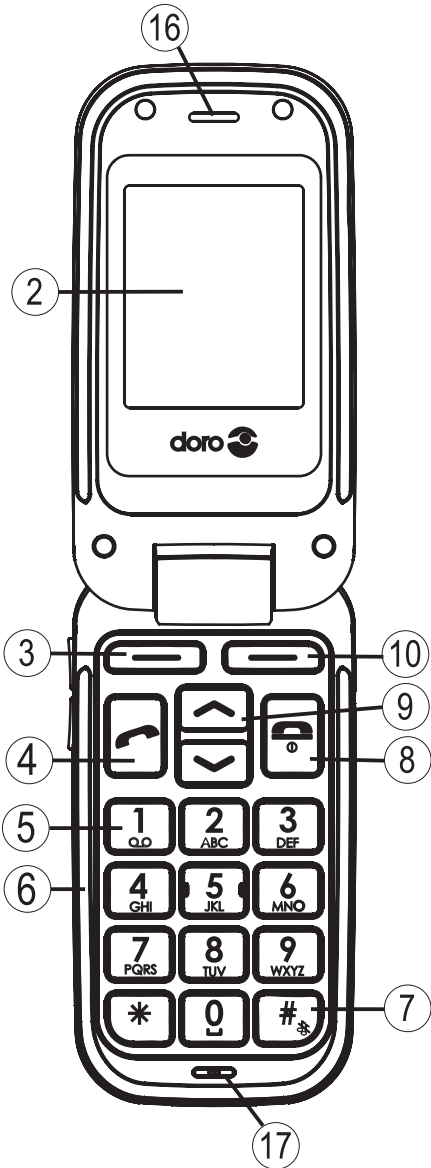

Doro PhoneEasy® 409s gsm

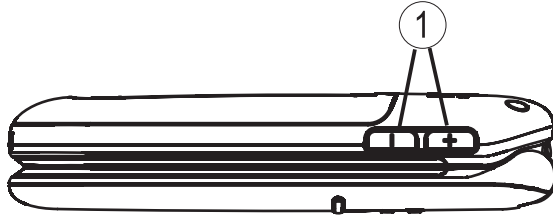

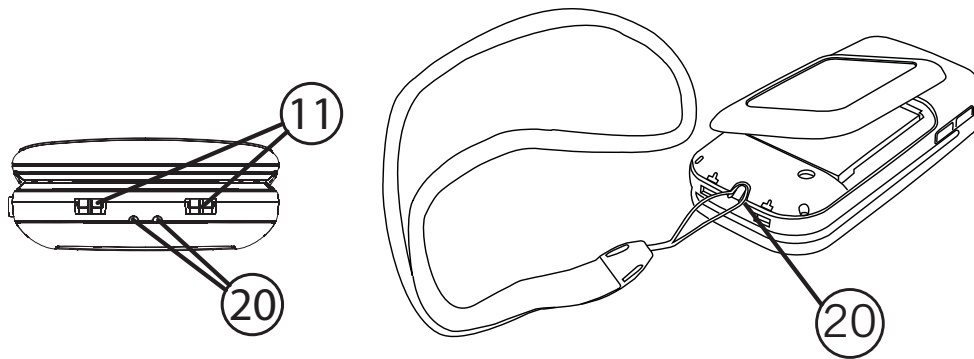

English

- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Side key (volume) 2. Display 3. Left soft key 4. Call key 5. 1 / Voice mail 6. Numeric keypad 7. # / Change profile 8. End call/Power on/off 9. Arrow keys 10. Right soft key | <ol style="list-style-type: none"> 11. Charging contacts, for use with charging stand (not included) 12. Emergency call key 13. Battery cover 14. Headset socket 15. Charging socket 16. Loudspeaker 17. Microphone 18. Led light (Battery level low) 19. Led light (New message) 20. Lanyard |
|---|---|

Contents

Installation	3
Installing the SIM card and battery	3
Charging	4
Phone indicators	5
Operation	6
Activating the phone	6
Making a call	7
Making a call from the Phonebook	7
Receiving a call	7
Volume control	7
Display symbols	8
Additional functions	9
Call options	9
Call waiting	10
Call information	10
Call log	10
Phonebook	11
Silent mode	13
Headset	13
SOS calls	14
Emergency Call key	14
Games	15
Alarm	15
Calendar	16
Calculator	16
Text input	17
SMS messaging	18
Creating and sending SMS	18
Incoming SMS (Inbox)	19
Outgoing SMS (Outbox)	19

Settings	21
Time and date	21
User setup	22
Tone settings (rings & tones)	24
Silent	25
Blocking functions	25
Emergency	26
Voice mail	27
Speed dial	28
Call setup	29
SMS settings	30
Network setup	32
Services	32
Security settings	32
Safety instructions	34
Troubleshooting	37
Care and maintenance	39
Warranty and technical data	40

Installation


Warning!

Turn off the phone and disconnect the charger before removing the battery cover.

Installing the SIM card and battery

The SIM card holder is located behind the battery.



1. Remove the battery cover by pressing it carefully down and sliding away from the emergency call key.
2. Remove the battery if it is already installed.
3. Press lightly on the cardholder and carefully slide it towards the emergency call key.
4. The SIM card holder can now be folded into an upright position.
5. Placing the SIM-card on the marked area of the compartment. Make sure that the SIM card's contacts are facing downwards and that the cut-off corner is placed accordingly with the marked area. See *picture*. Take care not to scratch or bend the contacts on the SIM card.
6. Fold the SIM-card holder down and carefully slide it away from the emergency call key until it "clicks" into place.
7. Insert the battery by sliding it into the battery compartment with the contacts facing towards the emergency call key.
8. Replace the battery cover until it "clicks" into place.

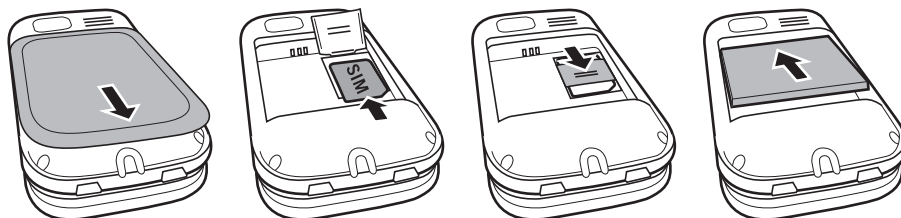



Charging


Warning!

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee.

When the battery is running low,  is displayed and a warning signal is heard. To charge the battery, connect the mains adapter to the wall socket and to the charging socket .

 is displayed briefly when the charger is connected to the phone, and  when it is disconnected. The battery charge indicator will be animated while charging.

It takes approximately 3 hours to fully charge the battery.

 is displayed when charging is completed. If the phone is turned off when the charger is connected to the phone only the battery charge status indicator will be shown in the display.

Note!

To save power the LCD backlight goes off after a short while but the phone is still charging. Press any key to illuminate the display.

Full battery capacity will not be reached until the battery has been charged 3–4 times.


Batteries degrade over time, which means that call time and standby time will normally decrease with regular use.

Save energy

When you have fully charged the battery and disconnected the charger from the device, unplug the charger from the wall outlet.

Phone indicators

When  flashes you have a new message or a missed call.

When  flashes the batteries is running low.

Operation

Activating the phone


Press and hold the red button  on the phone to turn it on/off. The following messages may be displayed:



SIM card missing or incorrectly inserted.



SIM card damaged or not valid.

If the SIM card is valid but protected with a PIN code (Personal Identification Number), **PIN:** is displayed. Enter the PIN code and press **OK** ( upper left corner of keypad).

Delete with **Clear** ( upper right corner of keypad).

Note!

If PIN and PUK codes were not provided with your SIM card, please contact your network operator.



Attempts: # shows the number of PIN attempts left. When no more attempts remain, **SIM blocked** is displayed. The SIM card must now be unlocked with the PUK code (Personal Unblocking Key).

1. Enter the PUK code and confirm with **OK**.
2. Enter a new PIN code and confirm with **OK**.


Changing the language, time and date

The default language is determined by the SIM card. See [Settings](#) on how to change language, time and date.



Making a call

1. Enter the phone number. Delete with **Clear**.
2. Press  to dial. Press **Abort** to cancel dialling.
3. Press  to end the call.




Note!

When making international calls, press  twice for the international prefix "+". Always use "+" before the country code (instead of 00 or similar) for best operation.

Making a call from the Phonebook

1. Press **Name** to open the phonebook.
2. Use the arrow keys  /  to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the entry, see [Text input](#).
3. Press **Call** to dial the selected entry, or press **Back** to return to standby mode.

Receiving a call










1. Press  to answer, or press **Silent** to switch off the ring signal and then **Reject** to reject the call (busy signal). Alternatively, press  to reject the call directly.
2. Press  to end the call.

























See also [Call options](#).

Volume control

Use the side keys **+/-** to adjust the sound volume during a call. The volume level is indicated on the display.

Display symbols

	Signal strength		Headset connected
	Ring only		Battery level
	Ring + vibration		New SMS
	Vibration only		Silent
	Alarm active		Roaming (in other network)

	SIM card missing		Charger connected
	SIM card error		Charger disconnected
	Mute		Headset connected
	New SMS message		Headset disconnected
	SOS calls only		Handsfree on
	OK (confirmed)		Handsfree off
	Query		Warning
	Battery level low		Error
	Calling		Charging (animated)
	Incoming call		Call ended
	Searching		Missed call
	Progressing (animated)		Call on-hold


Additional functions

Call options

During a call the soft keys¹ give access to additional functions:

Options (left soft key)

A menu with the following options is displayed:

Hold single call	Hold the current call
End single call	End the current call (same as )
New call	Call another number (three-party call)
Phonebook	Search the phonebook
Msg centre	Write or read SMS messages.
Mute	Disable the microphone

SPK on (right soft key)


Activates handsfree mode, which allows you to speak without holding the phone.

Speak clearly into the microphone at a maximum distance of 1 meter (3 feet). Use the side keys **+/-** to adjust the loudspeaker volume.

Press **SPK off** to return to normal mode.

Note!

The handsfree function allows only one person at a time to talk. Switching between talk/listen is triggered by the sound of the person talking. Loud noises (music, etc.) in the background may interfere with the handsfree function.

¹ **Soft keys**  have multiple functions. The current key function is shown above the soft key on the display.

Call waiting

An alert tone will be heard if there is an incoming call while talking. To put the current call on hold and answer the incoming call, press **Options**.

This service must be activated, see [Settings/Call setup](#).

Call information









During a call, the called or calling phone number and the elapsed call time is displayed.

If the identity of the caller is withheld, **Unknown** is displayed.

Call log

Answered, missed, and outgoing calls are saved in a combined call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

Retrieving and dialling





1. Press .
Alternatively press **Menu**, scroll to  and press **OK**.
2. Use the arrow keys  /  to scroll through the call list.
 -  = Incoming call
 -  = Outgoing call
 -  = Missed call
3. Press  to dial the number or press **Options** for the following settings:

View	Show details for the selected call
Delete	Delete the call
Delete all	Delete all calls in the call log
Save	Save the number in the Phonebook

Phonebook

The phonebook can store 100 entries with 3 phone numbers in each entry.


Creating a phonebook entry

1. Press **Menu**, scroll to  and press **OK**.
2. Select **-New contact-** and press **Add**.
3. Enter a name for the contact, see *Text input*. Delete with **Clear**.
4. Use  /  to select **Mobile**, **Home number** or **Office number**, and enter the phone number(s), then press **Save**.
5. Press  to return to standby mode.

Note!

For international phone numbers, always use "+" before the country code (instead of 00 or similar) for best operation.



Managing phonebook entries

1. Press **Menu**, scroll to  and press **OK**.
2. Select an entry and press **Options**.
3. Select one of the following options and press **OK**.

View

Show details for the selected contact.

Edit

1. Use  /  to move the cursor. Delete with **Clear**.
2. Press **Save**.

Add new

See *Creating a phonebook entry*.

Call



Press **OK** to call the contact.

Send SMS

Press **OK** to write a SMS message, see *SMS messaging*.

Top 10 setting

Set the entry as one of the first 10 numbers listed in the phonebook.

1. Select one of the empty entries and press **Add**.
2. Use the arrow keys  /  to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the entry.
3. Press **OK** to save the selected entry, or press **Back** to return to the menu.

To delete a Top 10 entry, select the entry in the Top 10 list and press **Options**, then **Delete**.

Delete

Press **OK** to delete the selected phonebook entry. Press **Yes** to confirm or **No** to abort.

Delete all

Select **From SIM** or **From Phone** and press **OK** to delete all phonebook entries from the SIM card or phone memory.

Enter the phone code and press **OK** to confirm. The default Phone code is **1234**.

Copy all

Select **From SIM** and press **OK** to copy all phonebook entries from the SIM card to the phone memory. Press **Yes** to confirm or **No** to abort.

Select **From Phone** and press **OK** to copy all phonebook entries from the phone memory to the SIM card. Press **Yes** to confirm or **No** to abort.

Storage

Select **SIM** or **Phone** (default) and press **OK** to select the default storage for new phonebook entries.

Phone	100 contacts with 3 phone numbers each Mobile , Home number or Office number .
SIM	1 phone number per contact. Number of entries and length of the phone numbers/contacts that can be stored will vary depending on SIM card.

Send vCard

Select **Send by SMS** and press **OK** to send the selected phonebook entry as a vCard via SMS. Enter the phone number of the recipient (or press **Search**) and press **OK** to send.

Silent mode

Silent mode is a fixed profile with SMS and ring signals disabled, while vibration and key tone settings are unchanged. Press and hold **#** to activate/deactivate Silent mode.

See also [Settings](#).

Headset


When a headset is connected, the internal microphone in the phone is automatically disconnected.

When receiving a call you can use the answer key on the headset cable to answer and end calls.

Warning!

**Using a headset at high volume can damage your hearing.
Adjust the sound volume carefully when using a headset.**


SOS calls

As long as the phone is switched on, it is possible to place an SOS call by entering the main local emergency number followed by .

Some networks accept calls to SOS numbers without a valid SIM card. Contact your network operator for more information.

Emergency Call key

The Emergency Call function must be activated before use. See [Settings](#) on how to activate this function as described below or with 3 key presses, how to enter Emergency Numbers, and how to edit the emergency SMS message.

To make an emergency call, press and hold the Emergency Call key on the back of the phone for 3 seconds, or press it two times within 1 second. The phone will send an emergency SMS text message to all phone numbers in the **Emergency numbers list**. The phone will then dial the first number on the list. If the call is not answered within 25 seconds, the next number is dialled. Dialling is repeated 3 times or until the call is answered, or until  is pressed.

Warning:

Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.


Note!

When an emergency call is activated the phone is pre-set to handsfree mode.

Automatic calls to official emergency numbers (e.g. 112, 999, 911) are normally not allowed. Do not save such numbers in the list of numbers to be called automatically.


Some private security companies can accept automatic calls from their clients. Always contact the security company before programming in its number.

Games

1. Press **Menu**, scroll to  and press **OK**.
2. Select a game (e.g. **Robot**) then press **OK** for the following settings:

Start game	Press OK to start a new game.
Game level	Select difficulty level and press OK .
Best grades	Shows your best results. Press Back to return to the menu or Reset to reset the scores.
Help	Shows instructions for the game. Press Back to return to the menu.

Alarm

1. Press **Menu**, scroll to  and press **OK**.
2. Select **On** and press **OK**.
3. Enter the alarm time using the keypad, then press **OK**.
4. For a single occurrence, select **Single** and press **Save**.
5. For a repeated alarm, select **Repeated** and press **OK**.
Scroll through the list of weekdays and press **On/Off** to enable/disable the alarm for each weekday, then press **Save**.
6. To edit an alarm, press **Edit**, then press **OK**.
7. To stop the alarm, press **Off**. The alarm is now deleted.

Note!


The alarm will work even when the phone is switched off.

*Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.*

When the alarm goes off a signal will sound.

*Press **Stop** to turn off the alarm or press **Snooze** to repeat the alarm after 9 minutes.*



Calendar

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Options**.
3. Select one of the following options and press **OK**.

View tasks

Show tasks for the selected date.

Add task

1. Enter a date for the task, then press .
2. Enter a time for the task, then press .
3. Press **Edit**, enter a description for the task (see *Text input*), then press **Done**.
4. Press **Save** to save the task.

At the recorded date/time, an alert tone will be played and the task description will be shown on the display.

Jump to date


Enter the date and press **OK**.

Note!

*The calendar will work even when the phone is switched off.
Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.*

Calculator

The Calculator can perform basic math operations.

1. Press **Menu**, scroll to  and press **OK**.
2. Enter the first number. Use **#** to enter decimal points.
3. Use the arrow keys to select an operation (+, -, x, ÷) and press **OK**.
4. Enter the next number and press **OK**.
5. Repeat steps 2–4 as necessary.
Select **=** and press **OK** to calculate the result.

Text input

Text is entered by pressing the numerical keys repeatedly to select characters. When writing SMS messages in some languages you can use the Smart ABC (eZiType™) input method which uses a dictionary to suggest words.

See *Settings* on how to change input method.

Entering text

Press the key repeatedly until the desired character is shown. Wait a few seconds before entering the next character.

Press ***** for a list of special characters. Select the desired character and press **OK** to enter it.

Use the side keys **+/-** or **^ / v** to move the cursor within the text.

Press **#** to cycle upper case, lower case and numerals.

Entering text with Smart ABC


Press each key **once**, even if the displayed character is not the one you want. The dictionary will suggest words based on the keys you have pressed. Use the arrow keys to select a word, then press **OK** and continue with the next word.

If none of the suggested words are correct, press **#** to change to manual input mode. The icon on the top left of the display indicates the input mode:

eZi ABC	UPPER CASE with SmartABC
eZi abc	lower case with SmartABC
ABC	UPPER CASE
abc	lower case
123	Numerals

SMS messaging

Creating and sending SMS

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Write message** and press **OK**.
3. Type your message (see *Text input*) then press **Done**.
4. Select one of the **sending options** below and press **OK** to confirm.

Save and send	Send the message and save it in the Outbox
Send only	Send the message without saving
Send to many	Add more recipients for the message




If **Send to many** was selected, do the following:

1. Select **Recipients** and press **OK**.
2. Select one of the empty entries and press **Edit**.
3. Enter a phone number or press **Search** to open the phonebook. After entering or selecting a number, press **OK**.
4. Repeat step 2–3 to add additional recipients.
When finished, press **Done**.




Note!

For international phone numbers, always use "+" before the country code (instead of 00 or similar) for best operation.

Incoming SMS (Inbox)

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Inbox** and press **OK**.
3. Select a message from the list and press **Read**.
Use  /  to scroll the message up/down.
4. Press **Options**, see *Outgoing SMS (Outbox)*.

Outgoing SMS (Outbox)

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Outbox** and press **OK**.
3. Select a message and press **OK**. Use  /  to scroll the message up/down.
4. Press **Options**.

Send (Outbox)

Select one of the sending options and press **OK** to confirm, (see *Creating and sending SMS*).

Reply (Inbox)

Type your reply, then press **Done**. The message will be sent immediately.

Call

Press **OK** to call the contact.

Delete

Press **Yes** to delete the message, or **No** to return to the menu.

Edit

Edit the message, then press **Done** to show the **sending options** (see *Creating and sending SMS*).

Forward (Inbox)

Forward a message from your Inbox. Press **Done** to show the **sending options**.

Delete all

Press **Yes** to delete all messages in the Inbox. Press **No** to return to the menu.

Use number

Displays all phone numbers contained in the message as well as the number of the sender.

1. Use the arrow keys to select one of the displayed numbers.
2. Press **Options**.
3. Select one of the following options and press **OK**.

Call	Call the selected number
Save	Save the number in the phonebook
Send SMS	Write a new SMS message


Settings

Note!


The settings described in this chapter are carried out in standby mode.

Time and date


Setting the time and date

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Time & date** and press **OK**.
3. Select **Set time** and press **OK**.
4. Enter the time (HH:MM), then press **OK**.
5. Select **Set date** and press **OK**.
6. Enter the date (DD/MM/YYYY), then press **OK**.

Setting the time/date format

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Time & date** and press **OK**.
3. Select **Set format** and press **OK**.
4. Select **Time Format** and press **OK**.
5. Select **12 hours** or **24 hours** and press **OK**.
6. Select **Date Format** and press **OK**.
7. Select the desired date format and press **OK**.

Setting Auto time on/off

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Time & date** and press **OK**.
3. Select **Auto time** and press **OK**.
4. Select **On/Off** and press **OK**.


To set the phone to automatically update the time and date according to the current time zone, select **On**.

Automatic update of date and time does not change the time you have set for the alarm clock, calendar or the alarm notes. They are in local time. Updating may cause some alarms you have set to expire.

User setup


Language

The default language for the phone menus, messages etc. is determined by the SIM card. You can change this to any other language supported by the phone.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Language** and press **OK**.
4. Scroll up/down to select a language, then press **OK**.


Wallpaper

You can select from 8 different display backgrounds.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Wallpaper** and press **OK**.
4. Scroll up/down to display the available wallpapers.
5. Press **OK** to confirm or **Back** to discard changes.

Idle display

In standby mode the display can present date, time, and the connected network, or just the time.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Idle display** and press **OK**.
4. Select **Clock only** or **All info** and press **OK**.

Owner number

The phone numbers assigned to your SIM card are saved in Owner numbers if this is allowed by the card.

To view/edit/delete the numbers:


1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Owner number** and press **OK**.

See *Phone book* on how to add names/numbers.

To edit or delete an existing entry, select it and press **Options**, then select **Edit** or **Delete** and press **OK**.


LCD backlight

Sets the delay time before the display backlight is turned off.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **LCD backlight** and press **OK**.
4. Select **15 sec.**, **30 sec.** or **1 min.** and press **OK**.

Audio setup


If you use hearing aid or have hearing difficulties when using the telephone in noisy environment, you can customize the phone's audio settings.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Audio setup** and press **OK**.
4. Select one of the following options and press **OK**.




Normal	For normal hearing in normal conditions.
High	For mild hearing impairment or usage in noisy environment.

Tone settings (rings & tones)

Tone setup


1. Press **Menu**, scroll to  and press **OK**.
2. Select **Tone settings** and press **OK**.
3. Select **Tone setup** and press **OK**.
4. Select **Ring Tone** and press **OK**.
5. Select one of the available tones, the tone will be played. Press **OK** to confirm, or press **Back** to discard changes.
6. Set up the **Alarm**, **Opening tone**, **Closing tone**, **Message tone** and **Keypad tone** in the same way.

Ringtone volume

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Tone settings** and press **OK**.
3. Select **Volume** and press **OK**.
4. Scroll  /  to change the ring volume, then press **OK**.

Alert type (ring/vibrate)


Incoming calls can be signalled by a ring tone and/or vibration.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Tone settings** and press **OK**.
3. Select **Alert type** and press **OK**.
4. Select the desired signalling mode and press **OK**.

Ring only	Ring tone only
Vib. only	Vibration only
Vib & ring	Vibration and ring tone
Vib -> ring	Starts with vibration and adds ring tone after a short while


Warning and error tones

Warning and error tones are used to alert the user of low battery power, phone and SIM card errors, etc.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Tone settings** and press **OK**.
3. Select **Extra tone** and press **OK**.
4. Select **Warning** and press **On/Off** to enable/disable it.
5. Select **Error** and press **On/Off** to enable/disable it.
6. Press **Done** to save.

Silent


Silent profile is a fixed profile with SMS and ring signals disabled, while vibration and key tone settings are unchanged.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Silent** and press **OK**.
3. Select **On/Off** to enable/disable it.
4. Press **OK** to save.

Alternatively press and hold **#** to activate/deactivate **Silent**.

Blocking functions

You can disable some functions to simplify use of the phone.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Block function** and press **OK**.
3. Select each function you want to disable and press **On**.
4. Press **Done** to confirm.

Emergency

Settings for the Emergency Call key function.

See also [Operation/Emergency call](#).

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Emergency** and press **OK** for the following settings:

Activation



Select one of the following options and press **OK**.

Off	Emergency call key disabled.
On Normal	Emergency Call key enabled. To activate, hold key for >3 seconds, or press 2 times within 1 second.
On (3)	Emergency Call key enabled. To activate, press key 3 times within 1 second.

Numbers list

The list of numbers that will be called when the Emergency Call key is pressed.

Some private security companies can accept automatic calls from their clients. Always contact the security company before programming in its number.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Emergency** and press **OK**.
3. Select **Numbers list** and press **OK**.
4. Select **Empty** and press **Options**.
5. Select **Phonebook** if you want to add a contact from the Phonebook.
Alternatively press **Manual**.
6. Press .
7. Enter the number and press **Save**.

Repeat until you have max. 5 emergency numbers.

See [Phonebook](#) on how to add names/numbers.

To edit or delete an existing entry, select it and press **Options**, then select **Edit** or **Delete** and press **OK**.

Message

The SMS text message to be sent when the Emergency Call key is pressed. Press **Edit** and enter text, then press **OK** to save.


Alarm information

Please read this important safety information before enabling the Emergency function:

Be careful about including numbers with automatic answering in the call list, as the alarm sequence stops once the call is answered.

Voice mail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call. Voice mailbox is a network service and you may need to subscribe to it first. For more information and for the voice mailbox number, contact your service provider.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Voice mail** and press **OK**.
3. Select **Empty** and press **Options**.
4. Select **Phonebook** if you want to add a contact from the Phonebook.
Alternatively press **Manual** to add new. See *Phonebook* on how to add names/numbers.
5. Press **Save** to confirm.

Connect to Voice mail

1. Select **Options** and press **OK**.
2. Select **Connect** and press **OK** to call the voice mailbox.
Alternatively press and hold **1** to call the voice mailbox.

Edit

To edit an existing entry, select it and press **Options**, then select **Edit** and press **OK**.


Delete

To delete an existing entry, select it and press **Options**, then select **Delete** and press **OK**.

Speed dial

The numerical keys **0** and **2–9** can be used for speed dialling.

Adding speed dial numbers

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Speed dial** and press **OK**.
3. Select **0** and press **Add**.
4. Select an entry from the phonebook and press **OK**.
5. Repeat to add speed dial entries for keys **2–9**.

To speed dial an entry, press and hold the corresponding number key.

To edit an existing entry, select it and press **Options**, then select **Edit** or **Delete** and press **OK**.

Call setup

Depending on network support and subscription.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Call setup** and press **OK** for the following settings:

Caller ID

Controls display of your phone number on the recipients phone. Select an option and press **OK**.

Set by network	Use default setting by the network
Hide ID	Never show your number
Send ID	Always show your number

Call waiting

Select an option and press **OK**. See also [Operation - Call waiting](#).

Activate	Enables the function
Deactivate	Disables the function
Query status	Displays if the service is active or not

Call divert

Set up which calls should be diverted.

Select a condition and press **OK**, then select **Activate**, **Deactivate** or **Query status** (see [Call waiting](#) above) for each.

Div. voice calls	Diverts all voice calls.
Div. unreach	Diverts incoming calls if the phone is turned off or out of range.
Div. no reply	Diverts incoming calls if unanswered.
Divert if busy	Diverts incoming calls if the line is busy.
Cancel diverts	Do not divert calls

Call barring

The phone can be restricted to disallow certain types of calls.

Note!

To change these settings a password is needed. Contact your network operator to get the password.

Outgoing calls	Press OK then select:
All calls	User can answer incoming calls but not dial out.
Internat. calls	User can not call international numbers.
Int. except home	User can not call international numbers except to the country associated with the SIM card.
Incoming calls	Press OK then select:
All calls	User can dial out but not receive incoming calls.
When roaming	User can not receive incoming calls while roaming (operating in other networks).
Cancel all	Cancel all call barring (password needed)

Answer mode

Select **Open to answer** and press **On** to be able to answer incoming calls by cover opening.

Select **Any key** and press **On** to be able to answer incoming calls by pressing any key.

SMS settings

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Messages** and press **OK** for the following settings:

Profile set

This number is needed to use the SMS function. The number can be obtained from the network operator.

1. Add/edit the message service phone number. Use the side keys to move the cursor. Press **Clear** to erase.
2. Press **Save** to save the new number.

Memory status

Displays the percentage of memory space used in the SIM card and phone memory.

Pref. storage

1. Select **SIM** to store messages on the SIM card, or **Phone** to store messages in the phone memory.
2. Press **OK** to confirm.

Predictive text (Smart ABC)

1. Press **On** to enable Smart ABC/eZiType™, see *Text input*.
2. Select a dictionary (language) and press **OK** to confirm.


Cell information

You can receive messages on various topics from your service provider, such as weather or traffic conditions in a particular region. For available channels and relevant channel settings, contact your service provider. Cell broadcast messages cannot be received when the device is Roaming.

Select **Cell information** and press **OK** for the following settings:

Function on/off	To turn information On or Off
Read	Select Read and press OK to read the message
Languages	Select language and press OK
Settings	Select from which channels you want to receive/subscribe messages. Use the options Select , Add , Edit and Delete to define your channels

Network setup


1. Press **Menu**, scroll to  and press **OK**.
2. Select **Network setup** and press **OK**.
3. Select one of the following options and press **OK** to confirm.

Automatic	Network is selected automatically.
Manual	A list of available network operators is displayed (after a short delay). Select the desired operator and press OK .

Services

This menu may contain pre-programmed services from your network provider. Depending on network support and subscription.

Security settings

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Security** and press **OK**.

SIM lock

The SIM card is protected with a PIN code (Personal Identification Number). The phone can be set to ask for the PIN code on startup.

Select **On/Off** and press **OK** to enable/disable SIM card lock.

Note!

You need to input the current PIN code to disable/enable SIM lock.

Phone lock

Select **On/Off** and press **OK** to enable/disable the Phone lock.

Note!


*You need to input the current Phone code to change this setting. The default Phone code is **1234**.*

Fixed dial (FDN)

You can restrict calls to certain numbers saved on the SIM card. The list of restricted numbers is protected by your PIN2-code.

Mode	Select On/Off and press OK . Enter PIN2 and press OK to confirm.
Fixed numbers	Press Options for the following settings: Add, Edit or Delete and press OK . Enter PIN2 and press OK to confirm.

Please note!

You can save parts of phone numbers. For example, if you save 01234, allows calls to all numbers starting with 01234. It is possible to place an SOS call by entering the main local emergency number followed by  even when fixed dial is activated.

When fixed dial is activated you are not allowed to view or manage any phone numbers saved on the SIM card.

PIN / PIN2 / Phone password

To change the PIN codes or the phone lock password:

1. Enter the current code and confirm with **OK**
2. Enter a new code and confirm with **OK**.
3. Enter the new code again and confirm with **OK**.

Reset

Resets the phone to the factory settings.

Input the phone lock password and press **OK** to reset.

Safety instructions

Warning!

The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children. The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.

This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 1.5 cm from your body. If the unit is carried close to your body in a case, belt holder or other holder, these holders should not contain any metal, and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete.

Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 15 cm be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. Persons with pacemakers:

- Should always keep the phone more than 15 cm from their pacemaker when the phone is turned on
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimize the potential for interference

If you have any reason to suspect that interference is taking place, turn the phone off immediately.

Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion. Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine. In these areas, sparks can cause explosion or fire which can lead to personal injury or even death.

Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

Emergency calls

Important!

Mobile phones use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, never rely only on a mobile phone for very important calls such as medical emergencies.

Hearing aids

This device should work with most hearing aid equipment in the market. However, full compatibility with all equipment can not be promised.

Vehicles

Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories. For vehicles equipped with air bags: Remember that air bags fill with air with considerable force.

Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

It is prohibited to use the unit in flight. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

RF exposure information (SAR)

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.088 W/kg and when worn on the body, as described in this user guide, is 0.537 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on **FCC ID: WS5DORO409S**

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 5/8 inch (1.5 cm) from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 5/8 inch (1.5 cm) from your body when the phone is switched on.

FCC/INDUSTRY CANADA NOTICE

This device complies with part 15 of the FCC Rules. This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules/ Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Doro has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

Troubleshooting

Phone cannot be switched on	
Battery charge low	Connect the power adapter and charge the battery for 3 hours.
Battery incorrectly installed	Check the installation of the battery.
Failure to charge the battery	
Battery or charger damaged	Check the battery and charger.
Battery recharged in temperatures < 0°C or > 40°C	Improve the charging environment.
Charger incorrectly connected to phone or power socket	Check the charger connections.
Standby time decreases	
Battery charge capacity too low	Install a new battery.
Too far from base station, phone is constantly searching for signal	Searching the network consumes battery power. Find a place with a stronger signal, or temporarily turn off the phone.
Failure to place or receive calls	
Call barring activated	Deactivate call barring. If this does not solve the problem, contact the network operator.
PIN code not accepted	
Wrong PIN code entered too many times	Enter the PUK code to change the PIN code, or contact the network operator.

English

SIM card error	
SIM card damaged	Check the condition of the SIM card. If it is damaged, contact the network operator.
SIM card incorrectly installed	Check the installation of the SIM card. Remove the card and reinstall it.
SIM card dirty or damp	Wipe the contact surfaces of the SIM card with a clean cloth.
Failure to connect to network	
SIM card invalid	Contact the network operator.
No coverage of GSM service	Contact the network operator.
Signal too weak	See <i>Weak signal</i> below.
Weak signal	
Too far from base station	Try again from another location.
Network congestion	Try calling at a later time.
Echo or noise	
Regional problem from bad network relay	Hang up and redial. This may switch to another network relay.
Failure to add a contact	
Phonebook memory full	Delete contacts to free up memory.
Failure to set a function	
Function not supported or subscribed from network	Contact the network operator.

Care and maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.

Do not expose your product to extreme high or low temperatures. Your phone operates best in temperature between 0 °C and 40°C. Minimum and maximum temperatures recommended by the manufacturer are 0°C and 40°C.

The advice above applies to the unit, battery, mains adapter and other accessories. If the phone is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Warranty and technical data

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if batteries other than DORO original batteries are used.

NOTE! This guarantee does not affect your legal (statutory) rights under your applicable national laws relating to the sale of consumer products.

Specifications

Network: GSM 900/DCS1800/PCS1900 Triple Band

Dimensions: 98 mm x 51 mm x 19 mm

Weight: 99 g (including battery)

Battery: 3.7V/800 mAh Li-ion battery

Declaration of Conformity

Doro hereby declares that **Doro PhoneEasy 409s gsm** conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2002/95/EC (RoHS).

A copy of the Declaration of Conformity is available at www.doro.com/dofc

© 2009 Doro AB. All rights reserved.

eZiType™ is a trademark of Zi Corporation.

vCard is a trademark of the Internet Mail Consortium.

English

This device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 standards. Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

Logo



Warning statement:

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.

Caution

Risk of explosion if battery replaced aced by an incorrect type.
Dispose of used batteries according to the instructions.

Please make sure the temperature for adapter will not be higher than 40 °C
Please make sure the temperature for device will not be higher than 40 °C

The device could be used with a separation distance of 1.5cm to the human body.

The adapter shall be installed near the equipment and shall be easily accessible.
Only can use adapter as below:Adatper mfg: Shenzhen Huntkey Electronics Co., Ltd.
Adapter 1 model: HKA00605055-3B I/P:100-240V,50/60Hz,0.2A,O/P 5V,0.55A
Adapter 2 model: HKA00605055-4B I/P:100-240V,50/60Hz,0.2A,O/P 5V,0.55A
The plug considered as disconnect device of adapter

English (A3)

Version 1.1

www.doro.com

C € 0700