

**mobile phone
User Manual
For
Avvio 761S**

Table of contents

Safety and use	5
1 Your mobile	10
1.1 Keys and connectors	10
1.2 Status bar	12
1.3 Getting started	15
1.3.1 Set-up	15
1.3.2 Power on your phone	17
1.3.3 Power off your phone	17
1.4 Home screen	17
1.4.1 Using the touchscreen	18
1.4.2 Personalize your Home screen	19
1.4.3 Search bar	20
1.4.4 Application tab	20
1.4.5 Volume adjustment	20
2 Text input	21
2.1 Using Onscreen Keyboard	21
2.2 Text editing	21

3 Phone call	22
3.1 Placing a call	22
3.2 Speed dial settings.....	22
3.4 Answering or rejecting a call	22
3.5 Consulting your call memory	23
4 Messaging	24
5 People	26
5.1 Adding a contact	26
5.2 Importing, exporting and sharing contacts	26
5.3 Synchronizing contacts in multiple accounts	27
6 Email	28
7 Getting connected	29
7.1 Connecting to the Internet.....	29
7.1.1 GPRS/3G	29
7.1.2 Wi-Fi	29
7.2 Browser	30
7.3 Bluetooth	30
7.3.1 Bluetooth on	30

7.3.2 Search for bluetooth devices nearby31

7.6 Factory data reset31

8 Tools 32

8.1 Sound recorder32

8.2 FM Radio.....32

8.3 Alarm33

9 Troubleshooting..... 34

Safety and use

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

➤ **TRAFFIC SAFETY**

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked. When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas. When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags.

To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area.
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

➤ **CONDITIONS OF USE**

You are advised to switch off the telephone from time to time to optimise its performance

- Switch the phone off before boarding an aircraft.
- Switch the phone off when you are in health care facilities, except in designated

areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

- When the phone is switched on, it should be kept at least 15cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any.
- Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.
- To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage..
- Do not let children use the phone and/or play with the telephone and accessories without supervision.
- Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -10°C to +55°C. At over 55°C the legibility of the phone's display may be impaired, though this is

temporary and not serious

- Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.
- Do not open, dismantle or attempt to repair your mobile phone yourself.
- Do not drop, throw or bend your mobile phone.
- Do not use the phone if the glass made screen, is damaged, cracked or broken to avoid any injury. Do not paint it.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game

and see a doctor

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.



Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your phone volume safely.

➤ **BATTERY**

Before removing the battery from your phone, please make sure that the phone is switched off. Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery.
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above 60°C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by the manufacturers.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of

equipment)

-Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

➤ **CHARGERS**

Mains powered chargers will operate within the temperature range of: 0°C to 40°C. The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

➤ **SAR**

This product meets applicable national SAR limits of 2.0 W/kg. When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

1 Your mobile

1.1 Keys and connectors



















Keys	Functions
Power key	Press: Lock the screen/Light up the screen. Press and hold: Power on your phone or show the pop-up menu to select from Ringer mode/Airplane mode/Power off .
Menu key	On Home screen press to quickly access System settings menu or Manage apps . On other screens, press to view options list.
Home key	While on any application or screen, touch to return to the Home screen.
Back key	Touch to go back to the previous screen, or to close a dialog box, options menu, the notification panel, etc
Volume key	Under call mode, adjust the earpiece or headset volume. In Music/Video/Streaming mode, adjust the media volume. In general mode, adjust the ring tone volume mute the ringtone of an incoming call.










1.2 Status bar

From status bar, you can view both phone status (to the right side) and notification












information (to the left side). When the status bar is full, “+” icon will appear








Status icons

	Signal strength
	GPRS connected
	GPRS in use
	EDGE connected
	EDGE in use
	HSPA (3G+) connected
	HSPA (3G+) in use
	Connected to a Wi-Fi network
	Bluetooth is on
	Connected to a Bluetooth device
	Airplane mode
	Alarm is set
	GPS is on
	Receiving location data from GPS
	Speakerphone is on
	No signal

	Vibrate mode
	Ringer is silenced
	Phone microphone is mute
	No charge in battery
	Battery is very low
	Battery is partially drained
	Battery is full
	Battery is charging
	Headset connected

Notification icons

	New text or multimedia message
	Problem with SMS or MMS delivery
	Upcoming event
	Data is synchronizing
	Data synchronizing is fail
	More notifications are hidden
	Song is playing
	USB tethering is on
	Portable Wi-Fi hotspot
	Call in progress
	Missed call

	Call on hold
	Call forwarding is on
	Uploading data
	Downloading data
	An open Wi-Fi network
	Phone is connected via
	Radio is on

Notification panel Touch and drag down the Status bar to open the notification panel. Touch and drag up to close it. From the Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.

1.3 Getting started

1.3.1 Set-up


Removing or installing the back cover



Inserting or removing the SIM card

You must insert your SIM card to make phone calls. Please power off your phone and

remove battery before inserting or removing the SIM card.

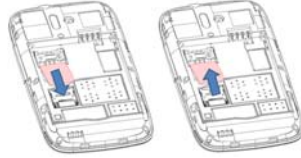


To install, place the SIM card with SIM chip facing downwards and slide it into the slot.

Make sure that it is correctly inserted. To remove the card, press and slide it out.

Installing or removing the battery

Please power off your phone before removing the battery.

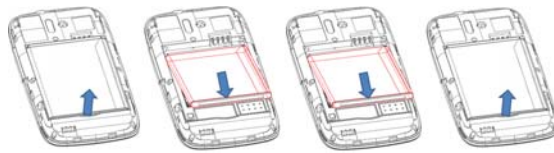

- Insert and click the battery into place, then close the phone cover.
- Unclip the cover, then remove the battery.

Installing and removing the microSD card

To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.



Charging the battery



Connect the battery charger to your phone, then the screen will light.



The charging status bar will not float if your battery is extensively consumed. To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

1.3.2 Power on your phone

Hold down the **Power** key until the phone powers on. It will take some seconds before the screen lights up.

1.3.3 Power off your phone

Hold down the **Power** key from the Home screen until the Phone options appear, select **Power off**, and touch **OK** to confirm.

1.4 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. Touch the **Home** key to switch to Home screen.

Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the

Home screen. Blue line at the lower left and right of the screen indicate which screen you are viewing.

1.4.1 Using the touchscreen

Touch

To access an application, touch it with your finger.

Touch and hold

Touch and hold the home screen to access the available options for setting the wallpaper

Drag

Place your finger on any item to drag it to another location.

Slide/Swipe

Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

Flick

Similar to swiping, but flicking makes it move quicker.

Pinch/Spread

Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

Rotate

Automatically change the screen orientation from portrait to landscape by turning the phone sideways to have a better view.

1.4.2 Personalize your Home screen

Add

Touch the application tab, touch and hold an application or a widget to activate the Move mode, and drag the item to any Home screen as you prefer.

Reposition

Touch and hold the item to be repositioned to activate the Move mode, drag the item to the desired position and then release. You can move items both on the Home screen and the Favorite tray. Hold the icon on the left or right edge of the screen to drag the item to another Home screen.

Remove

Touch and hold the item to be removed to activate the Move mode, drag the item up to the top of **Remove** icon, and release after the item turns red.


Wallpaper customization

Touch and hold an empty area or touch **Menu**, then touch **Wallpaper** on the Home screen to customize wallpaper.

1.4.3 Search bar

The phone provides a Search function which can be used to locate information within applications, the phone or the web.

1.4.4 Application tab

Touch  from the Home screen to enter applications list. To return to the Home screen, touch the **Home** key.

1.4.5 Volume adjustment

You can set ringer, media and phone ringtone volume to your preference by pressing **Volume up/down** key.

2 Text input

2.1 Using Onscreen Keyboard

Onscreen Keyboard settings

Onscreen keyboard will auto appear when text input. Touch the setting icon and select

System settings \ **Language & input**, a series of settings are available for your selection.

Adjust the Onscreen Keyboard orientation

Turn the phone sideways or upright to adjust the Onscreen Keyboard orientation. You can

freeze the orientation by changing the settings (**Touch Settings** \ **Display** \ **Auto-rotate screen**)

2.2 Text editing

- Touch and hold or double-tap within the text you would like to edit.
- Drag the tap to change the high-lighted selection.
- Following options will show: **Select all** / **Cut** / **Copy** / **Paste**.

Touch the icon or touch the blank to go back without any action.

3 Phone call

3.1 Placing a call

You can easily launch a call using **Phone**. Touch


Application tab from the Home screen and select **Phone**. Enter the desired number from the keyboard directly or select a contact from **Contacts** or **Call log** by sliding or touching tabs,

then touch  to place the call.

The number you entered can be saved to Contacts by touching the **Menu** key and touching

Add to Contacts. If you make a mistake, you can delete the incorrect digits by touching




To hang up a call, touch .

3.2 Speed dial settings

You can access this setting screen by touching **Menu** key and **Speed Dial Settings** on Dial screen, then select contacts to define 2-9 screen keys as a speed dialer.

3.4 Answering or rejecting a call

When you receive a call, touch the icon .

- Slide the icon rightward to answer;
- Slide the icon leftward to reject;
- Slide the icon upward to reject the call by sending a preset message.


To mute the ringtone volume of an incoming call, press the **Volume up/down** key.

3.5 Consulting your call memory

You can access your call memory by touching from the Dial screen to view call history in categories of Incoming calls, Outgoing calls, and Missed calls.

4 Messaging

You can create, edit and receive SMS and MMS with this phone. To access this feature, touch Application tab from the Home screen, then select **Messaging**.


 All messages you receive or send out can only be saved in phone memory. To consult messages stored in SIM card, touch **Menu** key from Messaging screen, then touch **Settings** | **Manage SIM message**


Write message

On message list screen, touch the new message icon to write text/multimedia messages

Sending a text message

Enter the mobile phone number of the recipient on **To** bar or touch to add recipients, touch

Type message bar to enter the text of the message. When finished, touch  to send the text message.

 An SMS of more than 160 characters will be charged as several SMS. Specific letters will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other

compatible phones and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or Subject or email addresses added.

5 People

You can view and create contacts on your phone and synchronize these with your Gmail contacts or other applications on the web or on your phone. When using **People** app, for the first time you are required to add new contacts, import contacts from SIM card or synchronize contacts from other application accounts to phone.

5.1 Adding a contact

Touch Application tab on the Home screen, select **People** app, then touch new contact icon in the contact list to create a new contact To **import/export** a single contact from/to SIM card, choose an account and target SIM card(s), select the contact you want to import/export.

To **import/export** all contacts from/to SIM card, choose an account and target SIM card(s).

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, Gmail, etc. Touch a contact you want to share, touch **Menu** key and **Share** from contact details screen, then select the application to perform this action.

5.2 Importing, exporting and sharing contacts

From Contacts screen, touch **Menu** key to open options menu, touch **Import/Export**, then select **Import from SIM card**, **Export to SIM card**, **Import from storage**, **Export to storage**, or **Share visible contacts**.

5.3 Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your phone.

6 Email

You can set-up external POP3 or IMAP email accounts in your phone. To access this function, touch Application tab from Home screen, then select **Email**. An email wizard will guide you through the steps to set-up an email account.

- Enter the email address and password of the account you want to set-up.
- Touch **Next**. If the account you entered is not provided by your service provider in the phone, you will be prompted to go to the email account settings screen to enter settings manually. Or you can touch **Manual setup** to directly enter the incoming and outgoing settings for the email account you are setting up.
- Enter the account name and display name in outgoing emails. To add another email account, you can touch **Menu** key and **To create and send emails**
- Touch the create new icon from Inbox screen. Enter recipient(s) email address(es) in **To** field. If necessary, touch **Menu** key and touch **Add Cc/Bcc** to add a copy or a blind copy to the message. Enter the subject and the content of the message.
- Touch **Menu** key, touch **Attach file** to add an attachment.
- Finally, touch to send. If you do not want to send the mail right away, you can touch **Menu** key and **Save draft** or touch **Back** key to save a copy.

7 Getting connected

To connect to the Internet with this phone, you can use GPRS/EDGE/3G networks or Wi-Fi, whichever is most convenient.

7.1 Connecting to the Internet

7.1.1 GPRS/ 3G

The first time you turn on your phone with SIM card inserted, it will automatically configure network service: GPRS or 3G. If the network is not connected, you can press on notification panel.

To check the network connection you are using, touch Application tab on the Home screen, then touch **Settings**\More...\b>Mobile networks**Access Point Names** or **Network operators**.

7.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on the phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network:

- Touch on notification panel to get to settings.
- Touch the switch beside Wi-Fi to turn on Wi-Fi.
- Touch **Wi-Fi**, detailed information of all detected Wi-Fi networks is displayed in the **Wi-Fi networks** section.

- Touch a Wi-Fi network to connect to it. If the network you selected is secured, you are required to enter a password or other credentials (contact network operator for details). When finished, touch **Connect**.

7.2 Browser

Using Browser, you can enjoy surfing the Web.

To access this function, touch Application tab from Home screen, then touch **Browser**.


To go to a web page

On Browser screen, touch the URL box at the top, enter the address of the web page, then confirm.

7.3 Bluetooth


Using bluetooth, you can connect to the other device which Bluetooth is on when your phone is within range of it. Wi-Fi can be used on the phone even without a SIM card inserted. Walls or other obstructions may affect the Bluetooth wireless connection.

7.3.1 Bluetooth on

- Touch Application tab  from the Home screen and select **Settings**
- Touch the switch beside Bluetooth to turn on Bluetooth.
- Touch Bluetooth, detailed information of all detected bluetooth devices is displayed in the Bluetooth devices section.
- Touch **Not visible to other Bluetooth devices** switch to **visible to all Bluetooth devices**

nearby.

7.3.2 Search for bluetooth devices nearby


Touch Application tab  from the Home screen and select **Settings**

- Touch the switch beside Bluetooth to turn on Bluetooth. Select Bluetooth, then touch search for devices.

- Your phone will search for all the Bluetooth devices nearby and detailed information of all detected Bluetooth devices will displayed.


- You may required to enter a password when you select to pair with the bluetooth detected. You can tap 0000 or 1234 to try.

To turn on USB tethering or Portable Wi-Fi hotspot:

- Touch Application tab  from the Home screen and select **Settings**.

- Touch **More...** \Tethering & portable hotspot.


- Mark the checkbox of **USB tethering** or **Portable Wi-Fi hotspot** to activate this function.

 These functions may incur additional network charges from your network operator.

Extra fees may also be charged in roaming areas.

7.6 Factory data reset

To activate factory data reset:


- Touch Application tab  from the Home screen and select **Settings**.

- Touch **Backup & reset** \ **Factory data reset** Mark the checkbox

Phone reset will erase all of your personal data from internal phone storage, including information about your any accounts, your system and application settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when you first started Android. When you are unable to power on your cellphone, there is another way to perform a factory data reset by pressing the **Volume up** key and the **power** key at same time until the screen lights up.

8 Tools



8.1 Sound recorder

Touch Application tab  from the Home screen and select **Sound Recorder**. You can record several seconds or several hours.


8.2 FM Radio

Touch Application tab  from the Home screen and select **FM Radio**.


Search for channel

Touch  and  for radio tuning. you can also drag the Slide block to change channel.

Close FM radio

Touch  in the Upper right corner to close FM radio.

8.3 Alarm


Touch Application tab  from the Home screen and select **Clock**, then touch **Set alarm**.

- **Turn alarm on** Touch to check and set alarm on
- **Time** Touch to set alarm time
- **Repeat** Touch to select the day you desire to alarm
- **Ring tone** Touch to select the alarm ringtone
- **Vibrate** Touch to check and set vibrate on
- **Label** Touch to tap a alarm name

Touch **OK** to save the alarm.

9 Troubleshooting

Before contacting the service centre, you are advised to follow the instructions below:

- . You are advised to fully charge , the battery for optimal operation.
- . Use **Factory data reset** and the upgrade tool to perform phone formatting or software upgrading (to reset factory data, hold down the **power** key and the **Volume up** key at the same time). ALL User phone data: contacts, photos, messages and files, downloaded applications will be lost permanently. It is strongly advised to fully backup the phone data and profile via Android Manager before doing formatting and upgrading.

and carry out the following checks:

My phone is frozen or cannot switch on

- . Check the battery contacts, remove and reinstall your battery, then turn your phone on.
- . Check the battery power level, charge for at least 20 minutes.
- . If it still does not work, please reset the phone using the **power** key and the **Volume up** key.

My phone has not responded for several minutes

- . Restart your phone by pressing and holding the **Power** key.
- . Remove and re-install the battery, then restart the phone.

My phone turns off by itself

- . Check that your screen is locked when you are not using your phone, and make sure the

Power key is not mis-contacted due to unlocked screen.

- Check the battery charge level

My phone cannot charge properly

- Make sure you are using the battery provided by manufacturer and the charger from the box.
- Make sure your battery is inserted properly and clean the battery contact if it's dirty. It must be inserted before plugging in the charger.
- Make sure that your battery is not completely discharged; if the battery power is empty for a long time, it may take around 20 minutes to display the battery charger indicator on the screen.
- Make sure charging is carried out under normal conditions (0°C to +40°C).
- When abroad, check that the voltage input is compatible.

My phone cannot connect to a network or “No service” is displayed

- Try connecting in another location.
- Verify the network coverage with your operator.
- Check with your operator that your SIM card is valid.
- Try selecting the available network(s) manually
- Try connecting at a later time if the network is overloaded.


My phone cannot connect to the Internet

- Check that the IMEI number (press *#06#) is the same as the one printed on your warranty card or box.
- Make sure that the internet access service of your SIM card is available.
- Check your phone's Internet connecting settings.
- Make sure you are in a place with network coverage.
- Try connecting at a later time or another location.

Invalid SIM card

- Make sure the SIM card has been correctly inserted (see "**Inserting or removing the SIM card**").
- Make sure the chip on your SIM card is not damaged or scratched.
- Make sure the service of your SIM card is available.
- Make sure your SIM card is valid, more detail, please contact your Operator.

Unable to make outgoing calls

- Make sure you have dialed a valid number and have touched .
- For international calls, check the country and area codes.
- Make sure your phone is connected to a network, and the network is not overloaded or unavailable.
- Check your subscription status with your operator (credit, SIM card valid, etc.).

- Make sure you have not barred outgoing calls.
- Make sure that your phone is not in flight mode.

Unable to receive incoming calls

- Make sure your phone is switched on and connected to a network (check for overloaded or unavailable network).
- Check your subscription status with your operator (credit, SIM card valid, etc.).
- Make sure you have not forwarded incoming calls.
- Make sure that your phone is not in flight mode.

The caller's name/number does not appear when a call is received

- Check that you have subscribed to this service with your operator.
- Your caller has concealed his/her name or number.

I cannot find my contacts

- Make sure your SIM card is not broken.
- Make sure your SIM card is inserted properly.
- Import all contacts stored in SIM card to phone.

The sound quality of the calls is poor

- You can adjust the volume during a call by pressing the **Volume Up/Down** key.
- Check the network strength.

- Make sure that the receiver, connector or speaker on your phone is clean.

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service.

When I select a number from my contacts, the number cannot be dialed

- Make sure that you have correctly recorded the number in your file.
- Make sure that you have selected the country prefix when calling a foreign country.

I am unable to add a contact in my contacts

- Make sure that your SIM card contacts are not full; delete some files or save the files in the phone contacts (i.e. your professional or personal directories).

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability.

I cannot access my voicemail

- Make sure your operator's voicemail number is correctly entered in "Voicemail number".
- Try later if the network is busy.

I am unable to send and receive MMS

- Check your phone memory availability as it might be full.
- Contact your network operator to check service availability and check MMS parameters.
- Verify the server centre number or your MMS profile with your operator.

- The server centre may be swamped, try again later.

SIM card PIN locked

- Contact your network operator to obtain the PUK code (Personal Unblocking Key).

I am unable to connect my phone to my computer

- Install Android Manager.
- Check that your USB driver is installed properly.
- Open the Notification panel to check if the Android Manager Agent has activated.
- Check that you have marked the checkbox of USB debugging in

Settings\Development\USB debugging

- Check that your computer meets the requirements for Android Manager Installation.
- Make sure that you're using the right cable from the box.

I am unable to download new files

- Make sure there is sufficient phone memory for your download.
- Check your subscription status with your operator.

The phone cannot be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your phone is visible to other users.
- Make sure that the two phones are within Bluetooth's detection range.

How to make your battery last longer

- Make sure you follow the complete charge time (minimum 4 hours).

- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication.
- Switch on the backlight upon request.
- Extend the email auto-check interval for as long as possible.
- Update news and weather information on manual demand, or increase their auto-check interval.
- Exit background-running applications if they are not being used for a long time.
- Deactivate Bluetooth, Wi-Fi, or GPS when not in use.

The phone will become warm following prolonged calls, game playing, internet surfing or running other complex applications. This heating is a normal consequence of the CPU handling excessive data. Ending above actions will make your phone return to normal temperatures.

FCC Regulations:

●This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

●This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States, Industry Canada of Canada.

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg, and 1.6W/kg by Industry Canada.

This device is complied with SAR for general population /uncontrolled exposure limits in

ANSI/IEEE C95.1-1992 and Canada RSS 102, and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C, and Canada RSS 102. This device has been tested, and meets the FCC, IC RF exposure guidelines when tested with the device directly contacted to the body.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: WVBA761X.

For this device, the highest reported SAR value for usage against the head is 1.45 W/kg, for usage near the body is 1.33 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 10 mm between the unit and the human body. Carry this device at least 10 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 10 mm between this device and your body. RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.