



RED4 User's Manuals

Contents

1	Pin Description	3
1.1	RED4 Pin Description.....	3
2	Operation Method.....	5
2.1	Power Supply	5
2.2	UART	5
2.3	RF In/Out.....	5
2.4	GUI Control	6
3	Specification	11

1 Pin Description

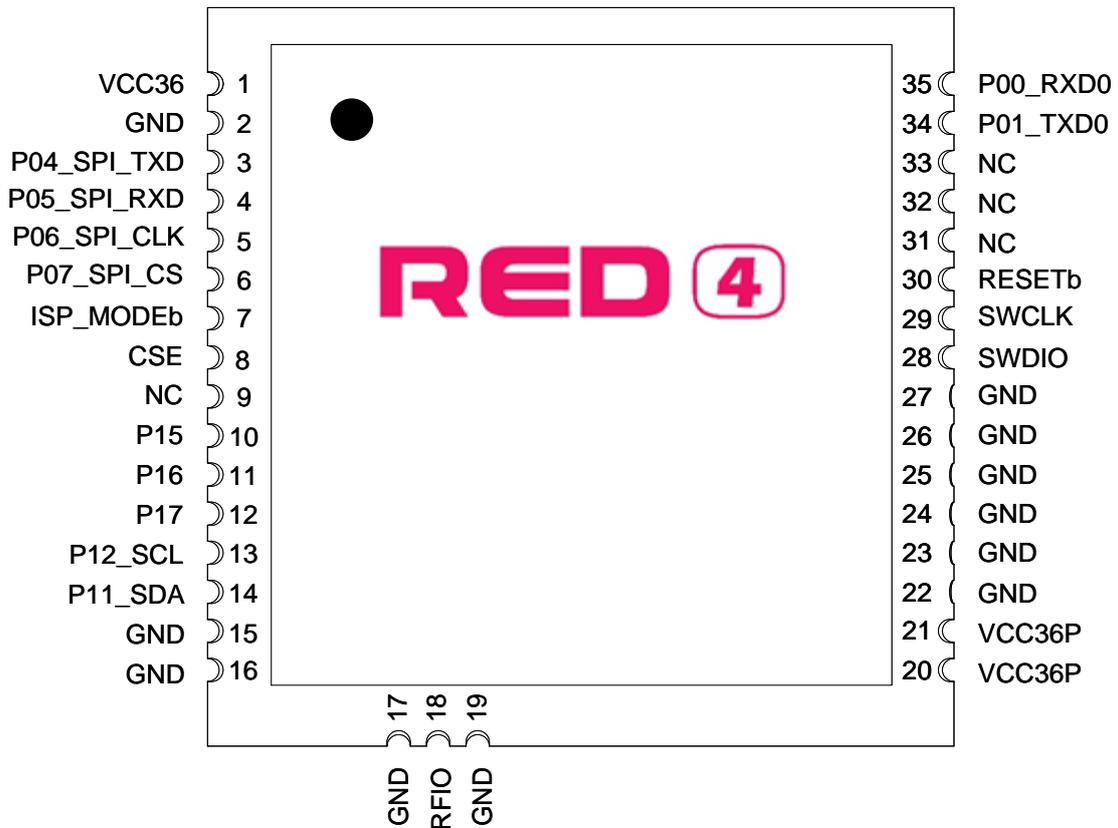


Figure 1 Pin Description

1.1 RED4 Pin Description

No.	Pin Name	Description																									
1	VCC36	DC Power for Reader SOC																									
2	GND	Ground																									
3	P04_SPI_TXD	Quasi-bi directional I/O port or SPI Output																									
4	P05_SPI_RXD	Quasi-bi directional I/O port or SPI Input																									
5	P06_SPI_CLK	Quasi-bi directional I/O port or SPI Clock																									
6	P07_SPI_CS	Quasi-bi directional I/O port or SPI Chip Select																									
7	ISP_MODEb	<p>When ISP_MODEb is Logic 'Low', ISP mode is set as shown below table</p> <table border="1"> <thead> <tr> <th>Pin No.</th> <th>7</th> <th>12</th> <th>11</th> <th>10</th> </tr> </thead> <tbody> <tr> <td>MODE</td> <td>ISP_MODEb</td> <td>P17</td> <td>P16</td> <td>P15</td> </tr> <tr> <td>Normal</td> <td>1</td> <td>GPIO/INT</td> <td>GPIO/INT</td> <td>GPIO/INT</td> </tr> <tr> <td>UART ISP</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>SPI ISP</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> </tr> </tbody> </table> <p>[CAUTION] Except ISP mode, ISP_MODEb should be set logic 'High' for robust stability for FLASH memory</p>	Pin No.	7	12	11	10	MODE	ISP_MODEb	P17	P16	P15	Normal	1	GPIO/INT	GPIO/INT	GPIO/INT	UART ISP	0	0	0	0	SPI ISP	0	0	0	1
Pin No.	7	12	11	10																							
MODE	ISP_MODEb	P17	P16	P15																							
Normal	1	GPIO/INT	GPIO/INT	GPIO/INT																							
UART ISP	0	0	0	0																							
SPI ISP	0	0	0	1																							
8	CSE	Chip Select enable / module power enable 0:Disable 1: Enable																									
9	NC	Not Connection																									
10	P15	<p>Quasi-bi directional I/O port</p> <p>[NOTE] This pin is already used internally. So this pin should be only for ISP mode</p>																									

11	P16	Quasi-bi directional I/O port or External Interrupt 4
12	P17	Quasi-bi directional I/O port or External Interrupt 5
13	P12_SCL	Quasi-bi directional I/O port I2C Clock The pull-up resistor is always switched on. Reserved Address : 0x70, 0x71
14	P11_SDA	Quasi-bidirectional I/O port I2C Data In / Out The pull-up resistor is always switched on. Reserved Address : 0x70, 0x71
15	GND	Ground
16	GND	Ground
17	GND	Ground
18	RF IO	Rx Input / Tx Output
19	GND	Ground
20	VCC36P	DC Power for Power Amp
21	VCC36P	DC Power for Power Amp
22	GND	Ground
23	GND	Ground
24	GND	Ground
25	GND	Ground
26	GND	Ground
27	GND	Ground
28	SWDIO	Serial Wire Debug data in out
29	SWCLK	Serial Wire Debug Clock
30	RESETb	Reader SOC Reset signal 0: reset
31	NC	Not Connection
32	NC	Not Connection
33	NC	Not Connection
34	P01_TXD0	Quasi-bi directional I/O port or UART0 Output
35	P00_RXD0	Quasi-bi directional I/O port or UART0 Input

2 Operation Method

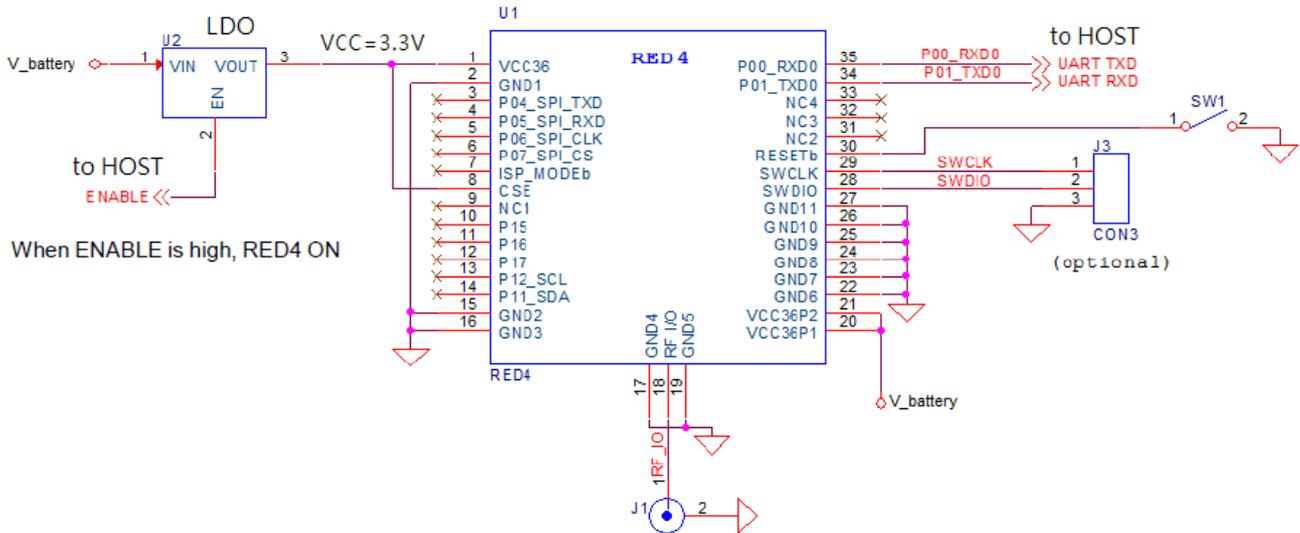


Figure 2 Application Circuit

2.1 Power Supply

DC power to operate RED4 is separated by 2 kinds. VCC36 is to supply for PR9200 which power range is 3.3 to 3.6 volts, VCC36P is to supply for power amp which power range is 3.3 to 4.2 volts. Total current consumption of RED4 is typically 450mA at 25dBm output power.

2.2 UART

The serial interface is assigned with two wires. RXD0, which pin is assigned to pin 35, is for receiving command from host and TXD0, which pin is assigned to pin 34, is for transmitting response to host. Pin connection is shown as below figure.

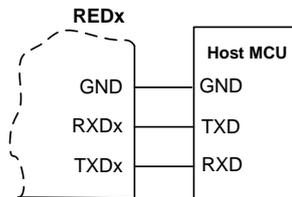


Figure 3 Host MCU Connection

Following configuration is used for interfacing to USB transceiver.

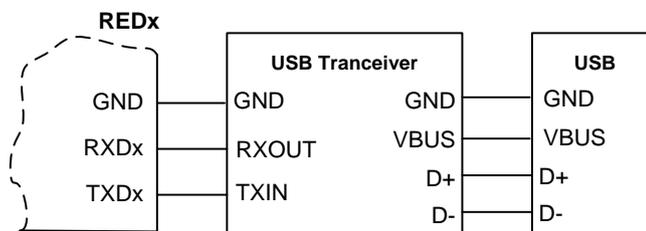


Figure 4 USB transceiver Connection

2.3 RF In/Out

RF I/O which assigned to Pin 18 is optimized with 50ohm impedance.

2.4 GUI Control

The RED Utility helps the user to start working with RED DK RFID reader quickly.

Follow below steps to run GUI.

Windows Start button → Program Menu → RED Utility_vX.X.X

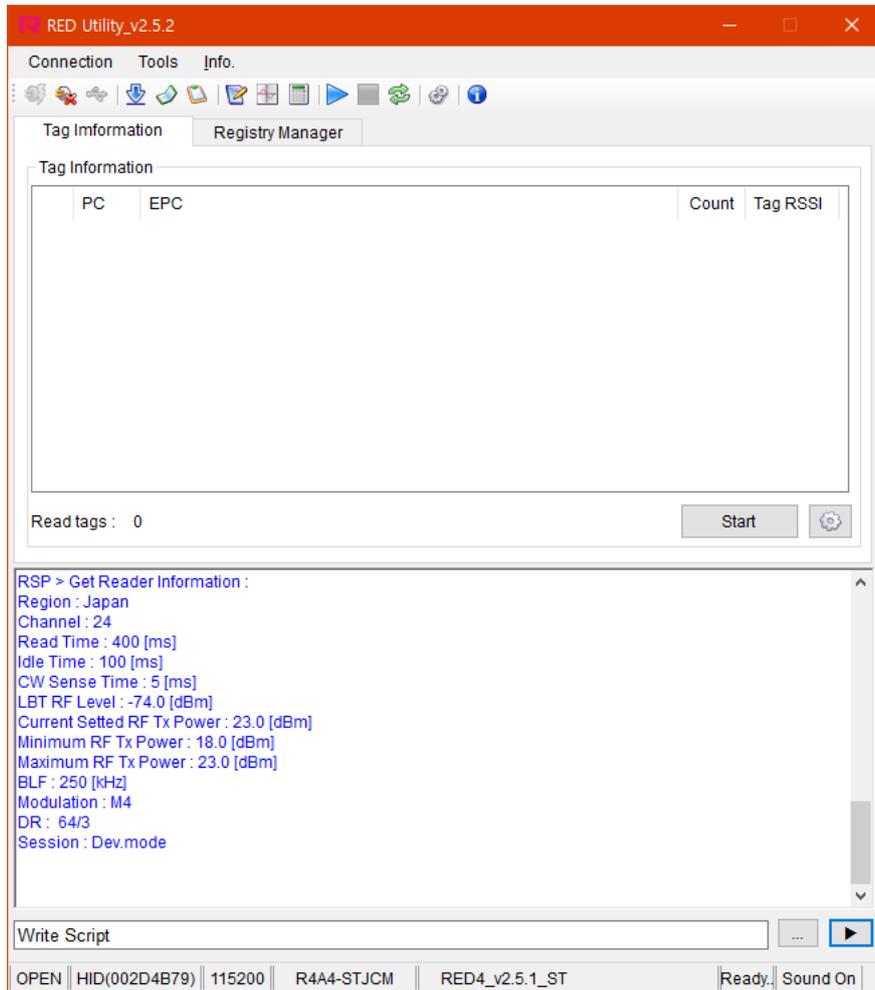


Figure 5 RED Utility_vX.X.X

2.4.1 Mode Change

RED Utility provides two view modes. User can select view mode depending on purpose of use between Basic View Mode and Extended View Mode.

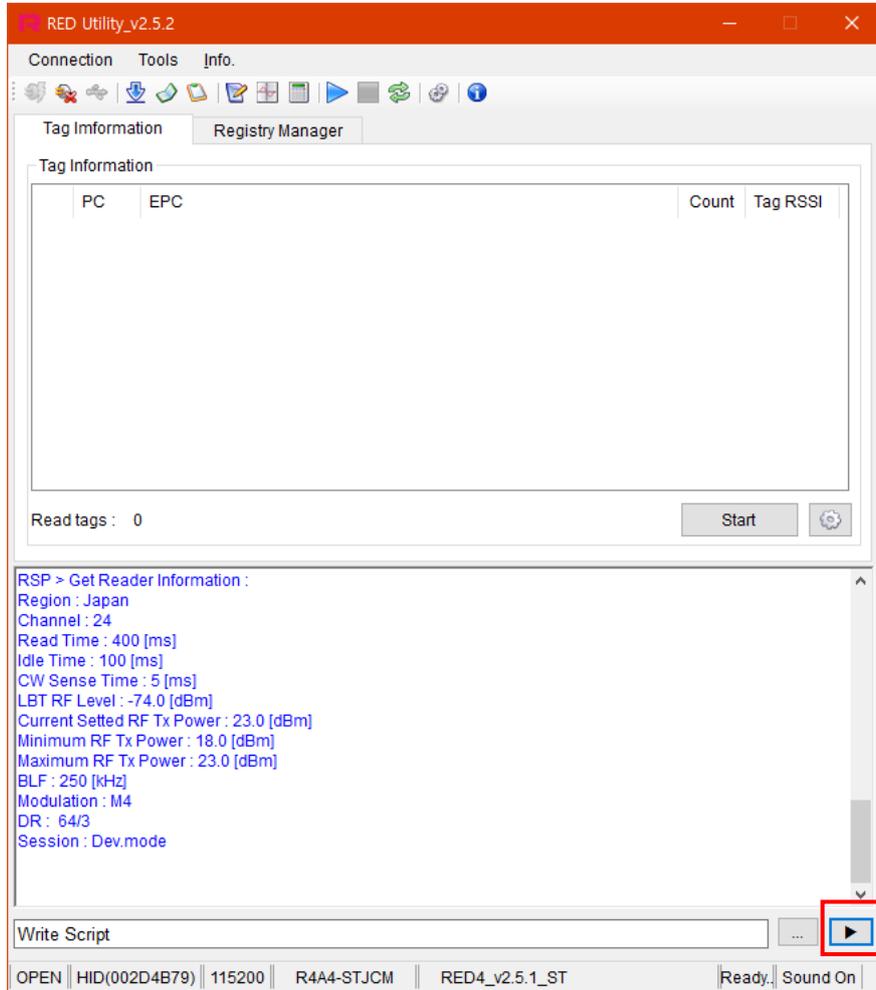


Figure 6 Basic View Mode

To change View Mode, click the extension button marked red in Figure 6 above.

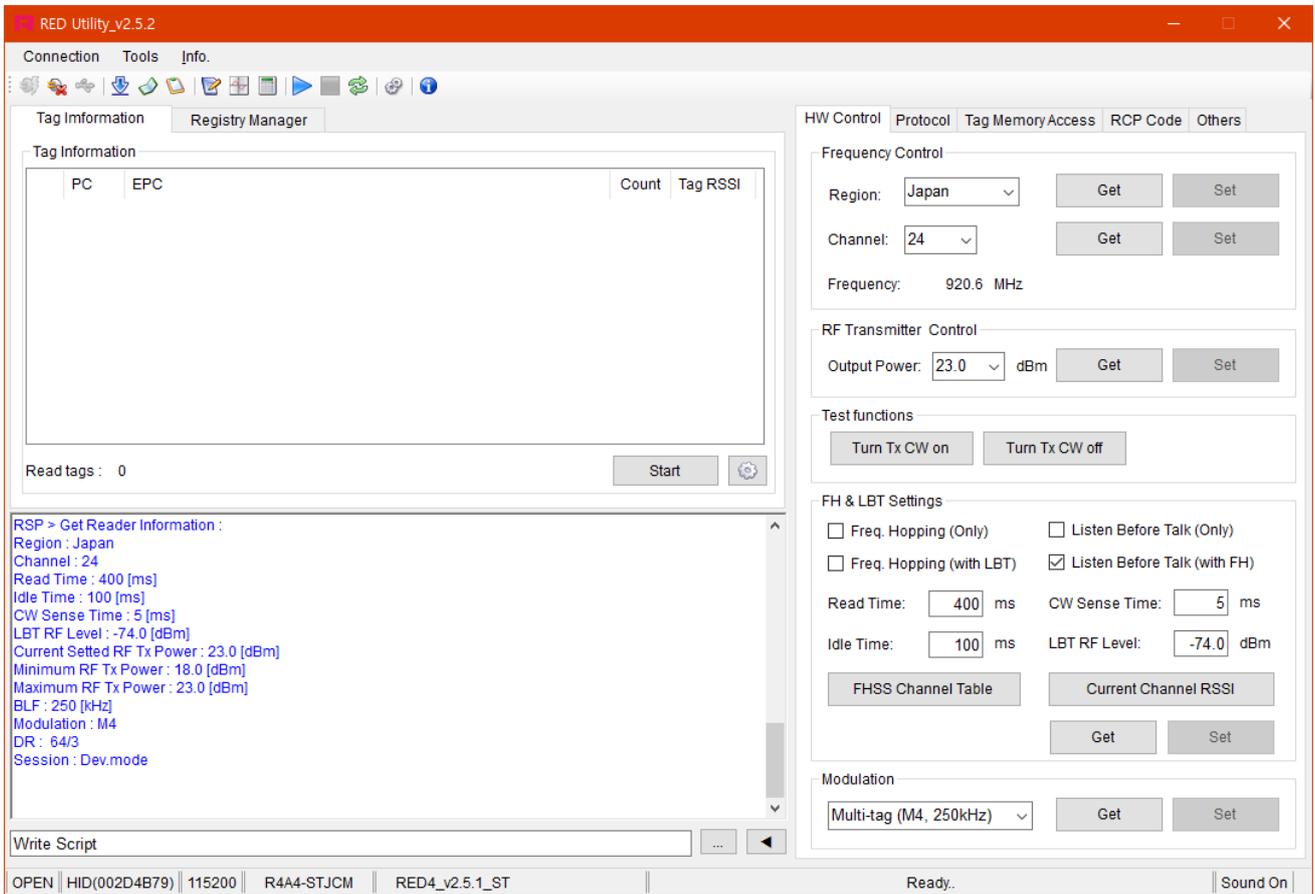


Figure 7 Extended View Mode

Always use Extended View Mode for measurement.

2.4.2 RED4 Connection

If hardware connection is valid, RED utility connect module REDx automatically.

If utility cannot connect hardware, please follow below step
 Click "Connection->Connect" to connect to REDx-DK through USB-to-UART at main window
 GUI will find the Device and synchronize parameters with REDx module automatically. If the GUI cannot find the device automatically, Click "Connection->Port Setting" and select other Device. Default Baud rate is 115200 bit/s.

Connection	Tools	Info.
Connect		Alt+C
Disconnect		Alt+D
Port Settings		Alt+P

If the Device connected successfully, status bar will display "OPEN" state and device number and so on.

OPEN || HID(002D4B79) || 115200 || R4A4-STJCM || RED4_v2.5.1_ST || Ready. || Sound On

2.4.3 Hardware Control

Click 'H/W Control Tab.' To control hardware.

2.4.3.1 Band(Region) Setting

To select operating band, band setting should be required. Select band in combo box and click Set button to set operating band in group box 'Frequency Control.'

Region:

2.4.3.2 Power Class Setting

Some countries classify channel number by power class. Click Get button and choose required power class. And then click Set button to set finally.

Channel:

2.4.3.3 Output Power setting

To set RED output power, select the Output Power combo box and click Set button.

RF Transmitter Control

Output Power: dBm

2.4.3.4 CW (Continuous Wave) setting

It is only used for hardware debugging.

To set CW on, click Turn Tx CW on button. To set CW off, click Tx CW off button.

Test functions

2.4.4 Tag Inventory Procedure

Click Start button in Tag Information Tab to read UHF RFID tag with RED Utility.



Click Start button and Tag's EPC information is displayed.



3 Specification

No.	Item	Unit	Test Condition	Specification			Remark
				min	Typ.	max	
1	Frequency Range	MHz		917.1		926.9	
2	Tx Power	dBm			25		
3	Spurious	dBm		US (FCC 15C)			
4	Impedance	Ω			50		RF I/O
5	DC Power	VCC36P	V	3.3	3.6	4.2	
		VCC36		3.3		3.6	
6	Operating Temperature	$^{\circ}\text{C}$		-20		70	
7	Operating Humidity	%		0		90	
8	Current	Power Down	uA	Active current is measured at 25dBm with 50ohm load			20
		Idle	mA				20
		Active				450	
9	Size	mm	24.0 * 24.0 * 3.0				
10	Weight	g	3				

- Device Name(Model Name) : RED4
- Certification No.:
- Name of Grantee: PHYCHIPS Inc.
- Production year, month, date:
- Manufacturer/Country:

FCC Information to User

This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

- (1) the device may not cause interference, and*
- (2) the device must accept any interference, including interference that may cause undesired operation of this device.*

Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.*
- Increase the separation between the equipment and receiver.*
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- Consult the dealer or an experienced radio/TV technical for help.*

End Product Labeling

The module is labeled with its own FCC. If the FCC ID is not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. In that case, the final end product must be labeled in a visible area with the following:

“Contains FCC ID: Y3D-RED4”

OEM Responsibilities to comply with FCC and Industry Canada Regulations

The module has been certified for integration into products only by OEM integrators under the following condition:

- The antenna(s) must be installed such that a minimum separation distance of at least 20 cm is maintained between the radiator (antenna) and all persons at all times.*
- The module is limited to installation in mobile or fixed applications.*
- The transmitter module must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.*
- Separate approval will be required for all other operating configurations, including portable configurations with respect to Part 2.1093 and different antenna configurations other than supplied antennas.*

As long as the two condition above is met, further transmitter testing will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed (for example, digital device emissions, PC peripheral requirements, etc.).

In the event that these conditions cannot be met, then the FCC authorizations are no longer considered valid and the FCC ID cannot be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product including this module and obtaining separate FCC authorizations.

- *This device is intended only for OEM integrators*
- *For OEM integration only – device cannot be sold to general public.*
- *Manual Information to the End User*
The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

This module has to install the input the 3.3V, cause there is no regulator in the device.

This device may only operate using an antenna of a type and maximum (or lesser) gain approved by Phychips. Antenna types not included in the list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this transmitter.

Note

	<i>Peak Gain</i>	<i>Part Name</i>
<i>ANT1</i>	<i>2.79 dBi</i>	<i>KSA – 921A6010B100B</i>
<i>ANT2</i>	<i>0.99 dBi</i>	<i>KSA – 921A4010B100B</i>
<i>ANT3</i>	<i>-0.34 dBi</i>	<i>KSA –SP921MS25P20P4B</i>