


# *Galaxy*

## Instruction Manual

Model No. Galaxy-Crown

---

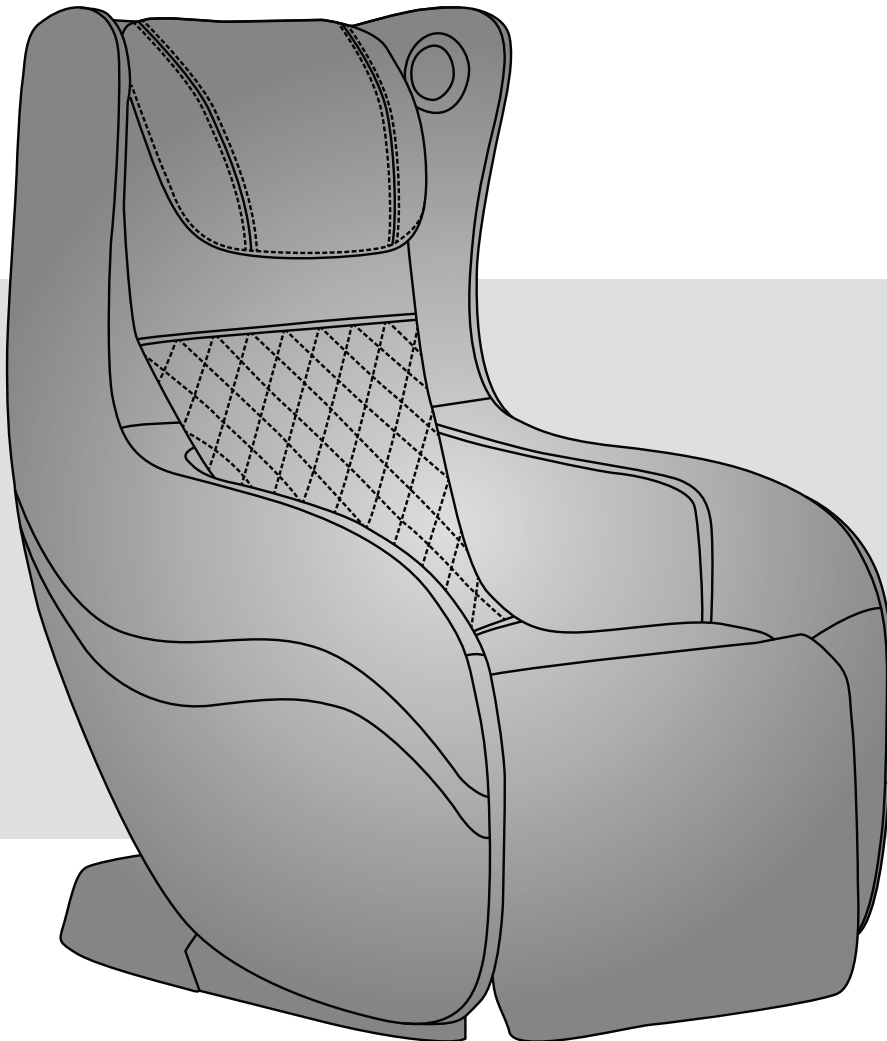

Before operating this unit, please read these instructions completely.

# Contents

---

## Before Use

---

Safety Precautions .....	1-3
• FCC Radiation Exposure Statement	3
Chair Components .....	4-5
• Bluetooth Speaker	4
Setting up the massage chair .....	6
Preparation before Use .....	7-9

## How to Use

---

Operation Instruction .....	10-11
After massage.....	12

## Q&A / Important

---

Cleaning and maintenance .....	13
Troubleshooting .....	14-15
Grounding Instructions.....	16
Specifications.....	17

Thank you for purchasing this Massage Chair.  
Before using your massage chair, please read the contents of this instruction manual and refer to it when needed.

# Safety Precautions

When using the massage chair, basic precautions should always be followed to reduce the risk of electric shock, burns, fire or injury to persons. Please read the following precautions before using the massage chair.

- Make sure the power plug is securely inserted into a proper electrical outlet to reduce the risk of short-circuit and fire.
- It is highly recommended that a surge protector is used to prevent from damage.
- DO NOT use the massage chair in areas where the humidity is high such as a sauna steam room, Pools, bathrooms, AC or heating vents, etc.
- DO NOT use the massage chair outdoors and avoid areas with direct sunlight.
- If the chair is not being used, turn the power switch to the OFF position and unplug the massage chair from the electrical outlet to prevent any damages to the chair when there are power outages/surges that may cause serious damage.
- Never plug/unplug the power cord plug socket with wet hands.
- Close and continuous supervision is necessary when the massage chair is used by, on or near children or disabled persons.
- No more than one person should use the massage chair at the same time.
- The massage chair is intended for use as described in the Instruction Manual. Do not use any attachments other than those recommended by the manufacturer.
- DO NOT attempt to stand or sit on the backrest, armrest or footrest in order to prevent accident, injury or damage to the chair.
- Avoid falling asleep while using the massage chair.
- Always keep the massage chair clean, and never insert any objects into or around the gaps of the massage chair.
- DO NOT move the massage chair by pulling on the power supply cord.
- Make sure there are no children, pets or other obstacles behind or underneath the massage chair.
- If you find any rips or tears in the fabric of the massage chair contact the service department and stop using the chair immediately.
- This massage chair is designed for household use and should not be used in non-residential settings.

- Please consult your doctor if you are in doubt as to whether or not you should use this massage chair.
- Please consult a doctor before using the massage chair if you are pregnant, undergoing any medical treatment, using a medical electronic device such as a pacemaker, or are experiencing any of the following: Malignant tumor, heart disease, back pain, abnormal or curved back bone, osteoporosis or acute illness.
- If you experience pain while using the massage chair, stop using the chair immediately and consult your doctor.
- Never use a massage function on swollen or inflamed parts of the body.
- DO NOT use the massage chair for more than 30 minutes at a time.
- DO NOT use the massage chair where aerosol(spray) products are being used or where oxygen is being administered.
- This massage chair is a non-professional product designed to provide a comfortable massage and should not be substituted for appropriate medical treatment.
- Never operate the appliance with the air hoses that inflate while they are blocked. Keep the air openings free of lint, hair, and any other obstructions.
- Check the skin in contact with the heated area of the appliance frequently to reduce the risk of injury. If the heating pad malfunctions and extreme heat is produced it may cause serious burns.
- Burns may result from improper use. If this is the case immediately shut off the chair and unplug from the outlet.
- Remove all sharp objects from the body and pockets such as keys and Pens.
- Keep children away from extended foot support (or other similar parts.)
- DO NOT WET-DO NOT USE PINS.
- NEVER REMOVE COVER.



**Caution**

The user's weight is usually limited to 220 lbs.

For a user heavier than 220lbs, the product may have bigger noise and its fabric housing may be worn quicker.

# FCC Radiation Exposure Statement

## FCC Radiation Exposure Statement: (mobile device)

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.


### FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

# Chair Components

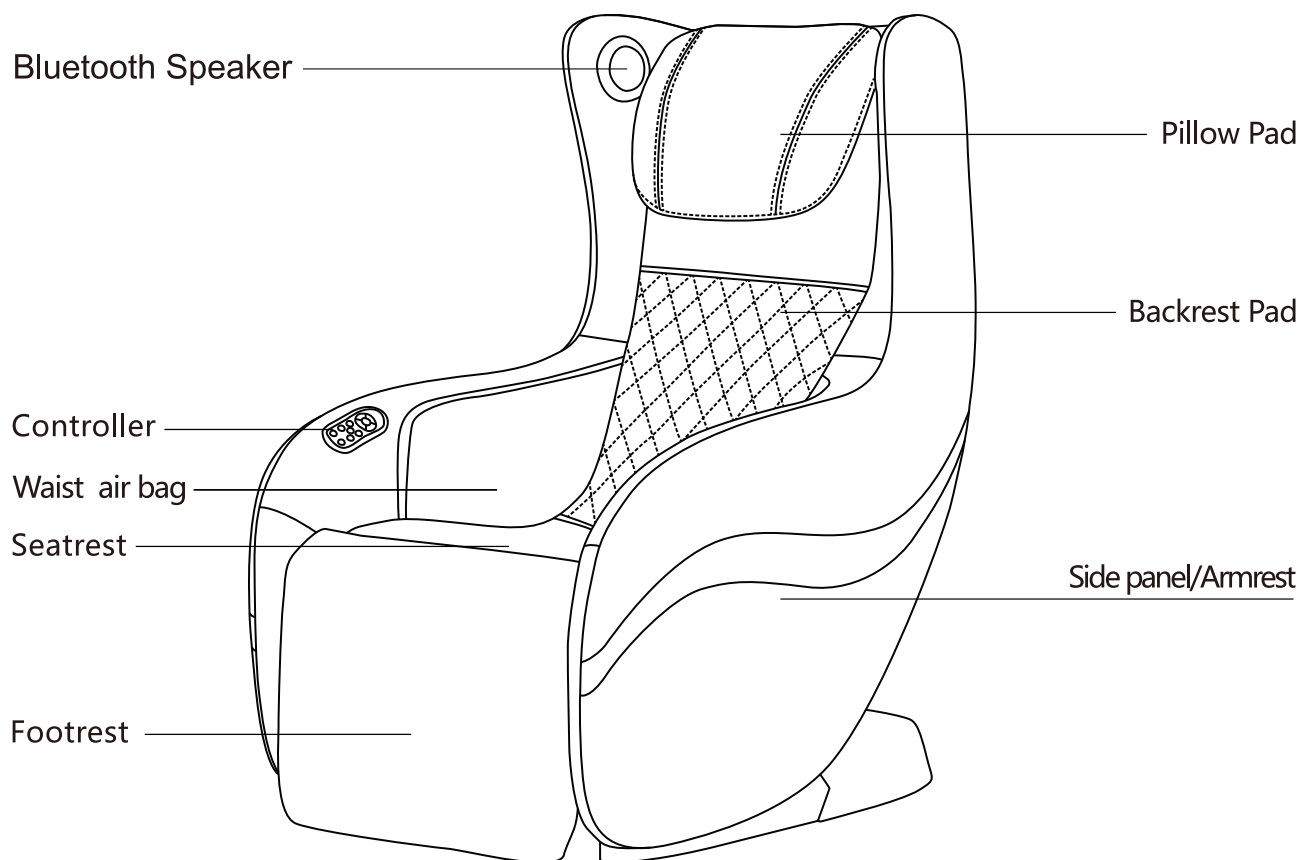


## Bluetooth Speaker

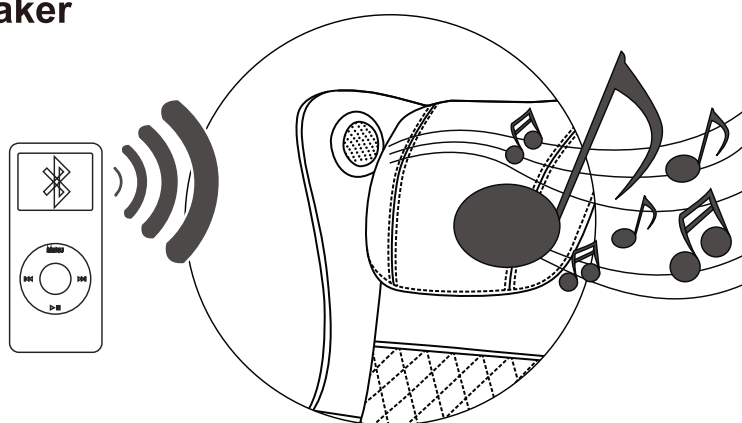

**NOTE:**

The bluetooth speaker can only connects with one bluetooth device at a time. Please turn off your bluetooth device after using so that other users can enjoy it as well. The bluetooth name label is on the right side of power switch on the electric control box.


## Air Bags Massage Position

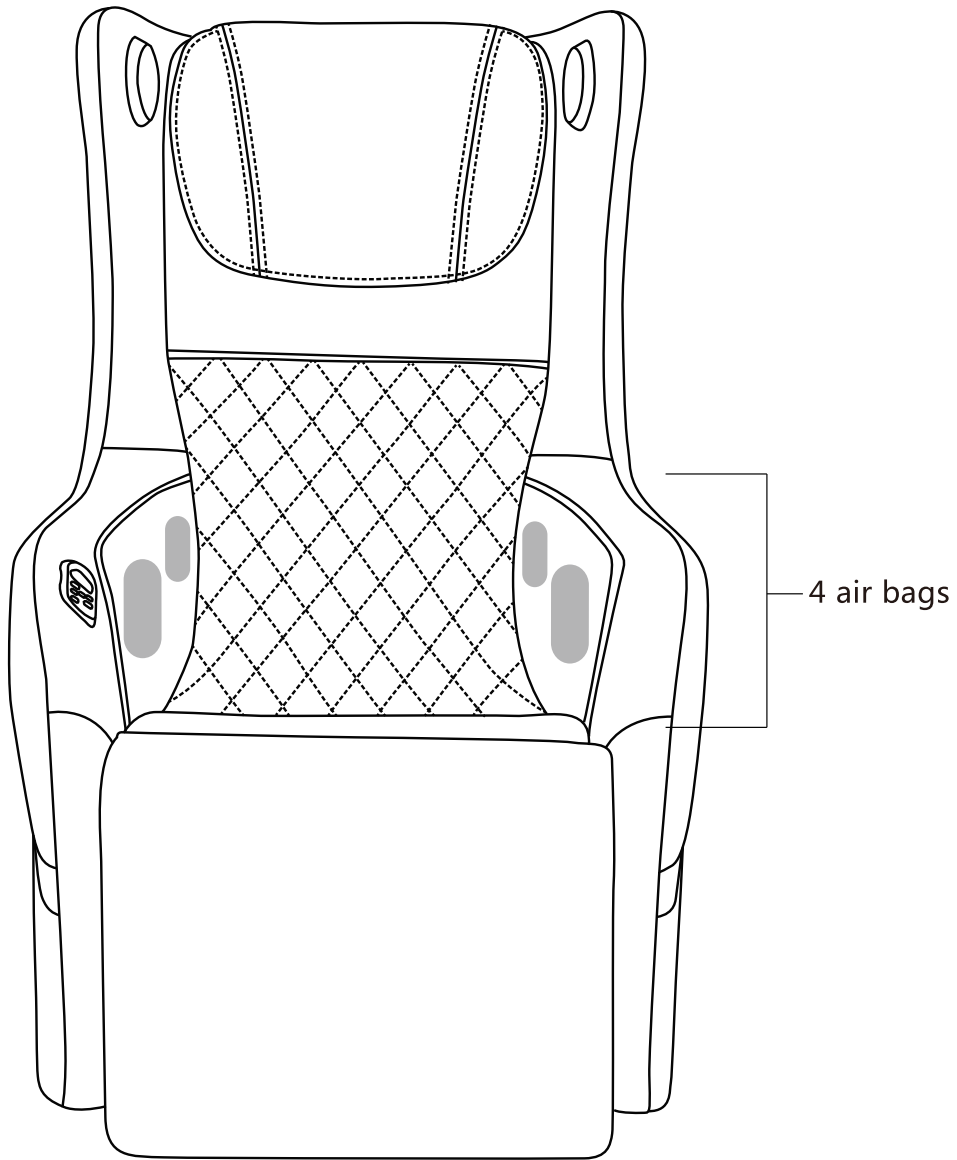

# Setting up the massage chair

## 1 Before use (installation position)


- Make sure there is enough space for the tilting of the product.

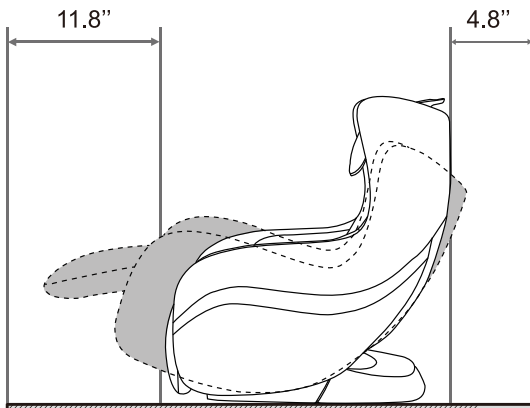

- Do not expose the product to direct sunlight or a high-temperature place (e.g., in front of heating equipment); otherwise its synthetic leather may fade or harden.
- Place a mat below the product to avoid floor damage. The mat should cover the product's area in contact with the floor and the footrest's area in contact with the floor (minimum dimensions: 60"X32" ). See the figure.
- Install the product close to a power socket.

## 2 Chair Moving Instruction

Recline the chair to easily move the chair around the house.

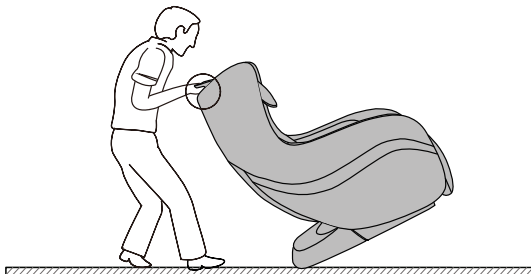

- The product is heavy and be careful when moving.

Product weight	Approx. 102lbs
----------------	----------------

Put the product on the floor.

- ※Caution
- Before moving the chair, please put the footrest back into the original position. Otherwise, injuries might occur in the process of moving.
  - Avoid moving the massage chair when there is someone seated on it.
  - Placing a mat underneath the massage chair is advisable, as the moving process might leave scratches on the floor surface.

- Put down the product slowly and carefully to avoid foot injury.
- Do not release the footrest until the product is placed horizontally. Otherwise the footrest will rebound to its original position.
- It is suggested to pave an article such as a mat on the floor to keep it from damage.

### ⚠ Caution


- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>● Do not drag or pull the product after it is installed.</li> <li>● When handling the product, do not hold its frame. Otherwise product faults or personal injuries may happen.</li> <li>● Do not move the product by pulleys directly on a floor. Otherwise marks may be left on the floor.</li> </ul> | <ul style="list-style-type: none"> <li>● Do not move the product while there is a person on it. Otherwise, accidents or injuries may happen due to falling down.</li> <li>● Do not hold the foot massage section when moving the product. Otherwise injuries may happen due to sliding.</li> </ul> |
|--|--|



# Preparation before Use


## 1 Check the space around the product.

Make sure there is no person, pet or other object close to the product.

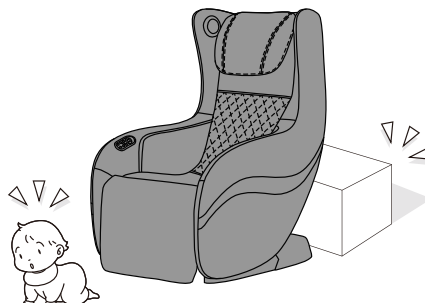

## 2 Roll up the back cushion and fix it by the zipper.

Roll up the back cushion and fix it on the main body by the zipper.

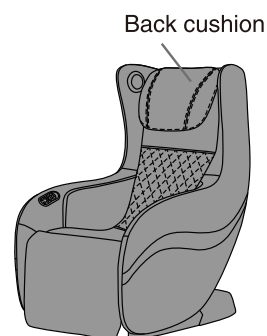


## 3 Make sure there is no foreign matter in the seams of the product.

When checking the Lower Leg/Foot massage section, press the footrest forward by your hands and make sure there is no foreign matter in the seam.

### Caution


- Do not put hands, fingers, feet or head into the seam(s) between the footrest and the seat surface or the armrests.
- Before sitting on the product, make sure there is no foreign matter between any two parts of it.
- Do not put pets on the product (such as its back cover, backrest).

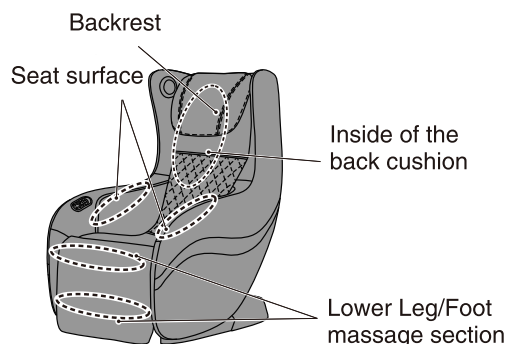

## 4 Inspect the power line and power plug


### Warning

- **Remove such dirt as dust on the power plug at regular intervals.**  
Otherwise fires caused by poor insulation due to factors such as moisture may happen. (Wipe the power plug with dry cloth.)
- **Do not damage the power line or the power plug. Do not damage, machine, forcibly bend, twist or lengthen the power line or the power plug, or place the power line or the power plug close to a heater, or tie or bind any heavy objects on the power line or the power plug.**  
A damaged power line or power plug may result in electric shocks, short circuits, or fires.  
Please consult the shop you bought the product or an authorized service center about maintenance method of the power line or the power plug.

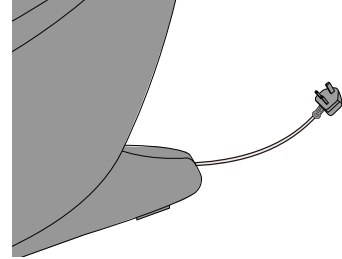


Do not be entangled by the power line.

**Push the interface into the power input jack till the end.**

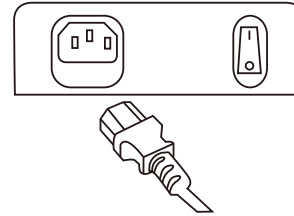


## 5 Power on the product

- 1 **Insert the power plug into the power socket.**
- 2 **Pull the power switch to the “I” position.**

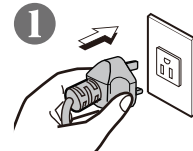


### Warning

- **Insert the power plug into the power socket till the end.**  
Otherwise electric shocks or fires because of overheat may happen.
- **Abide by the regulations on use of the socket and the wiring devices strictly.**
- **Use a 110-120V , 50/60Hz power supply. (Do not use the product in a foreign country or connect it with a transformer without permission.)**  
Otherwise electric shocks, product faults or fires because of overeat may happen.
- **Do not insert or pull out the power plug with wet hands.**  
Otherwise an electric shock may happen.

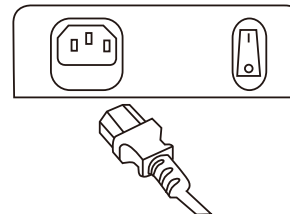


## 6 Make sure the massage wheels are retracted

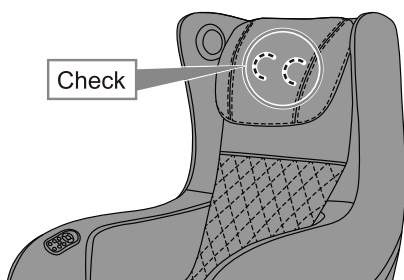

**If they are not,**  
press ON return them to the  
retracting position.

## 7 Make sure the fabric is not damaged nor cracked

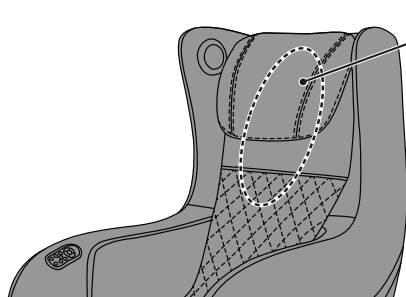


Inspected area:  
The fabric of traveling sections of the massage  
wheels on the backrest

### **Warning**

- **Before use, check whether fabrics of the area pointed out in the figure are damaged. (Even if the fabric is slightly damaged, stop the product immediately, pull out the power plug and send the product to repair.)**  
If the product is used when there is fabric damage, you may get injured or get an electric shock.

# Operation Instruction

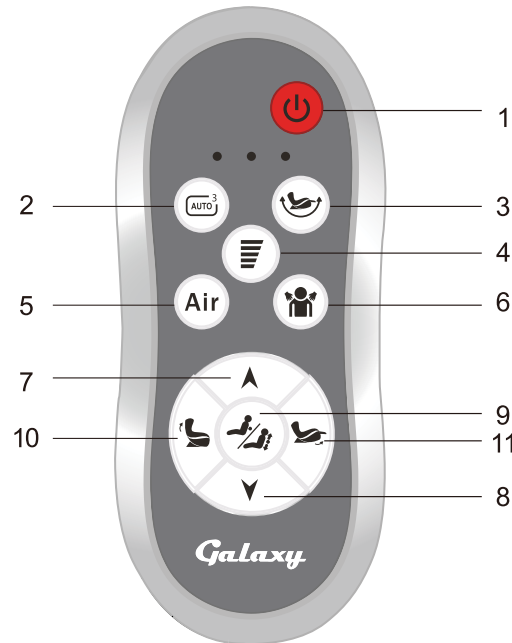

**Note:** The default time for all massage functions is minutes.  
The chair will be off after 15 min's use.

## 1 . ON / OFF

Turn on the power, and press the power switch on the bottom of the massage chair frame to "I" position, Massage chair in a reset state. At this point the massage chair into the standby mode. In Standby mode only backrest incline / recline and ON / OFF can be operate. Massage are not available . When the product is in ready mode, press any key to start massage function and activates the timer function.

## 2 . Auto Program

When the chair is operating, short press this button to start the Auto mode and the indicator will be lit. Every time this button is pressed, the auto program will change in sequence Full Body > Neck n' Shoulder > Shape n' Tone. After any auto program had been selected, the chair will first perform a shoulder height detection to provide a excellent massage journey. User can do their own tuning if needed.

1st LED turn ON = 1st Program; 2nd LED turn ON = 2nd program; 3rd LED turn ON = 3rd program.

## 3 . Zero Gravity & Cradle

When the chair is operating , press this button once to start Zero Gravity mode. The chair will recline into a Zero Gravity position. Press this button again to activate the Cradle function. The chair will swing like a cradle. Press the third time to turn off the functions.

## 4. Speed, Strength, Air Pressure Intensity ( \* Width )

When the chair is operating, short press this button to start increase the speed, strength and air pressure intensity. Every time this button is pressed, the level will change from LV1 > LV2 > LV3 in cycle

\* When the chair is operating in manual mode, long press 2 second to adjust the massage roller width. Every time long pressed this button the width level will change from narrow > medium > width in a cycle

## 5. Air Bag

When the chair is operating, short press this button to start air bag massage. Press again to shut off the function.

## 6. Manual massage

Kneading, Swedish, Tapping, Shiatsu, Clapping, Rolling.

When the chair is operating, short press this button to start kneading massage function for a full back. Every time this button is pressed, the manual massage function will change in sequence of kneading > swedish > tapping > shiatsu > clapping > rolling > stop in a cycle.

## 7/8. Upward / Downward

When the manual or automatic scan can not meet the personal requirements, press the up / down button, the massage wheel will be up or down according to your needs, release the key to the appropriate position, you can lock the upper limit of the massage trip to To achieve the purpose of fine-tuning.

Remark: During spot / partial, these two buttons can use to adjust the massage position

## 9 . Spot / Partial

Spot or localised back massage

This button allow user to select spot massage for any part on the back. Press this button once to activate spot massage. Press again to switch to partial function.

Partial Back Massage


This button allow user to select partial massage for any part on the back. Press this button once to activate partial massage. Partial massage will take the latest position as the centre to perform partial massage with distance of approximate 8 cm. Press again to switch to turn off the function.

## 10/11. Backrest Incline / Recline


When the chair is operating, press this button to adjust backrest angle. The footrest angle will be adjust in parallel during backrest incline / recline.

# After massage

## Power off the product.

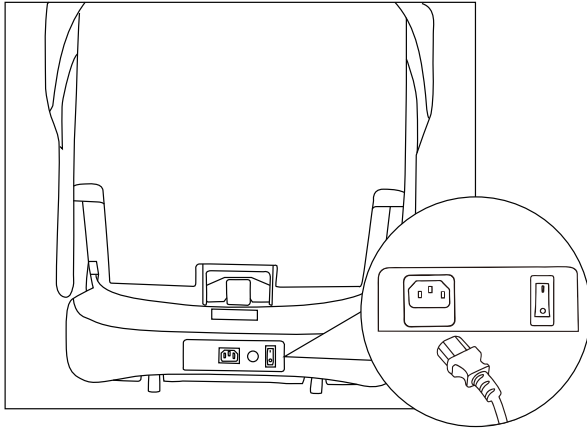

- ① Turn off the power switch.
- ② Pull out the power plug.

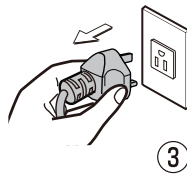

### **Warning**

- **After use each time, pull the power switch to the O position and pull out the power plug;** otherwise accidents and injuries by playing with them by children may happen.

### Timer function

#### Massage will end automatically when time is up.


- The Lower Leg/Foot massage section will remain at the final position.
- The massage wheels will move to the retracting positions.
- The backrest will not raise automatically. If controller was shut off, press ON/OFF button, the backrest and footrest will back to origin.

# Cleaning and maintenance

## Cleaning of the synthetic leather

**Wipe the synthetic leather with a soft dry cloth.**

- Do not clean the product with chemicals such as thinners, gasoline and alcohol.
- When using a leather maintenance product (cleaning cloth) sold on the market, follow its directions for use.
- If the synthetic leather is very dirty, wipe it with the method below.
  - ① Put a piece of soft cloth into water or 3% to 5% neutral detergent contained hot water and wring it out.
  - ② Wipe surface of the synthetic leather with the soft cloth.
  - ③ Wipe the detergent with a piece of cloth once soaked in clean water and wrung out.
  - ④ Wipe with a piece of wrung soft cloth.
  - ⑤ Have the synthetic leather take natural air drying.
- If it is difficult to remove the stains on the synthetic leather, soak a piece of melamine foam bought from the market into a neutral detergent and use it wipe the product.
- Do not dry the surface by a hair drier.
- Surface of the synthetic leather may be dyed by fabric colors; therefore, be careful when wiping the product with denim or colored cloth.
- Keep these positions from long-time contact with plastics to avoid fading.
- Synthetic leather may discolor, so the position in contact with the hair dye used should be covered by a towel.

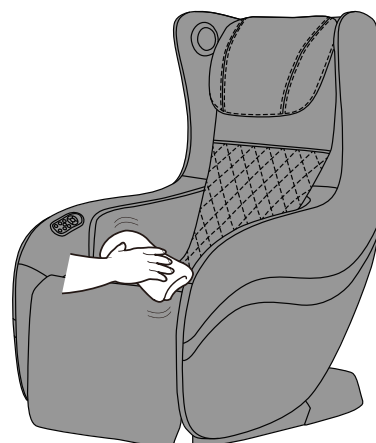

## Cleaning of the plastic parts


**1 Put a piece of soft cloth into water or neutral detergent contained hot water, wring it out and wipe the plastic parts.**

- Do not clean the product with chemicals such as thinners, gasoline and alcohol.

**2 Wipe with a piece of cloth once soaked in clean water and wrung out.**

- Wring the cloth out before using it to wipe the remote controller.

**3 Have the plastic parts take natural air drying.**

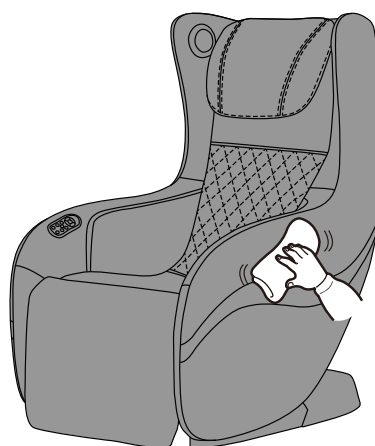

# Troubleshooting

**After a fault happens, inspect and try the corresponding method below.**

If the fault still exists after that, contact the shop from which you bought the product.

Fault	Cause and elimination method
<p><b>The massage wheels stop during use</b> (The product beeps and all icons and buttons on the remote controller flicker and then go out.)</p>	<p><b><u>For safety, the massage wheels will possibly stop upon a too large external force during use.</u></b> If all marks and buttons on the remote controller begin to flicker, it suggests an extreme abnormality. In this case, turn off the power switch and turn it on about 10 seconds later. If the massage wheels stop again, adjust your sitting posture and do not lean on the backrest completely. (Users, particularly those heavier than 220lbs, should follow relevant precautions.)</p>
<p><b>The product cannot tilt, or the footrest cannot be raised or lowered</b> (The product beeps, the running light on the remote controller goes out and the product stops)</p>	<p><b><u>For safety, the product will stop upon an obstruction or a too large force.</u></b> If all contents and buttons are flickering and the backrest or the footrest has stopped, turn off the power supply and turn it on about 10 seconds later and then operate the product.</p>
<p><b>The massage wheels cannot reach the shoulders or the neck</b></p>	<p>If the head is not in contact with the headrest, or the back is not in contact with the backrest, the shoulder position in body type detection will possibly be lower than the actual position. Sit in the deepest position of the product, lean your head on the headrest and operate from the beginning again.</p>
<p><b>The left and right massage wheels have different heights (intensities)</b></p>	<p>It is not a fault but a normal phenomenon because the product is provided with a massage core allowing alternate beats of the massage wheels.</p>
<p><b>The product cannot run at all.</b></p> <ul style="list-style-type: none"> <li>● Upper body (the neck to the waist) massage</li> <li>● Lower leg/foot massage</li> </ul>	<ul style="list-style-type: none"> <li>● The power line is disconnected.</li> <li>● The power switch is not turned on.</li> <li>● No program is selected after ON button on the remote controller is pressed.</li> </ul>
<p><b>The product is damaged.</b></p>	<p>To avoid accidents, contact an authorized service center.</p>
<p><b>The power line or the power plug has abnormal heating.</b></p>	




## The sounds and feelings you care about in use of the product

**You will hear or have the following sounds or feelings when using the product. It is not abnormal phenomena but results of the product structure.**

- Sound when the stretching massages are retracted
- Sound and feeling when the massage wheels rub patterns on the fabric
- Sound of movements such as kneading and beat
- Friction sound of the running massage wheels
- Sound of up-down movement
- Sound of the conveyor belt
- Motor sound
- Sound of the squeezing massage wheels when they begin to stretch
- Sound when a person is sitting on the seat
- Friction sound between the armrests and the back cushion when the backrest is tilting
- Friction sound between the massage wheels and the fabric
- Sound of the inflator pump during Air Bag massage
- Sound of air exhaust during Air Bag massage
- Running sound of the solenoid valve at bottom of the product during Air Bag massage.
- Swing of the footrest
- Sound when the shoulders are stretched or moved
- Running sound of the air bags
- Sliding sound of the foot massage section
- Friction sound between the back cushion and the back cover leather when the backrest is tilting

**If the sound is loud, it is also possible that the product has failed.**

- In this case, have the product inspected and repaired by an authorized service center.

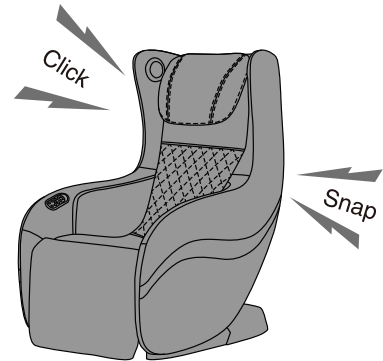

### **Warning**

- **Do not refit, disassemble or repair the product without permission.** Otherwise fires, abnormal movements or personal injuries may happen.


### **Warning**

- **In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid fuming, fires and electric shocks.**
  - < Abnormality and fault examples >
  - The product fails to work after the power switch is turned to the ON position;
  - After the power line is moved, the product is discontinuously powered on;
  - In use, the product gives off a burning smell or an abnormal sound;
  - The product is deformed or abnormally heating
    - In any of these abnormalities and faults, have the product inspected and repaired by an authorized service center immediately.

# Grounding Instructions

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord with an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Danger-Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service technician if the product will not fit the outlet, have a proper outlet installed by a qualified electrician. This product is for use on a nominal 120V circuit and has grounding plug that looks like that plug illustrated below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

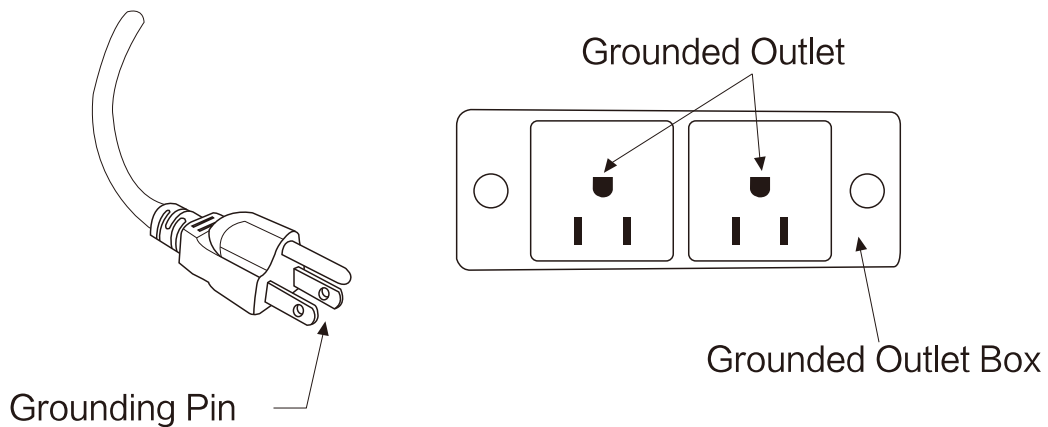

# Specifications

Description	Specifications
Power supply	110~120V, 50/60Hz
Power consumption	50W
Default timer	15min
Dimensions(L x W x H)	Upright: Approx. 36.8"x25.6"x41.4"
	Recline: Approx. 56.3"x25.6"x34.7"
Weight	Approx. 102lbs
Package dimensions(L x W x H)	Approx. 38.2"x26.8"x44.1"
Usage condition	Environment temperature: 0°-35°
	Contrasting humidity: 20-80RH
Storage condition	Environment temperature: -5°-35°
	Contrasting humidity: 20-80RH
Maximum body weight of user	220lbs

