



18061 Arenth Avenue
City of Industry, CA 91748
888-588-2567
www.valormultimedia.com



Note:

- 1) Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- 2) Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 3) This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

SD-904W

OWNER'S MANUAL

Contents

Thank you for purchasing a Valor Multimedia product. We hope you will find the instructions in this user manual clear and easy to follow. If you take a few minutes to look through this user manual, you will have a better understanding of how to use all of the features of your infotainment system which will allow you to have a maximum enjoyment. After grasping your infotainment system features operation knowledge, please keep this manual in a safe place for future reference.

Precautions	1
On Safety	1
Display Brightness	1
DISC Care	1
Playable Discs	2
DVD Region Management	2
Preparations	3
Features	3
Tools and Supplies	3
Warning	3
Disconnecting the Battery	4
Controls and Indicators	5
Button Operation	5
Key Areas for the Touch Screen	6
Remote Control	7
Remote Control Functions	7
TFT Monitor Operation	9
Rear Camera Mode	9
Screen Adjustment	9
Screen Adjustment Procedures	9
Parking Brake	9
Operating Instructions	10
Password Setting	10
Power On/Off	10
Source Selection	10
Volume Adjustment	10
Equalizer Setting	10
System Reset	10
Mute	11
Standby	11
Setup Menu	12
Main Menu	12
Screen Setting	12
Date Setting	14
Time Setting	14
Clock Mode Setting	14
DVD Setting	15
System Setting	15
Steering Wheel Control Setting	16
Basic Settings	17
Other Settings	18
Tuner (AM/FM) Operation	20
Tuner Display	20
Switch to Radio/Tuner Source	20
Select AM/FM Band	20
Auto Tuning	20
Manual Tuning	20

Using Preset Stations.....	20
Saving a Station.....	20
Select a Station.....	20
Auto Store (AS)	21
Program Scan (PS)	21
DX and LOC Stations Signals.....	21
DVD Player Operation.....	22
Insert/Eject Disc.....	22
Reset the Loading Mechanism.....	22
Accessing DVD Source.....	22
Using the Touch-Screen Controls.....	22
Controlling Playback.....	23
Accessing the DVD Menu.....	23
Moving Through Chapters.....	23
Fast Forward/Fast Reverse.....	23
GOTO Search.....	23
Direct Chapter / Track Selection.....	24
Viewing an Alternate Picture Angle (DVD Only)	24
Zooming.....	24
Multi-Language Discs (DVD Only)	24
Playback Information.....	25
General Disc Information.....	26
CD/MP3/WMA/JPEG Operation.....	27
DISC User Interface.....	27
MP3/WMA Disc.....	27
JPEG Disc.....	28
FLASH DRIVE Operation.....	29
Accessing Flash Source.....	29
Flash Drive Instructions.....	29
Card Operation.....	30
Accessing CARD Source.....	30
CARD Instructions.....	30
Bluetooth Operation.....	31
Before Using the Bluetooth.....	31
Bluetooth Indicator.....	31
Accessing Bluetooth Source.....	31
Bluetooth User Interface.....	31
Bluetooth Setup.....	32
A2DP.....	32
Pairing.....	32
Auto Connect.....	32
Making a Phone Call.....	33
Answering an Incoming Call.....	33
End a Call.....	33
Troubleshooting.....	34
Specifications.....	38
Accessory List.....	40

NOTE: 1. Certain descriptions in this user manual may differ from the actual unit.
2. Some pictures or icons in this user manual may differ from actual display.
3. Specifications subject to change without notice.

Precautions

To avoid the risk of injury or accident, read the following precautions before installing and operating the unit.

On Safety

Comply with your local traffic rules and regulations.

- While driving
 - ☞ You must not watch or operate the monitor. It may distract you and cause an accident. Park your car in a safe place to watch and operate the unit.
- While operating
 - ☞ Do not insert your fingers or foreign object into the unit's loader while a CD/DVD is playing. It may cause injury or damage to the unit. Keep small articles out of the reach of children.
 - ☞ Keep small articles out of the reach of children.
- If your car was parked in direct sunlight this can result in a high increase in temperature inside the car, please allow the unit to cool down before operating it.

Preventing Accidents

The video appears only after you park the car and set the parking brake.

When the car is in motion, the video will automatically prompt a "Caution" screen for your safety.

CAUTION!!!
IT'S UNLAWFUL TO OPERATE A VEHICLE WHILE VIDEO IS DISPLAYED IN THE
DRIVERS VIEWING AREA.
ENGAGE EMERGENCY BRAKE TO ENJOY VIDEO

Do not watch the monitor while driving. You may cause a traffic accident if your attention is distracted by the monitor.

- Do not use the System Setup feature while driving, or perform any other function which could divert your attention from the road.
- When using the reverse back-up camera:
 - ☞ When you drive, watch the surroundings carefully for your safety. Do not entirely depend on the back-up camera.
- When backing up your car, be sure to look back for your safety.

Damage Screen

- Do not touch the liquid crystal fluid if the LCD is damaged or broken. The liquid crystal fluid may be hazardous to your health or fatal. If the liquid crystal fluid from the LCD contacts your body or clothing, wash it off with soap immediately.

Display Brightness

When the temperature of the unit falls (as in winter), the liquid crystal inside the screen will become darker than usual. Normal brightness will return after using the monitor for a while.

DISC Care

Be careful not to splash juice or other soft drinks onto the unit or the discs.
Make sure that the discs are clean and free of dust.

Playable Discs

The following types of discs/files are compatible:

- CD-ROM (ISO), CD-R, CD-RW, DVD+R/RW, DVD-R/RW
- CD-DA, DVD Video
- MP3 data
- WMA data
- JPEG images
- AVI format
- MPEG formats

The following types of discs/files are not compatible:

- WMA files that are protected by DRM (Digital Rights Management)
- WMA lossless format
- Discs recorded with Track At Once or packet writing
- MP3 PRO format
- MP3 playlists
- WAV format

Some recordable DVDs and CDs may be incompatible with this unit, depending on media type and recording method.

DVD Region Management

Some DVD discs can be played only in certain playback modes according to the intentions of the software. As the unit plays discs according to their intentions, some functions may not work as intended. Please be sure to read the instructions provided with each disc. This player has been designed to play back DVD software that has been encoded for specific region areas. It cannot play back DVD software encoded for other region areas than the region areas for which it has been designed.

The unit will play discs labeled "All".

DVD region codes:

- 1 - USA, Canada
- 2 - Japan, Europe, South Africa, Middle East
- 3 - Rep. of Korea, Taiwan, Hong Kong, Parts of Southeast Asia
- 4 - Australia, New Zealand, Mexico, South America
- 5 - Eastern Europe, Russia, India, Africa
- 6 - China



Preparations

Please read all of the instructions below before beginning your installation. We recommend that you have your unit installed by an experienced car audio installer.

IMPORTANT NOTICE: It is very important that you read the **WARNINGS** and **NOTES** in this manual to ensure correct installation and use of your unit.

Features

- 7" Digital TFT Display
- DVD/DVD-R/DVD-RW/VCD/CD/CD-R/CD-RW Compatible
- Touch-screen Control with Dynamic Graphic User Interface
- Built-in 45W X 4 outputs amplifier, 4.1 channels surround sound output
- Bluetooth with A2DP, phonebook & Hands-free
- AM/FM Tuner with 48 Memory Presets
- SD Card Slot on Front Panel
- Rear USB Port on Front Panel (2.0 High Speed)
- Front and Rear Auxiliary
- Back-up Camera Input
- Steering Wheel Control Module Integrated (Analog)

Tools and Supplies

We suggest using these tools and supplies to install the unit.

- Torx type, flat-head and Philips screwdrivers
- Wire cutters and strippers
- Tools to remove existing radio (screwdriver, socket wrench set or other tools)
- Electrical tape
- Crimping tool
- Crimp connections
- Volt meter/test light
- 18 gauge wire for power connections
- 16 – 18 gauge speaker wire
- Heat shrinks tubing
- Soldering iron and solder

Warning

1. Only connect the unit to a 12-volt negative ground system.
2. Never install this unit where operation and viewing could interfere with safe driving conditions.
3. To reduce the risk of a traffic accident (except when using the backup camera feature) never use the video display function while driving the vehicle. This may be a violation of local laws.
4. Never disassemble or adjust the unit without the assistance of a professional. For details, please consult your local car stereo/specialty shop.
5. To prevent injury from shock or fire, never expose this unit to moisture or water.
6. Never use irregular discs, the only recommended disc size is a 12cm round disc.
7. To prevent damage to the mechanism inside this unit, avoid dropping the unit.
8. To ensure the touch screen is functioning properly please avoid hard impact to the TFT monitor.
9. Do not change the fuse on the power wire without professional guidance. Using an improper fuse may cause damage to the unit and result in a fire.

Disconnecting the Battery

To prevent a short circuit, turn off the ignition and remove the negative (-) battery cable prior to start the installation.

NOTE: If the unit is to be installed in a car equipped with an on-board drive or navigation computer, do not disconnect the battery cable. If the cable is disconnected, the computer memory may be lost. Under these conditions, use extra caution during installation to avoid causing a short circuit.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Controls and Indicators


Button Operation



- ① **Flip down touch screen**
- ② **Eject**
Press to eject disc.
- ③ **Bluetooth Microphone**
- ④ **Menu**
Press to enter **MAIN** menu, press again to return to previous source.
- ⑤ **Power off/VOL**
Press and hold to turn off the unit.
Press once to power on when the unit is turned off.
Short press while unit is on to mute the volume.
Rotate to adjust the volume.
- ⑥ **Source**
Press to change the source.
- ⑦ **Disc slot**
- ⑧ **Small LCD screen**
- ⑨ **SD card slot**
- ⑩ **Front aux-in jack**
- ⑪ **Previous**
- ⑫ **Play/Pause**
- ⑬ **Next**
- ⑭ **Angle adjustment**
- ⑮ **Remote Sensor**
- ⑯ **Reset**

Key Areas for the Touch Screen


The key areas are outlined below, for DVD, VCD playback mode and so forth.

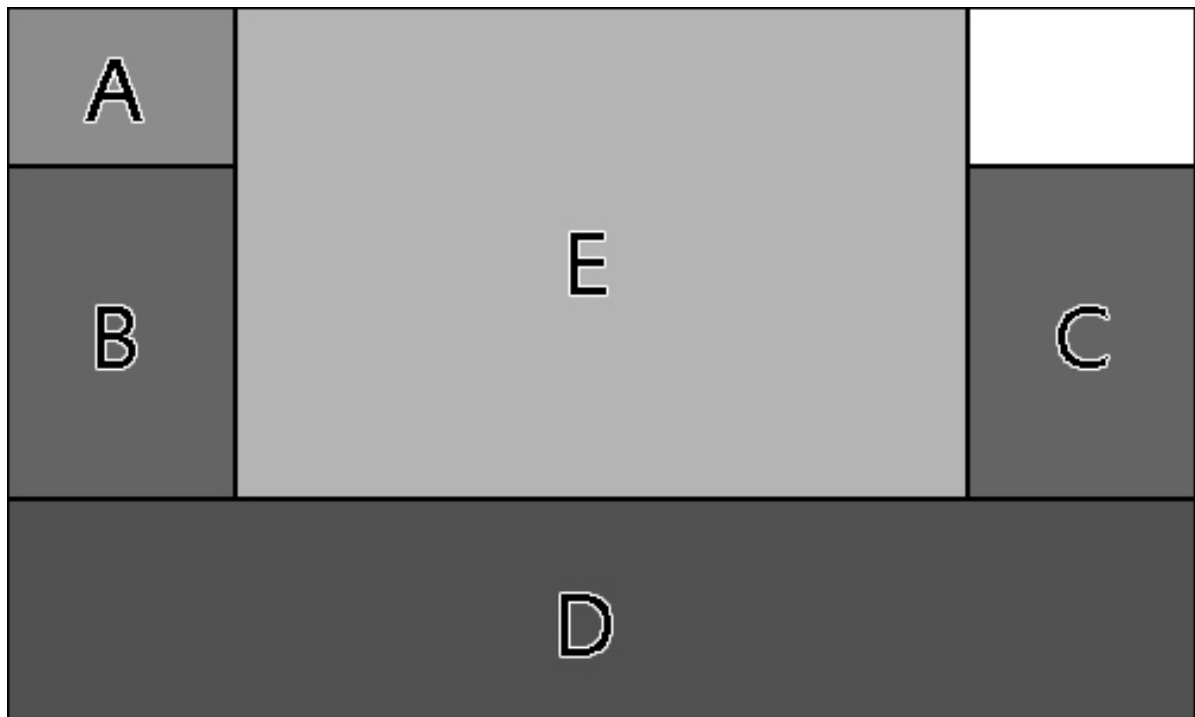






- A — Return to main menu
- B — Select previous chapter
- C — Select next chapter
- D — Display the on-screen controls, and different mode displays different menu.
- E — Display playing information

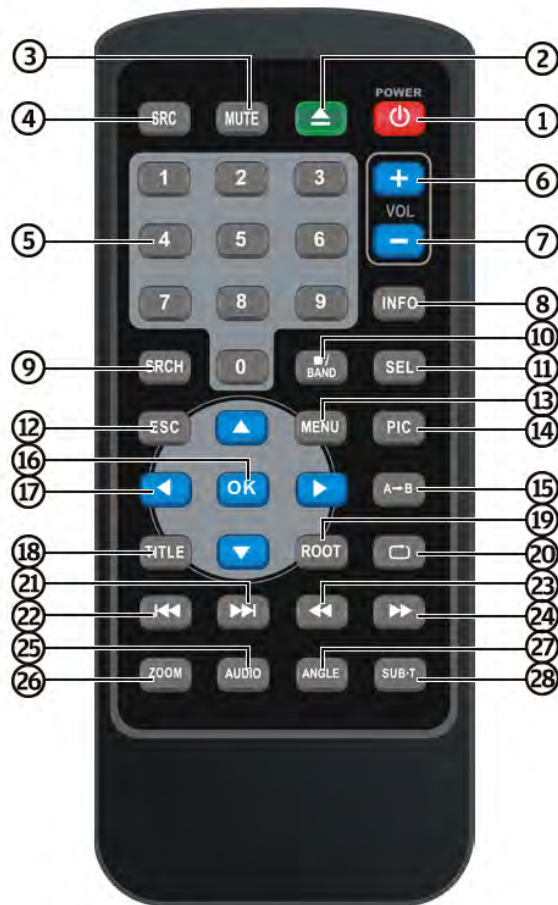Remote Control

Remote Control Functions



Name	Ref #	Signal	Function
Power	1		Turn the power on/off
Open	2		Eject Disc
Mute	3		Toggle on/off audio output
SRC	4		Select source
Numeric button	5	1.2.3.4.5. 6.7.8.9.0	Directly access certain chapter / track / preset station in current band
VOL up	6		Increase the volume
VOL down	7		Decrease the volume
Information	8		Display playing information
GOTO search	9		Position search function on VCD/DVD mode
Stop/Band	10		Select FM/AM band on Tuner mode Stop playback
Select	11		Enter the audio settings
ESC	12		Exit the current menu
Menu	13		Enter the main menu of system
Picture	14		Adjust the Screen settings
Repeat A→B	15		Set start point A and end point B to repeat continually
OK	16		Start or pause playback, confirm the settings
Direction buttons	17		Up/down/left/right to select items for certain setting

Title	18	TITLE	Go back to title while playing DVD
Root	19	ROOT	Enter the main menu of the disc Turn on PBC while playing DVD
Repeat	20		Repeat playback for current chapter
Next	21		Select the next chapter/track for playback Search an available radio station by increasing tuning frequency on tuner mode
Previous	22		Select the previous chapter/track for playback Search an available radio station by decreasing tuning frequency on tuner mode
Fast Reverse	23		Fast reverse the disc content
Fast Forward	24		Fast forward the disc content
Audio	25	AUDIO	Change the audio language for disc playback
Zoom	26	ZOOM	Zooming in/out on an image
Angle	27	ANGLE	Play in different angle for a scene (if it is applicable)
SUB Title	28	SUB-T	Language selection for subtitle

TFT Monitor Operation

Rear Camera Mode

When the vehicle is placed in "Reverse", and a rear camera is connected to the unit, the monitor will automatically switch to the camera input source. Please make sure the reverse wire is properly connected.

Screen Adjustment

"COLOR" "CONTRAST" and "BRIGHTNESS" can be adjusted.

Screen Adjustment Procedure

1. Enter the Screen adjustment mode:

Press the **PIC** button on the remote or go to main menu, then select set-up and then press the screen.

2. Select settings:

Press the (◀▶) buttons on the remote or on the screen when in the set-up mode, and then adjust the selected feature to the desired setting.

3. To Exit do not press any button on the remote for 5 seconds or in the set-up screen press the top left corner to exit:


Parking Brake


1. When the vehicle is stopped and the parking brake is on, the "PARKING Brake" wire must be connected to the parking brake (-) switch in order for the monitor to display video.
2. The Parking brake does not apply when using the reverse backup camera feature.
3. When the "parking brake" is off, the front monitor will display a "Caution" with blue background, preventing the driver from watching video while driving. This is for your safety and to reduce the risk of a traffic accident.

Please see "INSTALLATION SECTION" for installation guidance on the parking brake wire.

Operation Instructions

Power On / Off

Press the **POWER /VOL** button to turn the unit on. You can also turn on the unit by pressing the button () on the remote.

Press and hold the **POWER/VOL** button on the front panel or press the **POWER** button () on the remote to power off the unit.

Source Selection

Press the **MENU** Button on the front panel to change sources: TUNER, DISC, CARD, FLASH DRIVE, BT-TEL, F-AUX, R-AUX, SETUP, and STANDBY. The name of the source is displayed on the top right corner of the screen.

Volume Adjustment

To increase or decrease the volume level, turn the **POWER/VOL knob** on the front panel or press the **VOL+ / VOL-** buttons on the remote control. The volume ranges from “0” to “40”.



Equalizer Setting

The Equalizer Setting allows you to easily adjust your audio system to meet your sound needs. To get the best possible sound quality from your new system, be sure to adjust the settings for the speakers as well.



Accessing the EQ Settings

Press the (**SEL**) button on the remote control or at the bottom of the menu the “EQ” icon.


Selecting an EQ for Adjustment



Press the (/) buttons on the remote control or press the **icons on the** front panel once, then select an audio setting to be adjusted.

Adjusting an Audio Setting

Press the ( ) buttons on the remote or use the touch screen to adjust the selected feature.

EQ Settings

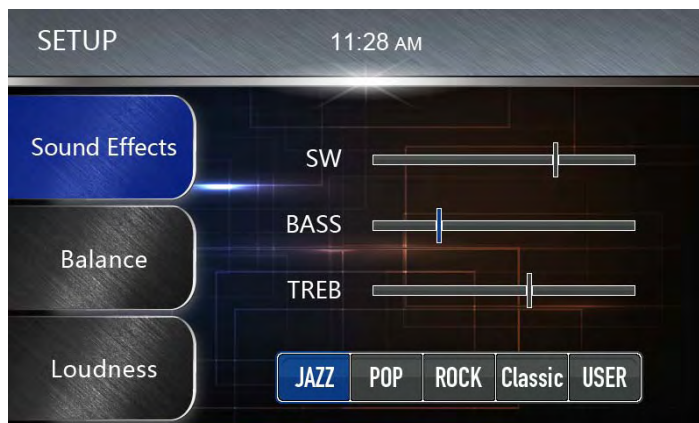

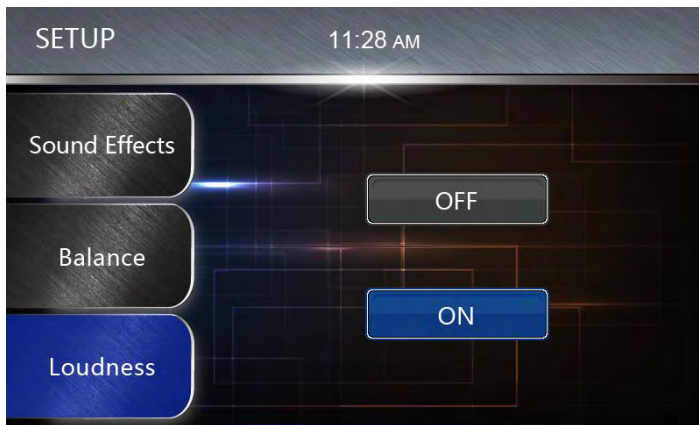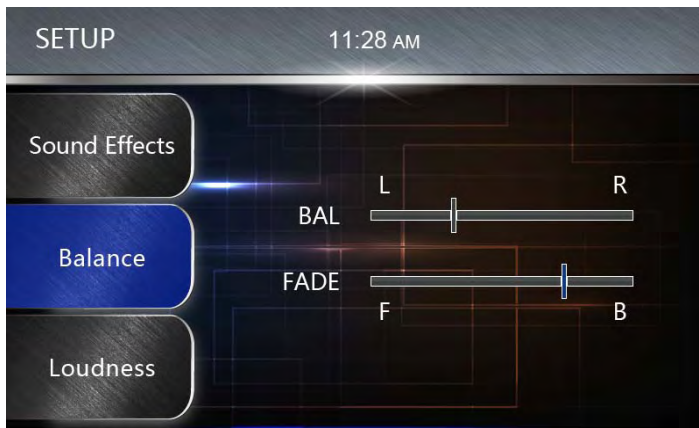

NOTE: The Bass and Treble levels are only adjustable when EQ is on “User” mode. The Loudness function increases the sound ranges from low levels to high levels.

Exiting the Equalizer Setting




Touch the return arrow on the top right corner of the screen or press the **(SEL)** button on the remote control to exit the Equalizer setting.

System Reset

To reset the system in case of a halt or other unusual operation, use the tip of a pen to press the **RESET** button located on the front top-left corner of the unit. After the system resets, the unit will restore the default settings before it was last powered off.

Mute

The volume can be mute by the following:

1. Press the MUTE button () on the remote control to mute the volume from the unit.
2. Press the /VOL knob on the panel.
3. Turning the /VOL knob counter-clockwise on the panel to decrease the volume level to "0".

NOTE: Press the **MUTE** button on the remote control again to restore the volume. Adjusting the volume or using any of the audio set-up features will cancel the mute function.

Standby

1. On the Main menu press the Standby icon.
2. In the standby mode, the screen will turn off while the audio output is still active.
3. In the standby mode, touch the screen or press the Menu button to return the screen to the normal stage.

Setup Menu

Main Menu



There are three methods to access the **SOURCE** menu.

- Press the **MENU** button on the front panel.
- Press the **MENU** button on the remote control.
- Touch the **A area (Top left corner)** on the touch-screen.

Note: Touch screen must be used to select menu and adjust settings. The remote control four directional pad cannot be used to select the features on the screen. The following instructions will show the different ways to access menus and settings.

Screen Setting




Press the **SETUP** icon on the main menu.



Press the "**SCREEN**" icon while on the Setup menu.


Selecting a Setting for Adjustment

Press one of the setting icons to make any adjustment.

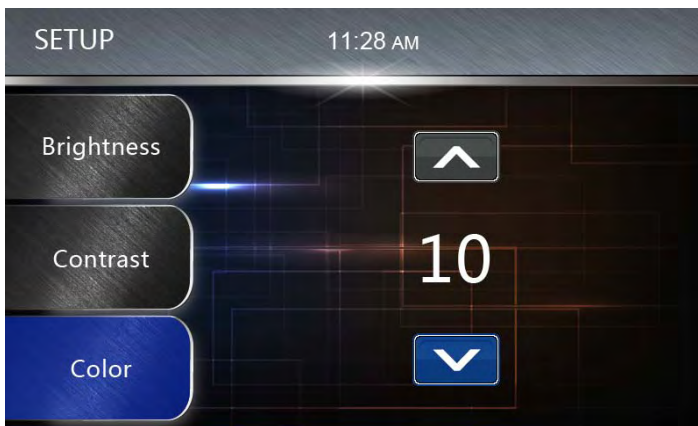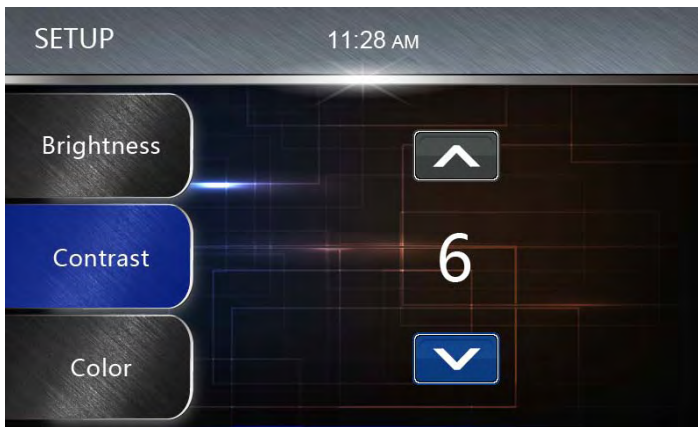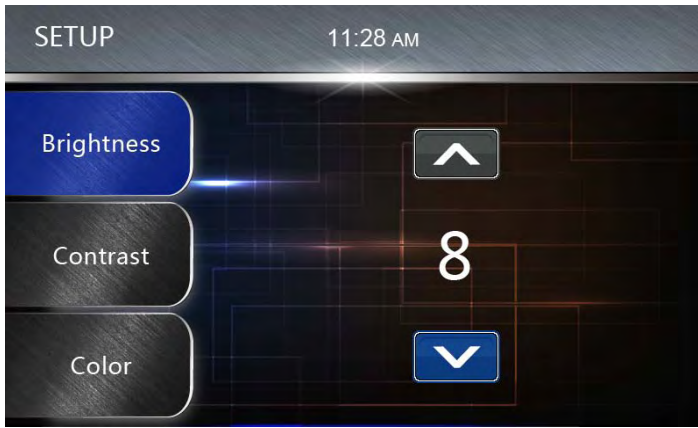


Date Setting

Press the **Date** icon in the **SETUP** menu, then select one of the following options Month/Day/Year to make the date adjustment.

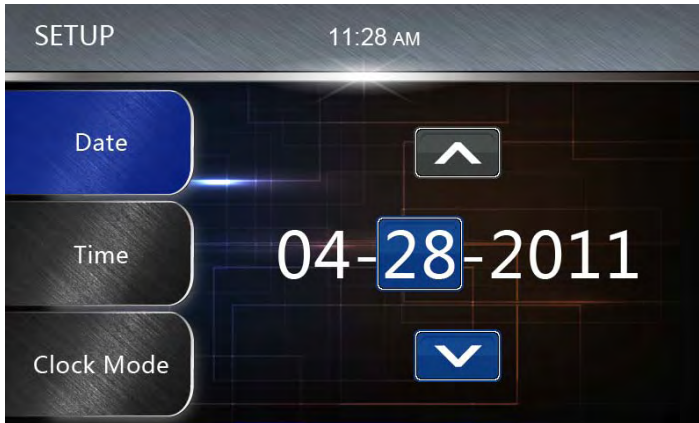


Time Setting

Press the **Time** icon in the **SETUP** menu, then select the hour or minute to make the time adjustment.

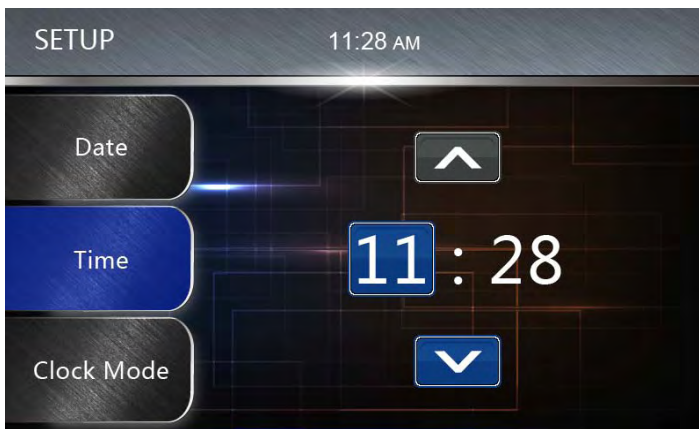

Clock Mode Setting

Press the **Clock Mode** icon in the **SETUP** menu, then select "12 Hr" or "24 Hr" modes.


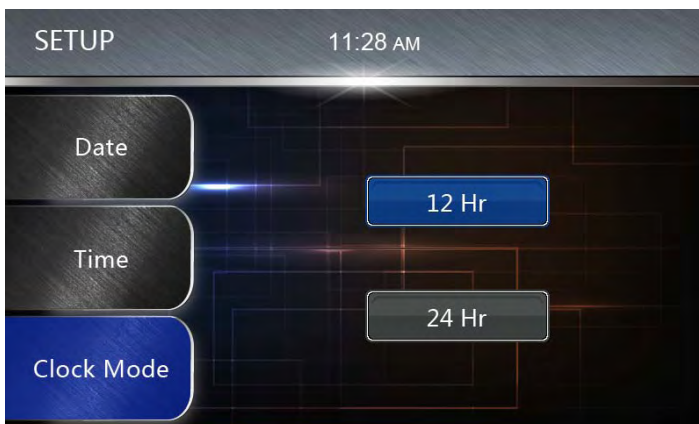


DVD Setting

Press the **DVD** icon while on the **SETUP** menu.

Selecting a Setting for Adjustment

Select one of the three setting options to make any adjustment.

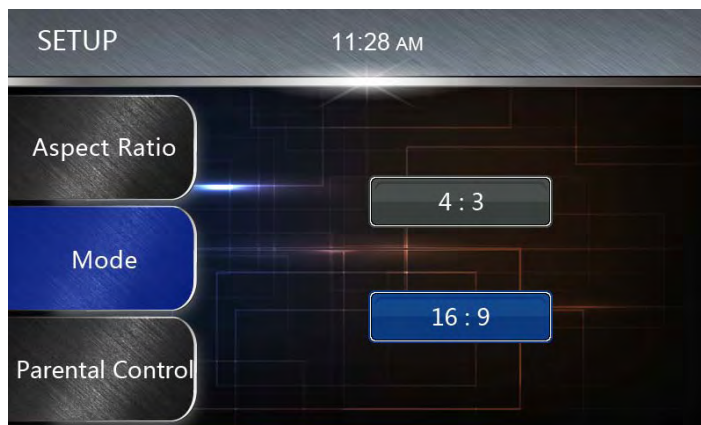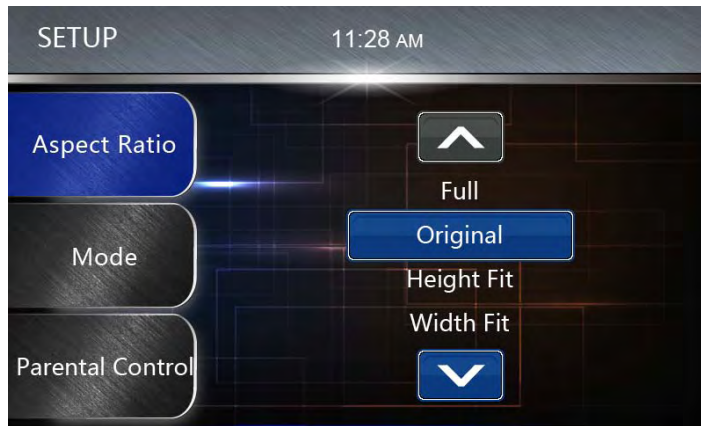

Parental Control

In order to change the parental password, you need to enter this manufacture default password 8888. Warning: If you decide to set your own password, make sure to write it down on the user manual or on a piece of paper and store it somewhere safe that you won't lose it because once a new password is set, you cannot use the default password anymore.




System Setting

Press the **SYSTEM** icon while on the **SETUP** menu.

Selecting a Setting for Adjustment


Select one of the three setting options to make any adjustment.

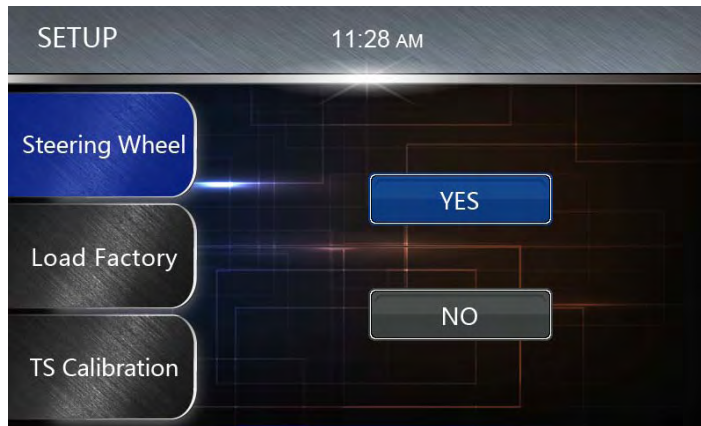



Steering Wheel Control Setting

Press **YES** to enter Steering Wheel Control setting.

1. Press **Learn** to begin the steering wheel control programming process.
2. Depend on the vehicle steering wheel control wiring configuration, the user can use mode one or mode two to program the commands function.
3. Press one of the function icon on the list to start the learn command.

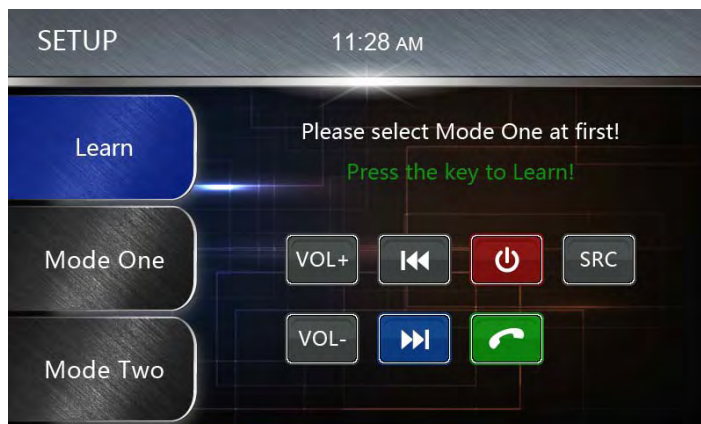

4. Press one of the buttons on your steering wheel control that you would like to use for this function in order to finalize the learning command.

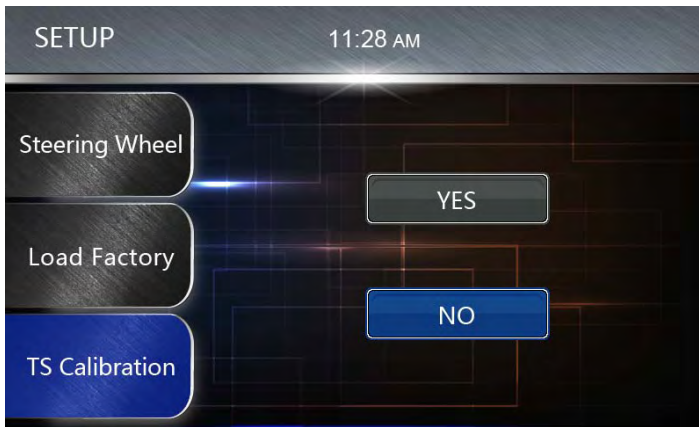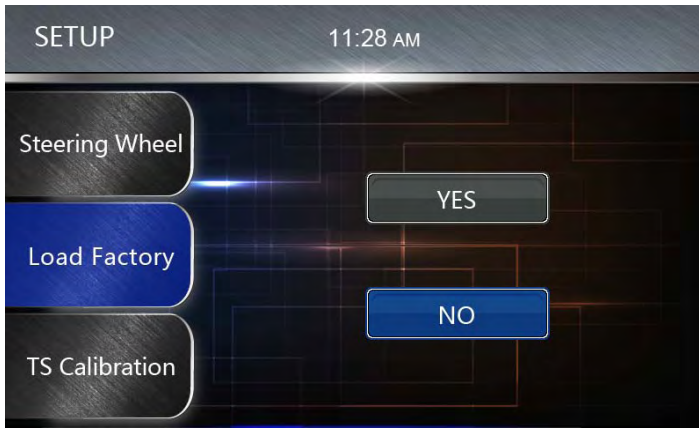




Basic Settings

Press the **BASIC** icon while on the **SETUP** menu.

Selecting a Setting for Adjustment

Select one of the three setting options to make any adjustment.

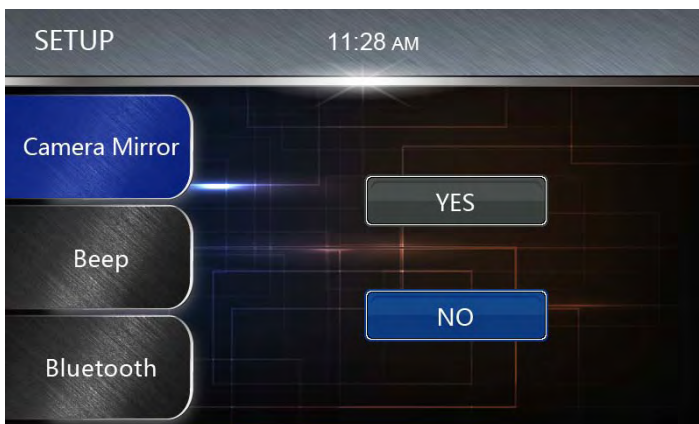

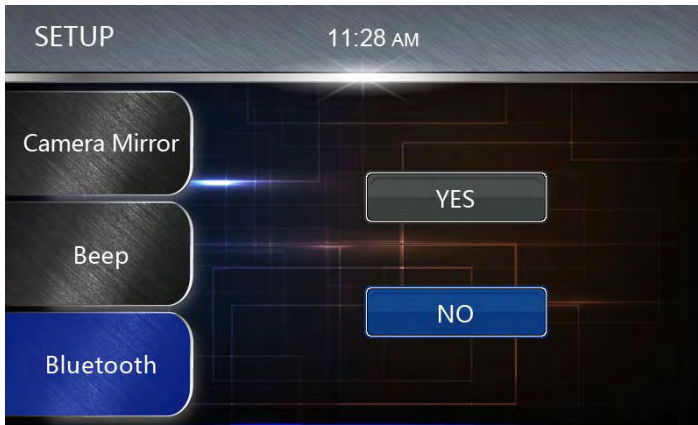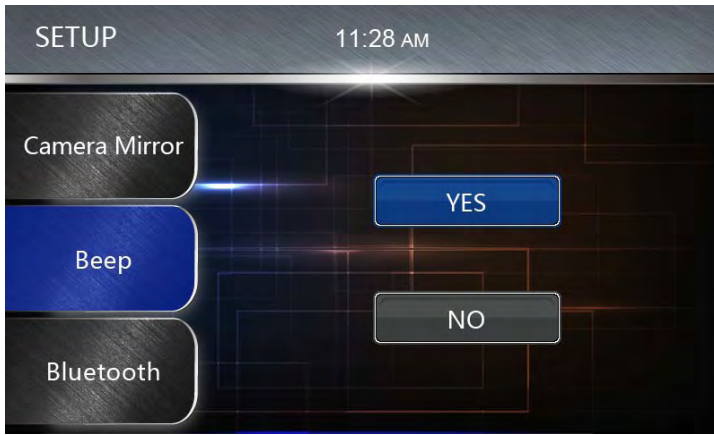


Other Settings

Press the **OTHER** icon while on the **SETUP** menu.

Selecting a Setting for Adjustment


Select one of the three setting options to make any adjustment.



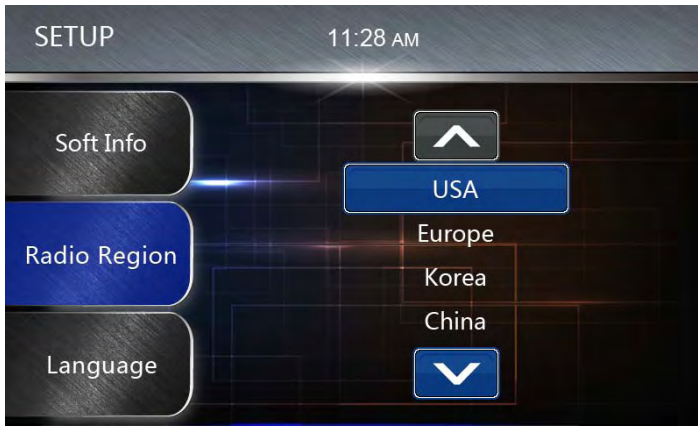

Tuner (AM/FM) Operation

Tuner Display

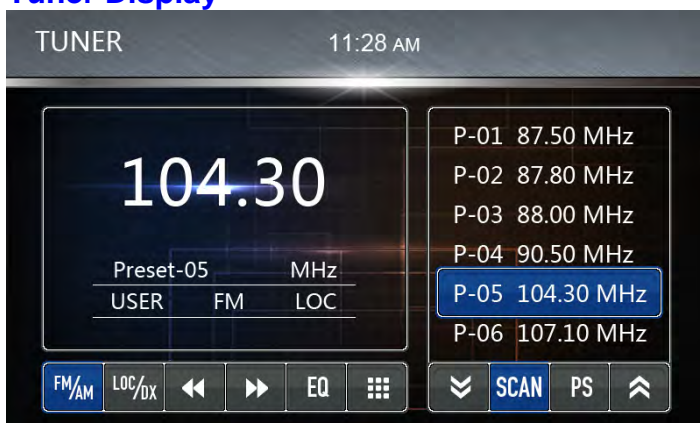

: Press to change between FM and AM.



: Press to seek down. Touch and hold for 3 seconds to scan the previous station.



: Press to seek up. Touch and hold for 3 seconds to scan the next station.



: Press to scan and store all stations in current band automatically.



: Press to scan the stations in the 12 preset channels in the current band.



: Press to activate the Local function in AM/FM tuner or the DX function



: Press to display the numeric keypad on the screen and then use the numeric keypad to input a station directly



: Previous page/set



: Next page/set





: Press to do EQ setting



Switch to Radio Tuner Source



Press the "SRC" control to switch to the **Tuner** source.

Select AM/FM Band



Touch the  button on the screen, or press the BAND button () on the remote control to change between FM and AM.



Auto Tuning

Press the button  on remote control or press the  button on the screen to seek up the next available station. Press the button again to stop searching.

Press the button  on the remote control or press the  button on the screen to seek down the next available station. Press the button again to stop searching.

Manual Tuning

Press the  button on the remote control or press the  button on the screen to up the tuning frequency one step at a time.

Press the  button on the remote control or press the  button on the screen to down the tuning frequency one step at a time.

Using Preset Stations

12 preset buttons are used to save your favorite stations for each band. First 6 saved stations (P1-P6) for the current band appear on the screen.

You can touch the arrow buttons  or  on the screen to see the other 6 stations.

Saving a Station

1. Select a band (AM/FM), and then select a station.
2. Press and hold one of preset (P1-P40) on the right side of the screen for three seconds. The station will then be saved on the selected preset number.

Select a Station

1. Select a band (AM/FM).
2. Touch one of the preset (P1-P6) on the right side of the screen.

Auto Store (AS)

Press the AS button on the screen to automatically scan and save all stations in current band.

Program Scan (PS)

Press the PS button on the screen to scan through the stations in the 12 preset channels in the current band.

Press any button to stop scanning and listen to the selected station.

DX and LOC Stations Signals (LOC)

When the Local function is on, only radio stations with a strong signal are found. When the Local function is active, "LOC" appears on the screen.

Press  to activate the Local function in AM/FM tuner or to activate the DX function.

DVD Player Operation

NOTE: When properly installed, DVD video cannot be displayed on the main screen unless the parking brake is applied. If you attempt to play a DVD while the vehicle is in motion, the screen will display “caution” with a blue background. Rear video output, (if used) will operate normally.

Insert/Eject Disc

Inserting a Disc


When inserting a DVD disc, DVD mode will be enabled and disc will begin to play.

NOTE: If Parental Lock (Rating) is activated and the disc inserted is not authorized, a 4-digit code must be entered or the disc will not play (see “Parental Lock Menu”).


You cannot insert a disc if there is already a disc in the unit or if the power is off.

NOTE: CD-R/RW, DVD-R/RW, DVD+R/RW will not play unless the recording session is closed.

Ejecting a Disc

Press the button  on the unit to eject the disc. The unit will automatically revert to Tuner mode at the same time.

Reset the Loading Mechanism


If the disc loads abnormally or does not play properly, press and hold the button  on the unit to reset the loading mechanism. The disc should be ejected and resume to normal operation.







Accessing DVD Source

To switch to DVD source when a disc is already inserted, press the “**SRC**” button on the remote control until the DVD source appears on the top of the screen.

On the front panel press Menu and select the “Disc” icon.

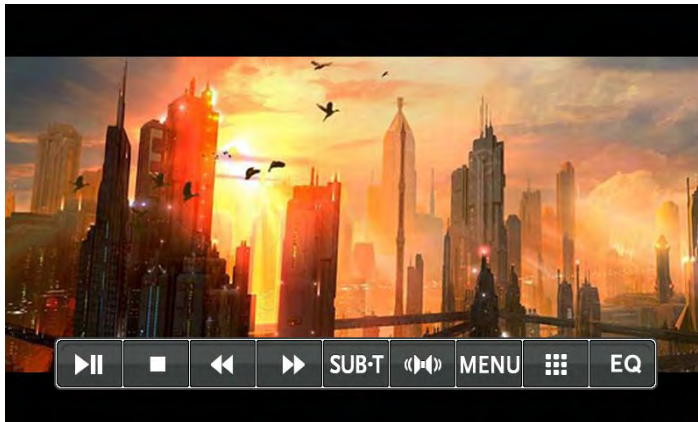Using the Touch-Screen Controls



-  : Press to Play/Pause
-  : Press to stop
-  : Press to fast reverse
-  : Press to fast forward
-  : Press to display Sub-title
-  : Press to switch among LEFT, RIGHT and STEREO.



: Press to return to DVD main menu






: Press to select Title, Chapter, and Time.




: Press to enter EQ setup.

Controlling Playback


Stop Playback

Press the stop button  on the screen or press the  button on the remote control to stop the DVD playback; press the play/pause button  on the screen or the **(OK)** button on the remote control to resume play.


Pause Playback


Press the play/pause button  on the screen to pause or to resume play.

Accessing the DVD Menu

1. You can touch the area E (middle of screen), and then press the  button to access the main DVD menu.
2. Use the arrow buttons on the remote control to select a title from the menu.
3. Press the **TITLE** button on the remote control to select a different title for playback.
4. Press the **O** button on the remote control or touch the item directly to confirm your selection and begin playback.



Moving Through Chapters



Press the  button on the remote control to advance to the next chapter on the DVD.

Press the  button on the remote control to move to the previous chapter on the DVD.

Touch the right side of the screen to advance to the next chapter, or touch the left side of the screen to move to the previous chapter.



Fast Forward/Fast Reverse

Press the  button on the remote control or press the  of area E on the screen to fast forward. Continue pressing to increase the rate from "X 2" to "X 4", "X 8", and "X 16".

Press the  button on the remote control or press the  of area E on the screen to fast reverse. Continue pressing to decrease the rate from "X 2" to "X 4", "X 8", and "X 16".

GOTO Search

During DVD or VCD playback, use the following steps for the "GOTO" feature to access a specific location on the disc:

1. Press the **-/--** button on remote control or touch Area F on the screen and then press  icon.
2. Press the  buttons on the remote control to select a category.
 - For DVD mode, you can choose Time or Title/ Chapter search.
 - For VCD mode, press the **-/--** button to choose between Track Search, Disc Search and Exit.

	Search
Title	__ / __
Chapter	__ / __
Time	__ : __ : __

DVD Search

Time – Go to specific time in current title

Title/Chapter – Go to specific title or chapter

Track Search	
Time	-- : -- : --
Track	--- / ---

VCD Track Search

Time – Go to specific time in the current track


Track – Go to specific track

Disk Search	
Time	-- : -- : --
Track	--- / ---

VCD Disc Search

Time – Go to specific time on disc

Track – Go to specific track

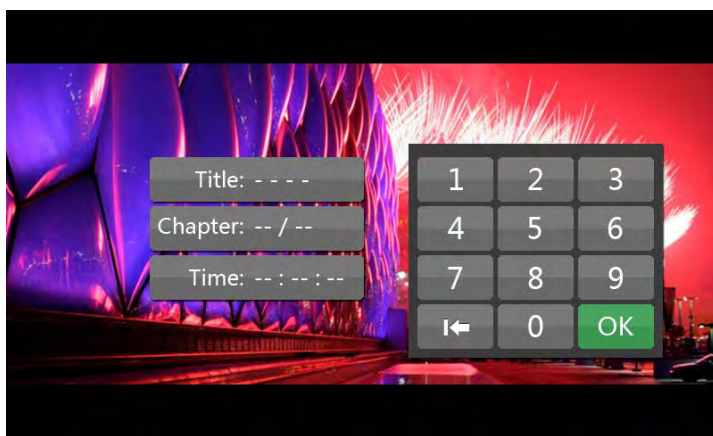

3. Enter a Time/Track number into the field using the numeric keypad on the remote control or on the screen.

4. Press the **OK** button on the remote control or on the touch screen to go to the specified location on the disc.

5. Press the -/-- button on the remote control again or touch the OK icon on the screen to exit.

Direct Chapter / Track Selection

During DVD, VCD and CD playback, you can use the numeric keypad on the remote control to access a track directly.

Viewing an Alternate Picture Angle (DVD Only)


Some DVDs contain scenes that have been shot from different angles. For DVDs recorded with multiple angles, press the **ANGLE** button on the remote control to toggle available angles.

Zooming

Press the **ZOOM** button on the remote control to enlarge and scan through the video image using the following options: “Q1”, “Q2”, “Q3”, and “OFF”.

Multi-Language Discs (DVD Only)

Changing Audio Language

If you are watching a disc recorded in multiple languages, press the **AUDIO** button on the remote control to choose a language. You can also touch area E, and then press this  button.

NOTE: During VCD playback, press the **AUDIO** button on the remote control to choose between

Left Channel, Right Channel, and Stereo.

Changing Subtitle Language


If you are watching a disc that contains multiple languages subtitles, press the **SUBT** button on the remote control to choose the language in which you would like the subtitles to appear. You can also touch area E, and then press this **SUB-T** button.

Playback Information

During DVD and VCD playback, press the **INFO** button on the remote control or touch area B to display playback information on the screen, this will include the media playing and current playback time.

DVD Playback Information

The following information is displayed at the middle of the screen during DVD playback:

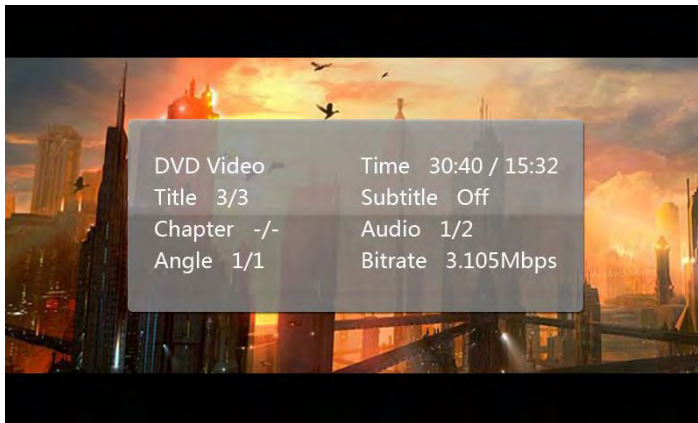

①: Indicate the current source playing.

②③: Indicate the playback time of the current title.

④: Indicate the subtitle status.

⑤: Indicate the audio channel

⑥: Indicate velocity


⑦: Indicate angle

⑧: Indicate DVD chapter.

⑨: Indicate the number of titles on the DVD.

VCD Playback Information

The following information is displayed at the middle of the screen during VCD playback:

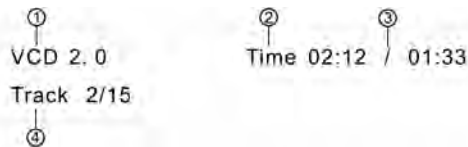





①: Indicate the Current source playing.






②③: Indicate the playback time of the current title.

④: Indicate VCD Track.

General Disc Information

Symbol	12cm Disc Properties	Max Play Time
	Single side single layer (DVD-5)	(MPEG 2 Method) 133 minutes
	Single side double layer (DVD-9)	242 minutes
	Double side single layer (DVD-10)	266 minutes
	Double side double layer (DVD-18)	484 minutes
	Single side single layer (VCD)	(MPEG 1 Method) 74 minutes
	Single side single layer	74 minutes

Disc Symbols

Symbol	Meaning
	Number of voice languages recorded. The number inside the icon indicates the number languages on the disc (maximum of 8).
	Number of subtitle languages available on the disc (maximum of 32).
	Number of angles provided (maximum of 9).
	Aspect ratios available. "LB" stands for Letter Box and "PS" stands for Pan/Scan. In the example on the left, the 16:9 video can be converted to Letter Box video.
	Indicates the region code where the disc can be played. <ul style="list-style-type: none"> • Region 1: USA, Canada, East Pacific Ocean Islands • Region 2: Japan, Western Europe, Northern Europe, Egypt, South Africa, Middle East • Region 3: Taiwan, Hong Kong, South Korea, Thailand, Indonesia, South-East Asia • Region 4: Australia, New Zealand, Middle and South America, South Pacific Ocean Islands/ Oceania • Region 5: Russia, Mongolia, India, Middle Asia, Eastern Europe, North Korea, North Africa, North-West Asia • Region 6: Mainland China • ALL: All regions

CD/MP3/WMA/JPEG Operation


Instructions for Insert/Eject, Play/Pause, Stop Playback, Track Selection, Fast Forward/Fast Reverse, Scan, and Random Play are the same for DVD, CD and MP3 operation. Please see the DVD Player Operation section for information about these topics.

The file naming formats listed below are compatible with this unit:

- ISO 9660 – file name: 12 characters, file extension: 3 characters
- ISO 9660 – file name: 31 characters, file extension: 3 characters
- Joliet – 64 characters

If the file or folder name does not comply to ISO 9660 file system standards, it may not be displayed or played back correctly.

DISC User Interface

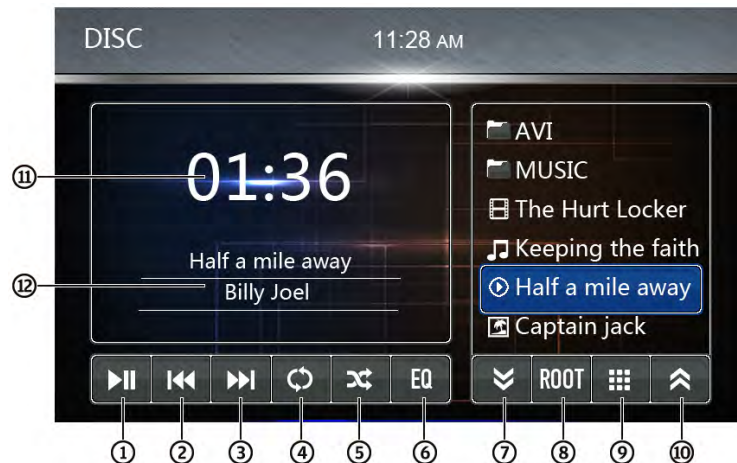

- ① : Press to Play/Pause
- ② : Press to play previous track
- ③ : Press to play next track
- ④ : Press to activate/deactivate Repeat Single/Folder Repeat/Repeat All
- ⑤ : Press to activate/deactivate Shuffle Mode
- ⑥ : Press to enter EQ setup
- ⑦ : Next page/set
- ⑧ : Press to return to the root folder menu
- ⑨ : Press to display the numeric keypad on the screen and then you can use the numeric keypad to access a track directly
- ⑩ : Previous page/set
- ⑪ : Elapsed playing time
- ⑫ : Song info

Playing CD Files


After inserting a CD disc, a file will play in the sequence of the directory. During playing back, you can press the numeric button on the remote control or press a track that you would like to play.

MP3/WMA Discs

This player allows you to playback MP3/WMA files recorded on CD-R, CD-RW, DVD+R/RW and DVD-R/RW. For CD-RW discs, please make sure to use a slow speed write and not the fastest speed in order to prevent improper disc writing.

When recording MP3 up to the maximum disc capacity, disable additional writing. Please use the “disc at one” setting.


The touch keys for CD/MP3/WMA playback are described below.

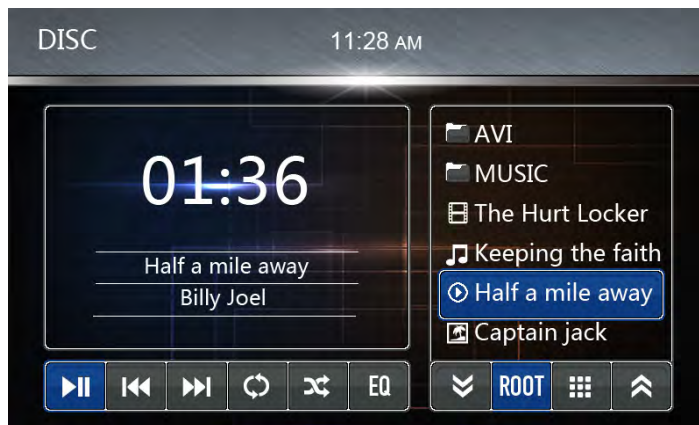





Playing MP3/WMA Files

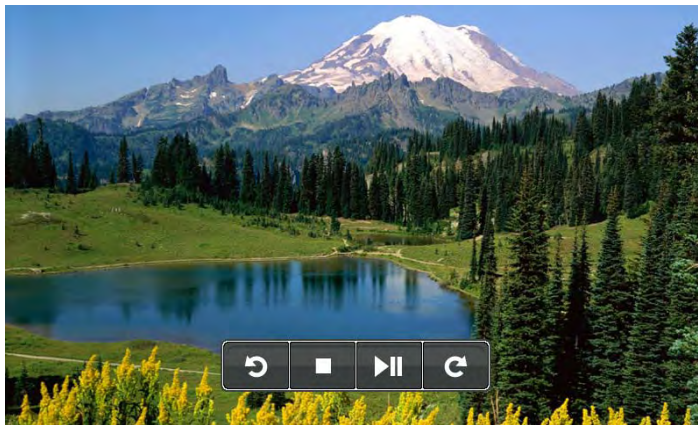After inserting a MP3/WMA disc, a file will play in the sequence of the directories/folders. While playing back, you can press the numeric button on the remote control or touch the selected track that you would like to play.

JPEG Discs



- : Flip the current image counter-clockwise
- : Stop
- : Play/Pause
- : Flip the current image clockwise

FLASH DRIVE Operation

Accessing the Flash Source


1. To switch to **FLASH** source, press the **Menu** button on the front panel and press the Flash Drive icon or press the **(SRC)** button on the remote control until the **FLASH** appears at the top of the screen.

NOTE: Make sure the USB cable is connected with a flash drive device.

2. Select the Main menu, and then touch the **FLASH DRIVE** icon to select **FLASH** as your source.

Flash Drive Instructions

The touch keys on the screen for **FLASH** playback are described below:

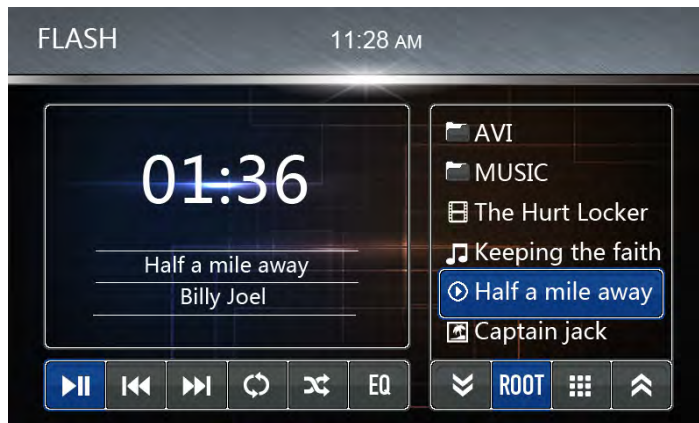

: Press to Play/Pause



: Press to play previous track



: Press to play next track



: Press to return to the root folder menu



: Press to enter EQ setup



: Press to activate/deactivate Repeat Single/ Repeat Folder/Repeat All



: Press to activate/deactivate Shuffle Mode



: Press to display the numeric keypad on the screen and then you can use the numeric keypad to access a track directly

Note: For other definitions, please go to CD/MP3/WMA/JPEG Operation as references.

CARD Operation

Accessing CARD Source


1. To switch to **CARD** source, press the **Menu** button on the front panel and press the **CARD** icon or press the **(SRC)** button on the remote control until the **CARD** appears at the top of the screen.

NOTE: Make sure the SD card is inserted properly into the unit.

2. Select the Main menu, and then touch the **CARD** icon to select **CARD** as your source.

CARD Instructions

The touch keys on the screen for **CARD** playback are described below:

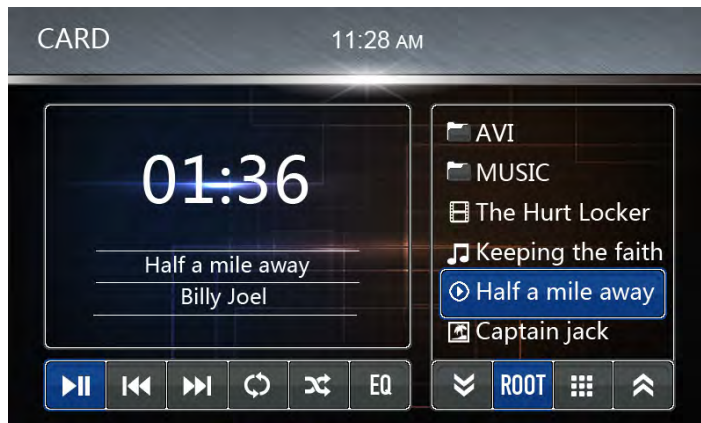

: Press to Play/Pause



: Press to play previous track



: Press to play next track



: Press to return to the root folder menu



: Press to enter EQ setup



: Press to activate/deactivate Repeat Single/ Repeat Folder/Repeat All



: Press to activate/deactivate Shuffle Mode



: Press to display the numeric keypad on the screen and then you can use the numeric keypad to access a track directly

Note: For other definitions, please go to CD/MP3/WMA/JPEG Operation as references.

Bluetooth Operation

Before using the Bluetooth

Before using the Bluetooth, it is necessary to perform the following steps.

1. Go to the Main menu and select the “SET UP” icon, select the “BASIC icon” option and select “Bluetooth”, make sure the “On” option is highlighted to activate the Bluetooth feature.
2. Pair your mobile phone to this unit (refer to the “Pairing” operation). It is necessary to pair your phone first with the unit in order to use the Bluetooth feature.

Bluetooth Indicator

There is a Bluetooth indicator  at the top of the screen.

When the Bluetooth function is “Off”, the indicator does not appear.

When the Bluetooth function is “On” and no phone is connected to the unit, the indicator Bluetooth symbol will blink constantly.


If a phone is connected to the unit, the indicator will be solid.

Accessing Bluetooth Source


Access the **MAIN** menu first and then touch the **BT** icon on the screen to access Bluetooth mode.

Bluetooth User Interface


Dial Interface

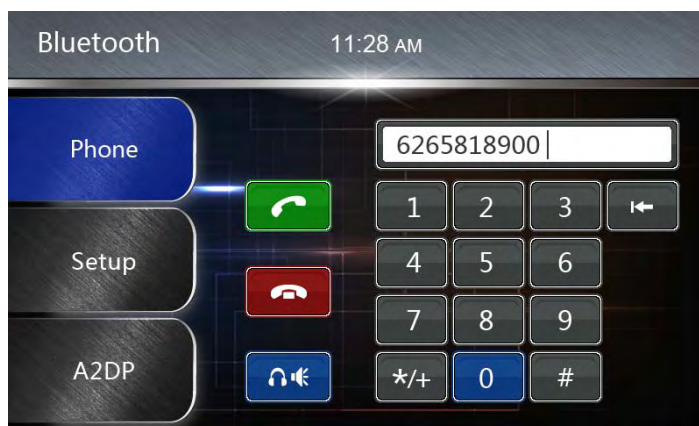

Bluetooth Setup

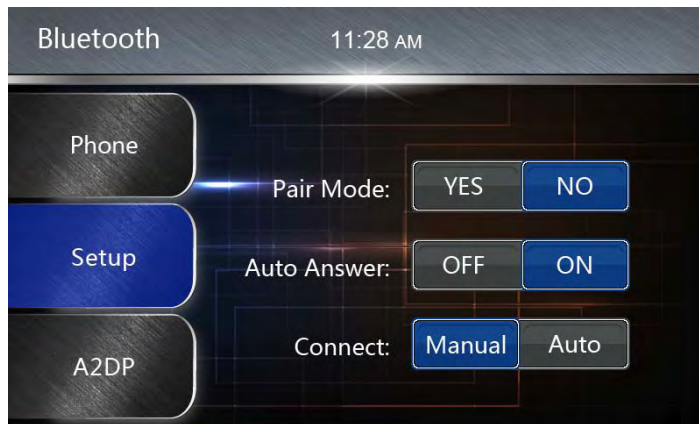

A2DP

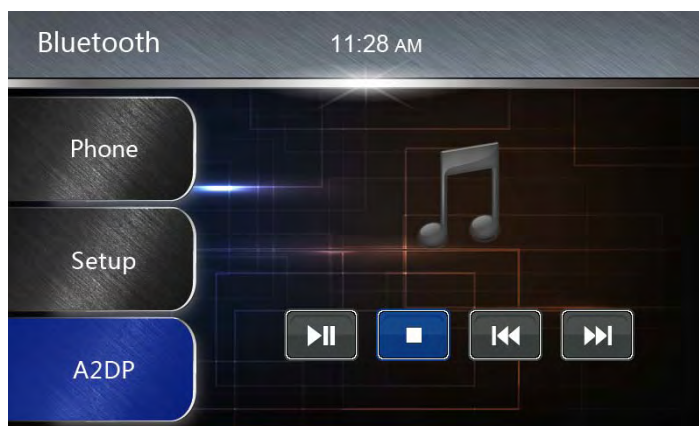

Pairing

Access the Bluetooth **“Setup”** and select “Pair Mode” to “Yes”, then select **“Phone”** and a “Waiting to pair” message will be displayed on the screen. Now you can begin pairing a phone to the unit. This unit can pair up to 5 mobile phones, but only one mobile phone can be used at a time. The Default phone will be retained only if all other paired phones are deleted. (Default Phone: The phone that was first paired with the unit.)

When using the maximum limit to pair phones, (for example four mobile phones have been connected with the unit, and you want to pair a new one, then the system will retain the last paired phone as the system default phone) the phone least used (except the default phone) will be deleted and the new paired phone will become the last phone.

Note: The password to pair your phone with the unit is “1234”. When asked/prompt, enter this password on your phone.

Auto Connect

If the unit has been set to auto connect, it will attempt to connect to the last used phone first. If Auto Connect is not activated, the unit will return to the previous operating mode.

When the phone connects to the unit successfully, the cell phone’s Bluetooth features will be

enabled.

Note: Please make sure your phone's Bluetooth is on before turning on the unit. If your phone's Bluetooth is turned on after the unit has been turned on you must pair the phone again in order to connect.

Making a Phone Call

There are three ways to make a phone call from this unit:


1. Use the phone's number keypad to make a call.
2. You can enter the phone number using the numeric keypad on the screen of the unit and press the green "**pick up**" button on the screen or on the remote control press "OK" to make a call. (must be connected to the Bluetooth)
3. If your phone supports voice dial, access this mode on your phone to make a call directly.

Answering an Incoming Call

You can answer an incoming call even if the source other than the telephone is selected.

You can answer an incoming call automatically or manually by going to the Bluetooth setup screen to set the "Auto Answer" to ON or OFF.

When a call comes in, the graphic will be displayed on the screen:

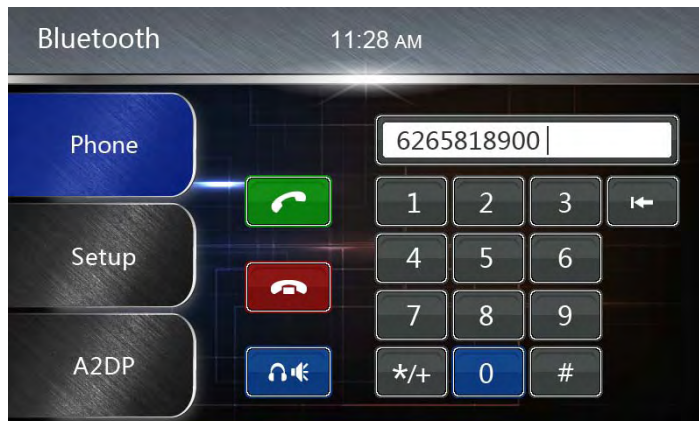

End a Call

Press the  button to end a call.

Troubleshooting

Problem	Cause	Corrective Action
GENERAL		
Unit will not power on	Radio Fuse blown	Install the new fuse with the correct specification
	Car battery fuse blown	Install the new fuse with the correct specification
	Illegal operation	Press the RESET button located at the top left corner of the front panel
Remote control does not function	Battery depleted	Replace depleted battery with a brand new battery
	Battery installed incorrectly	Remove and install the battery correctly
No/low audio output	Improper audio output connection	Check the wiring and make the correction
	Volume set too low	Increase the volume level
	Improper "MUTE" connection	Review the wiring diagram and check the "MUTE" connection
	Speakers damaged	Replace speakers
	Heavily biased volume balance	Adjust the channel balance to the center position
	Speaker wiring is in contact with metal part of car	Insulate all speaker wiring connections
Poor sound quality or distortion	Unauthorized disc is in use	Use the original media disc
	Speaker power rating not compatible with unit	Connect the proper speakers
	Speaker is shorted	Check the speaker connections
Unit resets itself when engine is off	Incorrect connection between yellow memory wire and positive battery wire	Check the wiring and make the correction
TFT MONITOR		
No Video playback	Incorrect connection to parking brake wire	Check the wiring and make the correction
	PRK SW is activated and parking brake is not engaged	Stop vehicle in a safe place and apply the parking brake
Flashing image or interference appears on screen	DVD is not compatible with current unit system settings	Change the setup to accommodate disc
	Improper video signal connections	Check the wiring and make the correction
Prolonged image or improper height/width ratio display	Improper aspect ratio setup	Use the correct aspect ratio setting
TUNER		
Weak station searching	Auto antenna is not fully extended or not properly connected	Connect the auto antenna control cable properly
	Radio reception is poor.	Current location has a weak radio signal, so move to another location.
	LOCAL function is activated	Turn the LOCAL function off
DISC		
Cannot insert disc	There is a disc inside the unit	Eject the current disc and insert a new disc

Disc does not play back	Disc is warped or scratched	Use a disc that is in good condition
	Disc is dirty or wet	Clean the disc with a soft cloth
	Incompatible disc is used	Use compatible disc
	Disc rating exceeds Parental Lock rating limit	Change Parental Lock settings to allow such restriction
	Disc region code is not compatible with unit	Use disc with the proper region code
	Disc is inserted upside down	Insert the disc with the label side up
Image blurred, distorted, or dark	Disc is illegally copied	Use the original disc
PBC cannot be used during VCD playback	PCB is not available on the disc	
No repeat or searching while playing VCD	PCB is on	Turn PCB off
MP3		
Interruption occurred during playback	Disc is dirty or scratched	Clean the disc or replace the disc
	File is damaged/bad recording	Recreate disc with good files
Incorrect playback message displayed	Message is longer than LCD can display	Shorten the name of the file


Error Messages

Message Displayed	Cause	Corrective Action
Loading	Disc is being read	
No Disc	Disc is dirty	Clean the disc with a soft cloth
	Disc is upside down	Insert the disc with the label side up
	Disc not present in loading compartment	Insert disc
Bad Disc	Disc is dirty	Clean the disc with a soft cloth
	Disc is upside down	Insert the disc with the label side up
Unknown disc	Disc format is not compatible with this unit	
Region Error	DVD is not compatible with region code of unit	
Error	illegal mechanism operation	Press & hold the EJECT key for 5 seconds to reset loading mechanism

Remote control


Remote control does not function	Battery is covered with insulation tape	Pull out the insulation tape
	Battery depleted	Replace battery with new one
	Battery installed incorrectly	Remove battery and install correctly

1. When using the remote for the first time, you must pull out the insulation tape.

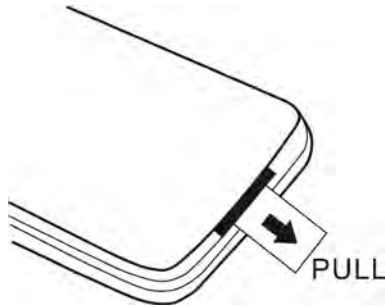


2. Remove the battery if the remote control is not used for a month or longer. If the battery is depleted, remove and dispose the old battery immediately.


3. Inserting/Replacing the Battery:
Remove the battery holder

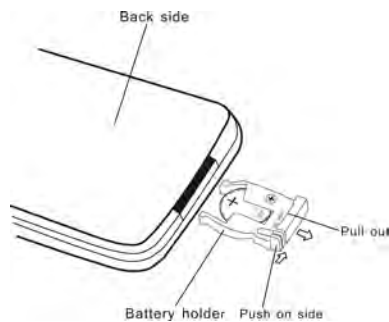

Remove the battery from the battery holder

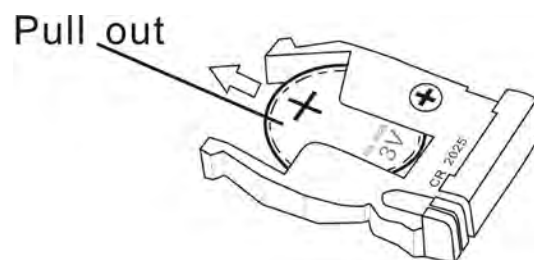

Install the battery

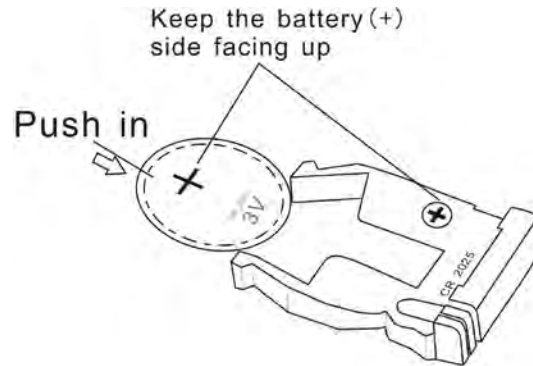

Insert the battery holder

NOTE: Only use one CR2025(3V) lithium battery.

Danger of an explosion if battery is incorrectly replaced. Replace only with the same or equivalent type of battery. Do not recharge, disassemble, heat or dispose of the battery in fire. Keep batteries away from children to avoid the risk of accident.

Suggestions

1. Only use a clean silicone cloth and neutral detergent to clean the front panel or monitor's screen. Using a rough cloth and non neutral detergent (such as alcohol) may result in scratching or discoloration.
2. Keep away from water and other liquids.
3. If the temperature inside the unit gets too high, the unit's loader will automatically stop playing the disc. Please wait for the unit to cool down before using the player again.
4. Never insert anything other than a 5 inch (12 cm) compact disc into the player as the mechanism can be damaged by foreign objects.
5. Do not attempt to use a 3" (8 cm) Single-CD disc in this unit, either with or without an adaptor, as it will damage the player and disc. Such damages are not covered under Warranty.
6. When the vehicle warms up during cold weather or under damp conditions, condensation may appear on the LCD panel. If this occurs, the screen will not operate properly until the moisture has evaporated.
7. We recommend that you clean your discs before inserting them into the unit; this will prevent damages to the laser and prolong its life

Specifications

Main Amplifier

Power Output: 20 watts RMS X 4 channels into 4-ohms @ < 10% THD+N

Signal to Noise Ratio: 70dB below reference. (Reference: 1 watt, 4-ohms)

MAX Power: 25 X 4 watts into 4-ohms, all channels driven

Frequency Response: 20Hz to 20kHz, -3dB. Aux input used as source reference

Reference Supply Voltage: 14.4VDC

DVD/CD Player

Compatible formats: DVD-R, DVD-RW, DVD+R, DVD+RW,

CD-R, CD-RW, CD-DA, HDCD, SVCD, VCD.

MPEG, JPEG, MP3, WMA, MP3/WMA files burned onto a DVD+R/W or DVD-R/W and CD-R/RW

Signal to Noise Ratio: 70dB

Dynamic Range: >95dB

Frequency Response: 20Hz to 20kHz, -3dB

Channel Separation: > 60dB @ 1kHz

D/A Converter(s): High performance 24-bit, 192kHz, multi-bit Sigma Delta modulation. DAC supports sample rates from 8~192kHz.

Electronic Skip Protection (ESP):

DVD: 2-3 sec, CD-DA: 10 sec, MP3: 100 sec, WMA: 200 sec

(ESP time is approximate)

Mechanical anti vibration ability: 10~200Hz, X/Y/Z direction: 1.0G

Video Section

Format: NTSC, PAL (auto-detection)

Output: 1Vp-p (75-ohm), buffered

Input: 1Vp-p (75-ohm)

FM Tuner Section

Tuning Range: 87.5MHz - 108MHz

Mono Sensitivity (-30dB): 10dBu

Quieting Sensitivity (-50dB): 15dBu

Alternate Channel Selectivity: 70dB

Signal to Noise Ratio @ 1kHz: 58dB

Image Rejection: 60dB

Stereo Separation @ 1kHz: 30dB

Frequency Response: 30Hz – 15kHz, -3dB

AM Tuner Section

Tuning Range: 530kHz – 1710KHz

Sensitivity (-20dB): 20dBu

Signal to Noise Ratio @ 1Hz: 50dB

Image Rejection: 60dB

Frequency Response: 50Hz – 2kHz, -3dB

Monitor Section

Screen Size: 6.2" (Measured diagonally).

Screen Type: TFT Liquid Crystal Display (LCD) active matrix

Response Time: 30mSec rise time, 50mSec fall time

Resolution, DVD/Composite Video in: 480i sub pixels,

800 (W) X 480 (H)

Viewing angle:

- 60 degrees left or right
- 30 degrees up

- 60 degrees down

General

Auxiliary Input impedance: 10k









Power Supply: 10.5 to 16V DC, negative ground

Fuse: 10-amp, mini ATM type

DIN chassis dimensions: 7" X 7" X 4" (178mm x 178mm x100mm)

*** Specifications subject to change without notice.**

Accessory List

Description	QTY	Image
Frame	1	
USB cable	1	
Power harness	1	
Remote control	1	
3.5mm-RCA cable	1	
Rear AV in cable	1	
Audio line out/Wheel key control	1	
User manual	1	
Warning card	1	
Warranty card	1	
Mounting bar/screws	1	