


# Open-Ear Headphones

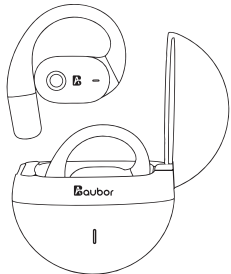


INSTRUCTION MANUAL  
Declaration ID D056232

✉ After-sales E-Mail: [Services.us@auborshop.com](mailto:Services.us@auborshop.com)

## How to connect


- Please keep the distance between the open headset and the mobile phone (or other connected devices) within 1 meter, the closer the better;
- Open the lid of the charging case, take out the L/R headphones and automatically pair, the pairing time is 3-5 seconds, prompt slow flashing, wait Connect open devices; If the pairing is not successful for 3 minutes, please turn off the computer.
- Turn on the user's mobile phone open function (or other open devices), search or scan, at this time the mobile phone will search for nearby open device, click on the searched headset name: A1, after successful connection, you can make a mobile phone call at this time, listen to songs;
- After the phone and open are successfully connected, the device will automatically shut down after 3 minutes of disconnection from a distance; If the headset is not connected for 3 minutes, the headset will automatically shut down.

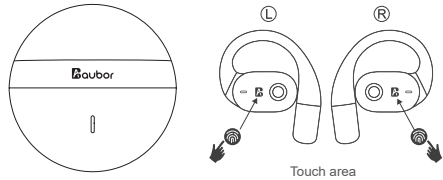

Touch area


## Quick Start Guide

### Quick Start Guide




Click to touch any side of the headset.

### Answer/Hang up




☑ Stand-alone touch any side of the headset to answer or hang up a call.

### Game Mode/Music Mode/Wake-up Siri




Three consecutive taps on the left ear to switch game mode/music mode.Wake up Siri with three consecutive taps on the right ear.

### Music Control-Switch Songs




Double-click to touch the left ear to switch the previous song, the right ear to switch the next song.

### Refuse to accept a call



☑ Long press and touch either side of the headset for 3 seconds.

### Volume control



☑ Long press on the (L) to reduce the volume  
☑ Long press on the (R) to increase the volume

## Earphone operation mode (power on and pairing)

Boot up	1. Open the lid of the charging case, take out the L/R earbuds, and automatically turn on and pair automatically. 2. L/R ear press and hold for 3 seconds .
Shut down	1. After the earphone L/R is placed in the charging case, it will automatically turn off. 2. L/R ear press and hold for 5 seconds and the device is invalid after connecting.

## Earphone operation mode (call control)

Call answer	Press 1 times (L/R) on the touch area to answer the call.
Call hang up	Press 1 times (L/R) to touch area to hang up the phone.
Incoming call rejection	The ear lever long presses and holds for 3 seconds (L/R) to touch area to reject incoming calls.
Voice assistants	Click on the right ear three times in a row


## Earphone operation mode (playing music)

Play / Pause	Press 1 times (L/R) on the touch area.
Previous piece	Press 1 times (L) on the touch area.
Next track	Press 1 times (R) on the touch area.
Game mode	Click the right ear 3 times in a row to enter game mode.
Volume +	Long press the right ear to increase the volume.
Volume -	Long press the left ear to decrease the volume.

## Charging instructions

- When the charging compartment is low on power, the green light flashes, please charge it in time.
- Connect one end of the USB charging cable to the Type-C charging input port of the charging compartment and the other end to the USB port of the power adapter. The orange light blinks when the charging compartment is charging, and the orange light is always on when it is fully charged. When the left and right ear is low on battery, it will report a low battery tone. Please put the headset into the charging compartment and close the cover to charge. When charging the green light is always on, fully charged green light off.
- When the headphone charging interface has foreign objects and poor contact, please use a cotton swab dipped in alcohol to gently wipe clean the headphone charging interface.

## Wearing wireless headphones




- Take out the headphones;
- Wear it behind the ear;
- Adjust the headphones to a comfortable position;
- Headphones ready

## Troubleshooting

- Unable to boot.**  
Determine whether the headset is fully charged, whether the button is misoperated, and then charge and activate.
- Unable to connect to Bluetooth.**  
Whether the headphone indicator is in the alternately flashing stage of red and blue
- Can't back to even.**  
Make sure the front end (e.g., Bluetooth) is open properly.
- Headphone volume is low.**  
Whether the phone increases the volume, the phone needs to increase or decrease the volume. Wearing a way Whether it is right.


## Matters needing attention

- Do not use violence against the product, do not use heavy objects to squeeze, away from high temperature and humidity environment.
- Stay away from WIFI, router and other high-frequency transmitting equipment, which will affect the signal of the machine, Receiving, causing the sound to snap and break.
- Please use the product in an effective environment (10 meters), and there is no space between the Bluetooth device and the headset. Have a physical barrier (e.g. wall, etc.)
- If you do not intend to use this product for a long time, please store it in a dry environment and charge the headphones at least once a month to extend their lifespan and avoid extreme temperatures and dust.

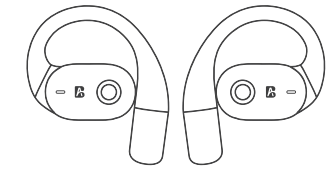

**Note:** This product can be used in connection with any audio device with wireless function.

# OWS ワイヤレス イヤホン

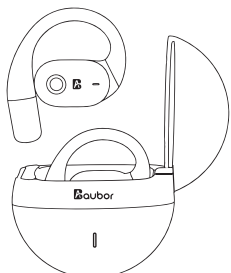


マニュアル  
Declaration ID D056232

✉ アフターメール: [Services.jp@auborshop.com](mailto:Services.jp@auborshop.com)

## 接続方法


- ワイヤレスイヤホンと携帯電話(または他の接続デバイス)の距離を1メートル以内にしてください。できるだけ近づけることが望ましいです。
- 充電ケースの蓋を開け、イヤホンを取り出すと、左右のイヤホンが自動的にペアリングされます。ペアリングには3~5秒かかり、イヤホンがゆっくと点滅するようになります。このまま待機してください。3分間ペアリングが成功しない場合は、電源を切る状態にしてください。
- ユーザーの携帯電話のBluetooth機能(または他のBluetoothデバイス)をオンにし、検索またはスキャンを行います。この時、携帯電話は周囲のBluetoothデバイス(削除可能)を検索します。検索されたイヤホンの名前「A1」を選択すると、接続が成功します。接続後、携帯電話で通話や音楽を楽しむことができます。
- 携帯電話とBluetoothが正常に接続された後、デバイスとの距離が離れて3分間接続が途切れると、自動的に電源が切れます。イヤホンが3分間デバイスに接続されていない場合、イヤホンも自動的に電源が切れます。

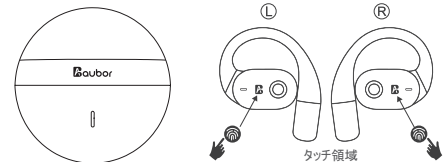

タッチ領域


## 「クイックスタートガイド

### 音楽コントロール-再生/一時停止




クリックしてヘッドセットの任意の側面をタッチする。

### 応答/電話を切る



☑ ヘッドセットの任意の側面をダブルタップして、通話に応答または電話を切ります。

### モード切り替え




左耳を3回連続でタップすると、ゲームモード/音楽モードが切り替わります。右耳を3回連続でタップすると、Siriが起動します。

### 音楽コントロール-曲の切り替え




ダブルクリックで左耳をタッチすると前の曲に、右耳をタッチすると次の曲に切り替わります。

### 着信拒否



☑ ヘッドセットのいずれかの側面を長押しして、3秒間タッチします。

### 音量調節



☑ Lを長押しを長押しして音量を下げます。  
☑ Rを長押しを長押しすると音量が上がります。

## イヤホンの操作方法(電源操作)

電源ON	1. 充電ケースの蓋を開け、L/Rイヤホンを取り出すと、自動的に電源がオンになり、自動的にペアリングが始まります。 2. L/Rイヤホンを離して長押しすると、電源がオンになります。
電源OFF	1. イヤホンを充電ケースに戻し、充電ケースの蓋を閉じると、自動的に電源がオフになります。 2. L/Rイヤホンを開いた状態で長押しすると、デバイスとの接続が切れます(無効になります)。

## イヤホンの操作方法(通話コントロール)

着信の受け付け	連続で1回(L/R)のタッチエリアを押すと、電話に応答します。
着信の切断	連続で1回(L/R)のタッチエリアを押すと、電話を切断します。
着信の拒否	3秒間(L/R)のタッチエリアを長押しすると、着信を拒否します。
音声アシスタント	3回続けて右耳をクリック

## イヤホンの操作方法(音楽再生)

再生/一時停止	連続で1回(L/R)のタッチエリアを押します。
前の曲	連続で1回(L)のタッチエリアを押します。
次の曲	連続で1回(R)のタッチエリアを押します。
ゲームモード	3回続けて右耳をクリックしてゲームモードに入る。
音量+	右耳を長押ししてボリュームを上げる。
音量-	左耳を長押しして音量を小さくする。

## 充電方法

- 充電コンパートメントの残量が少なくなると、緑色のランプが点滅します。
- USB充電ケーブルの一端を充電コンパートメントのType-C充電入力ポートに接続し、もう一端を電源アダプタのUSBポートに接続します。充電コンパートメントが充電中はオレンジ色のライトが点滅し、満充電になるとオレンジ色のライトが常に点灯します。
- 左右の耳の電池残量が少なくなると、電池残量低下音をお知らせします。ヘッドホンを充電コンパートメントに入れ、カバーを閉めて充電してください。充電中は緑色のライトが常に点灯し、満充電になると緑色のライトが消灯します。
- ヘッドホン充電インターフェースに異物や接触不良がある場合は、アルコールに浸した綿棒でヘッドホン充電インターフェースを優しく拭き取ってください。

## ワイヤレスイヤホンの装着方法




- イヤホンを取り出してください。
- イヤホンを耳の後ろに沿わせておくまで装着してください。
- ゆっくとイヤホンを調整し、快適な位置に合わせてください。
- イヤホンが使用準備完了です。

## 故障とトラブルシューティング

- 電源が入らない場合  
イヤホンが十分に充電されているか、ボタン操作が誤っていないか、充電が必要かを確認してください。
- Bluetooth接続ができない場合  
イヤホンのLEDが赤と青で点滅しているかどうかを確認してください。
- 再接続ができない場合  
接続先(例: 携帯電話のBluetooth)が正常にオンになっているかを確認してください。
- イヤホンの音量が小さい場合  
携帯電話の音量を上げているかどうか、または必要に応じて音量を上げたり下げたりしているかを確認してください。また、イヤホンの装着方法が正しいかどうかを確認してください。

## 注意事項

- 本製品に対して暴力をふるったり、重い物で圧迫したりしないでください。また、高温多湿な環境から離してください。
- Wi-Fiルーターなどの高周波発信機器から離れて使用してください。これにより、信号の受信に影響を受け、音声の途切れや切断が発生する可能性があります。
- 本製品は、有効な範囲(10メートル)内で使用してください。また、Bluetoothデバイスとイヤホンの間に壁などの物体があると、通信が妨げられる可能性があります。
- 長期間使用しない場合は、乾燥した環境で保管し、毎月少なくともイヤホン1回充電して寿命を延ばすようにしてください。極端な温度やほこりからも保護してください。

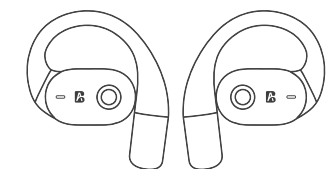

**注意:** この製品は、ワイヤレス機能を持つ音声機器と接続して使用できます。

単位	欧博东方数字科技有限公司	尺寸	70*70mm	公差	±0.5mm	比例	1:1
品名	A1无线耳机说明书	材质	128G单铜纸	绘图	Max	版本	A0
料号		工艺	七折风琴页, 单色印刷	审核		日期	2023.12.13

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **Portable**

### **RF Exposure Information**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.