

Date:	09.10.23/24.10.23
Artworker:	KR
Project Manager:	DOM
Job description:	INMOTION FASHION
Job no:	4.17.88
Supplier:	TAISONS
Supplier code:	85707
Version no:	1
SKU no:	3772249, 3772324, 3772089, 3772287
Barcode no:	5020420363047, 5020420363108, 5020420362897, 5020420363078
Line no:	11
Product:	WIRELESS SPEAKER
Pattern reference:	-
Stock specification:	UNCOATED PAPER
Finish:	-
Size:	A4 FOLDED TO A5 (DOUBLE SIDED)
A/W scale:	100%
Colour:	BLACK

Print colours
BLACK
Additional/Special Finishes
Cutter/Crease & Perforation Guides
CUTTER GUIDE

SIGN OFFS
PM (colour breakdown/copy): _____
Designer (design): _____
QC (quality copy): _____
Buyer (all elements): _____
Date sent to print: _____

Please note this run out is not a cromalin or colour proof. This run out should ONLY be signed when all the copy has been checked and is correct, and the colour breakdown, cutter dimensions and design checked and approved. Any corrections to be made should be marked on this run out and returned unsigned. Artwork will not be released until signed approval is received.

It is not WHSmith policy to send out fonts. To purchase our fonts, please contact Agfa Monotype on 0800 371242 or visit www.agfamonotype.co.uk

© WH Smith plc and its subsidiaries, 2017. All rights reserved. The contents of this artwork are not to be reproduced, copied or transmitted in any form or by any means without the consent of the copyright owner.


PLEASE NOTE ALL AMENDS MADE AFTER SIGN-OFF WILL INCUR ADDITIONAL SBU COSTS

WHSmith

Tel: 01793 616161 • Ftp: whsmith.wamnet.com
WHSmith, Greenbridge Road, Swindon, Wiltshire SN3 3RX

INMOTION

INSTRUCTIONS WIRELESS WATERPROOF SPEAKER

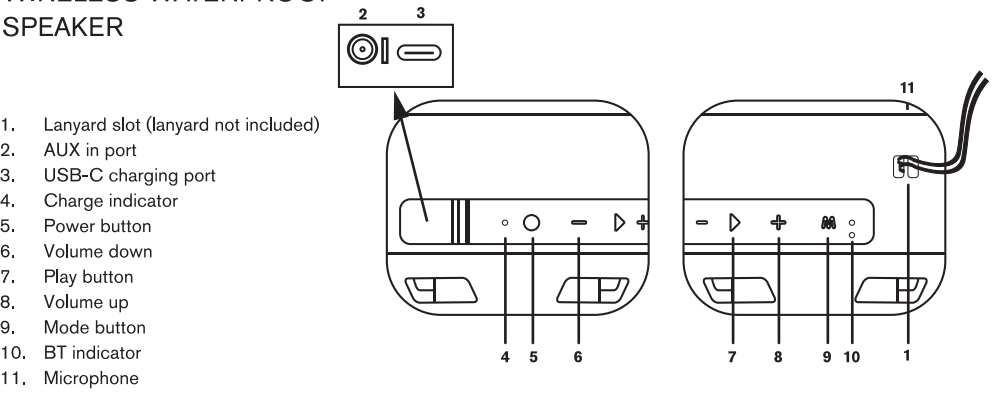

NOTE BEFORE USE

This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:

- Place the speakers in a stable position to avoid falls and damage or personal injury.
- Do not drop, disassemble, open, crush, bend, puncture or burn the speaker.
- Do not place speaker near any heat source (such as radiators, heating equipment, stoves, or other heat-generating equipment).
- Before wiping with a dry cloth to clean the speakers, set the power switch to the off position and unplug the power cord from the power outlet.
- Please adjust the sound to a suitable level to avoid damage to your ears.

SAFETY INSTRUCTIONS

Read all instructions

Only charge with devices rated and marked with 5V to avoid damage to the speaker. Do not open the speaker, it may damage the product.

Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles varies by use and settings. Never place the speaker close to high temperature heat sources. Never try to repair the product yourself.

Charging

Connect the supplied charging cable to the USB-C charging port and connect the other end to the USB-A port of the power supply. The charging indicator turns red during charging and off when fully charged. It is recommended to charge 10 minutes before powering on the speaker if it has been unused for 7 days.

Power ON/OFF

Press and hold the power button for approx. 3 seconds to turn on the speaker. The BT indicator flashes and is ready for BT pairing.

Press and hold the power button for approx. 3 seconds again to turn off the speaker. The BT indicator is now off.

Pairing

Turn on the speaker and the BT indicator flashes. Enable the BT search on your device and select "InMotion" from the list. It will give an indication sound when connection is successful. The BT indicator will stay on. Only one BT device can be connected at the same time. If you want to connect another device, you need to disconnect the current one first.

Reconnection

The speaker will automatically connect to a device which is previously paired and supports automatic reconnection.

When it is not connected, long press the Mode button to reconnect.

Press and hold the Mode button for 3 seconds to disconnect.

AUX connection

Connect the provided 3.5mm audio cable to the speaker and your device.

Playing Mode

The speaker supports playback through BT and AUX. Press the Mode button once to switch between them.

The Play Button Function

Short Press:

- Music playback, play/pause function
 - Answer an incoming call
 - Hang up a call
- ##### Long Press:
- Press and hold for 2 seconds to reject a call
 - Press and hold for 2 seconds to enter TWS (True Wireless Stereo) connection (see details on TWS Connection section). Once connected, press and hold 2 seconds to disconnect.
 - Press and hold for 5 seconds to clear the pairing information and return to default volume with a beep, the speaker will automatically turn off.

Double Press

To call back the last call when the speaker is connected to your phone via BT.

Change Volume and Song

During playback

Press Volume Up Button once to increase the volume. Press Volume Down Button once to decrease the volume.

Long press Volume Up Button to select next song. Long press Volume Down Button to select the previous song.

Hands Free Function

During BT connection, press the Play button once to answer the call, you can talk to each other through the built-in microphone. After call ended, it will continue to play music.

Long press the Play Button to reject an incoming call.

Voice Assistance

Short press Power Button to activate voice assistance while in BT mode with device has voice assistance function.

True Wireless Stereo (TWS) Connection

The speaker can connect to a same model speaker for Stereo sound.

- Turn on both speakers
- Press and hold the Play button on one of the speakers for about 2 seconds until you hear a "beep" sound. This speaker becomes the primary speaker.
- Release the Play button. It may take a few more seconds before speakers connect to each other.
- Check the indicator lights to distinguish L/R channel: The BT indicator of the primary speaker will flash blue for every 3 seconds that should be the Left channel; the BT Indicator on the other speaker stay on that should be the right channel.
- Enable the BT search on your device and pair the speakers by selecting "InMotion". It will only display one speaker which is both speakers combined.

To disconnect TWS connection, press and hold the Play Button on one of the speakers for 2 seconds until you hear a "beep" sound.

Automatic Turn Off

The speaker will turn off automatically in 10 minutes when Bluetooth is not connected and there's no playback.

Technical Specification

Range: Up to 10m
Speaker unit: ø52 mm (2.05 in.), 5W
Impedance: 4Ω
Input: DC 5V/800mA
Waterproof level: IPX7
Built-in rechargeable battery: Li-ion, 3.7V, 1200mAh
Charging Time: 3 hours
Playing time: Up to 5 hours (100% sound volume)
Product size: ø 90 X 75mm (ø 3.54 x 2.95in.)
Weight: 227g (8.0 oz)
USBC to USB-A charging cable length: 45cm (17.7 in.)
AUX to AUX cable length: 1m (39.3 in.)

FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio / TV technician for help

ISED Canada Compliance

This device complies with Industry Canada licence-empty RSS standard(s). Operation is subject to the following two conditions:

- this device may not cause interference, and
- this device must accept any interference, including interference that may cause undesired operation of the device.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


InMotion™ is owned by InMotion Entertainment LLC. Colors and content may vary. Please retain this information for future reference.

UK: WH Smith SN3 3RX UK
USA: IMEG LLC, 3755 W Sunset Rd
Suite A, Las Vegas, NV 89118
EU: WH Smith Ireland Limited, 6th Floor,
2 Grand Canal Square, Dublin 2, ROI
AU: WH Smith Australia, Level 4,
80 William Street, Woolloomooloo, 2011 NSW,
Sydney, Australia
Produced in China



INMOTION

NOTICE HAUT-PARLEUR ÉTANCHE SANS FIL

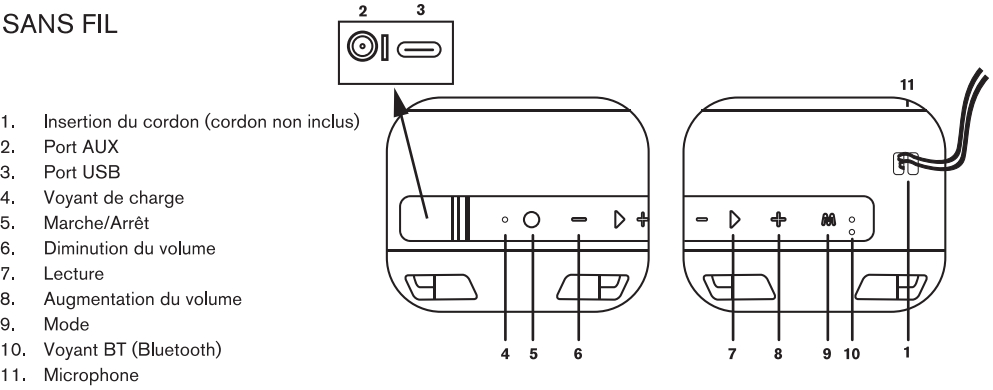

AVANT UTILISATION

Ce produit a été conçu en accordant une attention particulière aux performances en matière de sécurité. Pour garantir un fonctionnement correct et en toute sécurité, il convient de respecter les règles suivantes :

- Installer le haut-parleur en position stable pour éviter les chutes, dommages ou blessures.
- Ne pas laisser tomber, démonter, ouvrir, écraser, plier, percer ou brûler le haut-parleur.
- Ne pas positionner le haut-parleur près d'une source de chaleur (radiateur, équipement de chauffage, poêle ou autre appareil générateur de chaleur).
- Éteindre et débrancher le haut-parleur avant de l'essuyer avec un chiffon sec.
- Régler le volume de façon à ne pas nuire à votre audition.

CONSIGNES DE SÉCURITÉ

Recharger uniquement avec un dispositif dont la tension nominale est de 5 V et sur lequel figure cette tension, afin d'éviter d'endommager le haut-parleur

Ne pas ouvrir le haut-parleur : cela pourrait l'endommager.

Les batteries peuvent être rechargées un certain nombre de fois. Ce nombre et l'autonomie des batteries varient selon l'utilisation et les réglages.

Ne jamais placer le haut-parleur près de sources de chaleur élevée.

Ne jamais essayer de réparer l'appareil soi-même.

Rechargement

Connectez le câble de recharge fourni au port USB-C et l'autre extrémité du câble au port USB-A d'alimentation. Le voyant de recharge est rouge pendant le chargement; il s'éteint une fois le rechargement terminé. En l'absence d'utilisation du haut-parleur pendant 7 jours, il est conseillé de le recharger pendant 10 minutes avant de l'allumer.

Marche/Arrêt

Pour allumer le haut-parleur, appuyez sur la touche Marche/Arrêt pendant 3 secondes environ. Le voyant BT clignote alors et l'appareil est prêt à être jumelé. Pour éteindre le haut-parleur, appuyez sur la touche Marche/Arrêt pendant 3 secondes environ (le voyant BT s'éteint).

Jumelage

Allumez le haut-parleur : le voyant BT clignote. Activez la recherche BT sur votre appareil et sélectionnez « InMotion » dans la liste des appareils disponibles. L'émission d'un son confirmera alors la connexion et le voyant BT restera allumé. Il est impossible de connecter plusieurs appareils BT simultanément. Pour connecter le haut-parleur à un autre appareil, il faut d'abord déconnecter l'appareil en connexion.

Reconnexion

Le haut-parleur se connectera automatiquement à un appareil déjà jumelé (reconnexion automatique). Quand le haut-parleur n'est pas connecté, appuyez longuement sur la touche Mode pour le reconnecter. Déconnexion : appuyez sur la touche Mode pendant 3 secondes.

Connexion AUX

Branchez le câble audio de 3,5 mm au haut-parleur et à votre appareil.

Mode de lecture

Le haut-parleur permet la lecture musicale par Bluetooth et par câble AUX. Une pression sur la touche Mode vous permet de passer d'un mode à l'autre.

Fonction de lecture

- Pression rapide :
- Musique, lecture/pause
 - Réponse à un appel entrant
 - Fin d'un appel
- Pression longue :
- Pression pendant 2 secondes pour refuser un appel
 - Pression pendant 2 secondes pour passer en connexion TWS (True Wireless Stereo, voir détails dans la rubrique Connexion TWS). Déconnexion : une fois la connexion établie, appuyez pendant 2 secondes.
 - Pression pendant 5 secondes pour effacer les informations de jumelage et revenir au volume par défaut (émission d'un bip). Le haut-parleur s'éteindra automatiquement.

Pression double :

Rappel du dernier numéro sur le téléphone connecté par BT au haut-parleur.

Changement du volume et du morceau

Pendant l'écoute :

Appuyez sur la touche Augmentation du volume pour monter le son.

Appuyez sur la touche Diminution du volume pour baisser le son.

Appuyez longuement sur la touche Augmentation du volume pour passer au morceau suivant.

Appuyez longuement sur la touche Diminution du volume pour passer au morceau précédent.

Mains libres

Pendant la connexion BT, appuyez sur la touche Lecture 1 fois pour répondre à un appel : il est alors possible d'échanger avec l'interlocuteur grâce au micro intégré. Une fois l'appel terminé, le haut-parleur reprendra la lecture musicale.

Appuyez longuement sur la touche Lecture pour refuser un appel entrant.

Assistance vocale

Appuyez brièvement sur la touche Marche/Arrêt pour activer l'assistance vocale quand le haut-parleur est connecté en mode BT à un appareil doté d'une fonction d'assistance vocale.

Connexion True Wireless Stereo (TWS)

Il est possible de connecter le haut-parleur à un modèle identique pour obtenir un son en stéréo :

- Allumez les deux haut-parleurs
- Appuyez pendant 2 secondes sur la touche Lecture de l'un des deux haut-parleurs, jusqu'à l'émission d'un bip. Ce haut-parleur devient alors le haut-parleur principal.
- Rallongez la touche Lecture et attendez quelques secondes que les haut-parleurs se connectent l'un à l'autre.
- Vérifiez les voyants pour distinguer les canaux gauche et droit : le voyant BT du haut-parleur principal clignote en bleu toutes les 3 secondes pour signaler le canal gauche; le voyant BT de l'autre haut-parleur reste allumé pour signaler le canal droit.
- Activez la recherche BT sur votre appareil et jumelez les haut-parleurs en sélectionnant « InMotion ». Un seul haut-parleur s'affichera pour représenter les deux haut-parleurs.

Pour désactiver la connexion TWS, appuyez pendant 2 secondes sur la touche Lecture de l'un des haut-parleurs jusqu'à l'émission d'un bip.

Arrêt automatique

En l'absence de connexion Bluetooth et de lecture musicale, le haut-parleur s'éteint automatiquement au bout de 10 minutes.

Caractéristiques techniques :

Portée : jusqu'à 10 m
Haut-parleur : ø 52 mm, 5 W
Impédance : 4 Ohms
Entrée : CC 5 V / 800 mA
Norme d'étanchéité : IPX7
Batterie rechargeable intégrée : Li-ion, 3,7 V, 1 200 mAh
Temps de recharge : 3 heures
Autonomie : Jusqu'à 5 heures (volume à 100 %)
Dimensions : ø 90 X 75 mm
Poids : 227 g
Longueur du câble de recharge USB-C – USB-A : 45 cm
Longueur du câble AUX – AUX : 1 m

CONFORMITÉ FCC

Cet appareil est conforme à la partie 15 des règles de la FCC (Federal Communications Commission, Commission fédérale américaine des communications). Son fonctionnement est soumis aux deux conditions suivantes :

- Cet appareil ne doit pas causer d'interférences nuisibles.
- Cet appareil doit tolérer toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement indésirable.

ATTENTION ! Toute modification ou tout changement non expressément approuvé par la partie responsable de la conformité pourrait annuler le droit de l'utilisateur à utiliser l'équipement.

REMARQUE: Cet équipement a été testé et déclaré conforme aux limites d'un appareil numérique de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et est susceptible d'émettre de l'énergie radiofréquence. À ce titre, s'il n'est pas installé ou utilisé conformément aux instructions, il est susceptible de perturber les communications radio.

Cependant, il n'est nullement garanti que de telles interférences ne se produiront pas dans une installation particulière. Si cet appareil perturbe effectivement la réception de la radio ou de la télévision (ce qui peut être vérifié en allumant et en éteignant l'appareil), l'utilisateur est invité à essayer de corriger ces interférences en prenant une ou plusieurs des mesures ci-dessous:

- Reorienter ou déplacer l'antenne de réception
- Augmenter la distance entre l'équipement et le récepteur
- Connecter l'équipement à une prise reliée à un circuit différent de celui du récepteur
- Consulter le revendeur ou un technicien radio/TV qualifié pour obtenir de l'aide

Conformité ISED Canada

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- L'appareil ne doit pas produire de brouillage, et
- L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Renseignements sur l'exposition aux radiofréquences : L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé sans restriction dans des conditions d'exposition portables.

La marque InMotion™ est détenue par InMotion Entertainment LLC. La couleur et le contenu peuvent varier. Veuillez conserver cet emballage pour consultation ultérieure.

RU: WH Smith SN3 3RX UK
US: IMEG LLC, 3755 W Sunset Rd
Suite A, Las Vegas, NV 89118
UE: WH Smith Ireland Limited, 6th Floor, 2 Grand Canal Square, Dublin 2, République d'Irlande
Australie: WH Smith Australia, Level 4,
80 William Street, Woolloomooloo, 2011 NSW,
Sydney, Australie
Fabriqué en Chine

