


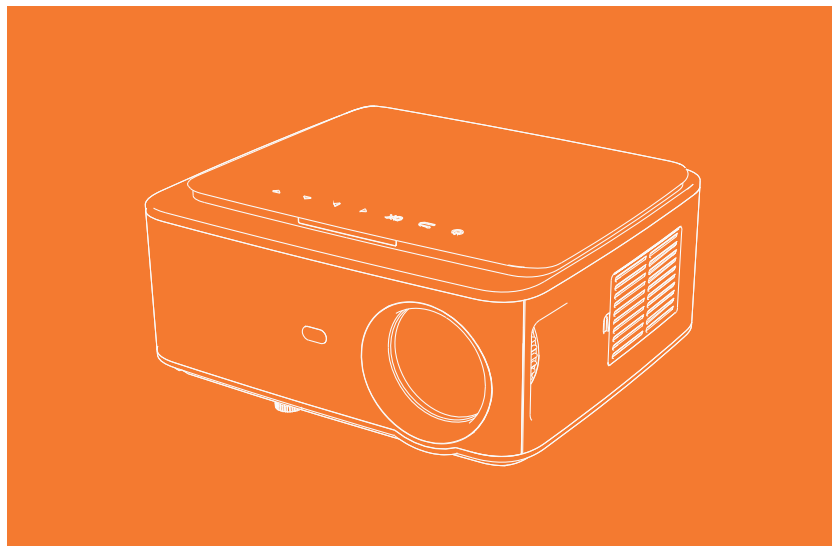

**Buffalo Pro U6 Projector**



## CONTENTS

|                                               |    |
|-----------------------------------------------|----|
| YABER Lifetime Professional Support .....     | 02 |
| TIPS .....                                    | 02 |
| PACKAGE LIS .....                             | 03 |
| PROJECTOR SPECIFICATIONS .....                | 03 |
| PROJECTOR OVERVIEW .....                      | 04 |
| REMOTE CONTOL .....                           | 06 |
| INSTALLATION .....                            | 07 |
| 1.Installation Method .....                   | 07 |
| 2.Install on the Ceiling .....                | 08 |
| STARTING PROJECTORR .....                     | 09 |
| IMAGEADJUSTMENT .....                         | 09 |
| 1.Focus Adjustment .....                      | 09 |
| 2.Digital 4D Keystone Correction .....        | 10 |
| SETTING UP THE PROJECTOR .....                | 10 |
| 1.Select The Input Signal Source .....        | 10 |
| 2.USB Disk Input Mode .....                   | 11 |
| 3.WiFi Setting .....                          | 13 |
| 3.1.iOS Cast(for iOS Devices) .....           | 14 |
| 3.2.Miracast(for Android Devices) .....       | 15 |
| 4.Bluetooth Setting .....                     | 16 |
| 5.Projector Image Setting .....               | 16 |
| 5.1.Projection Mode .....                     | 16 |
| 5.2.Keystone Advanced & 4-PointKeystone ..... | 17 |
| 5.3.Digital Zoom .....                        | 19 |
| 6.System Update .....                         | 19 |
| 7.Other Setting .....                         | 20 |
| 8.About .....                                 | 21 |
| SIGNAL LINES CONNECTION .....                 | 21 |
| 1.Connect USB Disk .....                      | 21 |
| 2.Connect the Devicesvia the HDMI ports ..... | 21 |
| 3.Connect to the DVD Player .....             | 22 |
| 4.Connect to the Soundbar/Speaker .....       | 22 |
| SAFE SHUTDOWN .....                           | 22 |
| WARRANTY .....                                | 22 |
| TROUBLESHOOTING .....                         | 23 |
| FCC STATEMENT .....                           | 24 |
| FCC Radiation Exposure Statement .....        | 24 |
| WARRANTY AND SERVICE .....                    | 24 |

## YABER Lifetime Professional Support

Dear customer,

Thank you very much for supporting YABER!

Please read this manual thoroughly before using the projector. If you have any issues, email your order number and the problem to [aftersales@yabertech.com](mailto:aftersales@yabertech.com). We will provide a fast solution in 24 hours.

Actually, many problems can be easily solved by setting, such as no signal, no sound, bluetooth connection failed, WiFi connection failed, dark spots, choppy animation etc. We promise all the projectors have been 100% carefully checked and packaged before shipping.

If you have any questions, could you please contact us so that the problem can be solved. And give us an opportunity to improve. We guarantee we will provide you a satisfactory solution.

Thanks for your understanding!  
YABER Service Team

### TIPS:

1. Do not place projector in too warm or too cold room, because the high temperature or low temperature will shorten lifespan of the device. The working environment would be 5°C~35°C better.
2. If there are black spots on the projection screen, please don't worry, please contact [aftersales@yabertech.com](mailto:aftersales@yabertech.com) via email, we can send you a video about how to remove the dust.
3. The ventilation is equipped for the projector to work stably. Don't cover the vent with cloth, blanket or other things. Don't insert anything into the slit of the projector, or it may produce a short circuit or an electric shock to your device and cause damage.
4. The projector shall be strictly protected from strong impact, extrusion and vibration. Do not try to move and on strong impact, extrusion and vibration. Do not try to move and the internal circuit faults.
5. Lens, as the core component of the projector, is directly related to the picture definition and effect. The excessive dust thereon will affect image quality. The dirty lens shall be wiped with soft cotton cloth for the glass lens surface. Hard cloth or abrasives shall not be used.


## PACKAGE LIST

|                                 |                  |              |
|---------------------------------|------------------|--------------|
| YABER <b>Pro U6</b> Projector*1 | Remote Control*1 | Power Cord*1 |
| HDMI Cable*1                    | 3-in-1 AV Cable  | Lens Cover*1 |
| Cleaning Cloth*1                | User Manual*1    |              |


## PROJECTOR SPECIFICATIONS

| Model No. Buffalo Pro U6        |                                            |                             |                                         |
|---------------------------------|--------------------------------------------|-----------------------------|-----------------------------------------|
| Native Resolution               | 1920*1080P                                 | Keystone Correction         | Manual Vertical & Horizontal            |
| Display Technology              | LCD                                        | Light Source                | LED                                     |
| Color Game                      | 16.7M Full                                 | Aspect Ratio                | 4:3/16:9                                |
| Recommended Projection Distance | 8.8-10.8ft                                 | Minimum Projection Distance | 5.5ft                                   |
| Power Voltage                   | AC100-240V                                 | Projector Weight            | 4.7lb                                   |
| Picture File                    | JPG/JPEG/<br>BMP/PNG                       | Interfaces                  | HDMI*2/USB*2/3.5mm<br>Headphone jack/AV |
| Projection Method               | Front/Rear on Desk, Front/ Rear on Ceiling |                             |                                         |
| Video File                      | 3GP/AVI/FLV/MP4/MPG/VOB/TS/M2TS/DAT/MKV    |                             |                                         |
| Audio File                      | MP3/APE/AAC/FLAC/OGG/WAV/WMA/MID/DTS/M4A   |                             |                                         |

## PROJECTOR OVERVIEW

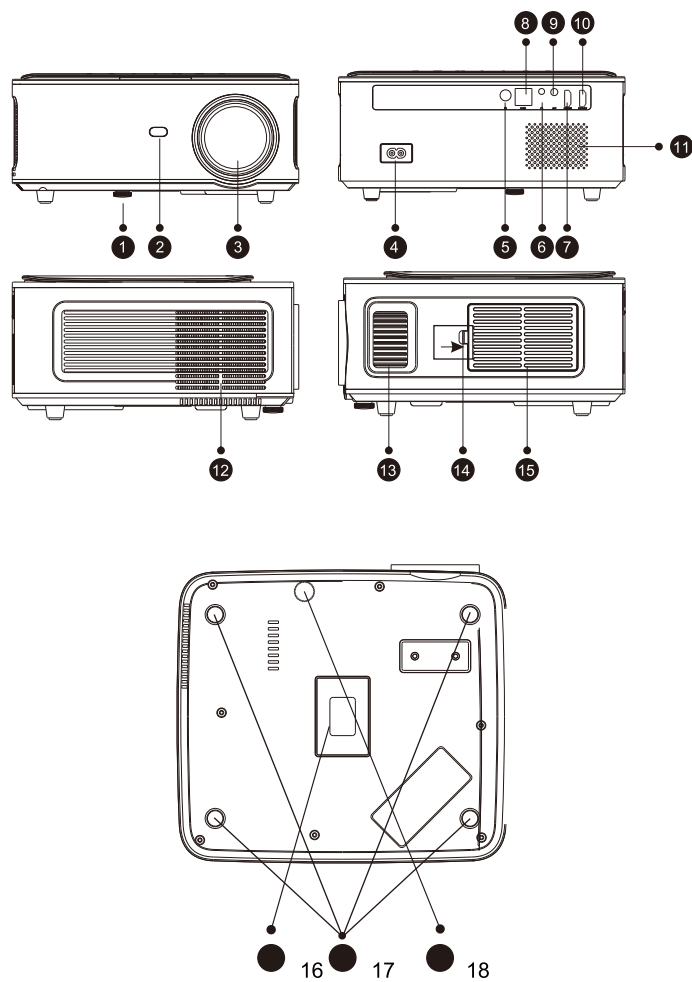


|      |                               |                                                                   |
|------|-------------------------------|-------------------------------------------------------------------|
| 1/18 | Height Adjustment Screw       | Adjust the height of the projector                                |
| 2/5  | IR Window                     | Infrared signal receiver                                          |
| 3    | Projector lens                | Optical coated glass lens                                         |
| 4    | Power Cord Port               | Power Cord Port                                                   |
| 6    | Headphone Jack                | 3.5mm Headphone Output                                            |
| 7/10 | HDMI Ports                    | HDMI 1 input / HDMI 2 input                                       |
| 8    | USB Ports                     | USB 1 port / USB 2 port                                           |
| 9    | AV Por                        | Audio input                                                       |
| 11   | Speakers                      | Speakers stereo 5w                                                |
| 12   | Vents                         | Prevent the projector from overheating                            |
| 13   | Focus Ring                    | Adjust the focus ring to get the clearest image                   |
| 14   | Detachable Dust Filter Switch | Push the switch from the right to open the detachable dust filter |
| 15   | Detachable Dust Filter        | Clean the dust (if the screen has a black spot)                   |
| 16   | Bottom label                  | Nameplate on the bottom of the projector                          |
| 17   | Rubber Pads                   | Protective pads/remove to install ceiling mount                   |

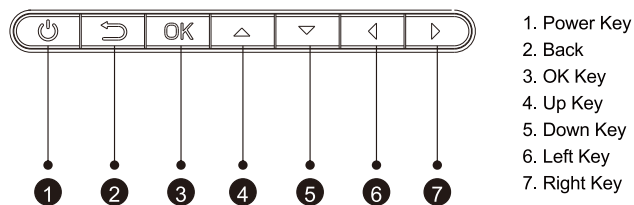

|         |            |                                                                |
|---------|------------|----------------------------------------------------------------|
| 1       | Power      | Turn on/off the power                                          |
| 2       | Back       | Return to the previous menu                                    |
| 3       | OK         | Confirm the option                                             |
| 4/5/6/7 | Arrow Keys | Used to adjust the parameter of the projector in the menu mode |

## REMOTE CONTOL

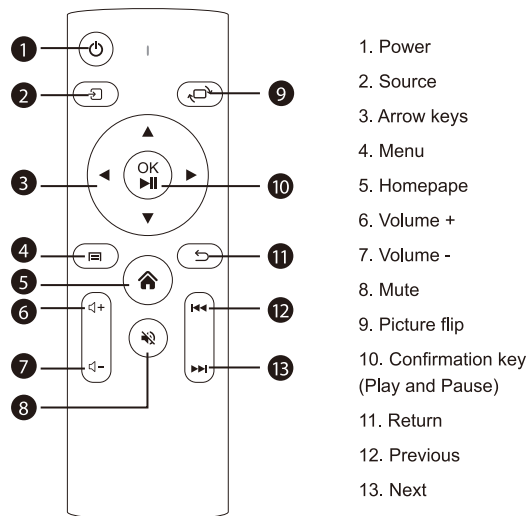

|    |  |                                                                                                 |
|----|--|-------------------------------------------------------------------------------------------------|
| 1  |  | Turn on/off the power                                                                           |
| 2  |  | Select the input signal source                                                                  |
| 3  |  | Used to adjust the parameter of the projector in the menu mode                                  |
| 4  |  | Press once: Back to the menu interface<br>Press twice in succession: select 16:9/4:3 projection |
| 5  |  | screen ratio                                                                                    |
| 6  |  | Enter the home page                                                                             |
| 7  |  | Volume up                                                                                       |
| 8  |  | Volume down                                                                                     |
| 9  |  | Close the sound                                                                                 |
| 10 |  | Picture flips                                                                                   |
| 11 |  | Confirm the option/Play or pause the video                                                      |
| 12 |  | Return to the previous menu                                                                     |
| 13 |  | Switch to the previous video                                                                    |


### Note:

- 1).Install 2 pieces of AAA batteries into the remote before using it. Do not combine new batteries with old ones in remote controller, which can cause operation failure due to insufficient power supply.
- 2).When using the remote controller, please make sure that the signal transmitter of the remote controller aims at infrared signal receiver of the projector.
- 3).If you are not using the remote controller for an extended period, please take out batteries to prevent batteries leakage.

## INSTALLATION

### 1.Installation Method

The projector can be hanged on the ceiling with special hanger frame, and placed on the stable desk to project the image according to the operating environment and requirements. In addition, the projector can be installed with following methods:

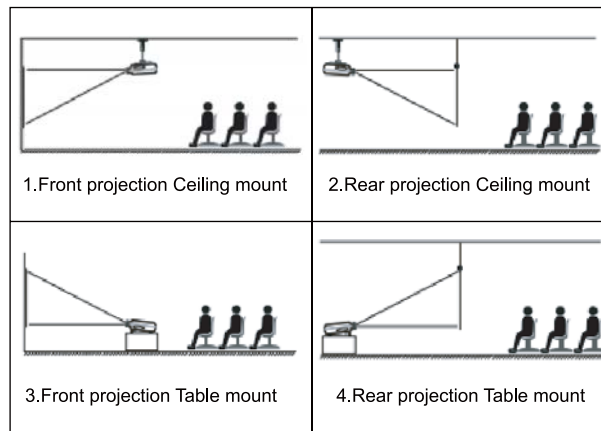

Keep the projector at a height where its lens is axial symmetry to the screen. If this is not possible, use the keystone correction function to adjust the projection image.


If you want to get a free projection screen, please contact us via [aftersales@yabertech.com](mailto:aftersales@yabertech.com)

| Aspect Ratio: 16:9 |             |
|--------------------|-------------|
| Distance (ft.)     | Screen Size |
| 5.50               | 50"         |
| 7.80               | 70"         |
| 10.8               | 100"        |
| 13.0               | 120"        |
| 16.4               | 150"        |

The recommended projection distance is about 10.8ft, the shortest projection distance is 5.5ft.

The image size depends on the distance between projector and screen, there may be 3% deviation among above listed data. Different settings cause various distances.

## 2. Install on the Ceiling

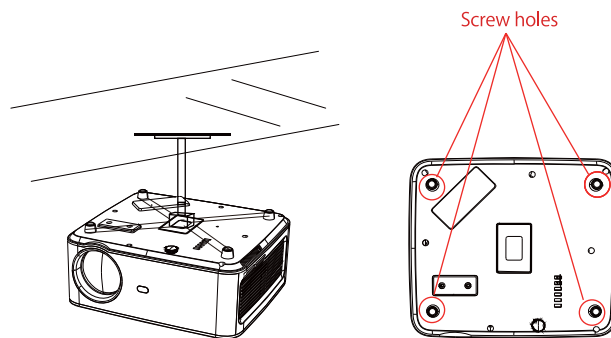

- A. Please purchase an universal projector ceiling mount;
- B. Remove the four rubber pads on the bottom of the projector, you will see the screw holes and use the M5\*11mm screws for installing the ceiling, and then install it.

## STARTING PROJECTOR


- 1) Press the power key on the remote or projector, the indicator light will turn blue;
- 2) Adjust the focus ring on the left side of the projector to get the best image performance; (If it is still blurry, please try to adjust the projection distance.)
- 3) Use the 4D keystone function of the projector to get a rectangle projection screen;
- 4) Connect the external device (Smart phone, iPad, Amazon Fire TV, TV box, DVD player, Computer, etc.) in the corresponding interfaces of the projector, please be sure to select the corresponding source. If you do not select the correct source, the projector will not be able to detect the signal;.
- 5) Select the " ⚙️ " menu, enter the [ Other Setting ], then you can select the option [ Language Setting ] to set your preferred language.


## IMAGE ADJUSTMENT

When using the projector for the first time, it normally displays an unclear image. This is due to the lens being out of focus or the incorrect trapezoid setting.

Please follow the below steps to correct:

### 1. Focus Adjustment

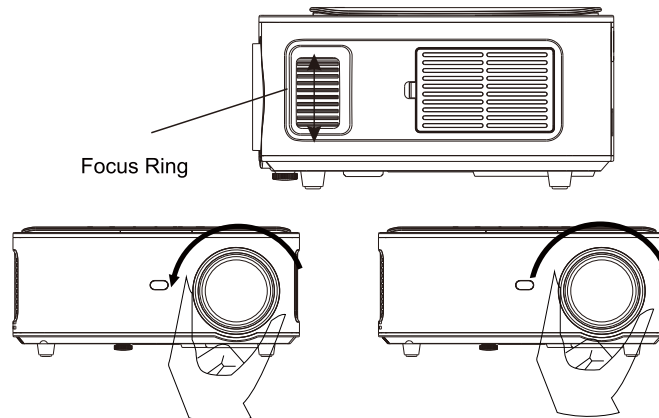

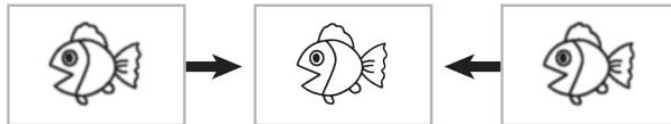

Rotate the focus ring or lens slowly. At the same time, check the focus point carefully. The best focus point for the lens would be where the image most clear.


Note: If it is still blurry, please try to adjust the projection distance.

## 2.Digital 4D Keystone Correction.

Use the digital 4d keystone correction of the projector to change the image to be rectangle(vertical and horizontal). Detail please refer the page 16 of this manual.

## SETTING UP THE PROJECTOR

The projector's home page is as follow.

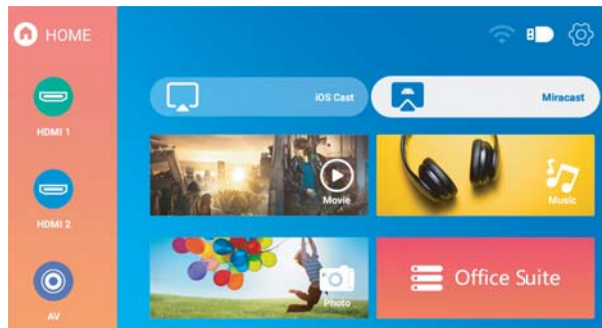

### 1.Select The Input Signal Source

Select the desired input signal source (HDMI1/HDMI2/AV) on the home-page


## 2.USB Disk Input Mode

2.1.Play Movie/Music/Photo/Office Suite in the USB Disk Input Mode


- 1).Input the USB Disk, select [ USB ] on the homepage and enter;
- 2).Select the option [ Movie/Music/Photo/Office Suite]
- 3).Select the desired file (or folder to enter the subfolder) in the USB disk, then press the [ OK ] button to play it.



### 2.2.Play Interface

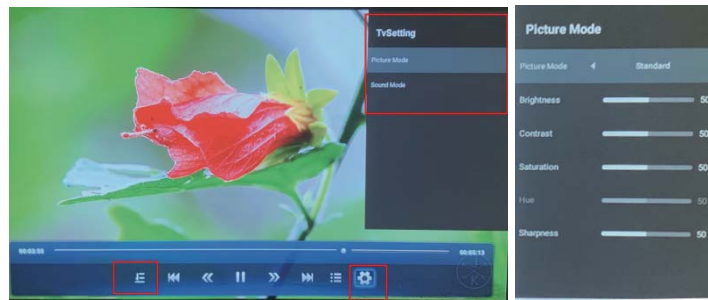


| Menu | Function                                                                                                         |
|------|------------------------------------------------------------------------------------------------------------------|
|      | Select play mode (directory play/single cycle/directory loop)                                                    |
|      | Switch to the previous video                                                                                     |
|      | Fast Backward,rewinds the video back quickly while playing it. The rewinding speed ranges from 2X to 32X         |
|      | Play or pause the current videot                                                                                 |
|      | Fast Forward, pushes the video to move forward quickly while playing it. The forward speed ranges from 2X to 16X |
|      | Switch to the next video                                                                                         |
|      | Select all playlists in the current folder                                                                       |
|      | TV Setting                                                                                                       |

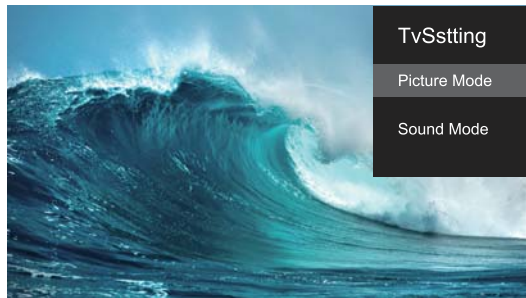

| Menu         | Content                        | Mode       | Function                                         |
|--------------|--------------------------------|------------|--------------------------------------------------|
| Picture Mode | User/Standard/Vivid/Soft       | Brightness | Modify the picture parameters in the range 0-100 |
|              |                                | Contrast   |                                                  |
|              |                                | Saturation |                                                  |
|              |                                | Sharpness  |                                                  |
| Sound Mode   | User/Standard/News/Music/Sport | 120Hz      | Modify the sound parameters in the range 0-100   |
|              |                                | 500Hz      |                                                  |
|              |                                | 1.5KHz     |                                                  |
|              |                                | 5KHz       |                                                  |
|              |                                | 10KHz      |                                                  |

### 2.3.Office Suite Play Interface

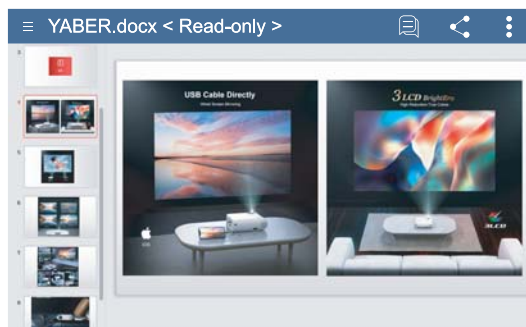

By pressing the button on the remote to enter the menus.

(Note: the Office version may be automatically updated, then the updated functions may change. Due to copyright, some functions are temporarily unavailable. Please refer to the actual version. )

| Menu                                                                               | Content                     | Function                        |
|------------------------------------------------------------------------------------|-----------------------------|---------------------------------|
|   | Invalid key, please ignore. | /                               |
|   | Invalid key, please ignore. | /                               |
|  | Export to PDF               | Export to PDF                   |
|                                                                                    | Protect                     | /                               |
|                                                                                    | Start slide show            | From the current slide          |
|                                                                                    | Advance slides              | /                               |
|                                                                                    | Cast Presentation           | /                               |
|                                                                                    | Go to Slide                 | Quickly select the desired page |
|                                                                                    | Zoom                        | Fit/Fit width/Actual size       |
|                                                                                    | Properties                  | View the properties of file     |
|                                                                                    | Help                        | Help instructions               |

### 3.WiFi Setting


#### Wireless Connection

##### Warming Tips:


- ①The fluency of screen mirroring with wireless connection will be affected by the network environment. A bandwidth of 100Mbit or more is recommended when using screen mirroring.
- ②Make sure your mobile device is close to the projector when using wireless connection. A distance within 1 meter is recommended.
- ③Some mobile devices may not support screen mirroring due to the compatibility.
- ④Any questions, please feel free to email YABER via [aftersales@yabertech.com](mailto:aftersales@yabertech.com) .

### 3.1.iOS Cast (for iOS Devices)

1.Go to home page -- Select the [  ] menu -- Select the [ WiFi Setting ] menu -- Open the WiFi function -- Select your home WiFi from the list -- Connect the Pro U6 projector to your home WiFi.

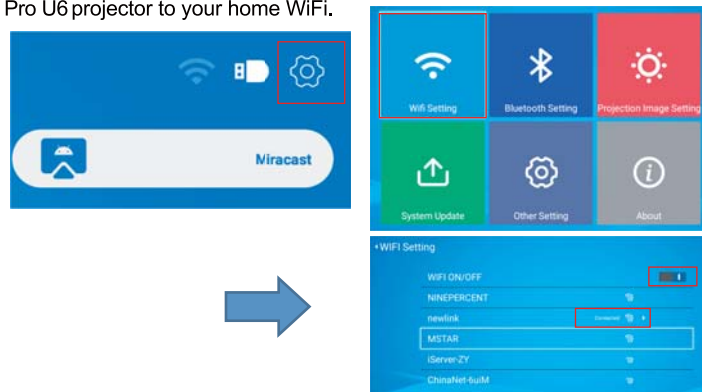

2.Back to home page -- Select [ iOS Cast ] menu -- Press the OK button to enter the [ iOS Cast ] menu.

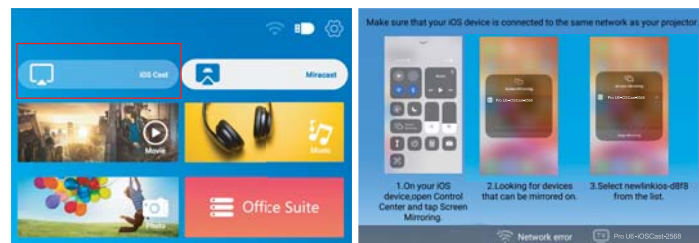


3.Select the [ Settings ] menu on your iOS device -- Turn on the [ Wi-Fi ] function -- Connect your iOS device to the same home network as the projector.


4.Open the [ Control Center ] on your iOS device -- Select the [ Screen Mirroring ] function -- Select and connect the iOS Cast receiver named [ Pro U6-iOSCast-xxxx ] -- your iOS device screen will be displayed on the projection screen after 3 seconds.

### 3.2.Miracast (for Android Devices)

1.Go to home page -- Select the [ Miracast ] menu -- Press the OK button to enter the [ Miracast Setting ] Menu.

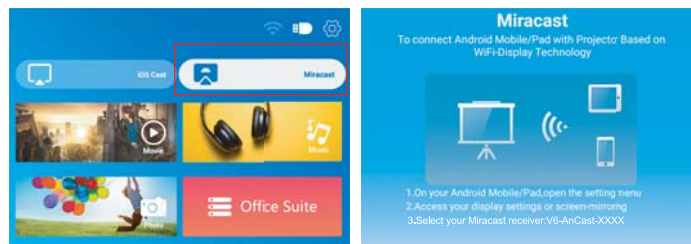

2.Select the [ Settings ] menu on your Android device -- Select the [ Screen mirroring ] function -- Select your Miracast receiver named [ **Pro U6-AnCast-X** XXX ] – your Android device screen will be displayed on the projection screen after 3 seconds.

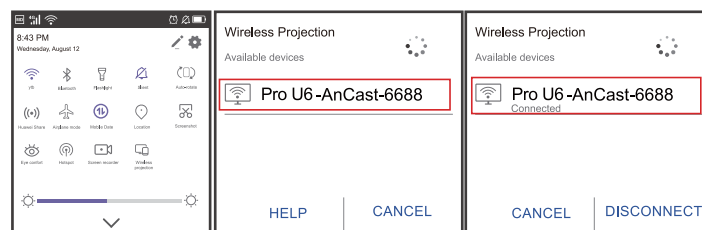


3.On your Android device, tap [ Settings ] -[ WLAN Display ] -Turn [ Wi-Fi ] ON, Connect your home WiFi.

#### Note:

- 1.Different brands of Android phones have different operations for select Screen Mirroring Display, please refer to your phone's manual. [ Multiscreen/Wireless display/WLAN display/Screen mirroring/Wireless projection/Smart view etc. ]
- 2.Not all Android phones support this function. Please make sure it is supported before use.

## 4. Bluetooth Setting

Go to home page -- Select the [  ] menu -- Select the [ Bluetooth Setting ] Option -- Open the Bluetooth function and your Bluetooth device -- Scan the Bluetooth devices nearby automatically -- Choose the Bluetooth device desired -- it will be paired and connected automatically.

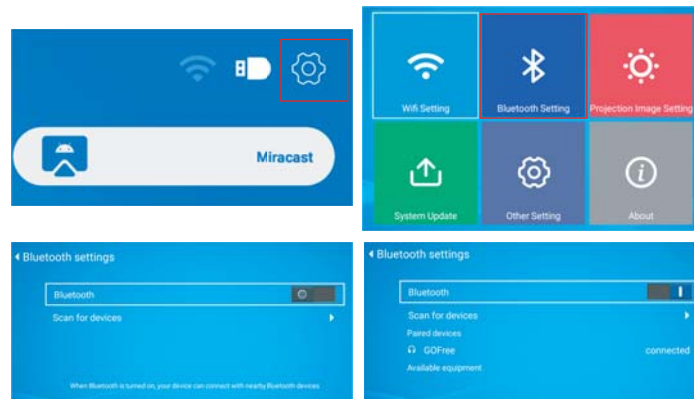


### Note:

1. The Pro U6 projector is compatible with the Bluetooth headsets, Bluetooth speakers and AirPods, but not the Bluetooth keyboards or Bluetooth phones.
2. If you have any question, please feel free to email YABER via: [aftersales@yabertech.com](mailto:aftersales@yabertech.com)

## 5. Projector Image Setting

### 5.1. Projection Mode




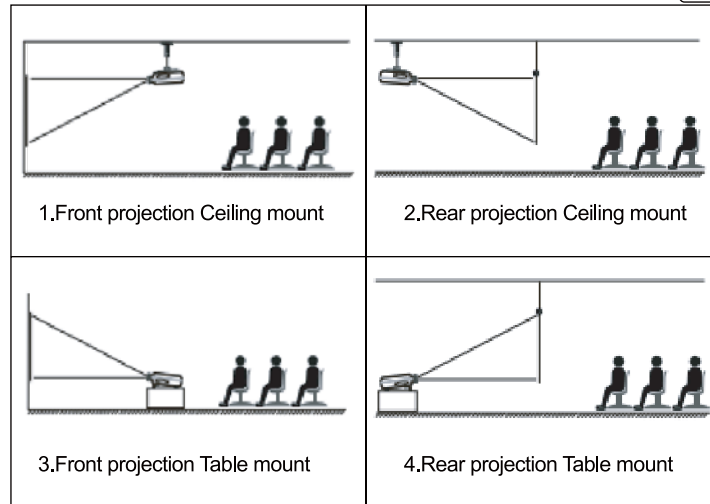

## 5.2. Keystone Advanced & 4-Point Keystone

### 5.2.1. Vertical Keystone Correction

Step 1: Select the [ Front ] option in the [ Keystone Advanced ] menu, then press the button to enter the [ Manual Keystone ] menu.

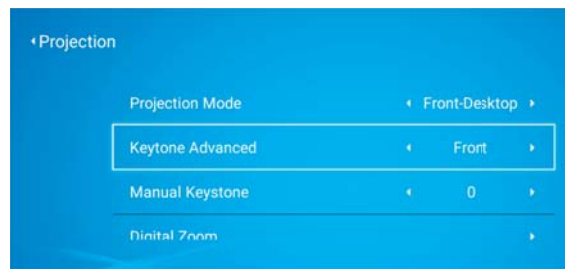

Step 2: If the projection image shows as (1), press the button on the remote or projector to increase the vertical parameter (-50~0), until to achieve the projection image (2).

Step 3: If the projection image shows as (3), then press the button on the remote or projector, and decrease the vertical parameter (0~50), until to achieve the projection image (4).




### 5.2.2.Horizontal & Vertical Keystone Correction

When the projection screen is not rectangular, it can be adjusted by 4-point keystone correction.


Step 1: Select the [ Side ] option in the [ Keystone Advanced ] menu;

Step 2: Press the button to select the [ 4-Point Keystone ] menu, then press the [ OK ] button to enter the submenu.

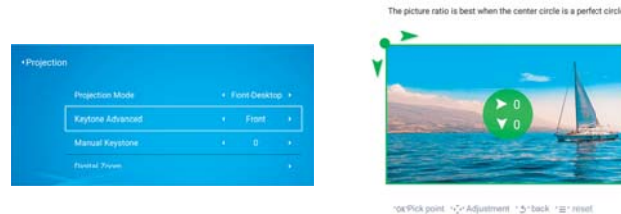

Step 3: Keep pressing the OK button on the remote control or projector to select the point .

Step 4: Press the arrow keys on the remote or projector to adjust the horizontal or vertical parameters, until the projection screen becomes the desired rectangle.

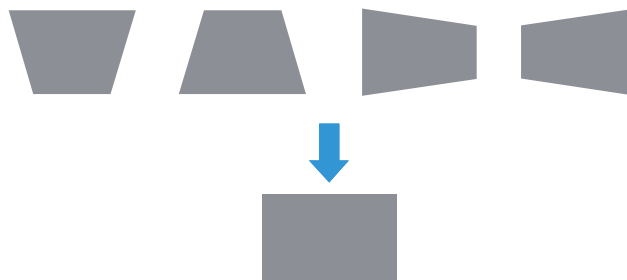

**OK Pick point** : Keep pressing the OK button on the remote control or projector, until the positioning icon  appears at the point desired, then release the button immediately.

**Adjustment** : Press the arrow keys on the remote control or projector to adjust the horizontal or vertical parameters.



**Back** : Press the key on the remote control to back to home page.

**Reset** : Press the  keys on the remote control to restore the original parameters.


### 5.3.Digital Zoom

Step 1: Select the [ Digital Zoom ] option and press the OK button to enter the submenu.

Step 2: By pressing the  button on the remote or projector, you can reduce the height and width of projection size up to 50%.

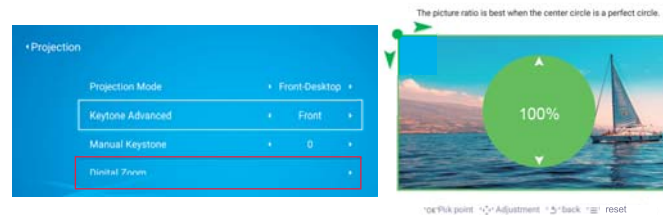


### 6.System Update

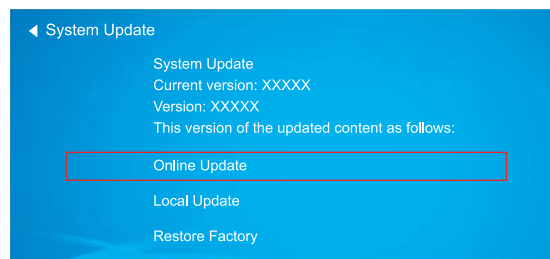

| Menu            | Function                                                            |
|-----------------|---------------------------------------------------------------------|
| Online Update   | Online update                                                       |
| Local Update    | Local update                                                        |
| Restore Factory | Restore user operation application configuration and system setting |

## 7. Other Setting

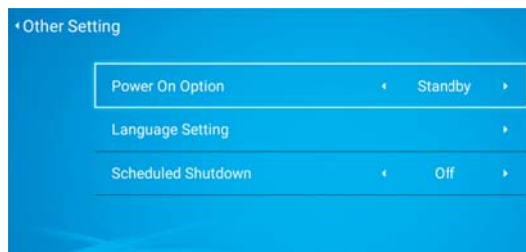

| Menu               | Function                       |
|--------------------|--------------------------------|
| Power On Option    | Direct/Standby                 |
| Language Setting   | Set up the language            |
| Scheduled Shutdown | 10min/20min/30min/60min/120min |

### About the Direct/Standby Power On Option

**Direct Mode:** When the projector is powered on, the projector will be automatically turned on.


**Standby Mode:** When the projector is powered on, you need to press the  button on the remote or projector to turn on the projector.

## 8.About

| Menu           | Content             |
|----------------|---------------------|
| System Version | V1.0.0.0.2020-08-27 |
| MAC Addressr   | Ac:5d:5c:c5:d9:83   |

## SIGNAL LINES CONNECTION

YABER **Pro U6** projector has 6 interfaces, HDMI ports\*2/USB ports\*2/3.5mm headphone output/AV output. Please select the correct connecting port to connect your device (PC, Phone, DVD Player, Sound bar, USB, PS4 etc.)

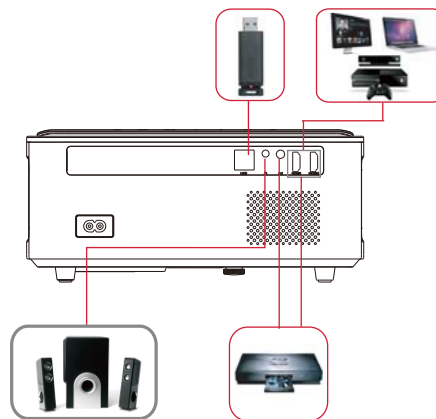

### 1.Connect USB Disk

- 1) Insert the U disk into either of the two usb input ports;
- 2) You can directly enter the start-up screen on the home page, select the option [ Movie/Music/Photo/Office Suite]
- 3) Select the desired file (or folder to enter the subfolder) in the USB disk, then press the [ OK ] button to play it.


### 2.Connect the Devices via the HDMI ports

- 1) Connect your TV stick or laptop to any HDMI port of the projector;
- 2) Enter the home page to select the corresponding HDMI1 or HDMI2 as the signal source.


### 3. Connect to the DVD Player

Use the 3-in -1 AV cable in the package

- 1) Turn on your DVD player and the projector;
- 2) Connect the colorful female connectors to your DVD player's RCA cable with the 3-in-1 AV cable in the package;
- 3) Connect the black connector to the AV port of the projector, enter the home page to select [ AV ] as the signal source.



Or connect to the DVD Player with the HDMI cable in the package.



### 4. Connect to the Sound bar/Speaker

If your speaker has AUX port, please use your 3.5mm audio cable connect the projector and your speaker as the picture shows, enter the home page to select [ AV ] as the signal source.



## SAFE SHUTDOWN

1. Press the  button on the projector or remote.
2. Unplug the power cord of the projector.
3. Cover the lens and store the projector in a cool and dry place.

## WARRANTY

Thank you so much for your purchase and support! We provide 3-year warranty for **Pro U6** projector. If you have any questions, please feel free to contact us via [aftersales@yabertech.com](mailto:aftersales@yabertech.com)

## TROUBLESHOOTING

Problems listed below might occur during the operation of your projector.  
Please refer to the possible factors which might cause the issue to do troubleshooting.

**1. When turning on the power switch, the indicator light does not work.**

- 1) The power might not be connected well.
- 2) Check the over-heat protection system.

**2. The remote control does not communicate with the projector.**

- 1) The power switch at the back of the projector is turned on or off?
- 2) The remote control's batteries are depleted?
- 3) Something obstructing the signal between the remote and IR
- 4) Strong light on IR directly.

**3. No image on the screen.**

- 1) Is the channel set-up correct?
- 2) Is there an input signal ?
- 3) Is the input cable plugged well ?
- 4) Under PC mode, is the refresh rate > 75KHz ?

**4. Blue screen,no picture,no sound.**

Input cables connected right?

**5. Picture right, no sound.**

- 1) Input cables connected right?
- 2) Volume at min or on Mute.

**6. Can't play the movies.**

- 1) The format of the video is right?
- 2) Files are broken?
- 3) Device is broken?

**7. There is picture, no sound?**

The decode system doesn't match.

**8. Can't find devices when connected with hard drive or flash drive.**

Check if the device is broken.

**9. Auto-off after working for a while.**

- 1) The projector ventilation is blocked.
- 2) The voltage is not stable.
- 3) The over-heat protection system.

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## WARRANTY AND SERVICE

Should this unit be operated under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, this will render WARRANTY VOID. The product you buy may sometimes differ slightly from illustration.



**DISPOSAL:** Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



- 2) ¿Las pilas del mando a distancia están agotadas?
- 3) Algo que obstruye la señal entre el control remoto e IR.
- 4) Luz fuerte en IR directamente.

### 3. No hay imagen en la pantalla.

- 1) ¿Es correcta la configuración del canal?

- 2) ¿Hay señal de entrada?

- 3) ¿Está bien conectado el cable de entrada?

- 4) En el modo PC, ¿la frecuencia de actualización es > 75 KHz?

### 4. Pantalla azul, sin imagen, sin sonido.

- ¿Está conectado correctamente el cable de entrada?

### 5. Imagen correcta, sin sonido.

- 1) ¿Está conectado correctamente el cable de entrada?

- 2) Determine si el volumen está al mínimo o en silencio.

- 3) El sistema de decodificación no coincide.

### 6. No puedo reproducir películas.

- 1) ¿El formato del video es correcto?

- 2) ¿Los archivos están rotos?

- 3) ¿El dispositivo está roto?

### 7. No puedo encontrar dispositivos cuando están conectados con un disco duro o una unidad flash.

- Compruebe si el dispositivo está roto.


### 8. Apagado automático después de trabajar durante un período de tiempo.

- 1) La ventilación del proyector está bloqueada.

- 2) El voltaje no es estable.

- 3) El sistema de protección contra sobrecalentamiento.

**4. Conecte la Barra de Sonido / Altavoz**  
Si su altavoz tiene un puerto AUX, utilice su cable de audio de 3,5 mm para conectar el proyector y el altavoz como muestra la imagen, ingrese a la página de inicio para seleccionar [AV] como fuente de señal.



## APAGADO SEGURO

1. Presione el botón  del proyector o del control remoto.
2. Desenchufe el cable de alimentación del proyector.
3. Cubra la lente y guarde el proyector en un lugar fresco y seco.

## GARANTIA

¡Muchas gracias por su compra y apoyo! Ofrecemos una garantía de 3 años para el proyector **Pro U6**. Si tiene alguna pregunta, no dude en contactarnos a través de: [affersales@yabertech.com](mailto:affersales@yabertech.com)

## Preguntas Frecuentes

Los problemas enumerados a continuación pueden ocurrir durante el funcionamiento de su proyector. Consulte los posibles factores que pueden causar el problema para solucionar el problema.

**1. Al encender el interruptor de encendido, la luz indicadora no funciona..**

- 1) Es posible que la alimentación no esté bien conectada.
  - 2) Verifique el sistema de protección contra sobrecalentamiento.
- 2. El control remoto no puede controlar el proyector.**
- 1) ¿El interruptor de encendido en la parte posterior del proyector está encendido o apagado?

**1. Conecte el Disco USB**


- 1) Inserte el disco U en cualquiera de los dos puertos de entrada USB;
- 2) Puede ingresar directamente a la pantalla de inicio en la página de inicio, seleccione la opción [Película / Música / Foto / Office Suite].
- 3) Seleccione el archivo deseado (o carpeta para ingresar a la subcarpeta) en el disco USB, luego presione el botón [OK] para reproducirlo.

**2. Conecte los Dispositivos a través de los puertos HDMI**


- 1) Conecte su TV stick o computadora portátil a cualquier puerto HDMI del proyector;
- 2) Ingrese a la página de inicio para seleccionar el HDMI1 o HDMI2 correspondiente como fuente de señal.

**3. Conecte al reproductor de DVD**

- Utilice el cable AV 3-en-1 en el paquete
- 1) Encienda su reproductor de DVD y el proyector;
- 2) Conecte los conectores hembra de colores al cable RCA de su reproductor de DVD con el cable AV 3 en 1 incluido en el paquete;
- 3) Conecte el conector negro al puerto AV del proyector, ingrese a la página de inicio para seleccionar [AV] como fuente de señal.



O conéctelo al Reproductor de DVD con el cable HDMI incluido en el paquete.

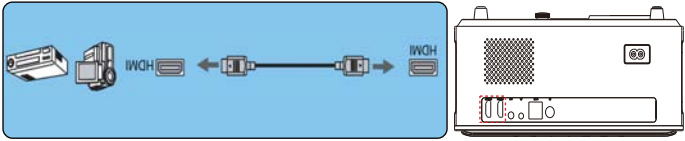


8. Acerca de

| Menú                | Contenido           |
|---------------------|---------------------|
| Versión del Sistema | V1.0.0.0.2020-08-27 |
| Dirección MAC       | Ac:5d:5c:c5:d9:83   |


Conectarse con Otros Dispositivos

El YABER Pro U6 proyector tiene 6 interfaces, puertos HDMI \* 2 / puertos USB \* 2 / salida de auriculares de 3,5 mm / Salida AV. Seleccione el puerto de conexión correcto para conectar su dispositivo (PC, Teléfono, Reproductor de DVD, Barra de Sonido, USB, PS4, etc.)

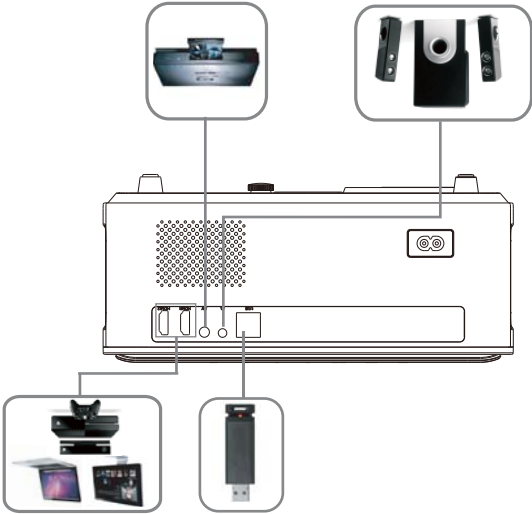

| Menu                   | Función                                                                                             |
|------------------------|-----------------------------------------------------------------------------------------------------|
| Actualización en línea | Actualización en línea                                                                              |
| Actualización local    | Actualización local                                                                                 |
| Restaurar fábrica      | Restaurar la configuración de la aplicación de operación del usuario y la configuración del sistema |



7.Otras Ajuste

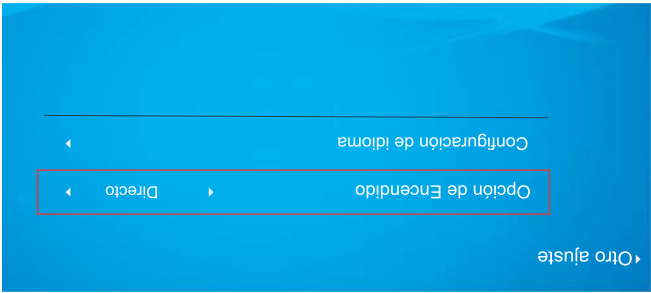

| Menu                    | Función                        |
|-------------------------|--------------------------------|
| Directo / En espera     | Directo / En espera            |
| Configuración de idioma | Configurar el idioma           |
| Apagado programado      | 10min/20min/30min/60min/120min |



Acerca de la Opción de Encendido Directo / en Espera

Modo Directo: Cuando el proyector está encendido, el proyector se encend-  
rá automáticamente.  
Modo de Espera: Cuando el proyector está encendido, debe presionar el botón  en el control remoto o el proyector para encender el proyector.


-  ajuste: Presione las teclas de flecha del control remoto o del proyector para ajustar los parámetros horizontales o verticales.
-  Presione el botón: en el control remoto para regresar a la página de inicio.
-  Presione el botón: del mando a distancia para restaurar los parámetros originales.

### 5.3.Digital Zoom

- Paso 1: Seleccione la opción [Digital Zoom] y presione el botón OK para ingresar al submenú.
- Paso 2: Al presionar el botón del control remoto o del proyector, puede reducir la altura y el ancho del tamaño de proyección hasta en un 50%.

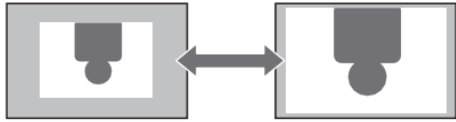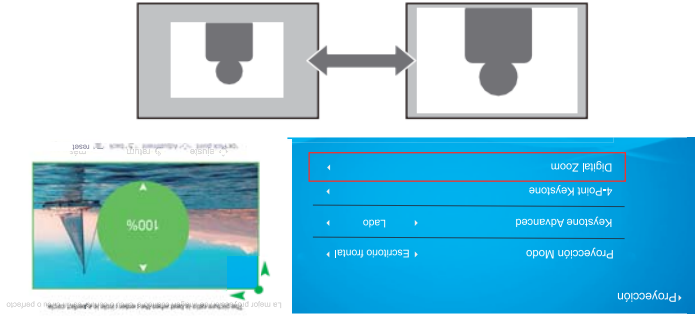

## 6. Actualización del Sistema

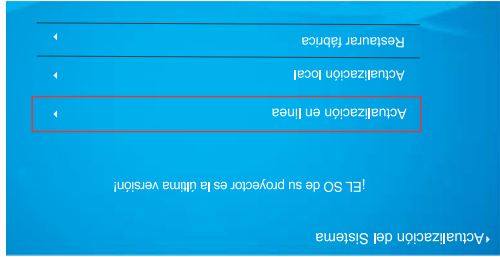

### 5.2.2. Corrección Trapezoidal Horizontal y Vertical

Cuando la pantalla de proyección no es rectangular, se puede ajustar mediante la corrección trapezoidal de 4 puntos.


Paso 1: Seleccione la opción [Lateral] en el menú [Keystone Advanced];

Paso 2: Presione el botón para seleccionar el menú [4-Point Keystone], luego presione la parte inferior [OK] para ingresar al submenú.



Paso 3: Siga presionando el botón OK en el Control Remoto o proyector para seleccionar el punto.

Paso 4: Presione arrow keys en el control remoto o proyector para ajustar los parámetros horizontales o verticales, hasta que la pantalla de proyección se convierta en el rectángulo deseado.

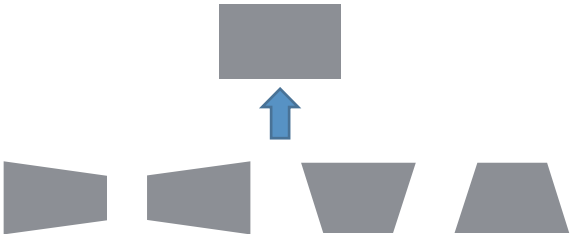


OK seleccionar puntos : Continúe presionando el botón OK en el control remoto o proyector, hasta que el icono de posición aparezca en el punto deseado, luego suelte el botón inmediatamente.

## 5.2. Keystone Avanzado & Keystone de 4 Puntos


### 5.2.1. Corrección Trapezoidal Vertical

Paso 1: Seleccione la opción [Frente] en el menú [Keystone Advanced], luego presione el botón para ingresar al menú [Keystone Manual].

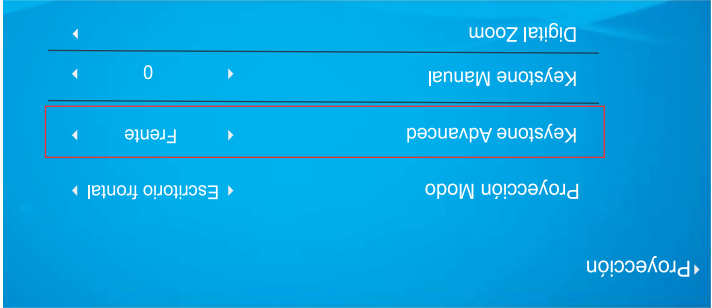

Paso 2: Si la imagen de proyección se muestra como (1), presione el botón en el control remoto o proyector para aumentar el parámetro vertical (-50 ~ 0), hasta lograr la imagen de proyección (2).



Paso 3: Si la imagen de proyección se muestra como (3), presione el botón en el control remoto o el proyector y disminuya el parámetro vertical (0 ~ 50), hasta lograr la imagen de proyección (4).

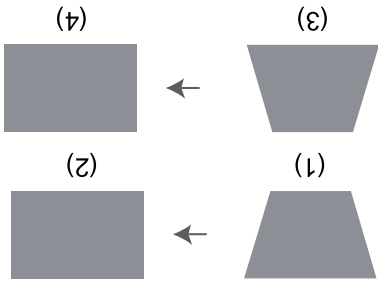

2.Si tiene alguna pregunta, no dude en enviar un correo electrónico a [affersales@yabertech.com](mailto:affersales@yabertech.com)

## 5.Configuración de Imagen del Proyector

### 5.1.Modos de Proyección

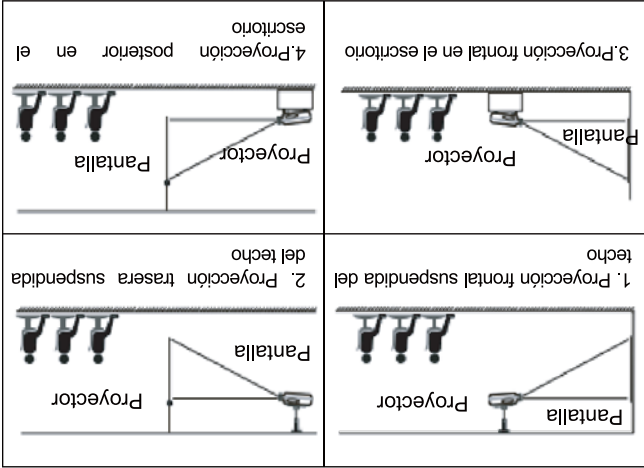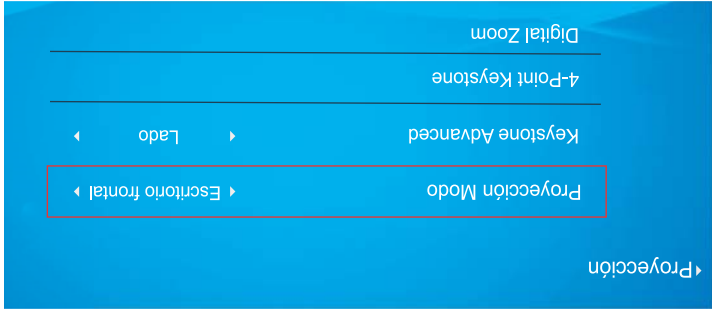

**Nota:**

1. Las diferentes marcas de teléfonos Android tienen diferentes operaciones para seleccionar.  
Pantalla duplicada de pantalla, consulte el manual de su teléfono. [Pantalla múltiple / Pantalla inalámbrica / Pantalla WLAN / Duplicación de pantalla / Proyección inalámbrica / Vista inteligente, etc.]  
2. No todos los teléfonos Android admiten esta función. Asegúrese de que sea compatible antes de usarlo.

**4.Configuración de Bluetooth**

Vaya a la página de inicio - Seleccione el menú [Configuración de Bluetooth] - Abra la función Bluetooth y su dispositivo Bluetooth - Escanee los dispositivos Bluetooth cercanos automáticamente - Elija el dispositivo Bluetooth deseado - se emparejará y conectará automáticamente.



**Nota:**


4. Abra el [Centro de control] en su dispositivo iOS - Seleccione la función [Screen Mirroring] - Seleccione y conecte el nombre del dispositivo [ Pro U6 -iOS-Cast-xxxx] - La pantalla de su dispositivo iOS se mostrará en la

proyección pantalla después de 3 segundos.


### 3.2.Miracast (para dispositivos Android)

1. Vaya a la página de inicio - Seleccione el menú [📶] - Seleccione el menú [Configuración de WiFi] - Abra la función WiFi - Seleccione su WiFi doméstico de la lista - Conecte el proyector Pro U6 a su WiFi doméstico.

2. Regresar a la página de inicio - Seleccione el menú [Miracast] - Presione el botón OK para ingresar al menú [Miracast].

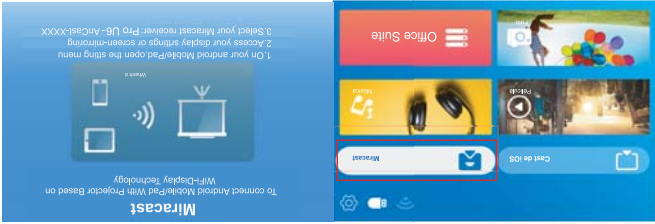

3. Seleccione el menú [Configuración] en su dispositivo Android - Seleccione la función [Duplicación de pantalla] - Seleccione y conecte el nombre del dispositivo [ Pro U6 -AnCast-XXXX] - La pantalla de su dispositivo Android se mostrará en la pantalla de proyección después de 3 segundos.

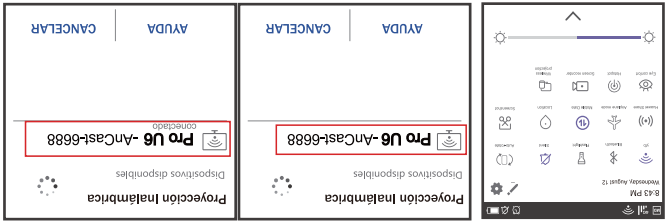


En su dispositivo Android, toque [Configuración] - [WLAN] - Encienda [Wi-Fi], conecte el WiFi de su hogar.

③ Algunos dispositivos móviles pueden no admitir la duplicación de pantalla debido a la compatibilidad.


④ Cualquier pregunta, no dude en ponerse en contacto con YABER a través de [Support@yabertech.com](mailto:Support@yabertech.com).

### 3.1. iOS de Cast (para Dispositivos iOS)

1. Vaya a la página de inicio - Seleccione el menú [📶] - Seleccione el menú [Configuración WiFi] - Abra la función WiFi - Seleccione su WiFi doméstico de la lista - Conecte el proyector **Pro U6** a su WiFi doméstico.

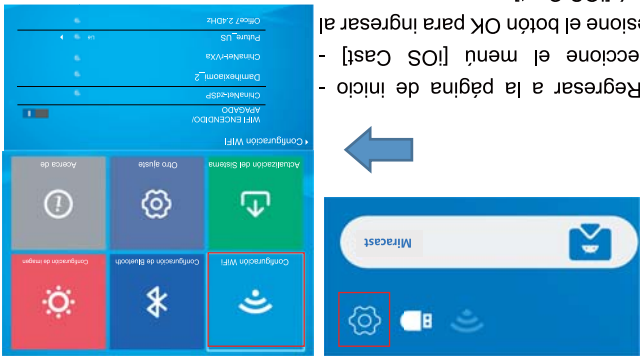

2. Regresar a la página de inicio - Seleccione el menú [iOS Cast] - Presione el botón OK para ingresar al menú [iOS Cast].

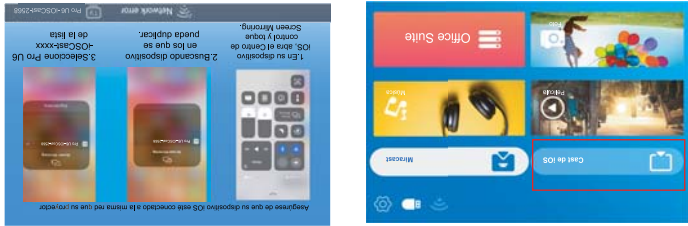

3. Seleccione el menú [Configuración] en su dispositivo iOS - Encienda la función [Wi-Fi] - Conecte su dispositivo iOS a la misma red doméstica con el proyector.

Pulsando el botón  del mando a distancia para acceder a los menús. (Nota: la versión de Office puede actualizarse automáticamente, luego las funciones actualizadas pueden cambiar. Debido a los derechos de autor, algunas funciones no están disponibles temporalmente. Consulte la versión real).

|                                                                                       |                      |                                          |         |
|---------------------------------------------------------------------------------------|----------------------|------------------------------------------|---------|
| Menú                                                                                  |                      | Content                                  | Función |
|  | No válida, ignórela. | /                                        |         |
|  | No válida, ignórela. | /                                        |         |
|                                                                                       |                      |                                          |         |
|  | Exportar a PDF       | Exporter au format PDF                   |         |
|                                                                                       | Protéger             | /                                        |         |
|                                                                                       | Firma Rápido         | /                                        |         |
|                                                                                       | Texto a habla        | /                                        |         |
|                                                                                       | Ver web              | De la diapositiva actual                 |         |
|                                                                                       | Modo nocturno        | /                                        |         |
|                                                                                       | Ir a la página       | Seleccione rápidamente la página deseada |         |
|                                                                                       | Zoom                 | Ajustar/Ajustar ancho/Tamaño real        |         |
|                                                                                       | Vista combinada      | /                                        |         |
|                                                                                       | Propiedades          | Ver las propiedades del archivo          |         |
|                                                                                       | Ayuda                | Instrucciones de ayuda                   |         |

### 3.Conexión inalámbrica


#### Consejos Calientes:

- ① La fluidez de la duplicación de pantalla con conexión inalámbrica se verá afectada por el entorno de red. Se recomienda un ancho de banda de 100Mbit o más cuando se usa la duplicación de pantalla.
- ② Asegúrese de que su dispositivo móvil esté cerca del proyector cuando utilice una conexión inalámbrica. Se recomienda una distancia de 1 metro.



| Menú         | Contenido                      | Modo        | Función                                                 |
|--------------|--------------------------------|-------------|---------------------------------------------------------|
| Picture Mode | User/Standard/Vivid/Soft       | Brighthness | Modifique los parámetros de la imagen en el rango 0-100 |
|              |                                | Contrast    |                                                         |
|              |                                | Saturation  |                                                         |
|              |                                | Sharpness   |                                                         |
| Sound Mode   | User/Standard/News/Music/Sport | 120Hz       | Modificar los parámetros de sonido en el rango 0-100    |
|              |                                | 500Hz       |                                                         |
|              |                                | 1.5KHz      |                                                         |
|              |                                | 5KHz        |                                                         |
|              |                                | 10KHz       |                                                         |

2.3. Interfaz de lectura de Office Suite

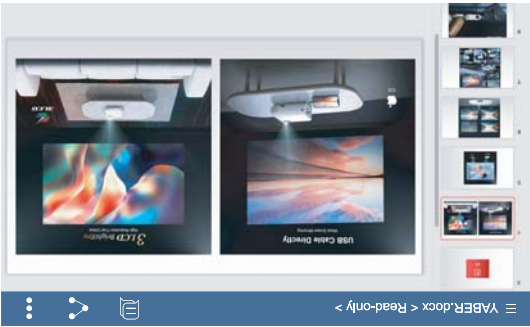


2.Modos de entrada de disco USB

2.1.Reproducir película/música/foto/Office Suite en el modo de entrada de disco USB


- 1).Inserte el disco USB;
- 2).Seleccione la opción "Película/Música/Foto/Office Suite";
- 3).Seleccione el archivo deseado (o la carpeta para ingresar a la subcarpeta) en el disco USB, luego presione el botón "OK" para reproducirlo.



2.2.Interface de lectura de vídeo

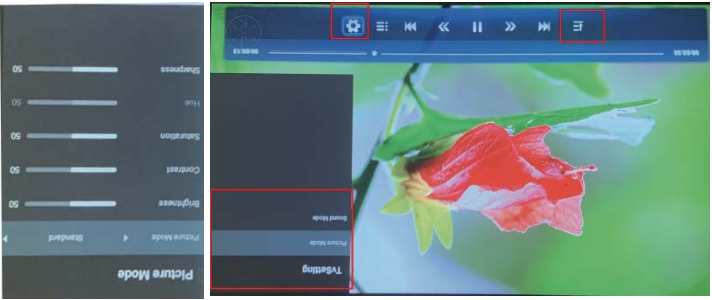

| Función                                                                                                                 | Menú |
|-------------------------------------------------------------------------------------------------------------------------|------|
| Seleccione el modo de reproducción (reproducción de directorio / ciclo único / bucle de directorio)                     |      |
| Cambiar al vídeo anterior                                                                                               |      |
| Fast Backward, rebobina el vídeo rápidamente mientras lo reproduce, los la velocidad de rebobinado varía de 2X a 32X    |      |
| Reproducir o pausar el vídeo actual                                                                                     |      |
| Avance rápido, empuja el vídeo para avanzar rápidamente mientras lo reproduce. La velocidad de avance varía de 2X a 16X |      |
| Cambiar al siguiente vídeo                                                                                              |      |
| Seleccionar todas las listas de reproducción en la carpeta actual                                                       |      |
| TV Setting                                                                                                              |      |

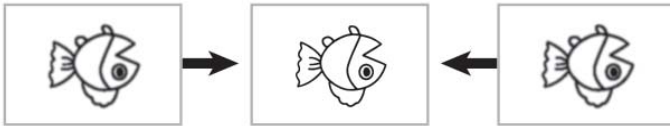

**Nota:** Si todavía está borroso, intente ajustar la distancia de proyección.

## 2. Corrección trapezoidal 4D digital (máximo ajustable $\pm 50^\circ$ )


Utilice la corrección trapezoidal 4D digital del proyector para cambiar la imagen a un rectángulo. La corrección trapezoidal se puede ajustar hasta  $\pm 50^\circ$  (vertical y horizontal).

## CONFIGURACIÓN DEL PROYECTOR

La página de inicio del proyector es la siguiente:

## 1. Seleccione la fuente de la señal de entrada

Seleccione la fuente de  
señal de entrada deseada  
(HDMI1 / HDMI2 / AV) en la  
página de inicio

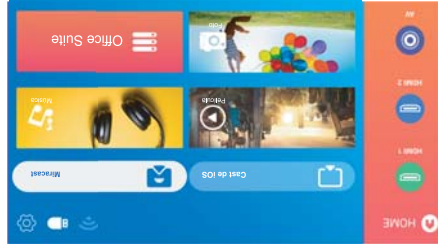

- A. Compre un soporte universal con tornillo M5\*11 para instalar el proyector en el techo.
- B. Instale el proyector en el soporte a través de los orificios para tornillos en la parte inferior del proyector.

## Encender el proyector

- A. Presione el botón  en el control remoto o proyector, el indicador LED se pondrá azul.

- B. Ajuste el anillo de enfoque en la parte superior del proyector para ajustar el enfoque. Si la imagen no es clara, ajuste la distancia de proyección.

- C. Ajuste la corrección trapezoidal 4d usando el control remoto.

- D. Conecte el dispositivo externo (teléfono inteligente, iPad, Amazon Fire TV, caja de TV, disco flash USB, reproductor de DVD, computadora, etc.) a las interfaces correspondientes.

- del proyector y presione el botón "S" en el control remoto, luego seleccione la fuente de señal de entrada correcta.


- E. Seleccione el botón  en la pantalla de inicio para acceder al submenú "Otros ajustes", luego seleccione la opción "Ajustes de idioma" para configurar su idioma preferido.

## Ajuste de imagen

Cuando utiliza el proyector por primera vez, normalmente muestra una imagen borrosa. Esto se debe a que la lente está desenfocada o a una configuración trapezoidal incorrecta.

Siga los pasos a continuación para corregir:

### 1. Ajuste de enfoque

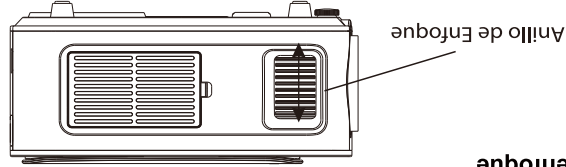

La lente del proyector debe instalarse en los ejes de simetría izquierdo y derecho de la pantalla para evitar la distorsión trapezoidal de las imágenes izquierda y derecha.

**2.La distancia entre el proyector y la pantalla**



Si desea obtener un tela de proyección gratuita, contáctenos a través de [affersales@yabertech.com](mailto:affersales@yabertech.com)

| Ratio d'aspec defecto: 16:9 |                      |
|-----------------------------|----------------------|
| Distancia de proyección (m) | Tamaño de proyección |
| 1.7                         | 50"                  |
| 2.3                         | 70"                  |
| 3.3                         | 100"                 |
| 3.9                         | 120"                 |
| 5                           | 150"                 |

La distancia de proyección recomendada es 3.3 m, la distancia de proyección más corta es 1.68 m.

El tamaño de la imagen depende de la distancia entre el proyector y la pantalla, puede haber una desviación del 3% entre los datos ennumerados anteriormente. Diferentes configuraciones causan varias distancias.

Screw holes

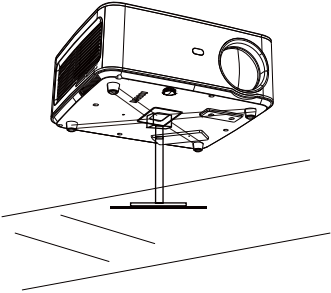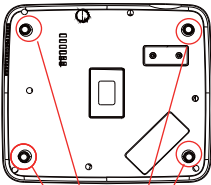

**3.Instalar en el techo**


**Nota:**

- 1. Instale 2 baterías AAA en el control remoto antes de usar. No combine baterías nuevas y viejas en el control remoto, ya que esto puede causar un mal funcionamiento debido a una fuente de alimentación insuficiente.
- 2. Cuando use el control remoto, asegúrese de que el transmisor de señal del control remoto apunte al receptor IR.
- 3. Si no utiliza el control remoto durante mucho tiempo, retire las baterías para evitar fugas.

**INSTALLATION**

**1. méthode d'installation**

El proyector de video puede suspenderse del techo con un marco colgante especial, o colocarse en el escritorio estable para proyectarse en la pantalla, que se adapta bien a diferentes entornos operativos y diferentes requisitos de uso. Por lo tanto, el proyector se puede instalar con métodos de acuerdo con las siguientes ilustraciones

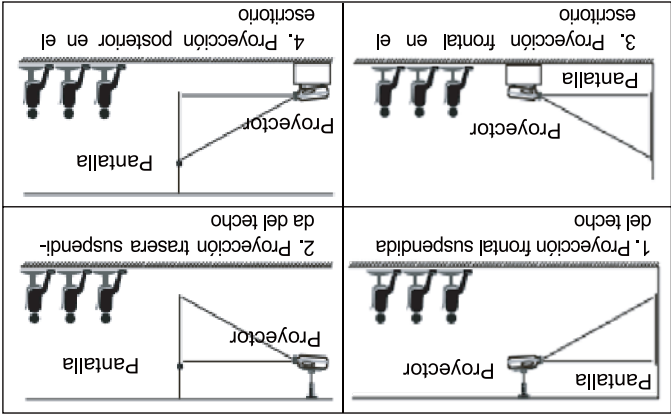

1. Poder

2. Fuente

3. Tecla direccional

4. Menú

5. Ama de casa

6. Volumen +

7. Volumen -

8. Silencio


9. Voltrear imagen

10. Confirmar/Reproducir o pausar el video

11. Regreso


12. Un abrazo

13. El siguiente.


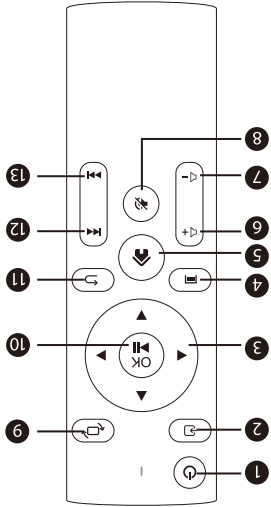


|    |                                                                                       |                                                                                   |
|----|---------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| 1  |  | Encender/apagar el proyector                                                      |
| 2  |  | Seleccione la fuente de entrada (HDMI 1, HDMI 2,AV)                               |
| 3  |   | Se utilizan para ajustar la configuración del menú del proyector                  |
| 4  |    | Presione el botón una vez para volver a la interfaz del menú d'aspect de 16:9/4:3 |
| 5  |    | Ir a la página de inicio                                                          |
| 6  |    | Aumentar el volumen                                                               |
| 7  |    | Bajar el volumen                                                                  |
| 8  |    | Cierra el sonido                                                                  |
| 9  |    | La imagen se volteea                                                              |
| 10 |    | Confirmar/Reproducir o pausar el video                                            |
| 11 |    | Regresar al menú anterior                                                         |
| 12 |    | Cambiar al video anterior                                                         |
| 13 |    | Cambiar al siguiente video                                                        |

|         |                |                                                                  |
|---------|----------------|------------------------------------------------------------------|
| 4/5/6/7 | Boutons flèche | Se utilizan para ajustar la configuración del menú del proyector |
| 3       | OK             | Confirmar                                                        |
| 2       | Regreso        | Regresar al menú anterior                                        |
| 1       | Alimentación   | Encender/apagar el proyector                                     |

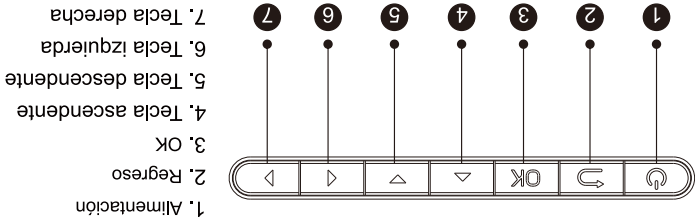

|      |                                |                                                                                 |
|------|--------------------------------|---------------------------------------------------------------------------------|
| 1/18 | Tomillo de ajuste de altura    | Ajuste la altura de la pantalla de proyección                                   |
| 2/5  | Ventana IR                     | Recibiendo la señal infrarroja                                                  |
| 3    | Lente del proyector            | Lente de vidrio con revestimiento óptico                                        |
| 4    | Puerto de alimentación         | Conecte el cable de alimentación                                                |
| 6    | Enchufe para auriculares       | Salida de auriculares de 3.5mm                                                  |
| 7/10 | Puertos HDMI                   | Entrada HDMI 1 / entrada HDMI 2                                                 |
| 8    | Puertos USB                    | Entrada USB 1 / entrada USB 2                                                   |
| 9    | Puerto AV                      | Entrada de audio                                                                |
| 11   | Altavoz                        | Altavoces estéreo 5w                                                            |
| 12   | Ventilaciones                  | Evite que el proyector se sobrecaliente                                         |
| 13   | Anillo de enfoque              | Ajuste el anillo de enfoque para obtener la imagen más clara                    |
| 14   | Interruptor de filtro de polvo | Presione el interruptor de la derecha para abrir el filtro de polvo desmontable |
| 15   | Filtro de polvo                | Limpie el polvo (si la pantalla tiene una mancha negra)                         |
| 16   | Etiqueta inferior              | Placa de identificación en la parte inferior del proyector                      |
| 17   | Tampons en caoutchouc          | Cousinets de protection / retirer pour installer le support de plafond          |

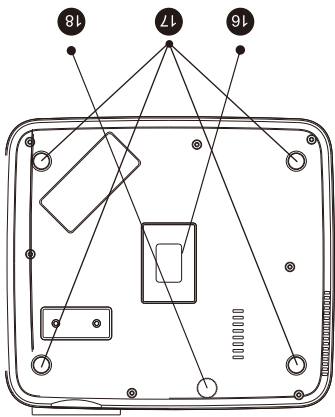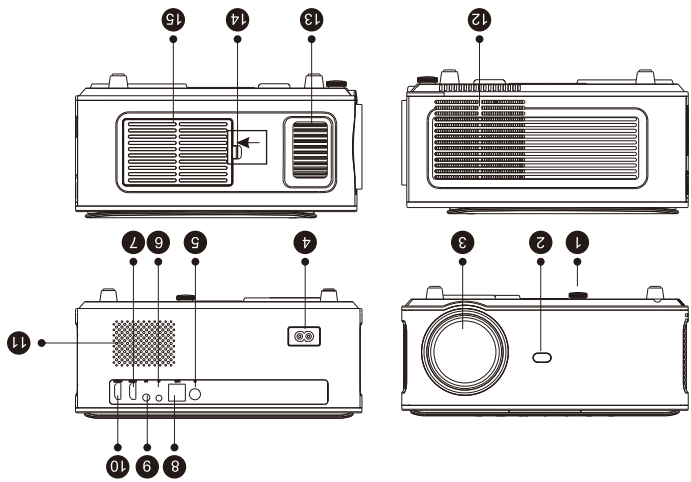

5. No coloque el proyector en una habitación que esté demasiado caliente o demasiado fría, ya que las temperaturas altas o bajas acortarán la vida útil de la unidad. El ambiente de trabajo sería de 5 °C~35 °C.
6. Si hay puntos negros en la pantalla de proyección, no se preocupe, comuníquese con [after-sales@yabertech.com](mailto:after-sales@yabertech.com) por correo electrónico, podremos enviarle un video sobre cómo eliminar el polvo.

### Lista de empaque

|                    |                     |                         |
|--------------------|---------------------|-------------------------|
| Proyector Pro U6*1 | Control remoto*1    | Cable de alimentación*1 |
| Cable HDMI*1       | 3-en-1 Cable AV     | Cubierta de la lente*1  |
| Tela de limpieza*1 | Manual de usuario*1 |                         |

### Especificación del proyector

|                              |                                                                                                                                           |                         |                                                                        |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|------------------------------------------------------------------------|
| Modelo:Buffalo Pro U6        |                                                                                                                                           |                         |                                                                        |
| Resolución Nativa            | 1920*1080P                                                                                                                                | Corrección trapezoidal  | 4D Digital                                                             |
| Sistema Imerysy              | LCD                                                                                                                                       | Fuente de luz           | LED                                                                    |
| Gama de colores              | 16.7M Full                                                                                                                                | Ratio d'aspect          | 4:3/16:9                                                               |
| Tamaño de la imagen          | 2.68-3.3m                                                                                                                                 | Distancia de proyección | 1.68m                                                                  |
| Tensión de alimentación      | AC100-240V                                                                                                                                | Peso del proyector      | 2.13kg                                                                 |
| Formato de imagen compatible | JPG/JPEG/BMP /PNG                                                                                                                         | Interfaces              | puertos HDMI*2/ puertos USB*2/salida de auriculares de 3.5mm/salida AV |
| Método de proyección         | Proyección frontal en el escritorio/ Proyección posterior en el escritorio/ Proyección frontal suspendida del techo/ Proyección posterior |                         |                                                                        |
| Formato de video compatible  | 3GP/AVI/FLV/MP4/MPG/VOB/TS/M2TS/DAT/MKV                                                                                                   |                         |                                                                        |
| Formato de audio compatible  | MP3/APE/AAC/FLAC/OGG/WAV/WMMA/MID/DTS/M4A                                                                                                 |                         |                                                                        |

## Soporte Profesional de Por Vida YABER

Estimado cliente,

¡Muchas gracias por apoyar a YABER!

Lea este manual detenidamente antes de utilizar el proyector. Si tiene algún problema, envíe un correo electrónico con su número de pedido y el problema a [after-sales@yabertech.com](mailto:after-sales@yabertech.com). Brindaremos una solución rápida en 24 horas.

En realidad, muchos problemas se pueden resolver fácilmente mediante la configuración, como no hay señal, no hay sonido, falla la conexión bluetooth, falla la conexión WiFi, puntos oscuros, animación entrecortada, etc. Prometemos que todos los proyectores han sido 100% cuidadosamente revisados y empaquetados antes del envío.

Si tiene alguna pregunta, póngase en contacto con nosotros para que podamos solucionar el problema. Y danos la oportunidad de mejorar. Le garantizamos que le proporcionaremos una solución satisfactoria.

¡Gracias por su comprensión!

Equipo de servicio YABER

### Consejos:

1. Antes de usar este proyector, retire la membrana protectora de las cubiertas superior e inferior.

El proyector no debe instalarse en un escritorio inestable o irregular.

2. Al instalar el proyector, debe elegir el soporte y los tornillos adecuados para evitar que el proyector se caiga accidentalmente debido a la mala calidad del tornillo o la falta de profundidad de rotación.

3. Si el proyector no se usa durante mucho tiempo, desconecte el cable de alimentación de la toma de CA.


4. Durante el funcionamiento normal, el proyector entrará en modo de espera después de presionar el botón de encendido del proyector o del control remoto. Antes de desenchufar el cable de alimentación, asegúrese de que el ventilador de enfriamiento esté apagado. No desenchufe el cable de alimentación de CA primero para apagar el proyector, ya que esto puede causar un mal funcionamiento del proyector.

## CONTENIDO

|                                                                           |    |
|---------------------------------------------------------------------------|----|
| Soporte Profesional de Por Vida YABER                                     | 02 |
| Consejos:                                                                 | 02 |
| Lista de empaque                                                          | 03 |
| Especificación del proyector                                              | 03 |
| Resumen del proyector                                                     | 04 |
| Resumen del Remoto Control                                                | 06 |
| INSTALLATION                                                              | 07 |
| 1. méthode d'installation                                                 | 07 |
| 2 La distancia entre el proyector y la pantalla                           | 08 |
| 3. Instalar en el techo                                                   | 08 |
| Encender el proyector                                                     | 09 |
| Ajuste de imagen                                                          | 09 |
| 1. Ajuste de enfoque                                                      | 09 |
| 2. Corrección trapezoidal 4D digital (máximo ajustable $\pm 50^{\circ}$ ) | 10 |
| CONFIGURACIÓN DEL PROYECTOR                                               | 10 |
| 1. Seleccione la fuente de la señal de entrada                            | 10 |
| 2. Modo de entrada de disco USB                                           | 11 |
| 3. Conexión inalámbrica                                                   | 13 |
| 3.1. OS de Cast (para Dispositivos iOS)                                   | 14 |
| 3.2. Miracast (para dispositivos Android)                                 | 15 |
| 4. Configuración de Bluetooth                                             | 16 |
| 5. Configuración de Imagen del Proyector                                  | 17 |
| 5.1. Modo de Proyección                                                   | 17 |
| 5.2. Keystone Avanzado & Keystone de 4 Puntos                             | 18 |
| 5.3. Digital Zoom                                                         | 20 |
| 6. Actualización del Sistema                                              | 20 |
| 7. Otras Ajuste                                                           | 21 |
| 8. Acerca de                                                              | 22 |
| Conectarse con Otros Dispositivos                                         | 22 |
| 1. Conecte el Disco USB                                                   | 23 |
| 2. Conecte los Dispositivos a través de los puertos HDMI                  | 23 |
| 3. Conecte al reproductor de DVD                                          | 23 |
| 4. Conecte la Barra de Sonido / Altavoz                                   | 24 |
| APAGADO SEGURO                                                            | 24 |
| GARANTIE                                                                  | 24 |
| Preguntas Frecuentes                                                      | 24 |



## Buffalo Pro U6 Projector

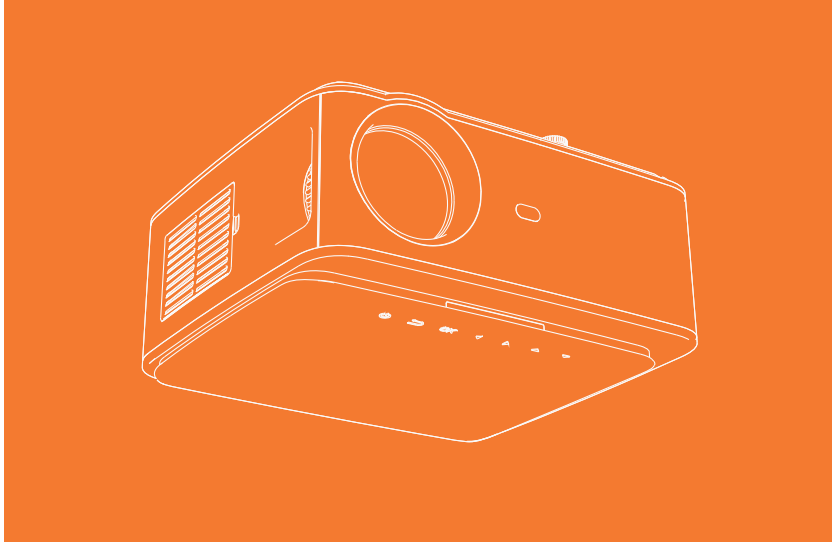

Yabber  
Entertainment Projector

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.