

AGPTEK



User Manual

EN 01/14

DE 15/29

Thank you for purchasing AGPTEK product. Please read this [User Manual] carefully before using the product, retain it in for future use.

Note:

To find out how to use **S2** or if you have a problem, please refer to User Manual.

This [User Manual] can help you understand how to use and troubleshoot the problem.

For better use this product, please connect the speaker to computer with USB 2.0/3.0 port or a 5V/1A charger (not quick charger) by the included USB cable. Usually, it will be fully charged in 3hours.

Register AGPTEK Forum

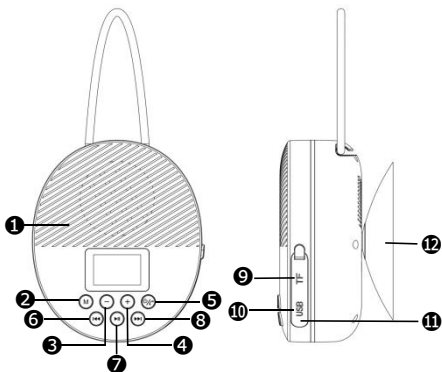
Please visit www.agptek.com/forum and register AGPTEK official forum to get better customer support.

Manufacturer: Betrue Technology Company Limited.

Address: D07, 5/F, King Yip Factory Building, 59 King Yip Street, Kwun Tong, Kowloon, Hong Kong.

E-mail: support@agptek.com.

A. Buttons & Controls



| | |
|--------------|---|
| 1 | MIC Hole (For Hand-Free) |
| 2 M | M Button (Cycle Time/Bluetooth/FM /TF mode) |
| 3 — | Volume down |
| 4 + | Volume up |
| 5 ⏻/📞 | Power On/Off, Pick up/Ignore/Hang up/Last dialed call |

| | | |
|----|---|---|
| 6 | ⏮ | Previous track |
| 7 | ⏸ | Play, Pause |
| 8 | ⏭ | Next track |
| 9 | | TF card slot |
| 10 | | Micro USB socket(Under Rubber Seal Cover) |
| 11 | | Reset hole(Under Rubber Seal Cover) |
| 12 | | Vacuum Cupule |

B. LED Digital Screen



After booting up this product, this speaker will display the Time Calibration Interface ① firstly. Press **M** button to cycle through different interface, such as Bluetooth Mode ②, FM Function ③, TF Card Mode ④ (Available when TF card is inserted).

C. Time Calibration


1. In power on mode, press the “**M**” to switch to clock

mode if it is in other mode.

2. Press and hold the “M” to go to hour set, the number of hour will blink on LED display.
3. Press the “◀◀” or “▶▶” button for adjusting the hour time as current time.
4. Short press the “▶|” button to confirm the hour time set and go for Minute set. The number of minute will blink on LED display.
5. Press the “◀◀” or “▶▶” button for adjusting the minute time as current time.
6. Short press the “▶|” button to confirm the minute time set.

Note:

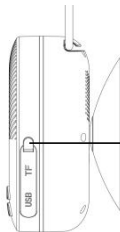- (1) For maintain the battery life and performance, if speaker isn't used for a while, the battery might need to be recharged. Charge the battery at least once every month.
- (2) Connect the Micro USB socket with the PC's USB port Power or DC 5V, 1000mA through USB cable.





Note: Please tighten the Rubber Seal Cover after charging to prevent water from penetrating into the speaker.



(3) Disconnect the USB cable when it is done.

D. Playing Music Via Bluetooth



● Power on and Pairing

1. Press and hold button  to turn on the device. A series of tones will sound. If it is in clock mode, press button **M** to switch to Bluetooth mode, the  icon is blinking quickly.
2. Then turn on your device's Bluetooth, the device will enter to Bluetooth searching mode automatically, if not, please search manually, then tap the related selection to manually enter to searching mode. (Refer to the user manual when necessary).
3. Your device show "**AGPTEK S2**" to select it for

pairing. Waiting for some seconds, you will see connected message as shown on your device. (For some Bluetooth devices, you may need to input "0000" as pairing password).

4. If pairing is successful, the  icon will constantly show on the display. Then you can start to play music by the device.
5. Press and hold  to turn off the device when it is not in use.

● **Disconnect from paired device**

1. Press and hold  to switch to new "Searching/Pairing" mode, the paired device will be disconnected. Or, you can choose "Disconnect" from Bluetooth paired device list on your mobile device. In this case; the Bluetooth Speaker will turn back into "Searching/Pairing" mode in seconds, a series of tones will sound and the  is blinking fast.
2. Now, you can process for new mobile device pair or power off the Bluetooth Speaker. **Note:** If Bluetooth is not connected for more than 8 minutes, this device will shut down automatically.

● **Auto re-connect with paired device and New pairing**

1. Every time you turn on the speaker and enter into Bluetooth mode; it will firstly searching for the mobile device, which has been paired previously and still in record. The Speaker will re-connect this mobile device as priority if it is in Bluetooth searching device mode.
2. If not found in some seconds, the Bluetooth Speaker then is turn into new pairing mode internally.
3. Now you can process for new mobile device pair.
(Refer to “Power on and Pairing”)

● After Bluetooth Paring

After Bluetooth pairing, the speaker can be operated by the following buttons while playing music.

| | |
|----------|---------------------------|
| press ► | to pause/resume the music |
| Press + | increase the volume level |
| Press - | decrease the volume level |
| Press ►► | go to next music |
| Press ◀◀ | go to previous music |







Note: When maximum or minimum volume is reached, a series of tones will sound.

E. Call Function

● About how to use Hand free Function

When there is an incoming call during Bluetooth music playing mode;



The ringing sound will up and the playing music will pause automatically.

| | |
|---|---|
| Press  /  | pick up the call if you want |
| Press  /  again | hang up the call when finished. And the paused music will start to play automatically |
| Press and hold button  /  for 3 seconds | ignore the incoming call |

Tip: speak to the MIC hole directly with distance in 30~60cm to get the best speakerphone performance when necessary.

● Redial for last call Function

To redial for last called number by the Speaker, even it is in music playing mode.

| | |
|---|--|
| Press  /  the twice for | enter into redial function, the playing music will pause and switch to hand free function for redial. |
|---|--|



Press the
again


hang up the redial call

Note: Make sure that your mobile phone has have last dial call used, if not, the redial for last call function cannot be activated.




F. FM Function

● Auto Tune Radio Frequency:

In Bluetooth mode, press button M to enter into FM mode.


Press and hold button  to enter into auto searching mode.

(1) The FM radio will search up the frequency from 87.5 MHz to 108.0MHz and will save the searched stations automatically.





(2) When finished searching, it will play from the firstly searched station automatically. You can select radio station P01-P40 through the “” or “” button, and press the “” button again to confirm.

● FM playing control:










To switch back to Bluetooth mode, press twice button M.

Press button 

to pause/resume the music

| | |
|---|---------------------------|
| Press button  | go to next station |
| Press button  | go to previous station |
| Press and hold button  | increase the volume level |
| Press and hold button  | decrease the volume level |

G. How to set the clock

- (1) In time mode, press and hold “” button to enter alarm clock set. “AL” will show on the screen. You can press the “” button to turn ON the alarm clock.
- (2) When “ON” show on the screen, press “” button to go to hour set.
- (3) Press or pressing the “” or “” button for adjusting the hour time as you desired.
- (4) Short press the “” button to confirm the hour time set and go for Minute set. The number of minute will blink on LED display;
- (5) Press or pressing the “” or “” button for adjusting the minute time as you desired.
- (6) Short press the “” button to confirm the minute


time set.

- (7) When the alarm is set, it will emit a series of beeps and then adjust the alarm volume.
- (8) Press or pressing the “ + ” or “ - ” button for adjusting the volume level as you desired.
- (9) Short press the “▶||” button to confirm the volume level and the volume of alarm clock set is completed.
- (10) Press once “⏻/🔊” button to stop the alarm.

H. Low Power Reminder and Auto Sleep

1. The Bluetooth Speaker will send tones from speaker by every minute. When you heard this reminder, please connect the device to the USB power for charging, if you still want to use the device.
2. If not, the Bluetooth Speaker will power off automatically when the battery is keeping low energy level in some minutes.
3. In this case, the device cannot be turned on, until you recharging the battery at least 10~15 minutes, because the rechargeable battery has not enough energy.

I. Reset the Device

1. In some circumstances the device's function may hanging and need to reset. To reset the Bluetooth speaker;
2. Insert a needle into reset hole near Micro USB socket. Then the device will reset automatically.
3. After that, turn on the Bluetooth Speaker by press and hold button .

Note: Do not reset the device if it is in properly working.

J. Splash Proof Handling

The Bluetooth Speaker can handle a brief jet of water on its surface (IPX5 water resistant). However, it should never be operated under running water and under no circumstance it should never be fully immersed in water. Before use the Shower Bluetooth speaker in bathroom, make sure that the splash proof "Rubber Seal Cover " is tighten closed at the right position.

After used in bathroom, always wipe the outside of the cabinet thoroughly if it becomes wet with moisture or water splashes. This will help to prevent the internal parts of the unit from entry of water and possible moisture damage.

Note: If water get into the USB socket, please always clean the water thoroughly before charging the device.

K. Specifications

| | | |
|------------------|---|--|
| Dimension | 80(L)x35(W)x95mm(H) (Not include Vacuum Cupule) | |
| Weight | 149g (Approximate) | |
| Bluetooth | Specification | V5.0 |
| | Supported Profile | WAV/FLAC/APE/ WMA/FIA/NWT/ AMR/DTS |
| | Effective Distance | 20m(In open area) |
| FM Radio | Tuning Range | 87.5– 108MHz |
| | Presets | up to 40 stations |
| | Antenna | Wireless type |
| Built-In Battery | Lithium3.7V, 2000mAh | |
| | Charging Time: around 3 H | |
| | Playing Time: around 10.5-12H(at max. volume setting, Bluetooth mode) | |
| Power | Micro USB Port | |

| | |
|-----------------------|----------------------------------|
| Source | PC's USB port Power or DC 5V, 1A |
| Water Resistance | Splash-Proof IPX5 |
| Operating Temperature | 0 to 40°C |

Vielen Dank für Ihren Einkauf des AGPTEK Produkt S2. Lesen Sie bitte diese Bedienungsanleitung sorgfältig und vollständig, bevor Sie das Produkt benutzen und bewahren Sie es bitte zur späteren Verwendung auf.

Hinweis:

Mit der Bedienungsanleitung kann man das Produkt leicht bedienen und Probleme besser beheben.

Um das Produkt besser nutzen zu können, laden Sie es bitte zuerst auf: Schließen Sie den Lautsprecher über das mitgelieferte USB-Kabel an einen Computer mit USB 2.0/3.0-Anschluss oder ein 5V/1A-Ladegerät (kein Schnellladegerät) an. Normalerweise wird es in 3 Stunden vollständig aufgeladen.

Registrieren Sie bei dem AGPTEK Forum

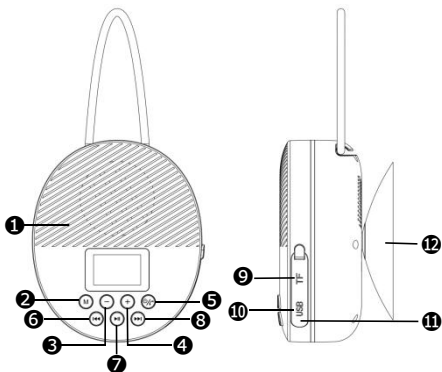
Besuchen Sie www.agptek.com/forum und registrieren Sie sich im Forum, um eine bessere Kundenunterstützung zu erhalten.

Hersteller: Bettrue Technology Company Limited.

Adresse: D07, 5/F, King Yip Factory Building, 59 King Yip Street, Kwun Tong, Kowloon, Hong Kong.

E-mail: support@agptek.com.

A. Tasten & Bedienelemente



| | |
|--------------|--|
| 1 | MIC-Loch (für Hand-Frei) |
| 2 M | M Taste (Zykluszeit/Bluetooth/FM/TF-Modus) |
| 3 — | Lautstärke - |
| 4 + | Lautstärke + |
| 5 ⏻/⏻ | Ein-/Ausschalten, Annehmen/ Ignorieren/Auflegen/Zuletzt gewählter |

| | | |
|----|-------|--|
| | Anruf | |
| 6 | ⏮ | Vorheriger Titel |
| 7 | ⏸ | Spielen/Pausen |
| 8 | ⏭ | Nächster Titel |
| 9 | | TF-Karten-Slot |
| 10 | | Micro-USB-Buchse (unter der Gummidichtung) |
| 11 | | Rückstellbohrung (unter der Gummidichtung) |
| 12 | | Vakuum Cupule |

B. LED Digitaler Bildschirm



Nach dem Hochfahren dieses Produkts zeigt der Lautsprecher zunächst die Zeitkalibrierungsschnittstelle **1** an. Drücken Sie die **M**-Taste, um durch die verschiedenen Schnittstellen zu blättern, z. B. Bluetooth-Modus **2**, FM-Funktion **3**, TF-Kartenmodus **4** (verfügbar, nur wenn eine TF-Karte eingelegt ist).


C. Zeitkalibrierung

1. Drücken Sie die Taste "M" um in den Uhrzeitmodus zu wechseln, wenn sich dieser in einem anderen Modus befindet.
2. Drücken und halten Sie die Taste "M", um zur Stundeneinstellung zu gelangen. Die entsprechende Stundenzahl blinkt auf der LED-Anzeige.
3. Drücken Sie die Taste "◀◀" oder "▶▶", um die aktuelle Stunden-zeit einzustellen.
4. Drücken Sie kurz die Taste "▶|", um die eingestellte Stundenzahl zu bestätigen und gelangen Sie zu Minuten-einstellung. Die Minutenzahl blinkt auf der LED-Anzeige.
5. Drücken Sie die Taste "◀◀" oder "▶▶", um die aktuelle Minuten-zeit einzustellen.
6. Drücken Sie kurz die Taste "▶|", um die eingestellte Minutenzeit zu bestätigen.

Hinweis:

- (1) Wenn der Lautsprecher längere Zeit nicht benutzt wird, muss man den Akku möglicherweise einmal im Monat aufladen, um die Lebensdauer und Leistung des Akkus zu aufrechterhalten.
- (2) Verbinden Sie die Micro-USB-Buchse über ein

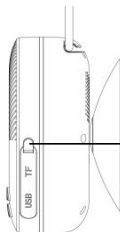USB-Kabel mit dem USB-Anschluss des PCs.





Hinweis: Bitte ziehen Sie die Gummidichtung nach dem Aufladen wieder fest, damit kein Wasser in den Lautsprecher eindringen kann.



(3) Ziehen Sie das USB-Kabel ab, wenn Sie fertig sind.

D. Musikwiedergabe über Bluetooth


● Einschalten und Pairing


1. Drücken und halten Sie die Taste  um den Lautsprecher einzuschalten. Es ertönt eine Reihe von Tönen. Wenn Sie sich im Uhrmodus befinden, drücken Sie bitte die Taste **M**, um in den Bluetooth-Modus zu wechseln. Das Symbol  blinkt schnell.
2. Schalten Sie dann das Bluetooth Ihres Geräts ein. Das Gerät wechselt automatisch in den Bluetooth-Suchmodus. Wenn nicht, suchen Sie

manuell und tippen Sie auf die entsprechende Auswahl, um manuell in den Suchmodus zu wechseln. (Siehe die Bedienungsanleitung wenn nötig)

3. Wenn auf Ihrem Gerät "**AGPTEK S2**" angezeigt wird, wählen Sie es zum Koppeln aus. Nach einigen Sekunden wird eine verbundene Nachricht auf Ihrem Gerät angezeigt. wird die auf Ihrem Gerät angezeigte verbundene Nachricht angezeigt. (Für manche Bluetooth-Geräten müssen Sie "0000" als Pairing-Passwort eingeben.)
4. Wenn das Pairing erfolgreich ist, wird das Symbol  ständig auf dem Display angezeigt. Dann können Sie mit dem Gerät Musik abzuspielen.
5. Wenn das Gerät nicht verwendet wird, drücken und halten Sie bitte , um es auszuschalten.

● **Verbindung zum gekoppelten Gerät trennen**

1. Drücken und halten Sie , um in den "Suchen/Koppeln" Modus zu wechseln. Das gekoppelte Gerät wird getrennt. Oder wählen Sie "Verbindung trennen" von der Bluetooth-Liste der gekoppelten Geräte auf Ihrem Mobilgerät aus. In diesem Fall kehrt der Bluetooth-Lautsprecher nach

einigen Sekunden in den "Suchen/Koppeln" Modus zurück, es ertönt eine Reihe von Tönen und das Symbol  blinkt schnell.

2. Jetzt können Sie ein Pairing für ein neues Mobilgerät durchführen oder den Bluetooth-Lautsprecher ausschalten. **Hinweis:** Wenn innerhalb von 8 Sekunden keine Bluetooth-Verbindung hergestellt wird, wird dieses Gerät automatisch heruntergefahren.

● **Automatische Verbindung mit dem gekoppelten Gerät und neue Koppelng**

1. Jedes Mal, wenn Sie den Lautsprecher einschalten und in den Bluetooth-Modus wechseln, er wird zunächst nach dem mobilen Gerät gesucht, das zuvor gekoppelt wurde und jetzt noch in der Pairing-Aufzeichnung steht. Der Lautsprecher verbindet dieses Mobilgerät vorrangig erneut, wenn es sich im Bluetooth-Suchgerätemodus befindet.
2. Wird der Bluetooth-Lautsprecher nach einigen Sekunden kein gekoppeltes Gerät gefunden, wechselt er in den neuen Pairing-Modus.
3. Jetzt können Sie zum Pairing nach einem neuen Mobilgeräte suchen. (Sehen Sie bitte "Einschalten

und Pairing")

● Nach dem erfolgreichen Bluetooth Pairing

Nach der Bluetooth-Kopplung kann der Lautsprecher während der Musikwiedergabe mit den folgenden Tasten bedient werden.

| | |
|-------------|-----------------------------|
| ▶▶ drücken | Musik anhalten/fortsetzen |
| ⊕ drücken | Lautstärke erhöhen |
| ⊖ drücken | Lautstärke verringern |
| ▶▶▶ drücken | Weiter zur nächsten Musik |
| ◀◀◀ drücken | Zurück zur vorherigen Musik |





Hinweis: Wenn die maximale oder minimale Lautstärke erreicht ist, ertönt eine Reihe von Tönen.

E. Anruf Funktion

● Über die Verwendung der Freihandfunktion

Wenn im Bluetooth-Musikwiedergabemodus ein Anruf eingeht, ertönt der Klingelton und die Musikwiedergabe wird automatisch unterbrochen..





| | |
|-----------|--|
| 📞 drücken | den Anruf entgegen nehmen, falls Sie es wollen |
|-----------|--|

| | |
|--|---|
|  /  erneut drücken | den Anruf auflegen. Die angehaltene Musik wird automatisch abgespielt |
|  /  drücken und für 3 Sekunden halten | den eingehenden Anruf ignorieren |

Tipp: Sprechen Sie direkt mit dem Mikrofonloch in einem Abstand von 30 bis 60 cm, um bei Bedarf die beste Freisprechleistung zu erzielen.

● **Wahlwiederholung für letzten Anruf Funktion**

Um erneuten Wählen der zuletzt vom Lautsprecher angerufenen Nummer, auch wenn sich der Lautsprecher im Musikwiedergabemodus befindet.

| | |
|---|---|
|  /  zwei mal drücken | Die Musikwiedergabe wird angehalten und der Lautsprecher wechselt sich in die Wahlwiederholungsfunktion, die Freisprechfunktion öffnet sich selbst. |
|  /  erneut drücken | Wahlwiederholung auflegen |

Hinweis: Stellen Sie sicher, dass auf Ihrem Mobiltelefon

der letzte Wählenruf verwendet wurde. Andernfalls kann die Wahlwiederholung für den letzten Anruf nicht aktiviert werden.

F. FM Funktion

● Autotuning - Radiofrequenz:

Drücken Sie im Bluetooth-Modus die Taste M, um in den FM-Modus zu wechseln. Halten Sie die Taste ►► gedrückt, um in den automatischen Suchmodus zu wechseln.


(1) Das UKW-Radio sucht die Frequenz von 87,5 MHz bis 108,0 MHz und speichert die gesuchten Sender automatisch.

(2) Nach dem Suchen wird der zuerst gefundene Sender automatisch abgespielt. Mit der Taste “►►” oder “◄◄” können Sie ein Sender zwischen den P01-P40 auswählen und durch erneutes Drücken der Taste “►►” bestätigen.









● FM-Spielsteuerung:

Um in den Bluetooth-Modus zurückzukehren, drücken Sie zweimal die Taste M.

| | |
|--------------|----------------------------|
| ►► drücken | Musik anhalten/fortsetzen |
| ►►►► drücken | zur nächsten Station gehen |

| | |
|---|------------------------------|
|  drücken | Zur vorherigen Station gehen |
| + drücken und halten | lautstärke erhöhen |
| — drücken und halten | Lautstärke verringern |

G. Wie stellt man die Uhr ein?

- (1) Halten Sie im Zeitmodus die Taste "|" gedrückt, um den Weckereinstellung aufzurufen. Auf dem Bildschirm wird "AL" dann angezeigt. Sie können die Taste "|" drücken, um den Wecker einzuschalten.
- (2) Wenn auf dem Bildschirm „ON“ angezeigt wird, drücken Sie die Taste „  |“, um zur Stundeneinstellung zu gelangen.
- (3) Drücken Sie bitte die Taste "|" oder "|", um die Stunden wie gewünscht einzustellen.
- (4) Drücken Sie kurz die Taste "|", um die eingestellte Stundenzahl zu bestätigen und gehen Sie zu Minuten-einstellung. Die Minutenzahl blinkt auf der LED-Anzeige.
- (5) Drücken Sie bitte die Taste "|" oder "|", um die

Minuten wie gewünscht einzustellen.



- (6) Drücken Sie kurz die Taste “▶||”, um die eingestellte Minuten zu bestätigen.
- (7) Wenn der Alarm eingestellt ist, ertönt eine Reihe von Signaltönen. Die Alarmlautstärke können Sie einstellen.
- (8) Drücken Sie die Taste “+ ” oder “- ”, um die Lautstärke wie gewünscht einzustellen.
- (9) Drücken Sie kurz die Taste “ ▶|| ”, um den Lautstärkepegel zu bestätigen und die Lautstärke des eingestellten Weckers zu vervollständigen.
- (10) Drücken Sie einmal die Taste “⏻ / ⏮ ”, um den Alarm zu stoppen.

H. Niedrigen Stromwerte Mahnung und Auto-Sleep Funktion

- 1. Der Bluetooth-Lautsprecher sendet jede Minute Töne aus dem Lautsprecher. Wenn Sie diese Erinnerung gehört haben, schließen Sie bitte das Gerät zum Aufladen an den USB-Anschluss an, wenn Sie das Gerät weiterhin verwenden möchten.
- 2. Wenn nicht, der Bluetooth-Lautsprecher wird sich nach einigen Minuten automatisch ausschalten.

3. In diesem Fall kann das Gerät erst eingeschaltet werden, wenn Sie den Akku mindestens 10 bis 15 Minuten lang aufgeladen haben, da der Akku nicht genügend Energie enthält.

I. Das Gerät zurücksetzen

1. Unter bestimmten Umständen kann die Funktion des Geräts hängen bleiben und muss zurückgesetzt werden. So setzen Sie den Bluetooth-Lautsprecher zurück:
2. Führen Sie eine Nadel in das Reset-Loch ein, was in der Nähe der Micro-USB-Buchse liegt. Das Gerät wird dann automatisch zurückgesetzt.
3. Danach schalten Sie bitte den Bluetooth Lautsprecher ein, indem Sie die Taste  /  drücken.

Hinweis: Ohne Problemen setzen Sie das Gerät nicht zurück.

J. Wasserdichtheit Erklärung

Der Bluetooth-Lautsprecher kann einem kurzen Wasserstrahl auf Ihre Oberfläche widerstehen (IPX5 wasserdicht). Er sollte jedoch niemals unter fließendem

Wasser betrieben werden und keinesfalls in Wasser getaucht werden. Vergewissern Sie sich vor Verwendung des Bluetooth-Lautsprechers im Badezimmer, dass die spritzwassergeschützte "Gummidichtungsabdeckung" an der richtigen Stelle festgezogen ist. Und wischen Sie bitte nach der Verwendung im Badezimmer die Außenseite des Gehäuses immer gründlich ab, wenn es mit Feuchtigkeit oder Spritzwasser nass wird.

Hinweis: Wenn Wasser in die USB-Buchse gelangt, reinigen Sie das Wasser immer gründlich, bevor Sie das Gerät aufladen.

K. Spezifikationen

| | | |
|-----------|---|--|
| Größe | 80(L)x35(B)x95mm(H) (Vakuum Cupule nicht enthält) | |
| Gewicht | 149g (ungefähr) | |
| Bluetooth | Version | V5.0 |
| | Unterstützte Profile | WAV/FLAC/APE/ WMA/FIA/NWT/ AMR/DTS |
| | Effektive Entfernung | 20m(Im offenen Bereich) |

| | | |
|---------------------|---|---------------------|
| FM Radio | Tuning Bereich | 87.5– 108MHz |
| | Voreinstellungen | Bis zu 40 stationen |
| | Antenne | Kabelloser Typ |
| Eingebaute Batterie | Lithium 3.7V, 2000mAh | |
| | Aufladenzeit: ca. 3 h | |
| | Spieldauer: ca. 10.5-12h (bei maximaler Lautstärkeeinstellung, Bluetooth-Modus) | |
| Energiequelle | Micro USB Anschluss | |
| | PC's USB Anschluss Power or DC 5V, 1A | |
| Wasserbeständigkeit | Spritzwasser-resistent IPX5 | |
| Betriebstemperatur | 0 bis 40°C | |

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition, compliance with exposure requirements.