

Get started


Quick Guide

Insert SIM card

The phone is Dual SIM, which allows you the option of having two service providers.

To insert SIM card(s):

1. insert the supplied tool into the hole on the left side of the terminal and remove the hidden tray
2. Put the nanoSIM(s) and microSD card in their slots

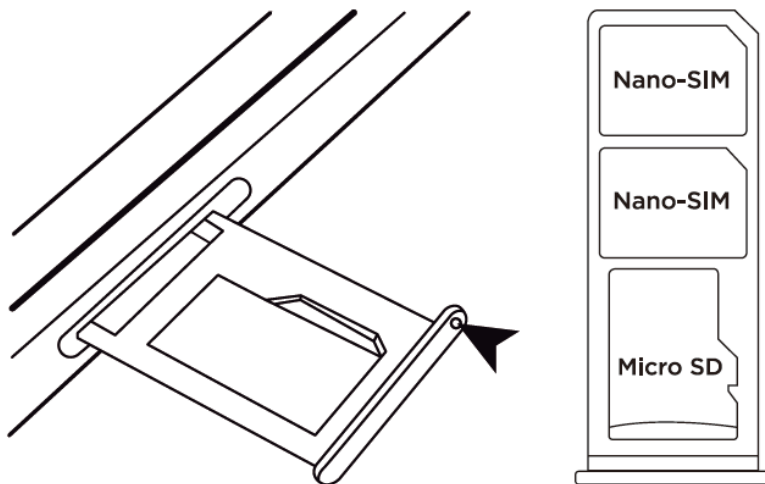


3. Put the tray back in place.

Camera and sensors


A rear quad camera module.

- 48MP main camera
 - 5MP wide angle
 - 2MP depth sensor
 - 2MP Macro
-
- 16MP Front Camera

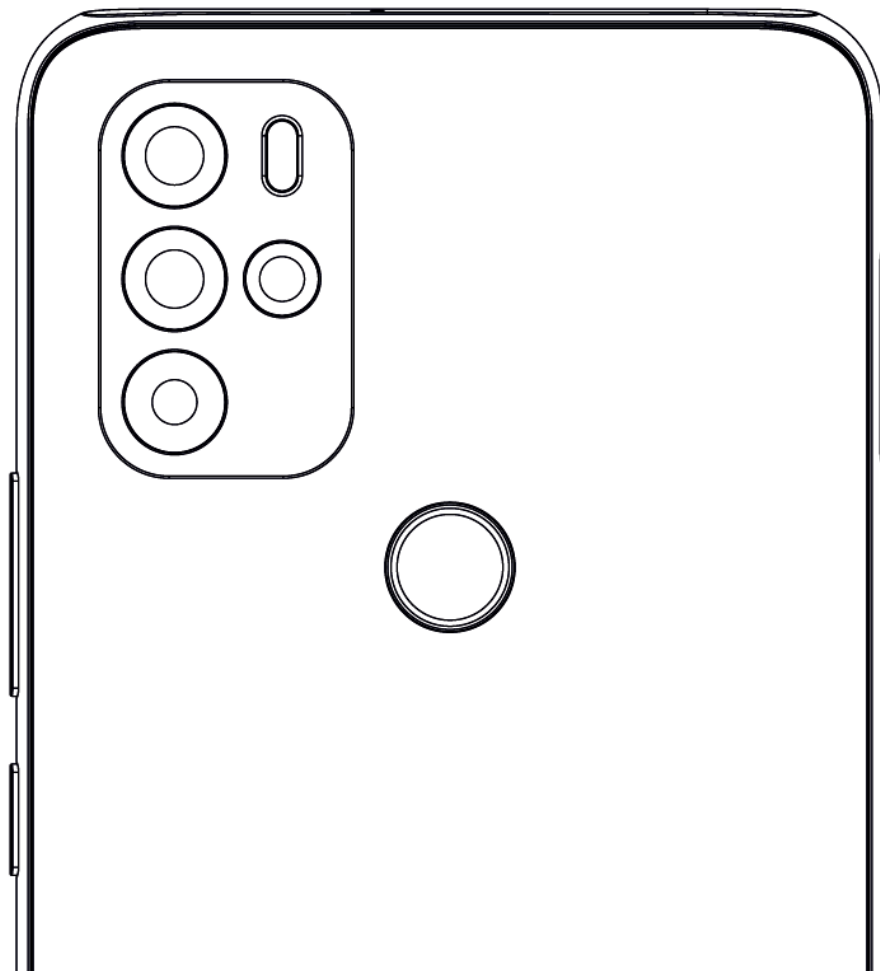


Charge the Battery

The USB slot to charge the mobile or connect it to the computer is located at the bottom of the terminal

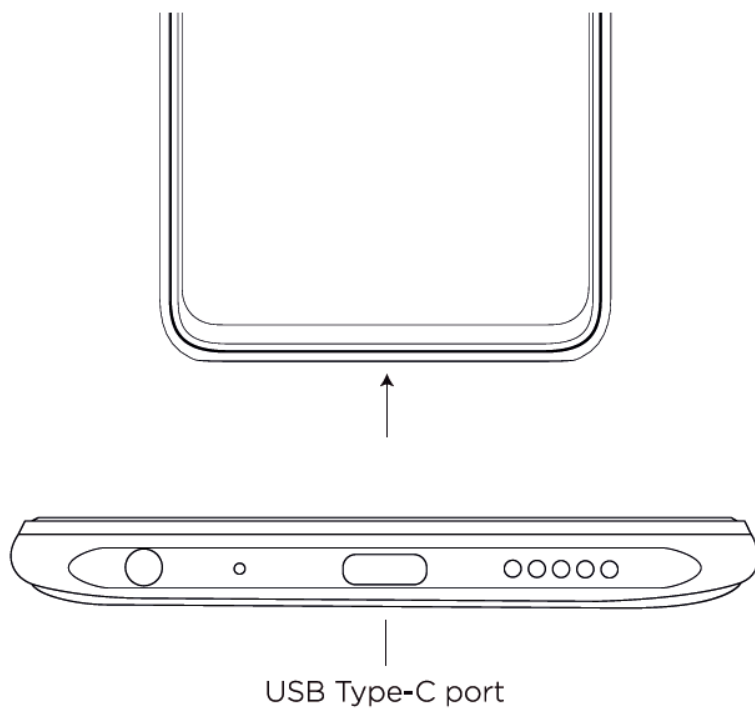

Keys and parts

The smartphone supports 4G/LTE cards and brings you a wonderful experience when you use its various features like 48MP main camera, 1080p video recorder, fingerprint reader, music player and an IPS FHD+ screen. It allows you to install various apps, games, and more (supports APK format) by downloading them from the Play Store.

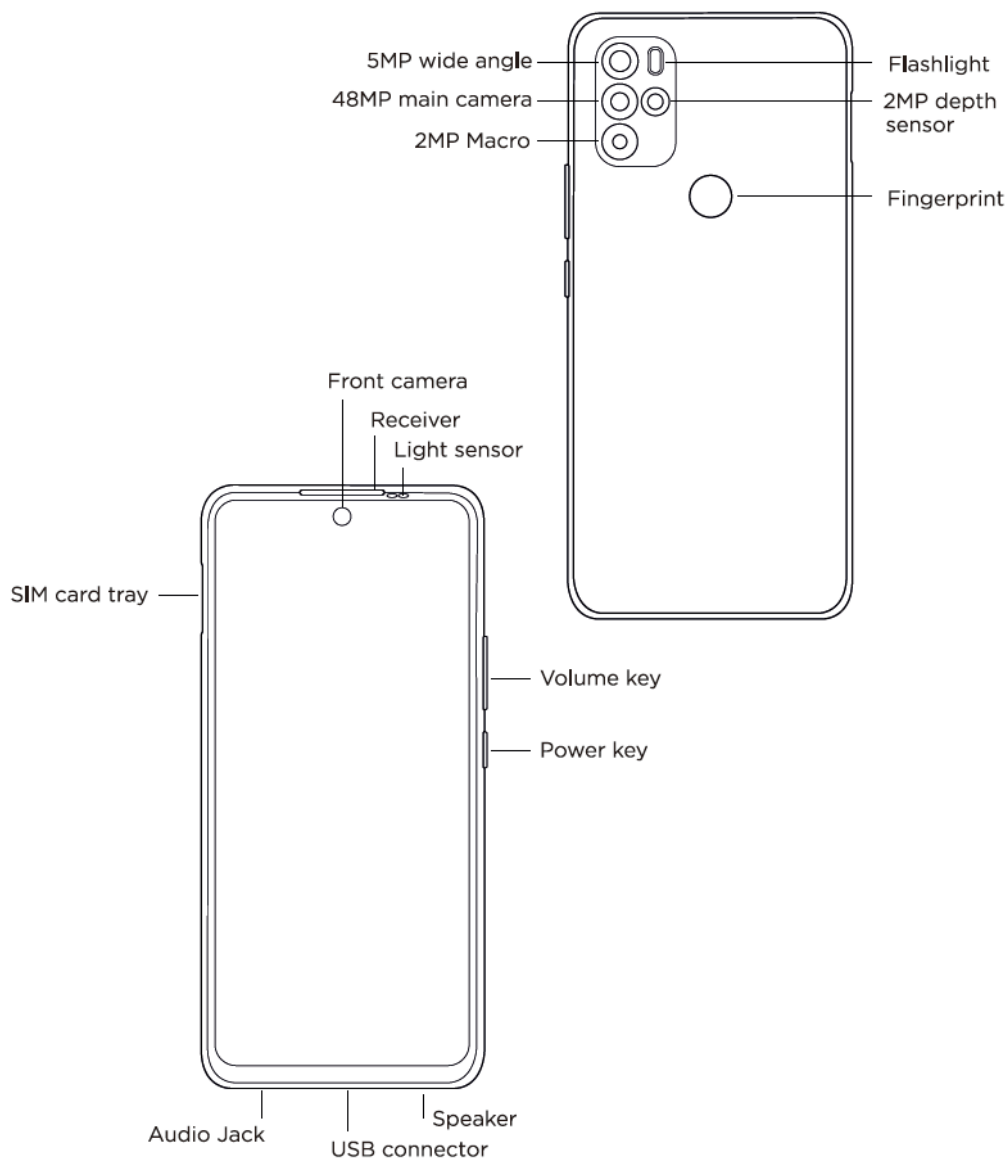

Lock and unlock the screen

Press power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up and then drag the lock to the up side to unlock.



Make a call

On the start screen choose  and enter a complete phone number to make a call.

Maintenance & Safety

Please read the following information carefully for your safety, proper use of your phone and to prevent damage. Please keep this guide in an accessible place after reading it.

- Use of unauthorized cables, power adapters, or batteries may cause fire, explosion, or other hazards.
- Use only authorized accessories that are compatible with your device.
- The operating temperature range of this device is 0°C to 40°C. Using the device in environments with a temperature range outside the indicated range may damage the device.
- If your device is provided with a built-in battery, please do not try to replace it yourself to avoid damage to the battery or the device.
- Charge the device only with the included and authorized power adapter and cable. Using other adapters may cause fire, electric shock, and damage to the device and adapter.
- When charging is complete, unplug the adapter from both the device and the power outlet. Do not leave the device charging for more than 12 hours.
- Keep the device dry.

4.General Notice

- **Do not place your phone near other devices or objects with magnetic components such as credit cards, phone cards, subway tickets, etc. Magnetism could damage the data stored on the phone**
- **Talking on the phone for a long time can reduce call quality and produce heat.**
- **Using the phone near wave receiving devices may cause interference such as TV and Radio.**
- **Do not immerse your phone in water. In case this happens, please take your phone to an authorized service center.**
- **The data stored on your phone can be deleted if the equipment requires any repair or Software update. Please back up your phone before handing it over to an authorized service center or performing a software update. The manufacturer will not be responsible for the loss of data on the phones.**
- **Do not turn your phone on or off when it is close to your ear.**
- **When the phone is not going to be used for a long period of time, store it unplugged in a safe place.**
- **Do not paint your phone**

WARNIN

FCC RF Exposure Information and Statement: The SAR limit of USA (FCC) is 1.6W/kg averaged over one gram of tissue. Product, model number: ONE (FCC ID: 2A67L-ONE) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the head is 1.550W/kg and when properly worn on the body is 1.066W/kg . The device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user body and the back of the handset. The use of belt clips, holders and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help



DAEWOO ONE

Quick Guide

Comenzar


Guía Rápida

Insertar tarjeta SIM

El teléfono es Dual SIM, lo cual le permite la opción de tener dos proveedores de servicio.

Para Insertar la(s) tarjeta(s) SIM:

1. introduce la herramienta suministrada en el agujero situado en el lateral izquierdo del terminal y retira la bandeja oculta
2. Coloca la/s nanoSIM/s y la tarjeta microSD en sus emplazamientos

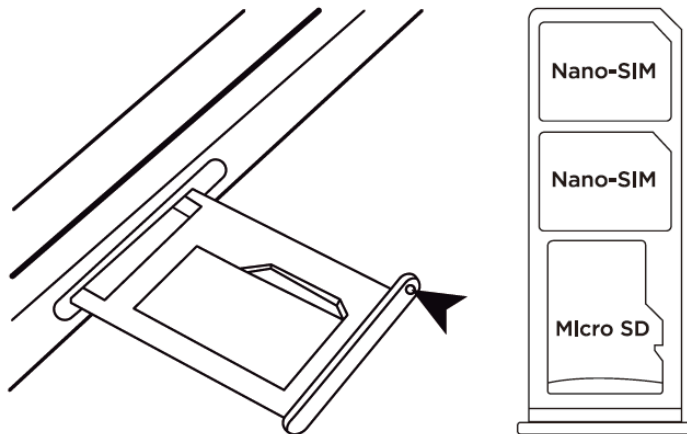


3. Vuelve a colocar la bandeja en su lugar.

Cámara y sensores


Un módulo de cámara cuádruple trasero.

- Cámara principal de 48MP
 - Gran angular de 2MP
 - Sensor de profundidad de 5MP
 - Macro de 2MP
-
- Cámara Frontal de 16MP

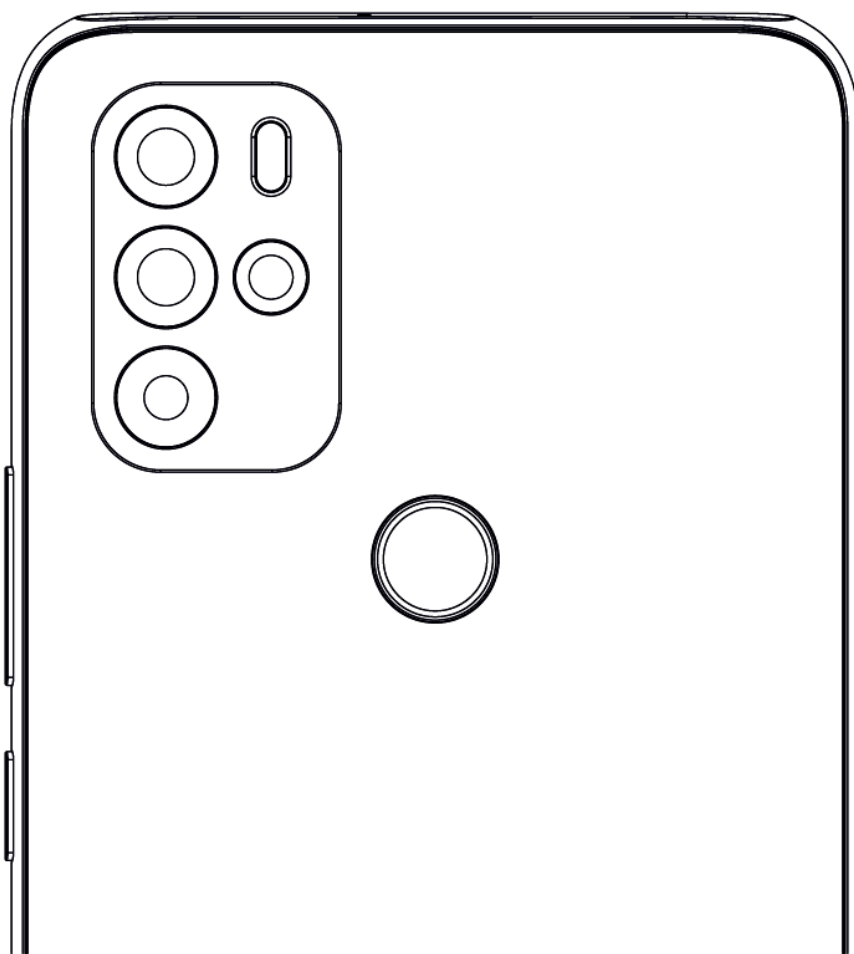


Cargar la Batería

La ranura USB para cargar el móvil o conectarlo al ordenador se encuentra en la parte inferior del terminal

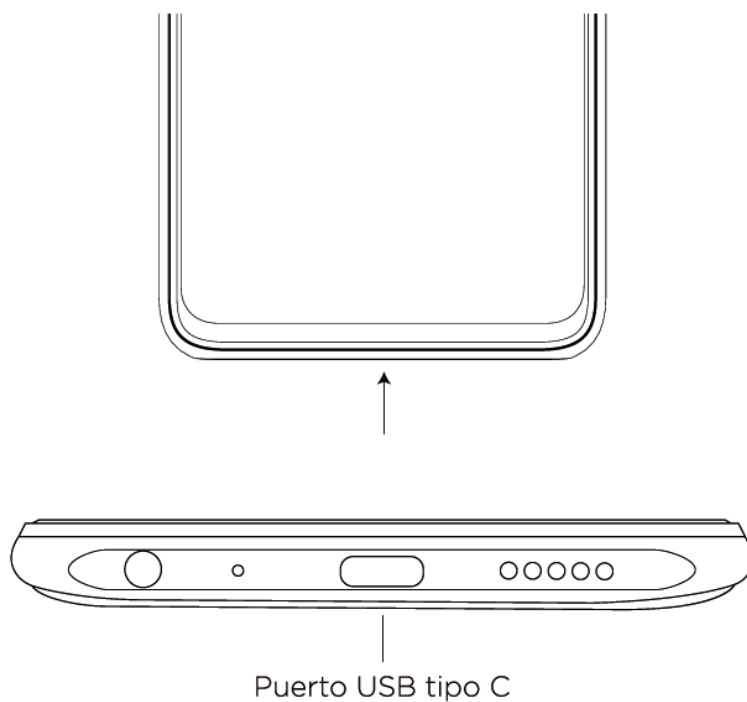

Teclas y partes

El teléfono inteligente soporta tarjetas 4G/LTE y le brinda una maravillosa experiencia cuando usa sus diferentes funciones como la cámara principal de 48mp, la grabadora de video a 1080p, lector de huella, reproductor de música y una pantalla IPS FHD+. Le permite instalar diversas aplicaciones, juegos, y más (soporta formato APK) descargándolos desde Play Store.

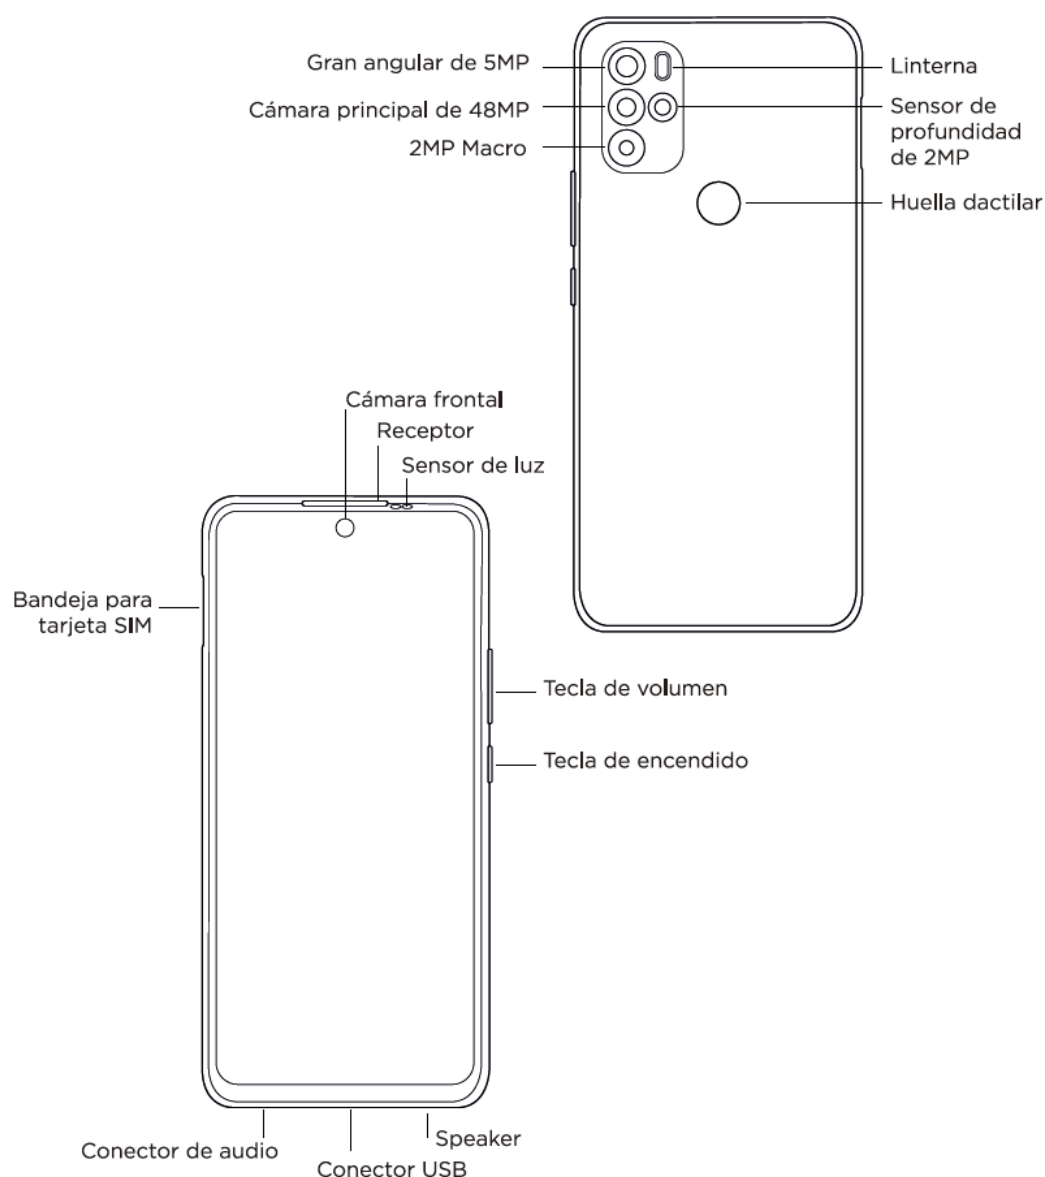

Bloquear y desbloquear la pantalla

Presionar el botón de encendido para entrar en el Modo de Suspensión, la pantalla será bloqueada; presionar el botón de encendido nuevamente para activar de nuevo la pantalla y arrastrar el candado hacia arriba para desbloquear.



Hacer una llamada

En la pantalla de inicio seleccionar el icono  e introduce el número telefónico completo para hacer una llamada.

Mantenimiento y Seguridad

Por favor lea detenidamente la siguiente información para su seguridad, uso adecuado de su teléfono y prevenir daños. Por favor guarde esta guía en un lugar accesible luego de haberla leído.

- El uso de cables, adaptadores de corriente o baterías no autorizados puede provocar incendios, explosiones u otros riesgos.
- Utilice únicamente accesorios autorizados que sean compatibles con su dispositivo.
- El rango de temperatura de funcionamiento de este dispositivo es 0 °C a 40 °C. Utilizar el dispositivo en ambientes con un rango de temperatura que esté fuera del indicado podría dañarlo.
- Si su dispositivo está provisto de una batería incorporada, no intente reemplazarla usted mismo para evitar daños a la batería o al dispositivo.
- Cargue el dispositivo únicamente con el cable y adaptador de corriente incluidos y autorizados. Utilizar otros adaptadores podría provocar incendios, descargas eléctricas y daños al dispositivo y al adaptador.
- Cuando la carga se haya completado, desconecte el adaptador tanto del dispositivo como de la toma de corriente. No deje cargando el dispositivo más de 12 horas.
- Mantenga seco el dispositivo.

4.Aviso General

- **No colocar su teléfono cerca de otros aparatos u objetos con componentes magnéticos como lo son tarjetas de crédito, tarjetas telefónicas, boletos de subterráneos, etc. El magnetismo podría dañar la data almacenada en el teléfono**
- **Hablar prolongadamente por teléfono puede reducir la calidad de la llamada y producir calor.**
- **Usar el teléfono cerca de aparatos receptores de onda puede causar interferencias como por ejemplo la TV y la Radio.**
- **No sumergir su teléfono en agua. En caso que esto ocurra, por favor llevar su teléfono a un centro de servicio autorizado.**
- **Los datos almacenados en su teléfono pueden ser borrados si el equipo requiere de alguna reparación o actualización de Software. Por favor haga un respaldo de su teléfono antes de entregarlo en un centro de servicio autorizado o bien antes de hacerle una actualización de software. El fabricante no será responsable por la pérdida de información en los teléfonos.**
- **No prender ni apagar su teléfono cuando éste se encuentre cerca de su oído.**
- **Cuando el teléfono no vaya a ser usado por un largo período de tiempo, guardarlo desenchufado en un lugar seguro.**
- **No pintar su teléfono**

Este dispositivo cumple con la sección 15 de las normas FCC. La operación está sujeta a las siguientes dos condiciones:

(1) Este dispositivo no puede causar interferencia dañina, y o (2) este dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que puedan provocar un funcionamiento no deseado o Cambios o modificaciones no aprobadas expresamente por la parte responsable del cumplimiento, pueden anular la autoridad del usuario para operar el equipo.



DAEWOO ONE

Guía Rápida