

KA219英语+日文说明书

尺寸：100*130MM

封面157G铜板纸，彩色印刷，封2封3留白

内页：80G书纸，彩色印刷

BIGASUO

Portable Karaoke Machine

User Manual



MODEL:KA219

CATALOG

OPERATING INSTRUCTIONS.....	1
PRODUCT CONTENTS.....	2
SPEAKER DESCRIPTION.....	4
MICROPHONE DESCRIPTION.....	8
REMOTE CONTROL DESCRIPTION.....	10
DETAILED USAGE GUIDE.....	11
PRODUCT ATTRIBUTES.....	13
FQA.....	14
FCC WARNING STATEMENT.....	16

Thank you for purchasing our products! This manual provides important information that will help you safely operate this karaoke machine. Please read this user manual carefully before using this product. Thank you! If you have any problem with the product, please don't hesitate to email us at:

us-karaoke-219@eitack.com

We will reply to you within 24 hours and give you the best solution.

OPERATING INSTRUCTIONS

All the instructions should be read carefully before operation and follow the instructions.

- * The speaker should be situated away from heat sources such as radiators, and not exposed to moist air or water.
- * Place the machine in a stable place to prevent it from falling down.
- * Do not use the machine with attachments not approved by the manufacturer.
- * Check the machine for damage before each use. Please don't attempt to repair the machine if you are not professional.
- * Disconnect the power cable from the outlet and switch it off before cleaning the machine. Please only use a soft cloth, with no harsh abrasives or chemicals to clean, as they will damage the appearance.
- * The power cable of the speaker should be unplugged from the socket, and the power switch should be turned off when not in use for a long time.
- * Please don't leave the speaker and the microphones in a state of exhaustion for a long time, otherwise the battery will be seriously depleted.
- * When the microphone is turned on, Do not point the microphone to the machine straightly to avoid howling.

PRODUCT CONTENTS



1 x Portable Karaoke Machine



2 x Wireless Microphones



1 x Remote Control




1 x Adapter



1 x Charging Cable for
Karaoke Machine



1 x 3.5mm AUX Cable



4 x AA Battery
for microphones



2 x AAA Battery
for Remote Control



1 x Shoulder Strap



1 x User Manual

Note: Please check the product packaging carefully, if any accessories are missing, please contact the after-sales service personnel by email at us-karaoke-219@eitack.com

SPEAKER DESCRIPTION



ON/OFF: Press to turn on/off machine

Record: Short press to start/pause recording

DC IN 5V: Charging port, DC 5V plugged in for charging

USB: Insert the USB flash drive to automatically decode and switch to playing music

TF: Insert the TF Card to automatically decode and switch to playing music

AUX IN: AUX audio input

MIC 1: 3.5mm Microphone Input

MIC 2 / MIC 3: 6.35mm Microphone Input

NOTE:

The recording function can only record when using Bluetooth and AUX mode, and a TF card or USB needs to be inserted to save the recording.



MIC.VOL

Microphone volume adjustment button, clockwise to increase the volume, counterclockwise to decrease the volume




ECHO

Microphone reverberation adjustment button, clockwise to increase the reverberation volume, counterclockwise to decrease the reverberation volume



TREBLE

Music treble adjustment button, clockwise increases treble volume, counter clockwise decreases treble volume

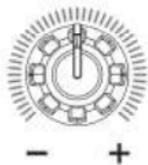

ALTO

Music Alto adjustment button, clockwise increases the Alto volume, counter clockwise decreases the Alto volume



BASS

Music bass adjustment button, clockwise increases the bass volume, counter clockwise decreases the bass volume



LIGHT

- ① Short press to switch the light effects and turn on/off the light.
- ② Long press to turn on/off explosive flashing light.



BRIGHTNESS

Karaoke machine display screen light brightness adjustment, clockwise increases the brightness, counterclockwise decreases the brightness



⏮ : Short press to switch to the previous song

⏸ : ① Short press to pause/play
② Long press to disconnect/connect the connected Bluetooth

⏭ : Short press to switch to the next song

M : ① Short press to switch playback mode: Bluetooth/AUX/USB/TF
② Long press to switch the display screen light color

- VOL + : Machine volume adjustment button, clockwise to increase the volume, counter clockwise to decrease the volume

NOTE:

- ① The charging indicator light will be red when charging, and the indicator light will be off when it is fully charged.
- ② When the speaker battery is low, it will make a sound.
- ③ Long press **⏸** to disconnect/connect the connected Bluetooth.

Instructions for use

As you power on, Bluetooth mode is the default. You could search for the Bluetooth device named "BIGASUO KA219" on your phone/iPad for connection. It will be converted to TF card mode when you insert the TF card. It will be converted to USB mode when you insert the USB. It will be converted to AUX mode when you insert the AUX cable. When inserting the TF card, USB and AUX cable at the same time, press the "MODE" button to convert the mode.

Singing Instructions

1. When the karaoke speaker is turned on, the wireless microphone is connected to the karaoke speaker by default after it is turned on.
2. When using the mobile phone/tablet to play music, the volume of the karaoke speaker can also be adjusted through the mobile phone/tablet.
3. When playing, you can adjust the Treble/Alto/Bass according to your personal preference to achieve the desired effect.

MICROPHONE DESCRIPTION



Play/Pause: Press the button to play/pause

EQ:

- ① Short press to switch between outdoor or indoor mode (default indoor mode)
- ② Long press to turn on/off original sound

Music VOL-: Press the button to decrease the volume of the karaoke speaker

Music VOL+: Press the button to increase the volume of the karaoke speaker

MIC VOL-:

- ① Short press to decrease the volume of the microphone
- ② Long press to reduce the reverb effect

MIC VOL+:

- ① Short press to increase the volume of the microphone
- ② Long press to enhance the reverb effect

Power:

- ① Short press to change channel of microphone
- ② Long press to turn on/off the microphone

REMOTE CONTROL DESCRIPTION



: Short press to turn on/off mute

MODE

: Short press to switch playback mode: Bluetooth/AUX/USB/TF



: ① Short press to switch between outdoor or indoor mode (default indoor mode)
② Long press to turn on/off original sound



: Short press to start/pause recording



: Short press to switch the display screen light color



: Short press to turn on/off the light and switch the light color

VOL-

: Short press to reduce the volume

VOL+

: Short press to increase the volume



: Short press to switch to the previous song



: Short press to switch to the next song



: ① Short press to pause/play
② Long press to disconnect/connect the connected Bluetooth

1 2 3

4 5 6

7 8 9

0

Number Key: Short press to select the corresponding music number (add the time number of the song according to TF Card/USB)



NOTE:

When using the remote control, please point the remote control towards the front of the karaoke machine.

DETAILED USAGE GUIDE

How to charge the machine?

Use the included charging cable to plug into the DC 5V charging port on the top of the karaoke speaker to charge.

How to install the batteries to the microphones?

- ① Hold the microphone and rotate the lower part of the microphone counterclockwise;
- ② Put in the included 2 AA batteries.
- ③ Twist the bottom of the microphone clockwise to tighten.



How to connect to Bluetooth?

Open the Bluetooth connection settings of the playback device, just search for the machine name "BIGASUO KA219" and click connect. When the karaoke speaker is not in Bluetooth mode, press the "MODE" button to switch the playback option to Bluetooth.

How to use TF mode?

Insert the TF card (according to the direction of the icon) into the TF card slot on the top panel of the machine. The playback will start immediately.

How to start AUX mode?(Playing music from an AUX-compatible device like MP3 Player, Phone or TV)

Plug the AUX cable into the designated slot on the top of the machine to activate AUX mode. Then, plug the other end of the adapter into the designated inputs on your device and play music.

How to use USB mode?(Playing music from a USB drive)

Plug a USB stick into the USB port on the top of the machine and your music will begin playing automatically.

How to clean?

Turn the machine and microphones off and unplug them from the charging adapter. Gently wipe the outside of the machine using a clean dry cloth. Keep all vents, buttons and openings free of lint and dirt. Do not immerse the machine in water and do not use any harsh cleaners.

How to store?

Charge the machine and microphones so that they are ready for next use.

Make sure that the machine is clean and dry.

Store the machine in a cool dry place away from damaging machine parts.

PRODUCT ATTRIBUTES

Power input	TYPE-C 5V /2A
Bluetooth transmission distance	10 meters
Support interface	TYPE-C charging port, USB multimedia interface, TF card multimedia interface, AUX audiointerface.
Materials	Plastic 、 Metal

FAQ

Questions	Solution
How to judge whether it is fully charged.	The charging indicator light will be red when charging, and the indicator light will be off when it is fully charged.
The microphone will not turn on.	The microphone is powered by 2 AA batteries, please install the batteries before use and check if the battery is installed correctly. Or check if the AA battery's power is exhausted.
The machine will not turn on.	The battery power is exhausted, use it after charging, and be sure to charge the machine after each use.
The speaker volume is too low.	You can increase the volume of your music with the speaker's volume knob. In addition, the volume of the device connected to the speaker will also affect the sound of the music. You can increase the volume of the playback device to achieve the effect of improving the sound. If the situation cannot be resolved after trying, please contact us in time.

Questions	Solution
What is the order in which songs on USB and TF cards are numbered?	Number according to the order in which songs are stored on USB and TF cards.

- * If any of these issues persist or if any part of the machine becomes damaged, discontinue use and consult a licensed electrician for repair.
- * Do not attempt to modify or repair the machine yourself. If you have any problem with the product, please don't hesitate to email us at:

us-karaoke-219@eitack.com

We will reply to you within 24 hours and give you the best solution.

FCC WARNING STATEMENT

FCC Statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- (3) The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning:

The device has been evaluated to meet the general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

FCC-ID: 2A9JC-KA219

BIGASUO

カラオケマシン

取扱説明書



型番:KA219

目次

注意事項.....	19
パッケージ内容.....	20
各部分の名称.....	22
スピーカーの説明.....	23
マイクの説明.....	27
リモコンの説明.....	29
詳細な使用ガイド.....	30
製品仕様.....	33
よくある質問.....	34
商品保証.....	35

この度は本製品をお買い上げいただきありがとうございます。

ご使用前に必ず取扱説明書をよくお読んでください。

お読みになった後は、いつでも見られるところに必ず保管してください。

本製品に何か問題がございましたら、お気軽に下記までメールでお問い合わせください。

jp-karaoke-219@eitack.com

24時間以内にご返信し、最適な解決策を提供いたします。

注意事項

操作する前にすべての説明をよく読んで、説明に従って操作してください。

*スピーカーをラジエーターなどの熱源から離れた場所に置き、湿った空気や水にさらさないでください。

*本機は落下しないように安定した場所に置いてください。

*メーカーが認めていない付属品と一緒に本機を使用しないでください。

*使用する前に本機が破損していないか確認してください。本機が故障した場合は、専門家に依頼し純正部品のみで修理してください。

*本機をきれいにする前に、電源ケーブルをコンセントから抜き、電源を切ってください。お手入れには柔らかい乾いた布のみを使用してください。外観を損なうため、強い研磨剤や化学品は使用しないでください。

*長期間使用しない場合は、スピーカーの電源ケーブルをコンセントから抜き、電源を切ってください。

*スピーカーやマイクが使用しない場合は、長時間オンになったままにしないでください。

*充電中マイクがオンにならないでください。

*マイクがオンになっているときは、ハウリングを防ぐため、マイクを本機に直接向けないでください。

パッケージ内容



1xカラオケマシン



2xワイヤレスマイク



1xリモコン




1xアダプター



1x充電ケーブル
(カラオケマシン用)



1x3.5mmAUXケーブル



4×単三電池
(マイク用)



2×単四電池
(リモコン用)



1×ストラップ



1×取扱説明書

ご注意： パッケージ内容をよく確認してください。付属品が不足している場合は、カスタマーサポートにメールでご連絡ください：jp-karaoke-219@eitack.com

各部分の名称



- | | | |
|-----------|------------|-------------|
| ① TWS | ⑥ 液晶パネル | ⑪ ワイヤレスマイク |
| ② 前の曲 | ⑦ 音量調整ボタン | ⑫ マイクのストラップ |
| ③ 再生モード | ⑧ 取っ手 | ⑬ ストラップ |
| ④ 一時停止/再生 | ⑨ 高音スピーカー | ⑭ 取っ手 |
| ⑤ 次の曲 | ⑩ 中低音スピーカー | ⑮ ライト |
| | | ⑯ ストロボライト |

スピーカーの説明



ON/OFF: 押すとマシンの電源がオン/オフになります。

Record: 短く押すと録音を開始/録音を一時停止します（ご注意:録音機能はBluetoothおよびAUXモードを使用している場合にのみ録音でき、録音を保存するにはTFカードまたはUSBを挿入する必要があります）。

DC IN 5V: 充電ポートです。USB充電ケーブルを接続して充電します。

ご注意:

- 1.充電インジケータライトは充電中赤色に点灯し、充電完了すると消灯します。
- 2.スピーカーのバッテリーが少なくなると音が鳴ります。
- 3.バッテリーの残量が完全になくなった場合は、本機を使用する前に30分間充電してください。

USB: USBメモリーを挿入すると、自動的にUSBモードに切り替わり、USBメモリーから音楽を再生します。

TF: TFカードが挿入されると、自動的にTFモードに切り替わり、TFカードから音楽を再生します。

AUX IN: オーディオ入力ポートです。

MIC 1: 3.5mmマイク入力ポートです。

MIC 2 / MIC 3: 6.35mmマイク入力ポートです。



MIC.VOL

マイクの音量調整ボタンです。時計回りに回すとマイクの音量が上がります。反時計回りに回すと、マイクの音量が下がります。



ECHO

— +

マイクのリバーブ効果調節ボタンです。時計回りに回すと、リバーブ音量が上がります。反時計回りに回すと、リバーブ音量が下がります。



TREBLE

— +

音楽の高音調整ボタンです。時計回りに回すと、高音が上がります。反時計回りに回すと、高音が下がります。



ALTO

— +

音楽の中音調整ボタンです。時計回りに回すと、中音が上がります。反時計回りに回すと、中音が下がります。



BASS

— +

音楽の低音調整ボタンです。時計回りに回すと、低音が上がります。反時計回りに回すと、低音が下がります。



LIGHT

- ①短く押すとライト効果が切り替わり、ライトがオン/オフになります。
- ②長押しすると、ストロボライトがオン/オフになります。



BRIGHTNESS

液晶パネルの明るさ調整ボタンです。時計回りに回すと、明るさが増します。反時計回りに回すと、明るさが下がります。



TWS: 短く押すと、カブレット(TWS)をします。プロンプト音が聞こえると、接続が成功したことを示します。

◀◀ : 短く押すと前の曲に切り替わります。

⏸ : ①短く押すと一時停止/再生します。
②長押しするとBluetoothの接続/切断ができます。

▶▶ : 短く押すと次の曲に切り替わります。

M : ①短く押すと再生モードを切り替えます: Bluetooth/AUX/USB/TF。
②長押しすると液晶パネルのライト色が切り替わります。

- VOL + : カラオケマシンの音量調整ボタンです。時計回りに回すと、カラオケマシンの音量が上がります。反時計回りに回すと、カラオケマシンの音量が下がります。

使用説明

① 1.電源を入れると、デフォルトはBluetoothモードです。スマホやタブレットで「BIGASUO KA219」という名前のBluetoothデバイスを検索して接続できます。

② TFカードを挿入すると、自動的にTFモードに切り替わります。USBメモリーを挿入すると、自動的にUSBモードに切り替わります。AUXケーブルを接続すると、AUXモードに切り替わります。TFカード、USBメモリー、AUXケーブルが同時に挿入されている場合、「MODE」ボタンを短く押すと再生モードが切り替わります。

歌い方

1.カラオケマシンをオンにすると、ワイヤレスマイクが電源を入れた後にデフォルトでカラオケマシンに接続されます。

2.スマホ/タブレットを使用して音楽を再生する場合、スマホ/タブレットからカラオケマシンの音量を調整することもできます。

3.歌うときに、個人の好みに応じて高音/中音/低音を調整し、理想的な歌唱効果を実現します。

マイクの説明



再生/一時停止: 押すと再生/一時停止します。

EQ: ①短く押すと屋外モードと屋内モードを切り替えます (デフォルトは屋内モードです)。

②長押しすると原音を消し/原音を戻します。

音楽音量-: 押すとカラオケマシンの音量が下がります。

音楽音量+: 押すとカラオケマシンの音量が上がります。

マイク音量-: ①短く押すとマイクの音量が下がります。

②長押しするとリバーブ音量が下がります。

マイク音量+: ①短く押すとマイクの音量が上がります。

②長押しするとリバーブ音量が上がります。

電源ボタン: ①短く押すとマイクの周波数チャンネルを変更します。

②長押しするとマイクがオン/オフになります。

リモコンの説明



: 短く押すとミュートがオン/オフになります。

MODE

: 短く押すと再生モードを切り替えます: Bluetooth/AUX/USB/TF。



: ① 短く押すと屋外モードと屋内モードを切り替えます (デフォルトは屋内モードです)。
② 長押しすると原音を消し/原音を戻します。



: 短く押すと録音を開始/録音を一時停止します



: 短く押すと液晶パネルのライト色が切り替わります。



: 短く押すと、ライトのオン/オフまたはライト効果が変更されます。

VOL- : 短く押すと音量が下がります。

VOL+ : 短く押すと音量が上がります。

⏮ : 短く押すと前の曲に切り替わります。

⏭ : 短く押すと次の曲に切り替わります。

⏸ : ① 短く押すと一時停止/再生します。
② 長押しするとBluetoothの接続/切断ができます。



数字キー: 短く押すと対応する音楽番号を選択します (TFカード/USB に従って曲の時間番号を追加します)。



ご注意:

リモコンを使用する場合は、リモコンをカラオケマシンの正面に向けてください。

詳細な使用ガイド

本機の充電方法

付属の充電ケーブルとアダプターを使用して、カラオケマシンの上部にあるDC 5V充電ポートに接続して充電します。

マイクに乾電池を取り付ける方法

- ①マイクを持ち、マイクの下部を反時計回りに回転させます。
- ②付属の単三電池2本を入れます。
- ③マイクの底部を時計回りに回して締めます。



リモコンに乾電池を取り付ける方法

リモコン背面のカバーを開けると、付属の単四電池2本を入れ、カバーを閉めます。

Bluetooth接続方法

スピーカーの電源を入れると、スマホやタブレットのBluetoothを開き、「BIGASUO KA219」という名前のBluetoothデバイスを検索して接続するだけです。スピーカーがBluetoothモードではない場合、「MODE」ボタンを短く押すと再生モードをBluetoothモードに切り替えます。

TFモードの使い方

TFカードを(アイコンの方向に従って)本機のトップパネルにあるTFカードスロットに挿入します。すぐに再生が始まります。

AUXモードの使い方(MP3プレーヤー、スマホ、テレビなどのAUX対応デバイスの音楽を再生)

AUXケーブルを本機のトップパネルにあるAUX INポートに挿入し、AUXモードを有効にします。次に、AUXケーブルのもう一方の端を他のデバイスのオーディオ出力ポートに接続します。他のデバイスで音楽を再生すると、その音声の本機に送信されます。

USBモードの使い方(USBメモリーの音楽を再生)

USBメモリーを本機のトップパネルにあるUSBポートに挿入すると、音楽の再生が自動的に始まります。

お手入れ方法

電源ケーブルをコンセントから抜き、本機とマイクの電源を切ります。柔らかい乾いた布のみ本機の外側をそっと拭きます。

すべての通気口、ボタン、開口部に糸くずや汚れが付かないようにしてください。本機を水に浸したり、強い洗剤を使用したりしないでください。

保管方法

本機とマイクを充電して、次回使用できるようにします。

本機が清潔で乾燥していることを確認してください。

機械部品の損傷を避けるように、本機は涼しく乾燥した場所に保管してください。

製品仕様

型番	KA219
Bluetooth技術	5.3
Bluetooth接続距離	10m
電源入力	TYPE-C 5V/2A
再生モード	Bluetoothモード/TFモード/USBモード/ AUXモード
端子	TYPE-C 充電ポート、USBポート、TFカード スロット、AUX INポート
素材	プラスチック、金属
サイズ	29*18.8*40.5CM

よくある質問

問題	対策
満充電かどうかはどうやって判断するのですか？	充電インジケータライトは充電中赤色に点灯し、充電完了すると消灯します。
スピーカーがオンになりません。	バッテリーの残量がなくなっていますので、充電してからご使用ください。毎回の使用後に必ず充電してください。
マイクがオンになりません。	マイクは単三電池 2 本で給電します。使用前に電池を入れ、正しく取り付けられているか確認してください。または、単三電池が消耗していないか確認してください。
スピーカーの音量が小さすぎます。	1.スピーカーの「VOL」ボタンを時計回りに回すと、音量を上げることができます。 2.スピーカーに接続されているデバイスの音量もスピーカーの音量に影響します。デバイスの音量を上げると、スピーカーの音量を上げることができます。 3.改善できない場合は、当社に時間内にご連絡ください。
USBとTFカードの音楽番号はどのような順序で付けられていますか？	曲はUSBとTFカードに保存されている順序に従って番号が付けられます。

商品保証

- 1.本機はテストされ、一般的なRF暴露要件を満たすことが確認されています。
- 2.本機はポータブル暴露条件で制限なく使用できます。
- 3.本機は無線周波数エネルギーを生成、および放射する可能性があるため、取扱説明書に従って設置および使用しない場合、無線通信に有害な干渉を引き起こす可能性があります。ただし、特定の設置環境で干渉が発生しないという保証はありません。
- 4.本機がラジオまたはテレビの受信に有害な干渉を引き起こしている場合(本機の電源をオフ/オンにすることで判断できる)、干渉を修正するには、次の1つ以上を試してください。
 - 受信アンテナを再調整または位置変更します。
 - 本機と受信機との距離を広げます。受信機が接続されている回路とは別の回路のコンセントに本機を接続します。
 - 販売店または経験豊富なラジオ/テレビ技術者に相談してください。
- 5.商品保証やお問い合わせは日本国内に限ります。国外での不具合や費用については保証致しかねます。
- 6.本製品及びパソコン等の接続機の不具合により、データが破損し、または消失した場合は、弊社ではデータ内容の保証を致しかねます。必ず内蔵メモリに保存されたデータを他の記録媒介に保存してください。
- 7.誤った使用方法で生じる人的被害や火災等の財産への障害を防止するため、「注意事項」を必ずお守りください。

本製品についてお問い合わせはこちら

お客様サポートセンター
土・日・祝祭日・年始年末を除く
メールアドレス: jp-karaoke-219@eitack.com

BIGASUO

KARAOKE MACHINE USER MANUAL

MODEL:KA219