

KT612 Guitar Instructions

2-In-1 PC/PS3 Guitar



≡ Support:pc/ps3


MADE IN CHINA



● Introduction

This guitar is a wireless 2-In-1 guitar using 2.4G RF technology. Use the receiver to connect to the USB interface of the PS3 host or computer to achieve a wireless connection with the guitar. Turn on the power, plug, and play, no need for any code matching. Work with the Guitar Hero 3 /Rockband games on the PS3 platform. And work with the Guitar Hero 3/Guitar Hero 3 Legends of Rock/Guitar Hero World Tour/Guitar Hero Aerosmith/Game ,PS3 Guitar Hero 3/Guitar Hero 4/Guitar Hero 5/Rockband1/Rockband2 on the PC platform.

● Function keys

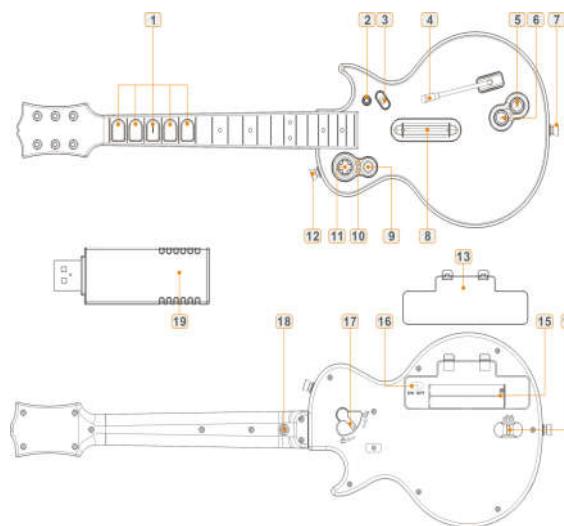


- 1、Five-color buttons: green, red, yellow, blue and orange.
- 2、Game switching button: Press and hold this button for 2 seconds on PS3 platform to switch between Guitar Hero and Rockband game modes; on PC platform, this button is a Backspace function.
- 3、Sound effect switch: Toggle this button in the Rockband game on the PS3 platform, and five different sound effects will appear for selection.
- 4、strum bar : When there is a long sound in the game, you can tap the strum bar to change the sound effect in the game.
- 5、+ key: PS3 platform pause and start key; PC platform confirm key.
- 6、-key: PS3 platform selection key; PC platform Esc function.
- 7、Strap buckle
- 8、Strum key: In the game, when the melody of different colors is corresponding to the pluck key and the play button are operated at the same time to produce different melody.
- 9、PS button: PS3 platform presses the PS button menu, selects the channel or exits the game, wakes up the sleeping guitar and other functions; PC platform wakes up the guitar and Menu function.


- 10、Channel LED indicator.
- 11、Direction control keys
- 12、Strap buckle
- 13、Battery cover
- 14、Guitar decorative surface lock.
- 15、AA battery compartment.
- 16、Power toggle switch.
- 17、Guitar pole lock.
- 18、Suspender buckle.
- 19、Receiver: PC platform red and blue lights are on at the same time; PS3 platform Guitar Hero mode lights blue, Rockband game mode lights red.

● Guitar pole installation and removal

- 1、Please take out the absorbent sponge from the main body of the guitar first (shown in the box below).The absorbent sponge is to protect the probes inside the guitar from being easily oxidized. When the guitar is not used for a long time, please put the absorbent sponge back to its original position

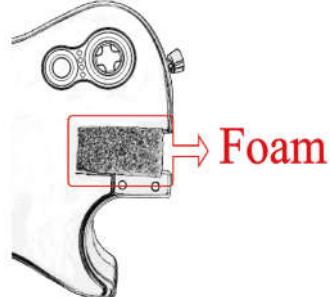

- 2、Take out the guitar stick in the packing box, insert the guitar stick into the main body as shown in the picture, and hear the sound of "ka" indicating that it has been inserted in place and has been automatically locked.

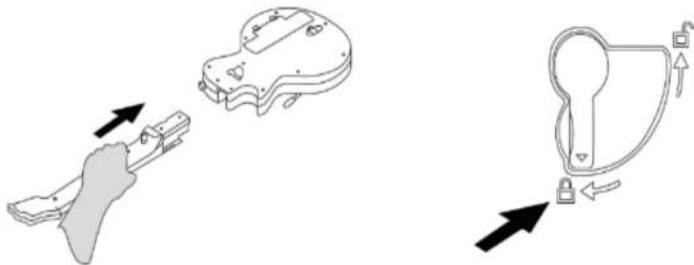

- 3、If you need to remove the guitar stick, please turn the lock to the unlocked position first, and then carefully pull out the guitar stick




● Install the strap

1. First take out the strap in the box
2. Use the holes at both ends of the strap to connect to the strap buckle on the guitar.
3. The length of the strap can be adjusted as needed.

● Install the battery

The product supports standard LR6 (AA) batteries. The package does not contain battery. Consumers need to purchase according to this specification.

1. Check that the switch is turned off (OFF state) before installing the battery.
2. Please install the battery correctly in accordance with the polarity indication.
3. After the battery is installed, please check whether the battery is installed correctly.
4. Turn on the switch to ON, and close the battery cover.

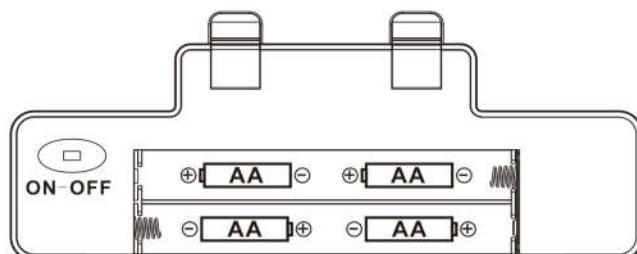

● Connect PS3 game console


First, turn on the power switch in the battery cover of the guitar and turn it to ON, then plug the receiver into the USB port of the PS3 game console. The guitar will automatically pair and connect with the receiver. After the connection is successful, the blue light of the receiver will always be on to indicate that the connection is successful; The guitar is in Guitar Hero mode at this time.

(If you enter the sleep state, press the PS button of the guitar to wake up the guitar and automatically connect)



● Switch between Hero and Rockband games


Firstly, the blue light of the receiver will be on after the guitar is successfully connected to the receiver, and the default Guitar Hero game mode. If you are playing a Rockband game, you need to press and hold the small button on the guitar side for 2 seconds, and wait for the LED on the receiver side to turn on red. Switch to Rockband game mode successfully.

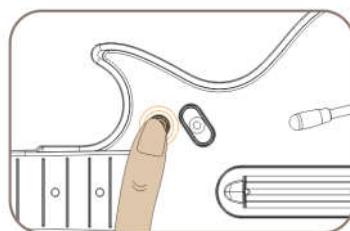

Firstly, the blue light of the receiver will be on after the guitar is successfully connected to the receiver, and the default Guitar Hero game mode. If you are playing a Rockband game, you need to press and hold the small button on the guitar side for 2 seconds, and wait for the LED on the receiver side to turn on red. Switch to Rockband game mode successfully.

● Connect to a Windows computer

First, turn on the power switch in the battery cover of the guitar and turn it to ON, then insert the receiver into the USB port of the host computer. The guitar will automatically pair with the receiver. After the connection is successful, the red and blue lights of the receiver will always be on to indicate the connection is successful. (If you enter the sleep state, press the PS button of the guitar to wake up the guitar and automatically connect)

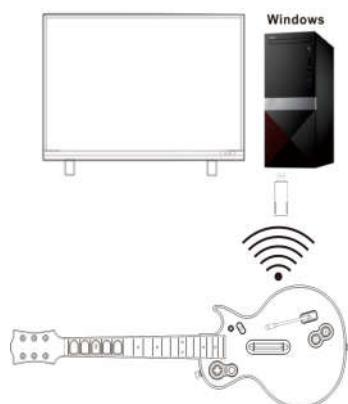

Note that after entering the game on the PC side, some games default to left-handed playing, which can be set in the guitar game.

For example, set Guitar Hero Aero Smith for left-handed or right-handed use

After entering the game, press the green button of the guitar to confirm, and the key to return; press the arrow keys to select OPTIONS below, and press the green button to confirm.



Select the following CONTROLLER and press the green button to confirm.



Cancel the ✓ in the position of P1 in the figure below, it is the right-handed guitar. If you add ✓ to the left-handed mode, (the ✓ in the right-handed modes P1 and P2 of the two-player game are both cancelled as the right-handed guitar mode)



● The use of plucking keys and five-color keys:

The 5 keys from left to right in the game correspond to the 5 keys of "green", "red", "yellow", "blue", and "orange" on the guitar. When the notes on the game reel follow the music to move to the corresponding position at the bottom of the reel, press the button of the corresponding color on the guitar with your left hand, and flick the guitar plucking key with your right hand, you can play the correct music. If the buttons or

beats are incorrect, false noises will be produced.

● The use of the pressure bar under the tone

For the long note in the game, when the note starts, you can just flick the plucking key once with your right hand, but the left hand will not release until the end of the long note when you press the key at the corresponding position. It will be generated by pressing the pressure lever before the end of the long note Different sound effects.

● Guitar Beads

The guitar contains a bead-blasting function. When the game's energy is more than 50%, the guitar is quickly erected, the game reel will change color, and the music will also change the sound effect.

Sleep and wake

When the guitar is connected to the receiver, when there is no button action on the guitar side for 3 minutes, the guitar enters sleep mode; during use, long press the "+" button for 5 seconds, the guitar enters sleep mode.

When the guitar is sleeping, you can press the "+" button on the guitar or press the "PS" button to wake the guitar and connect automatically.

● Battery level voltage indicator

When the battery voltage is lower status, the guitar LED will flash and there will be a broken link, reminding to replace the battery; when it is lower than the lowest preset value, it will automatically shut down

● Precautions

1. After the PC platform game, the guitar must be squared on the desktop; note that the PC platform cannot be placed upright. There is a bead switch inside the guitar. When the guitar is placed upright, the bead switch will be turned on, and the computer may be abnormal.Try to turn off the power switch on the guitar end as soon as possible after the game

is over.

2. The guitar has no function and the indicator light does not light up?

Please check whether the positive and negative poles of the battery in the guitar are installed incorrectly.

3. The Rockband game mode cannot be used normally?


Please check whether the guitar is switched to Rockband game mode. If it is successfully switched to Rockband game mode, the receiver will be on with a red light.

4. The pressure rod is not functioning or the pressure rod is not normal?

Do not touch the pressure lever before turning on the power switch of the guitar. Please turn off the power switch and turn on the power again.

5. The guitar stick buttons have no function?

Please check whether the metal probe point of the guitar shaft is oxidized; whether the probe at the position where the main body is connected to the guitar shaft is bent or blocked by other things; if the metal probe point of the guitar shaft is white or black, it means that there is oxide coating, please use alcohol cloth or rubber Wipe the metal probe point gently. (If the guitar is not used for a long time, please pack it in a plastic bag to avoid oxidation of the metal probe)

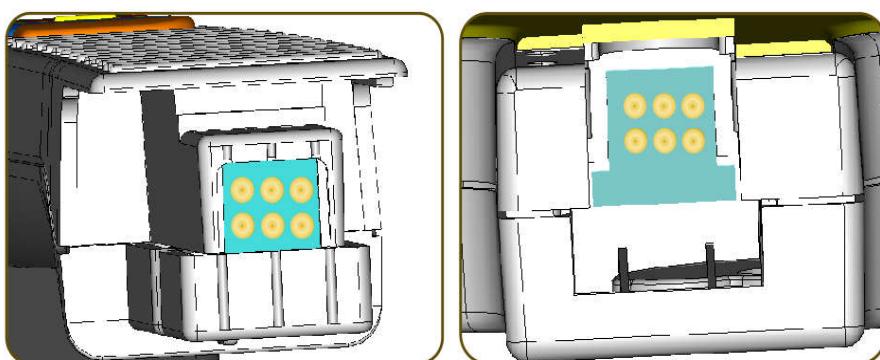

6. When the product is not in use, do not put the product in a humid or dusty place, and do not expose the product to the sun.


KT612 Guitarra Instruções

2-In-1 PC/PS3 Guitarra

Introdução

Esta guitarra é uma guitarra 2 em 1 sem fio que usa tecnologia RF 2.4G. Use o receptor para conectar a interface USB do host PS3 ou computador para obter uma conexão sem fio com a guitarra. Ligue a energia, conecte e use, sem necessidade de correspondência de código. Trabalhe com os jogos Guitar Hero 3 / Rockband na plataforma PS3. E trabalhe com Guitar Hero 3 / Guitar Hero 3 Legends of Rock / Guitar Hero World Tour / Guitar Hero Aerosmith / Game, PS3 Guitar Hero 3 / Guitar Hero 4 / Guitar Hero 5 / Rockband1 / Rockband2 na plataforma PC.

Função das teclas:

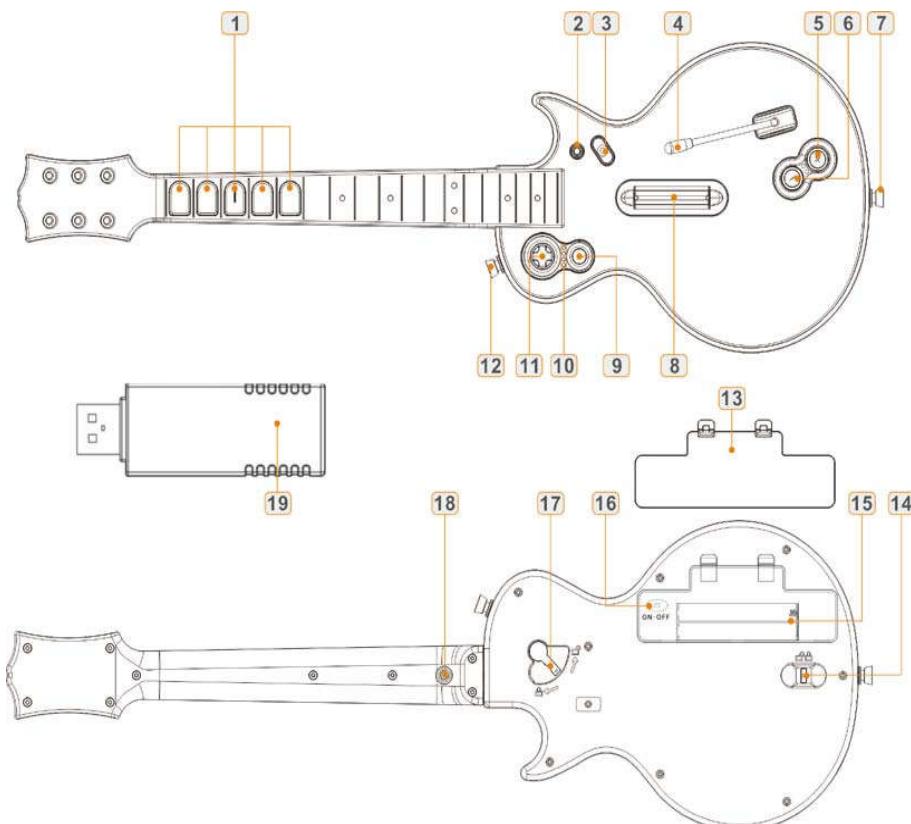


- 1 . Botões de cinco cores: verde, vermelho, amarelo, azul e laranja.
 - 2 . Botão de mudança de jogo: Pressione e segure este botão por 2 segundos na plataforma PS3 para alternar entre os modos de jogo Guitar Hero e Rockband; na plataforma do PC, este botão é uma função Backspace.
 - 3 . Botão de efeito de som: Alterne este botão no jogo Rockband na plataforma PS3 e cinco efeitos de som diferentes aparecerão para seleção.
 - 4 . barra de toque: Quando há um som longo no jogo, você pode tocar na barra de toque para alterar o efeito de som no jogo.
 - 5 . + tecla: pausa da plataforma PS3 e tecla iniciar; Chave de confirmação da plataforma do PC.
 - 6 . -key: tecla de seleção da plataforma PS3; Função Esc da plataforma do PC.
 - 7 . Fivela de alça
 - 8 . Tecla Strum: No jogo, quando a melodia de cores diferentes está correspondendo à tecla dedilhada e o botão play são operados ao mesmo tempo para produzir melodia diferente.
 - 9 . Botão PS: a plataforma PS3 pressiona o menu do botão PS, seleciona o canal ou sai do jogo, ativa o violão e outras funções; A plataforma do PC ativa a guitarra e a função Menu.
- Indicador LED de canal de 10 . .
- 11 . Teclas de controle de direção
 - 12 . Correia fivela


- 13 、 Tampa da bateria
 14 、 Bloqueio da superfície decorativa da guitarra.
 Compartimento de bateria AA de 15 .
 16 、 Chave liga / desliga.
 17 、 Bloqueio de mastro de guitarra.
 18 、 Fivela do suspensor.
 19 、 Receptor: as luzes vermelha e azul da plataforma do PC estão acesas ao mesmo tempo; O modo Guitar Hero da plataforma PS3 acende em azul, o modo de jogo Rockband acende em vermelho.

Instalação e remoção de mastro de guitarra


1 、 Retire primeiro a esponja absorvente do corpo principal da guitarra (mostrada na caixa abaixo). A esponja absorvente serve para proteger as pontas de prova dentro da guitarra de serem facilmente oxidadas. Quando a guitarra não for usada por um longo tempo, coloque a esponja absorvente de volta à sua posição original

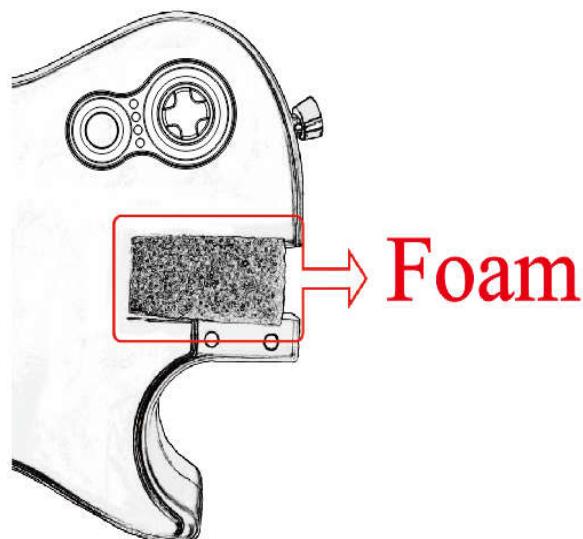

2 、 Retire o bastão da guitarra da embalagem, insira-o no corpo principal conforme mostrado na imagem e ouça o som de "ka" indicando que ele foi inserido no lugar e travado automaticamente.

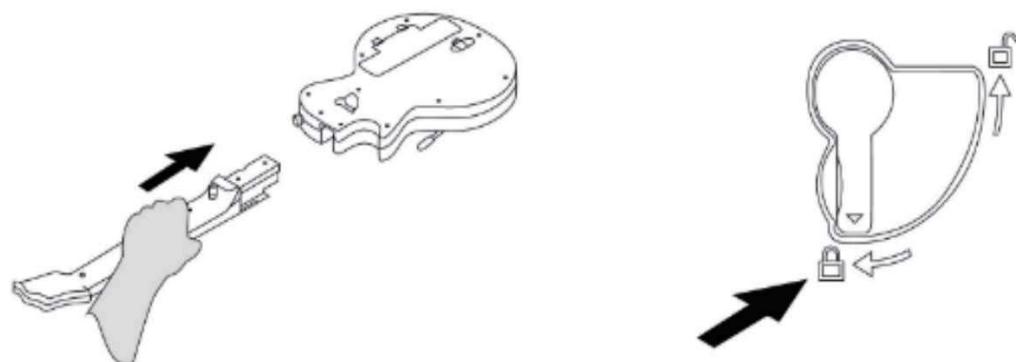

3 、 Se você precisar remover o bastão da guitarra, gire a trava para a posição destravada primeiro e, em seguida, puxe cuidadosamente o bastão da guitarra para fora

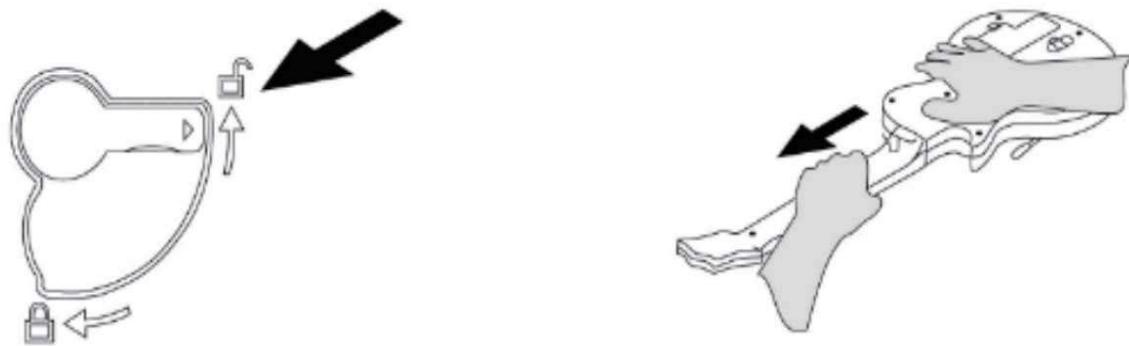


Instale a cinta

1. Primeiro retire a alça da caixa
2. Use os orifícios em ambas as extremidades da alça para conectar à fivela da alça na guitarra.
3. O comprimento da correia pode ser ajustado conforme necessário.

Instale a bateria

O produto é compatível com baterias LR6 (AA) padrão. O pacote não contém bateria. Os consumidores precisam comprar de acordo com esta especificação.


- 1.Verifique se a chave está desligada (estado OFF) antes de instalar a bateria.
2. Instale a bateria corretamente de acordo com a indicação de polaridade.
3. Depois que a bateria for instalada, verifique se a bateria está instalada corretamente.
- 4.Ligue a chave para ON e feche a tampa da bateria.

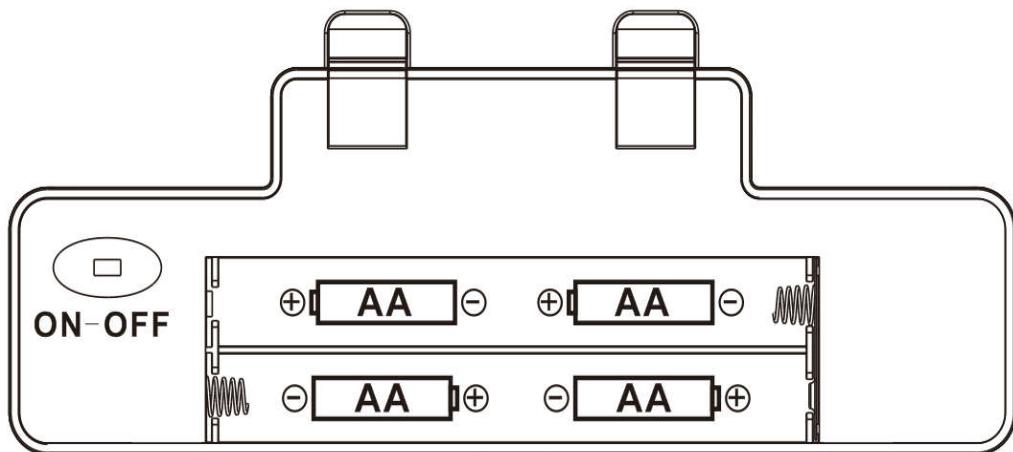

Conekte o console de jogos PS3


Primeiro, ligue o botão liga / desliga na tampa da bateria da guitarra e ligue-o, em seguida, conecte o receptor na porta USB do console de jogo PS3. A guitarra irá emparelhar e conectar-se automaticamente ao receptor. Depois que a conexão for bem-sucedida, a luz azul do receptor estará sempre acesa para indicar que a conexão foi bem-sucedida; A guitarra está no modo Guitar Hero neste momento.

(Se você entrar no estado de hibernação, pressione o botão PS da guitarra para acordar a guitarra e conectar-se automaticamente)

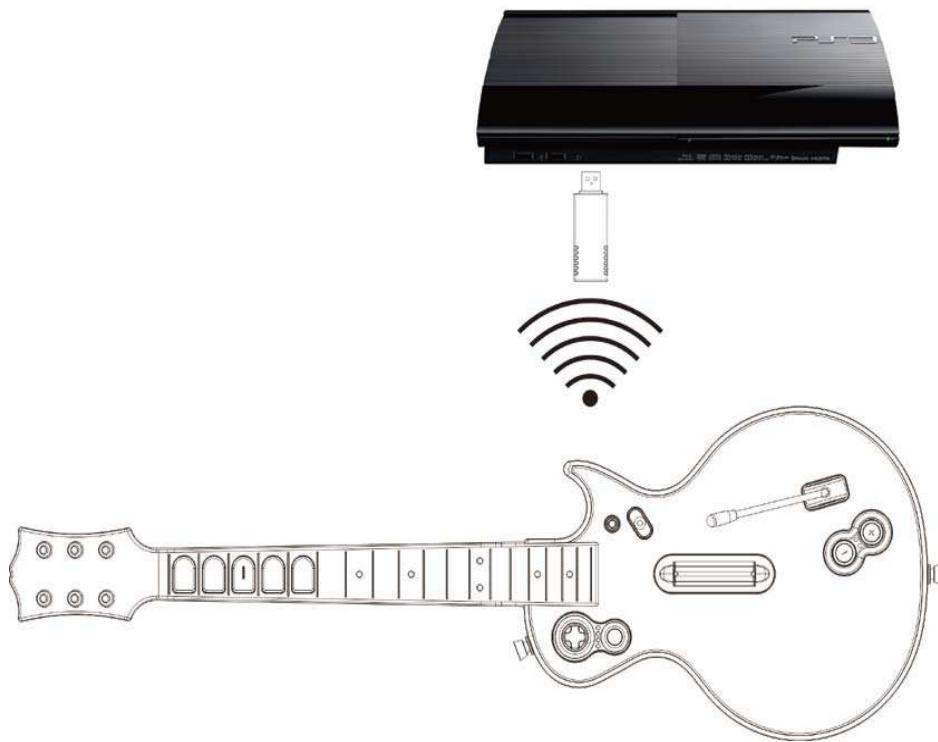

Alternar entre jogos Hero e Rockband


Em primeiro lugar, a luz azul do receptor acenderá depois que a guitarra for conectada com sucesso ao receptor e ao modo de jogo padrão do Guitar Hero. Se você estiver jogando um jogo Rockband, você precisa pressionar e segurar o pequeno botão do lado da guitarra por 2 segundos e esperar que o LED no lado do receptor fique vermelho. Mude para o modo de jogo Rockband com sucesso.

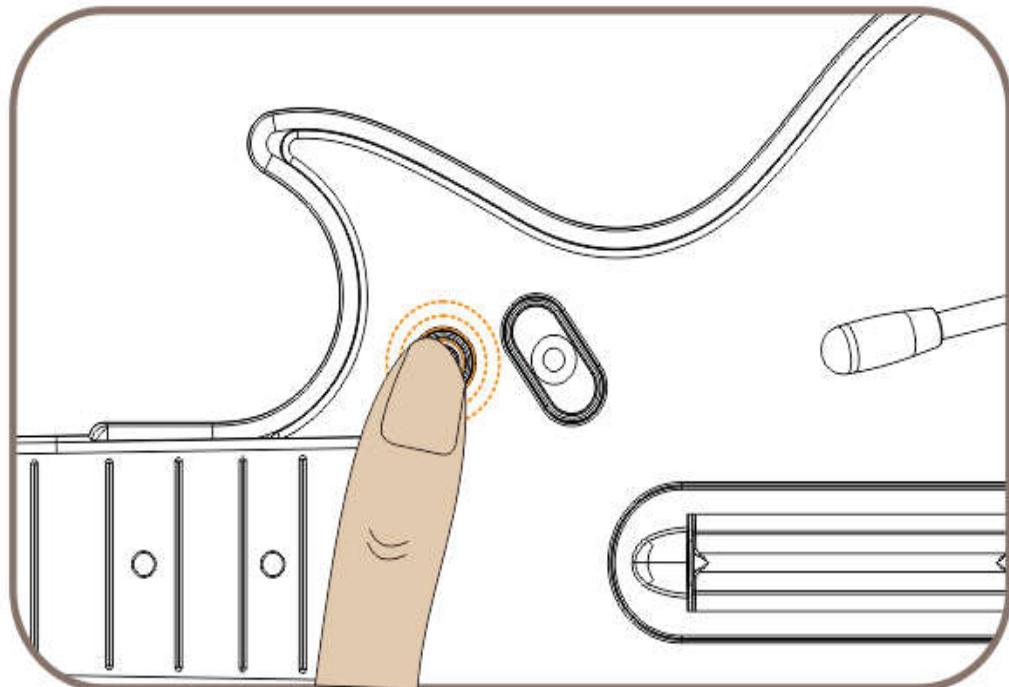

Conecte em um computador Windows

Primeiro, ligue o botão liga / desliga na tampa da bateria da guitarra e ligue-o, em seguida, insira o receptor na porta USB do computador host. A guitarra irá emparelhar automaticamente com o receptor. Depois que a conexão for bem-sucedida, as

luzes vermelha e azul do receptor estarão sempre acesas para indicar que a conexão foi bem-sucedida. (Se você entrar no estado de hibernação, pressione o botão PS da guitarra para acordar a guitarra e conectar-se automaticamente)

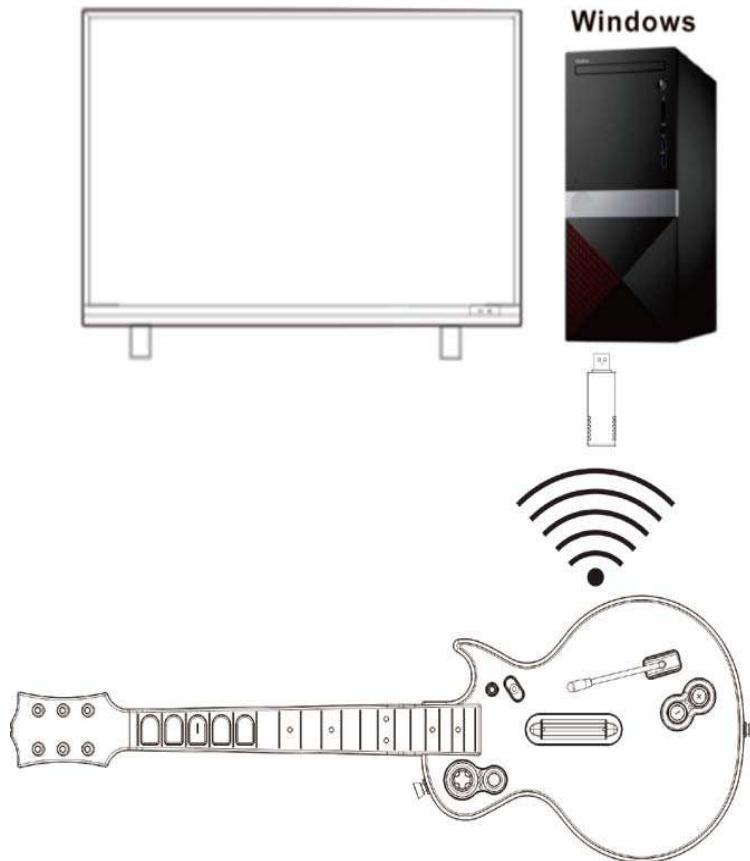


Observe que, após entrar no jogo no lado do PC, alguns jogos são padronizados para jogar com a mão esquerda, o que pode ser definido no jogo de guitarra.

Por exemplo, defina Guitar Hero Aero Smith para uso com a mão direita ou esquerda

Após entrar no jogo, pressione o botão verde do violão para confirmar, e a tecla para voltar; pressione as teclas de seta para selecionar OPÇÕES abaixo e pressione o botão verde para confirmar.



Selecione o seguinte CONTROLADOR e pressione o botão verde para confirmar.

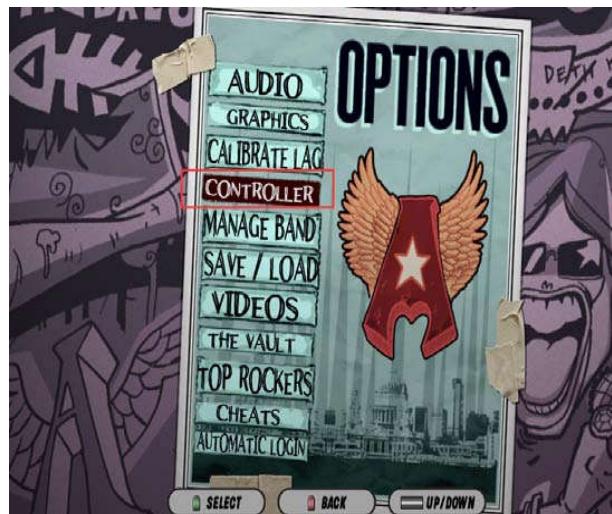

Cancele o ✓ na posição de P1 na figura abaixo, é a guitarra destra. Se você adicionar ✓ ao modo para canhotos, (o ✓ nos modos para destros P1 e P2 do jogo para dois jogadores são cancelados como modo de guitarra para destros)



O uso de chaves de arrancar e chaves de cinco cores:

As 5 teclas da esquerda para a direita no jogo correspondem às 5 teclas de "verde", "vermelho", "amarelo", "azul" e "laranja" na guitarra. Quando as notas na bobina do jogo seguem a música para mover para a posição correspondente na parte inferior da bobina, pressione o botão da cor correspondente na guitarra com a mão esquerda e toque na tecla de tocar da guitarra com a mão direita, você pode tocar a música correta. Se os botões ou batidas estiverem incorretos, ruídos falsos serão produzidos.

O uso da barra de pressão sob o tom

Para a nota longa no jogo, quando a nota começa, você pode simplesmente apertar a tecla de arrancar uma vez com a mão direita, mas a mão esquerda não soltará até o final da nota longa, quando você pressiona a tecla na posição correspondente. Será gerado pressionando a alavanca de pressão antes do final da nota longa. Diferentes efeitos sonoros.

Contas de guitarra

A guitarra contém uma função de jateamento de pérolas. Quando a energia do jogo é superior a 50%, a guitarra é erguida rapidamente, o rolo do jogo muda de cor e a música também muda o efeito sonoro.

Dormir e acordar

Quando a guitarra está conectada ao receptor, quando não há nenhum botão acionado no lado da guitarra por 3 minutos, a guitarra entra no modo de hibernação; durante o uso, pressione e segure o botão "+" por 5 segundos, a guitarra entra no modo de hibernação.

Quando a guitarra está dormindo, você pode pressionar o botão "+" na guitarra ou pressione o botão "PS" para acordar a guitarra e conectar-se automaticamente.

Indicador de tensão do nível da bateria

Quando a tensão da bateria está com o status mais baixo, o LED da guitarra piscará e haverá um link quebrado, lembrando para substituir a bateria; quando for inferior ao valor predefinido mais baixo, ele desligará automaticamente

Precauções

1. Após o jogo de plataforma para PC, a guitarra deve ser quadrada na área de trabalho; observe que a plataforma do PC não pode ser colocada na vertical. Existe um interruptor de talão dentro da guitarra. Quando a guitarra é colocada na vertical, a chave do talão é ligada e o computador pode estar anormal. Tente desligar a chave liga / desliga da guitarra o mais rápido possível após o jogo terminar.

2. A guitarra não tem função e o indicador luminoso não acende?

Verifique se os pólos positivo e negativo da bateria da guitarra estão instalados incorretamente.

3. O modo de jogo Rockband não pode ser usado normalmente?


Verifique se a guitarra está no modo de jogo Rockband. Se for mudado com sucesso para o modo de jogo Rockband, o receptor ficará ligado com uma luz vermelha.

4. A haste de pressão não está funcionando ou a haste de pressão não está normal?

Não toque na alavanca de pressão antes de ligar a chave liga / desliga da guitarra. Desligue o botão liga / desliga e ligue-o novamente.

5. Os botões do stick de guitarra não têm função?

Verifique se a ponta de prova de metal da haste da guitarra está oxidada; se a sonda na posição onde o corpo principal está conectado ao cabo da guitarra está dobrada ou bloqueada por outras coisas; Se a ponta de prova de metal da haste da guitarra for branca ou preta, significa que há revestimento de óxido, use um pano embebido em álcool ou borracha. Limpe a ponta de prova de metal com cuidado. (Se a guitarra não for usada por um longo tempo, por favor, embale-a em um saco plástico para evitar a oxidação do metal)

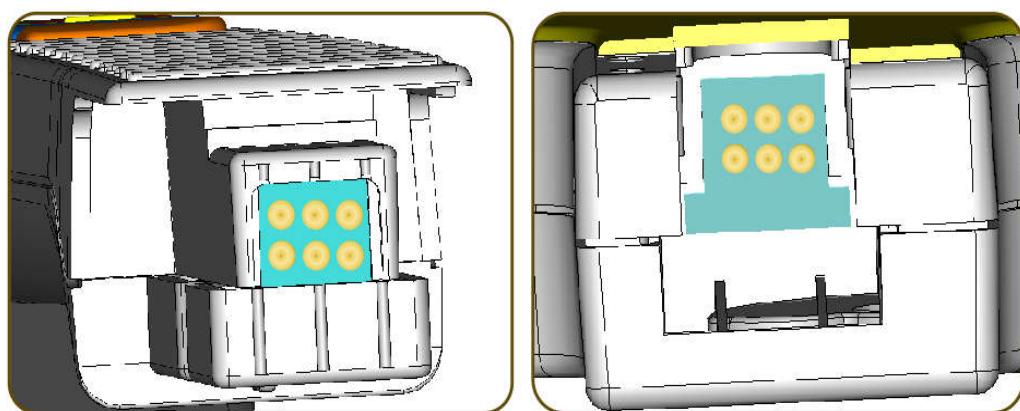

6. Quando o produto não estiver em uso, não coloque o produto em local úmido ou empoeirado, e não exponha o produto ao sol.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.